



 







CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Table top		1X
B	Front legs		2X
C	Back leg		2X
D	Bottom shelf		1X
E	Feet		2X
H1	Flat washer		4X
H2	Spring washer		4X
H3	Allen bolt		4X
H4	Screw		2X
H5	Allen key		1X

 **SAFAVIEH**
FURNITURE

Model# AMH4111A

Product Dimensions: 34"WX14"DX 31"H

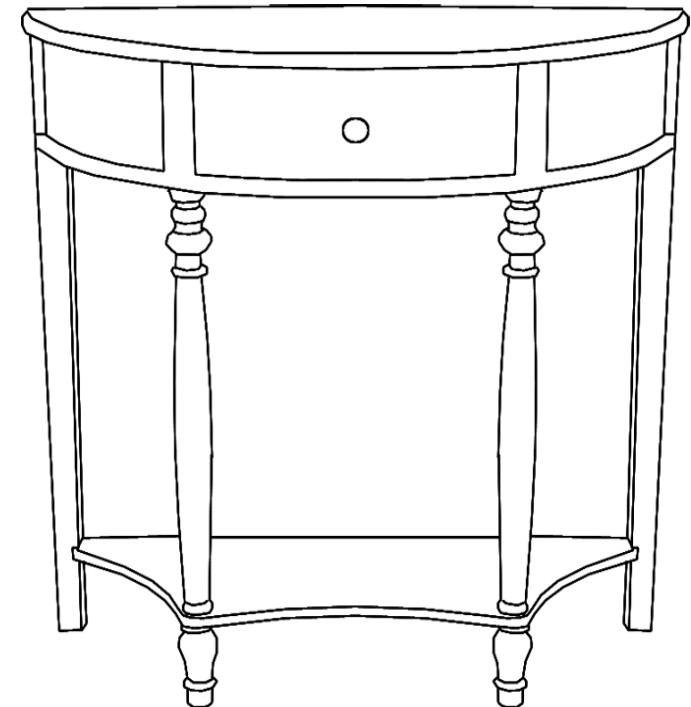


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen key

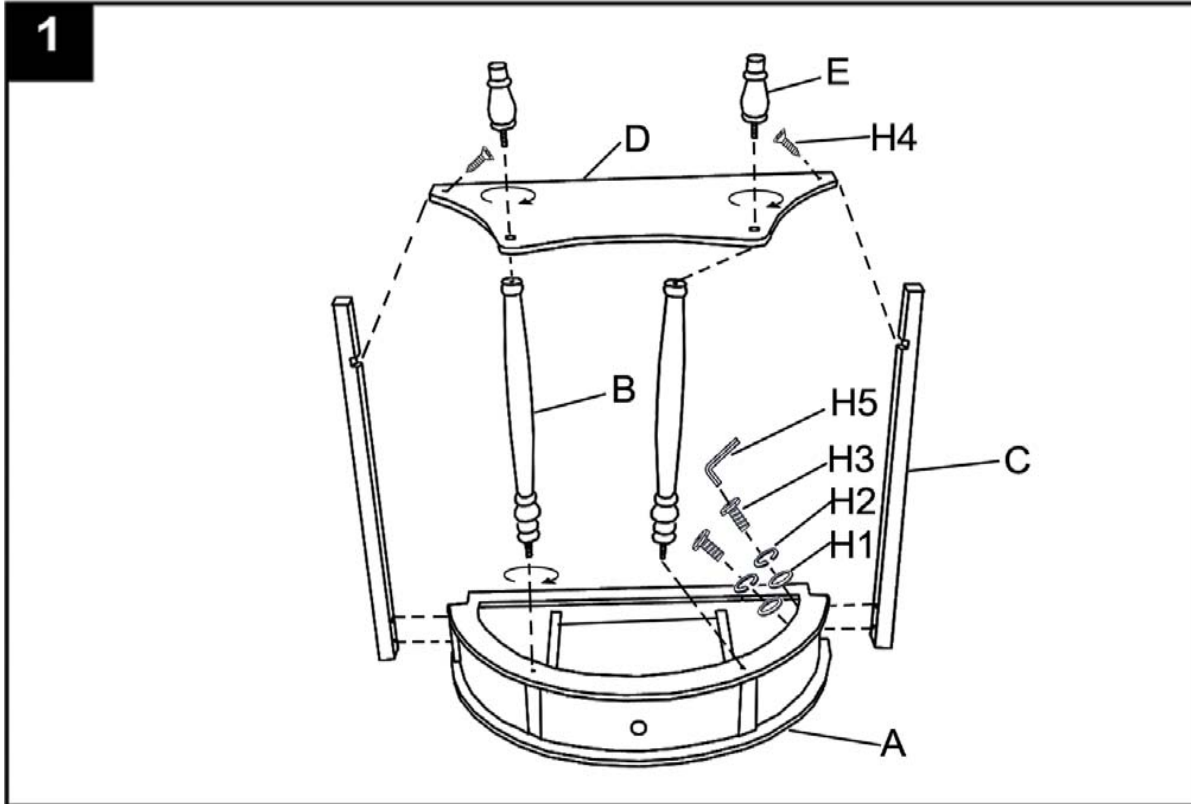

Step

Upside down the table top (A). Attach the front leg (B) and back leg (C) to the table top (A). Use the allen key (H5) to tighten the flat wa and the spring washer (H2) and the bolt (H3).

Screw the feet (E) to the front leg (B) through the bottom shelf (D).