CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening


Part List and Hardware List

1×		Allen kev	14
			:
Ş	0	י מי אמפורכי	-
o K		Flat washer	I N
«X	Q	Spirity waster	7.7
2			5
8X		Allen bolt L	==
×		Back leg-2	m
×		Back leg-1	0
×		Front leg-2	C
×		Front leg-1	В
×		SEAT	>
QUANTITY	PICTURE	DESCRIPTION	PIECE



Model# MCR4657

Product Dimensions:21.26" W x 22.83"D x35.43" H

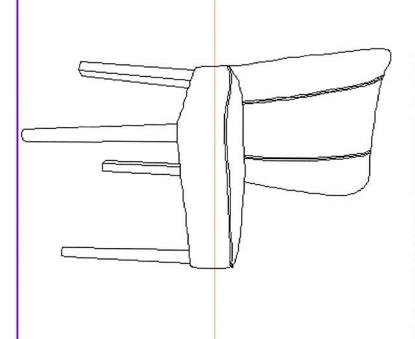

If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 10 minutes. Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

