

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE


WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

UPHOLSTERY CARE: To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.



ITEM ID: MED5901A

 ITEM DIMENSION: L 60 inch x W 15 inch x H 20 inch


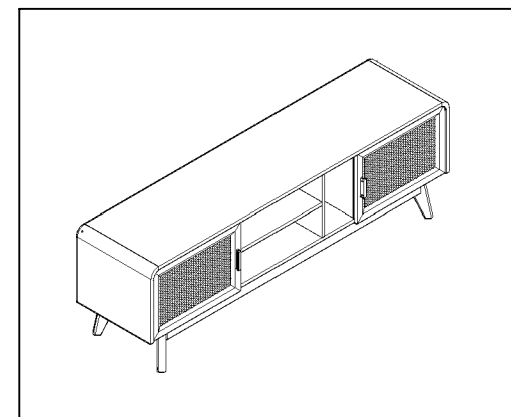


Total Weight Capacity : 238 lbs
Warning: Do not stand on the cabinet.
Warning: Do not over torque bolts.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY
1	Top Panel		1x	6	Center Panel(C)		1x	11	Leg Panel (C)		1x
2	Bottom Panel		1x	7	Center Panel(R)		1x	12	Shelf Panel		1x
3	Side Panel(L)		1x	8	Back Mdf Board		1x	13	Door Panel (L)		1x
4	Side Panel(R)		1x	9	Leg Panel		4x	14	Door Panel (R)		1x
5	Center Panel(L)		1x	10	Leg Support Panel(C)		1x				

  Part List and Hardware List



PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY
A	Cam Pin M5x24MM		11x	F	Pvc Handle Screw M4x38MM		2x 4x	K	Allen Key		1x
B	Cam Lock		11x	G	Screw M7x50MM		10x	L	Adjustable Leg-38		1x
C	Wood Dowel M8x30MM		20x	H	White Leg Pin		4x	SH78	Hydraulic Hinges 7/8" Screw M3.5x16MM		4x 24x
D	Iron Shelf Support		4x	I	Screw M6x50MM		3x				
E	Screw M4x28MM		4x	J	Screw M3.5x16MM		4x				

PREPARATION



 
- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key.

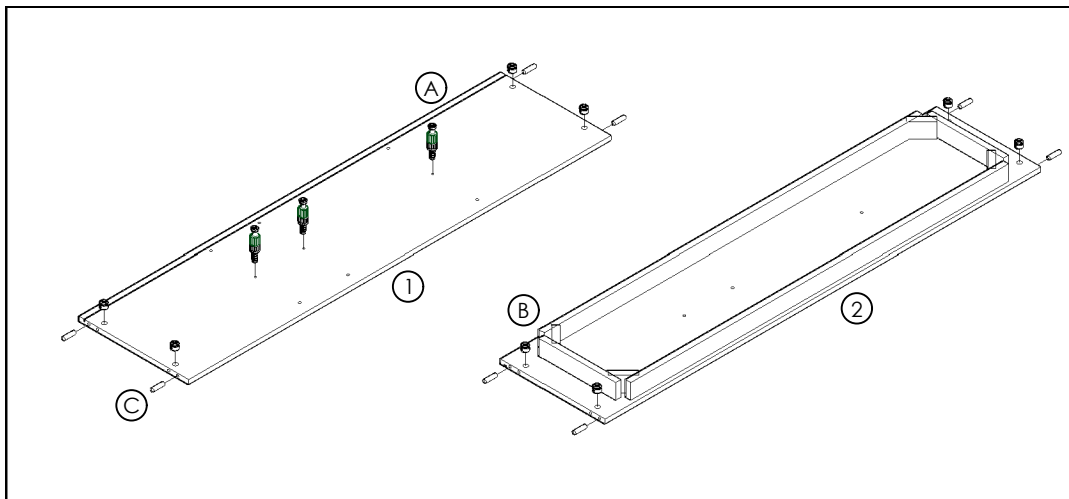


 
 
Step 1: As Shown,Install the provided hardware. Fasten the screw (A) and do not tighten it too tight. Put in the Camlock(B) into the hole. Please using the hammer to insert the wood dowel(C).

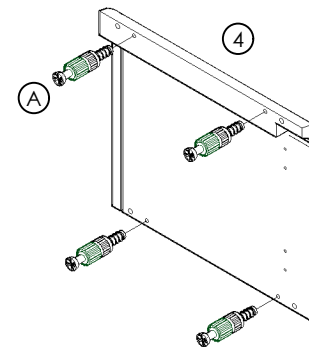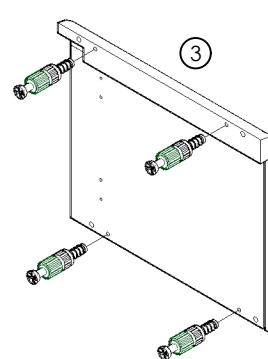

   
Step 2: Install the provided hardware. Fasten the screw (A) and do not tighten it too tight.

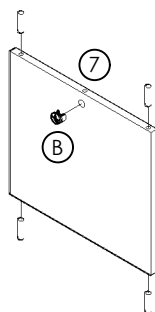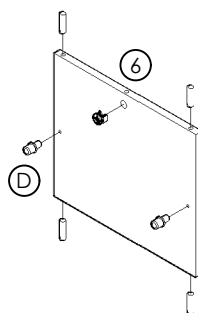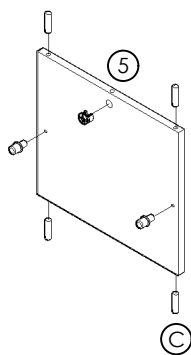

   
Step 3: Install the provided hardware. Put in the Camlock(B) into the hole. Please using the hammer to insert the wood dowel(C) and iron shelf support (D).

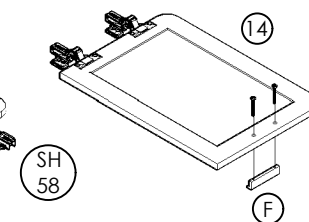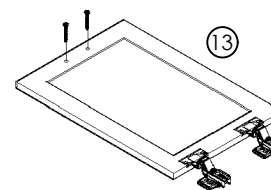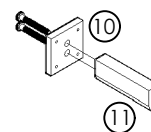

 
Step 4: Install the Hydraulic Hinges 7/8"(SH78). Insert the screw into the hole of the hinges with using the screwdriver.Then install hardware (F) with screw and tight screw (G) using screwdriver.

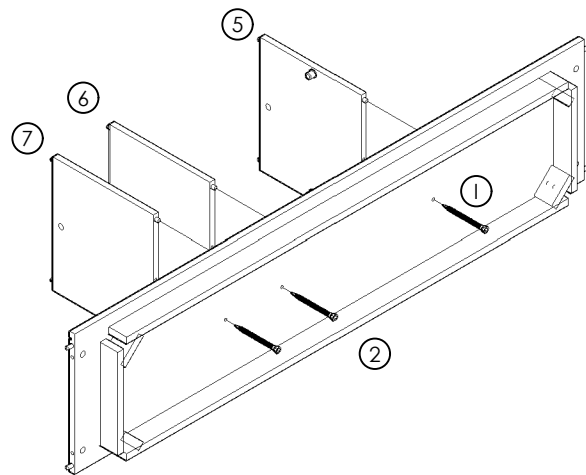

 
Step 5: As shown, Use allen key (K) to make the screw (I) goes into the hole until the screw is tight.

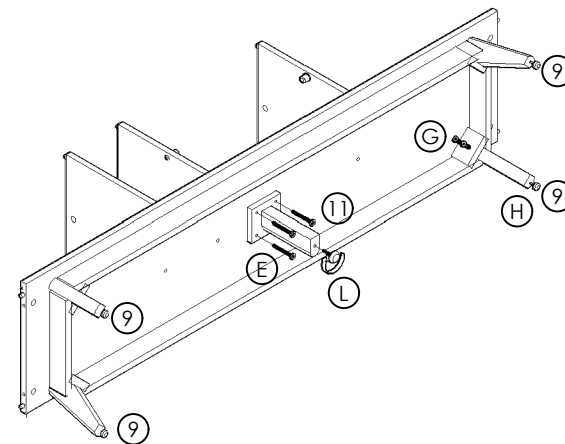

 
Step 6: Please insert the screw (E) and screw (G) on holes of leg panel using a screwdriver. Hold the screwdriver firmly and turn it clockwise to tighten the screw. Then using the hammer to install the white leg pin (H) & insert the adjustable leg (L) on holes then can be adjusted to suitability.

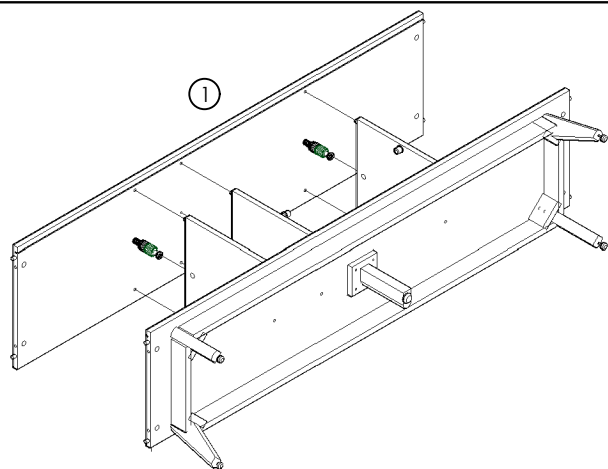

 
Step 7: As shown, on the position with using the hardware provide, the head of minifix housing goes into the open mouth of the minifix bolt, Use Allen Key(K) then turn the minifix housing so it tighten over the minifix bolt.

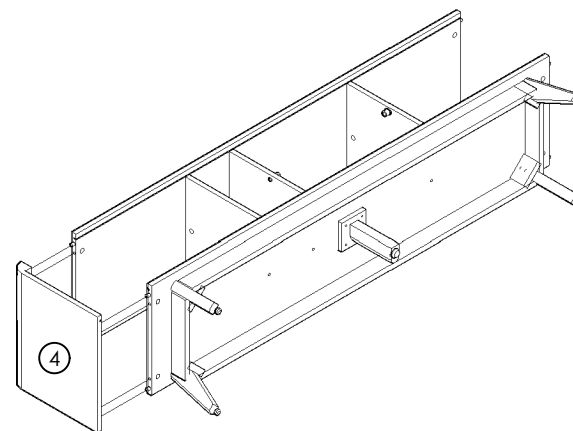

 
Step 8: After that using the hardware provide, Use Allen Key(K) then turn the minifix housing, so it tighten over the minifix bolt.

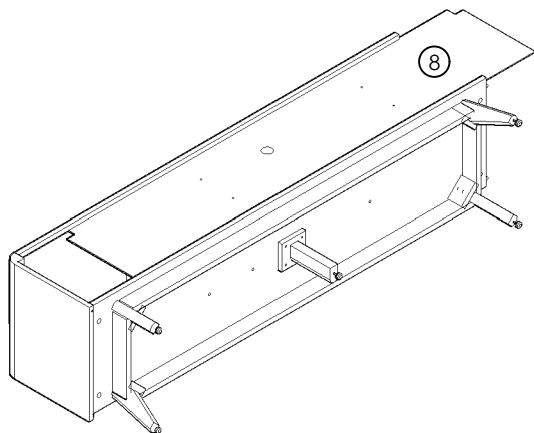


 
Step 9: Installation the Back Mdf Board. Insert the Back Mdf Board into the groov of panel.

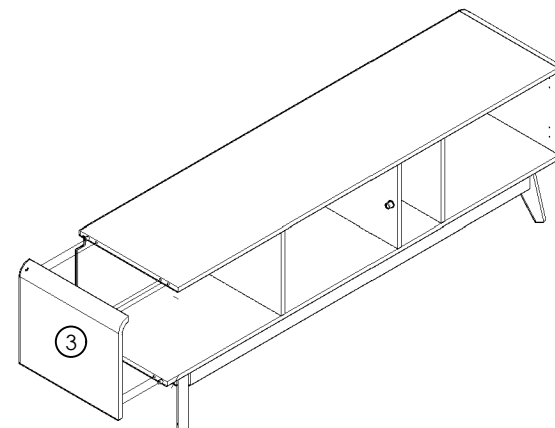

 
Step 10: on the position with using the hardware provide, the head of minifix housing goes into the open mouth of the mini fix bolt, Use Allen Key(K) then turn the minifix housing so it tighten over the minifix bolt.

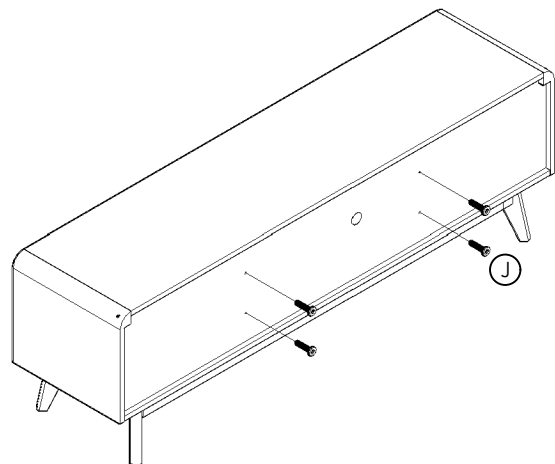

  Step 11: Please insert the screw (J) on holes of panel using a screwdriver. Hold the screwdriver firmly and turn it clockwise to tighten the screw. Make sure the panel is firmly secured without being overtightened.

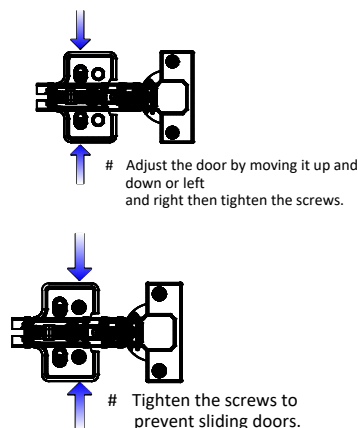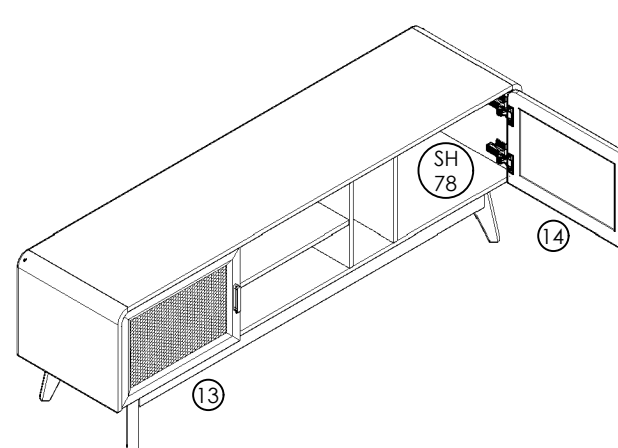

 Step 12: Adjust the door by moving it up and down or left and right then tighten the screws. Tighten the screws to prevent sliding doors.

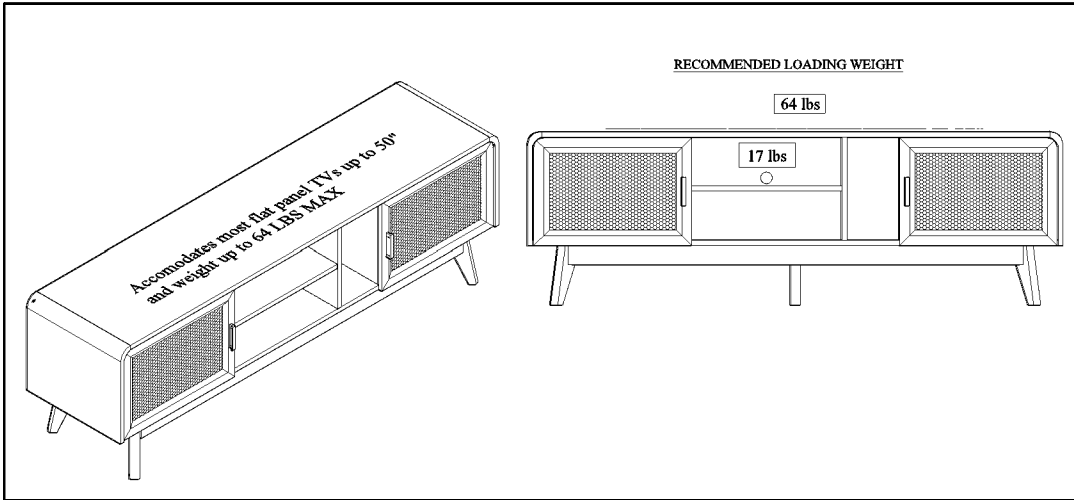
 Accommodates most flat panel TVs up to 50" and weight up to 64 LBS MAX RECOMMENDED LOADING WEIGHT 64 lbs 17 lbs	
Step 13: Completed.The Cabinet has been ready installed.	




HOW TO ADJUST GLASS/DOORS

- There is a gap between the door and the shelf with doors closed

 Loosen the back adjustable screw which is one of the two screws looking from the front while supporting the doors, adjust the door by moving it back and forth, then tighten the back screw.

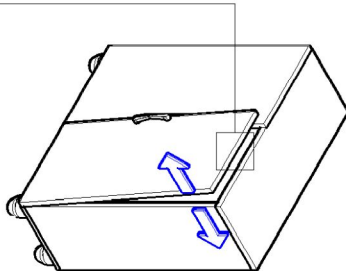

 
If there is a gap between the doors on the top.

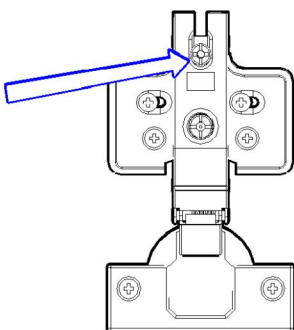


Loosen this screw, adjust by moving back and forth

- There is a gap in the middle with doors closed

 Loosen the ① back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust the middle gap. After adjusted, tighten the ① screw.

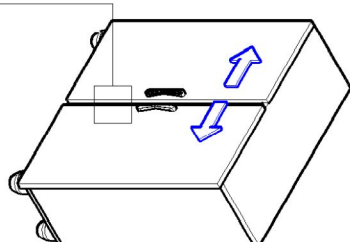

If the gap is wide

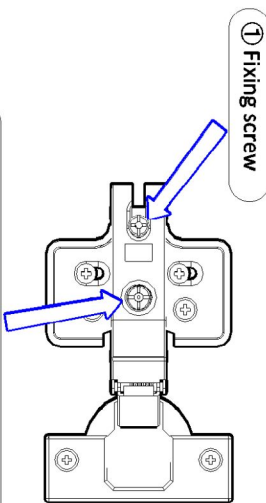 


① Fixing screw

② Adjusting screw
(If you twist clockwise once, the door moves about 2mm inward)


- There is a V gap when doors are closed

Loosen the ① back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust the middle gap. After adjusted, tighten the ① screw.

 
If there is a gap between the doors on the top (Please adjust slide hinge the top part door)

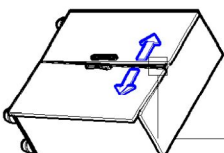

① Fixing screw

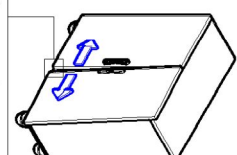 

 
If there is a gap between the doors on the bottom (Please adjust slide hinge the bottom part door)

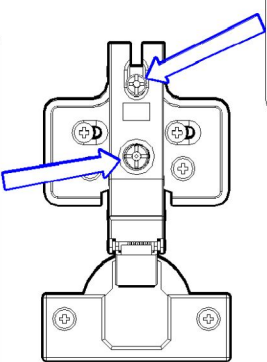


② Adjusting screw
(If you twist clockwise once, the door moves about 2mm inward)

- There is a gap on the top of the door when doors are closed
(Glass slide hinge does not require this step)
(4 screw hole hinge does not require ①)

 Loosen the slide hinge screw while supporting the door, adjust the door by moving it up and down then tighten the screws.
(Please loosen the slide hinge screws of the door completely you are adjusting before moving it up and down.)

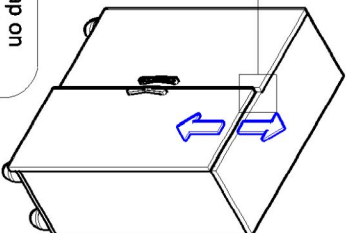

 If there is a gap on the top of the door

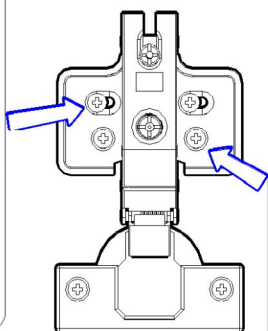

① Open screw

② Slide hinge screws (Please loosen these screws before adjusting)

ANTI-TIP DEVICE INSTALLATION INSTRUCTION

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions when using the range to prevent the risk of personal injury or damage. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.



This is the safety alert symbol. This symbol alerts you to potential hazards that can result in property damage and/or serious bodily harm or death. All safety messages will follow the safety alert symbol and either the word **WARNING** or **CAUTION**. These words means:



WARNING - Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION - Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

ANTI-TIP DEVICE

! WARNING

 
- **TO REDUCE THE RISK OF TIPPING, THE APPLIANCE MUST BE SECURED BY A PROPERLY INSTALLED ANTI-TIP DEVICE. TO CHECK IF THE DEVICE IS INSTALLED PROPERLY, VERIFY THAT ANTI DEVICE IS ENGAGED, OR GRASP THE TOP REAR EDGE OF THE RANGE BACK GROUND AND CAREFULLY ATTEMPTED TO TILT IT FORWARD.** Refer to the installation section for instructions.
- A child or adult can tip the range and be killed.
- Install the anti-tip device to the structure and/or the range. Verify the anti-tip device has been properly installed and engaged following the instructions on the anti-tip bracket template.
- Engage the range to the anti-tip device following the instructions on the anti-tip bracket template. Ensure the anti-tip device is re-engaged when the range is moved by following the instruction on the anti-tip bracket template.
- Re-engage the anti-tip device if the range is moved. Do not operate the range without the anti-tip device in place and engaged.
- See installation instruction for details.
- Failure to do so can results in death or serious injury to children or adults.

- Never remove the dresser/chest of drawer legs. The range will not be secured to the anti-tip bracket if the legs are removed.
- Do not step or sit on drawers. The range could be tipped and injury might result.
- Do not rest large heavy items on the open drawer. The range could tip forward and cause injury.
- Re-engage the anti-tip device after pulling the range out for moving or any other reason.
- Failure to follow these instructions can result in serious injury or death to children or adults.

Manufactured by : S&E Enterprise Sdn Bhd

Address : PLO 65, No:K16, Kawasan Perindustrian Tanjung Agas, 84000 Muar, Johor, West Malaysia.

03/2018

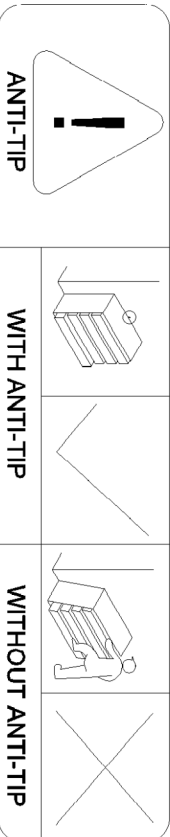

Installation Instruction :

A tip restraint must be attached to a wall stud using the 2" screw enclosed.

1. Attach a bracket to the back top rail or back top edge of the furniture using the 5/8" screw provided.
2. Locate the second bracket on the wall over a wall stud and 2 inches below the mounting strap secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole.
3. Place the furniture into position so both mounting strap are vertically in line.
4. Lace the end of the restraint releasable zip tie through the larger hole in each mounting releasable zip tie. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Confirm that the releasable zip tie is securely laced and locked.

Part Include :

