

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

 
*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

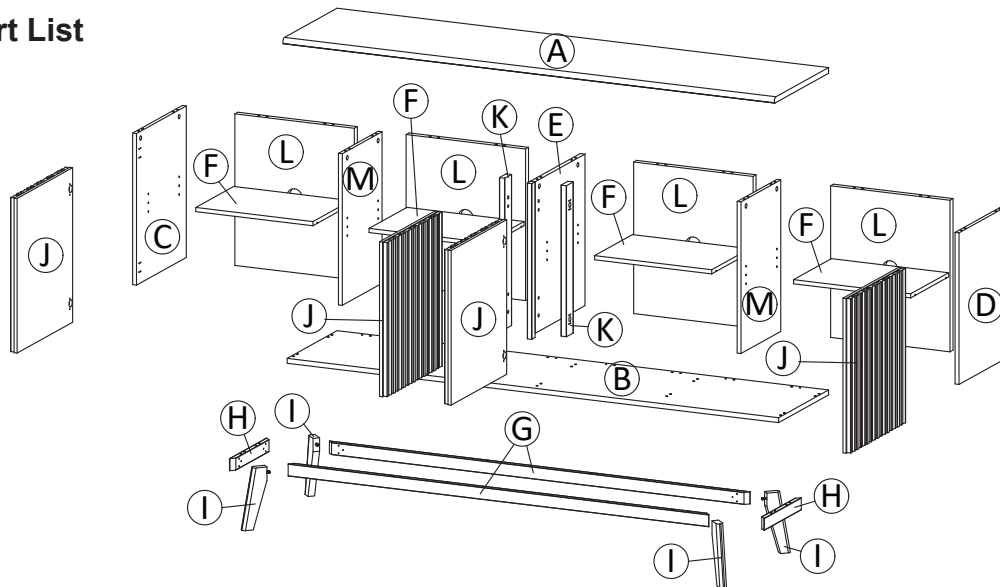

 **SAFAVIEH**
FURNITURE

Model# MED9641

 Product Dimensions: 75.04"Wx17.72"Dx32.28"H

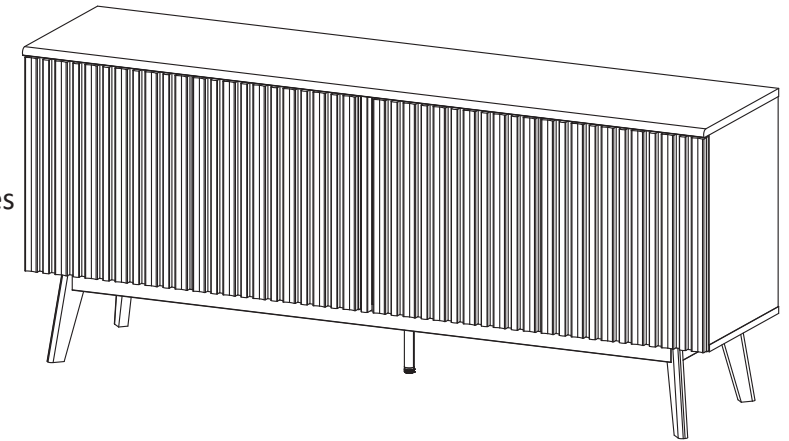









WARNING

This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 70 inches
Weight Limit: 123 lbs
Shelf Load Limit: 20 lbs
Drawer Load Limit: - lbs
Use with heavier televisions may result
in instability causing tip over resulting in
death or Serious injury.

WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on the child.

        Hardware List

HW1x26  $\varnothing 6 \times 35 \text{ mm}$	HW2x26  $\varnothing 15 \text{ mm}$	HW3x48  $\varnothing 8 \times 30 \text{ mm}$	HW4x12  $M 6.4 \times 53 \text{ mm}$	HW5x52  $M 4.5 \times 12.5 \text{ mm}$
HW6x10  $M 7 \times 50 \text{ mm}$	HW7x2  $L 4$	HW8x24  $M 4 \times 16 \text{ mm}$	HW9x16  	HW10x1  $\varnothing 15 \text{ mm}$
HW11x8  $\varnothing 15 \text{ mm}$	HW12x1  	HW13x2  $\varnothing 8 \times 50 \text{ mm}$	HW14x2  $M 6 \times 40 \text{ mm}$	HW15x4 
HW16x4  	HW17x4  	HW18x8  $M 3.5 \times 13 \text{ mm}$	HW19x2  	HW BC410x4 
HW LM23A1x1  	HW HS26Ax4  	HW HS26Bx4  		



Part List & HW For Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	2 of 2
B	Bottom Board	1	2 of 2
C	Side Board Left	1	2 of 2
D	Side Board Right	1	2 of 2
E	Center Board 1	1	2 of 2
F	Adjustable Shelf	4	2 of 2
G	Bottom Skirt 1	2	2 of 2
H	Bottom Skirt 2	2	2 of 2
I	Leg	4	1of 2
J	Frame Door	4	1 of 2
K	Support Board Center	2	1 of 2
L	Back Board	4	1 of 2
M	Center Board 2	2	2 of 2

Piece	Description	Qty	Carton Call
HW1	Cambolt	26	1 of 2
HW2	CamLock	26	1 of 2
HW3	Dowel Small	48	1 of 2
HW4	Screw M 6.4 x 53 mm	12	1 of 2
HW5	Screw M 4.5 x 12.5 mm	52	1 of 2
HW6	Screw M 7 x 50 mm	10	1 of 2
HW7	Allen Key	2	1 of 2
HW8	Screw M 4 x 16 mm	24	1 of 2
HW9	Shelf Support	16	1 of 2
HW10	Screw Cap Long	1	1 of 2
HW 11	Screw Cap Short	8	1 of 2
HW12	Wrench	1	1 of 2
HW13	Dowel Big	2	1 of 2
HW14	Screw M 6 x 40 mm	2	1 of 2
HW15	Flange Nut	4	1 of 2
HW16	Push Tool	4	1 of 2
HW17	Floor Protector	4	1 of 2
HW18	Screw M 3.5 x 13 mm	8	1 of 2
HW19	Hat Nut	2	1 of 2
HW BC410	Corner Brace	4	1 of 2
HW LM23A1	Metal Leg	1	1 of 2
HW HS26A	Full Overlay Hinge	4	1 of 2
HW HS26B	Half Overlay Hinge	4	1 of 2



PREPARATION

  - *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

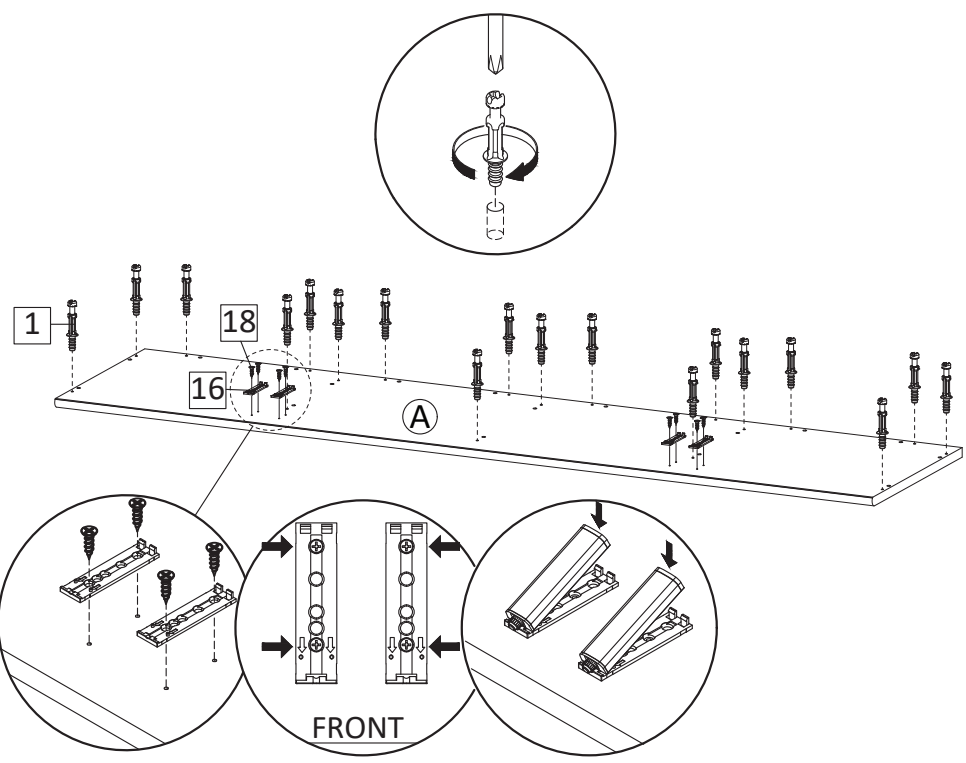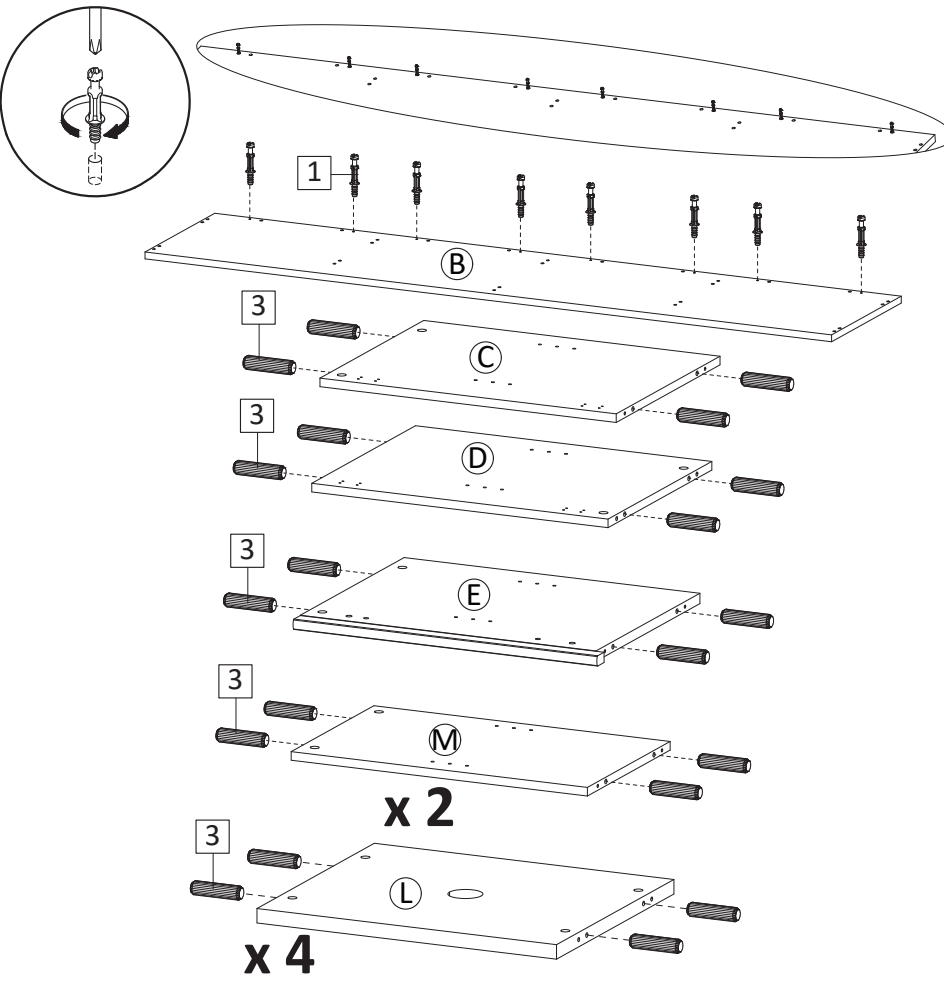	
STEP1: Insert Cambolt (HW1) into the Top Board (A). Separate the Push Tool (HW16) by pressing down the hook at the back. Separate the base, ensuring the front hook (see figure) is at the edge of the front side, and secure it with the M3.5x13mm screw (HW18). Align the front part of the Push Tool body with the bumper to the hook, then press down the back part of the Push Tool.	STEP2: Insert Cambolt (HW1) into Bottom Board (B). Insert Dowel Small (HW3) into Side Board Left (C), Side Board Right (D), Center Board 1 (E), Center Board 2 (M) and Back Board (L).

PREPARATION

  - *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

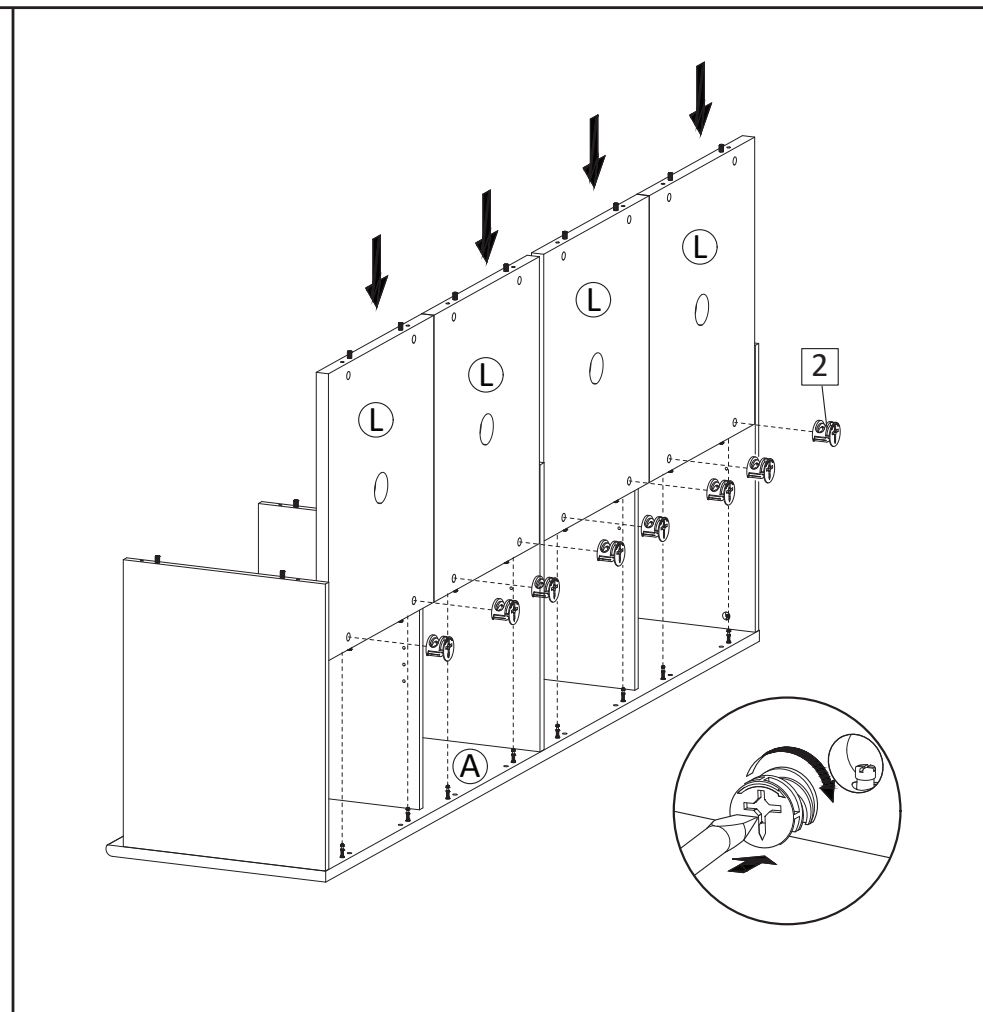
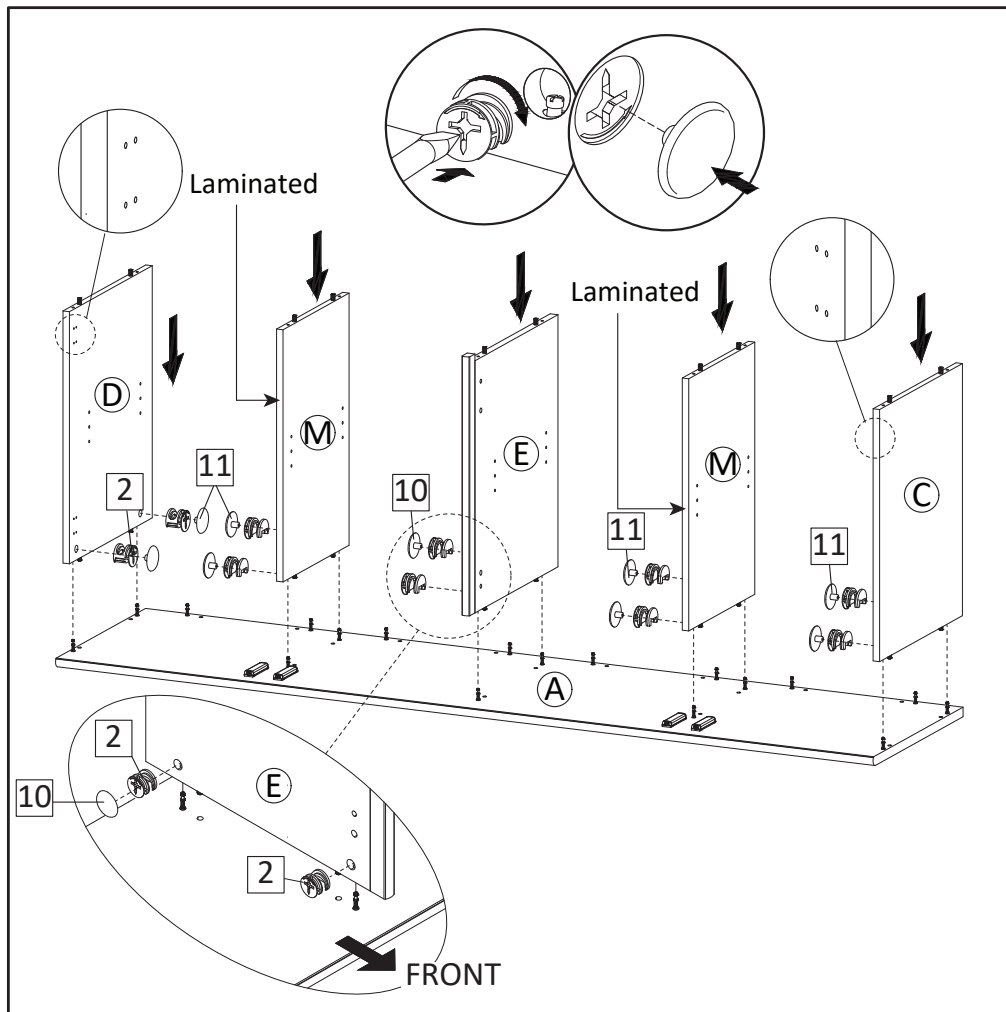


STEP3: Attach Side Board Left (C), Side Board Right (D), Center Board 1 (E), and Center Board 2 (M) into Top Board (A). Insert Camlock (HW2) then tighten using screwdriver. Put Screw Cap Short (HW11) over the screw Side Boards (C&D) and Center Board 2 (M), and put Screw Cap Long (HW10) over the screw Center Board 1 (E).

STEP4: Insert Back Board (L) onto the Top Board (A). Insert Camlock (HW2) then tighten using screwdriver.

PREPARATION

  - *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

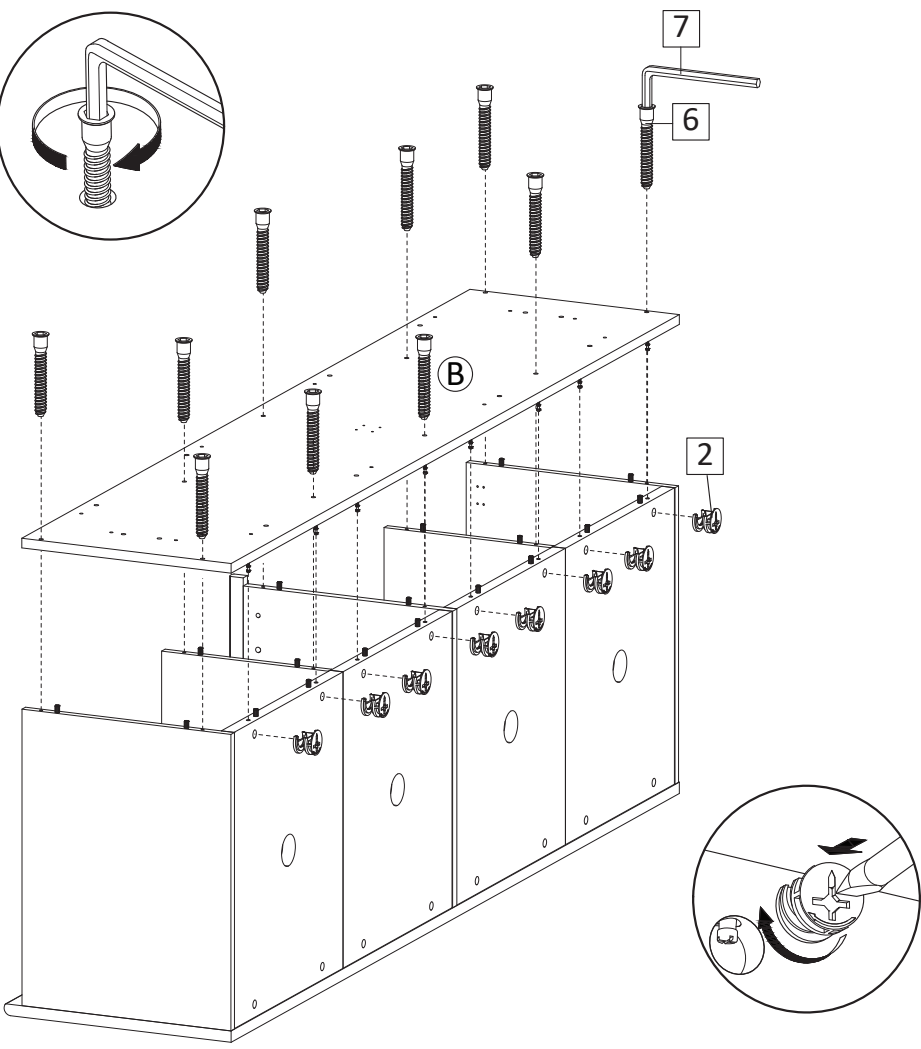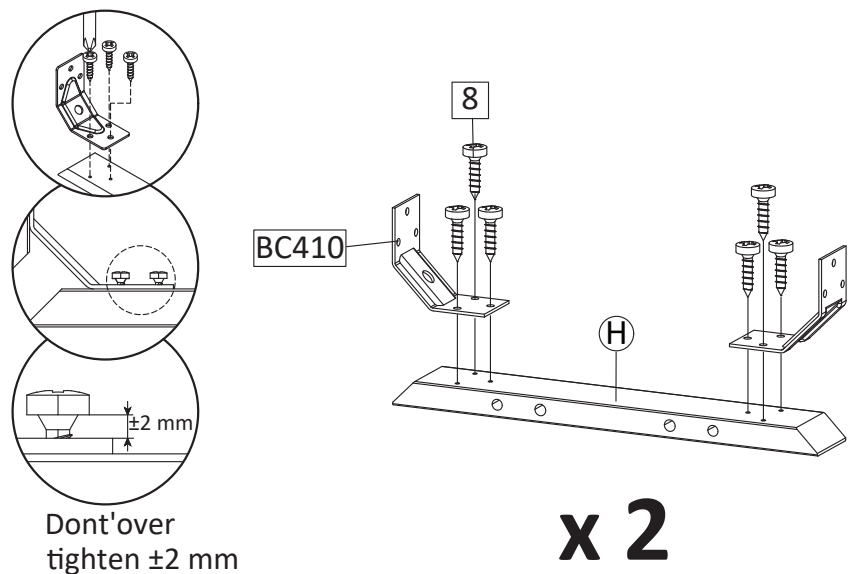 The diagram shows the bottom board (B) being attached to the frame. Screws (HW6) are shown being inserted into the board. A callout shows a screw being tightened with an Allen key. Another callout shows a camlock (HW2) being inserted into the board. The board is labeled 'B' and the camlock is labeled '2'.	 The diagram shows the bottom skirt (H) being attached to the frame. Corner braces (BC410) are shown being inserted into the skirt. Screws (HW8) are shown being inserted into the skirt. A callout shows a corner brace being installed. Another callout shows a warning not to over-tighten the screws, leaving a gap of ±2 mm. The corner brace is labeled 'BC410' and the skirt is labeled 'H'. The quantity 'x 2' is indicated.
STEP5: Put Bottom Board (B) and secure with Screw M7x50 (HW6),tighten screws using Allen Key (HW7). Insert Camlock (HW2) then tighten using screwdriver.	STEP6: Now let's combine the Bottom Skirt. Start with installing Corner Brace (HW BC410) into Bottom Skirt 2 (H) using Screw M4x16mm (HW8). Do not overtight screw yet,leave around 2mm gap.

PREPARATION

 
 
*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.



*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

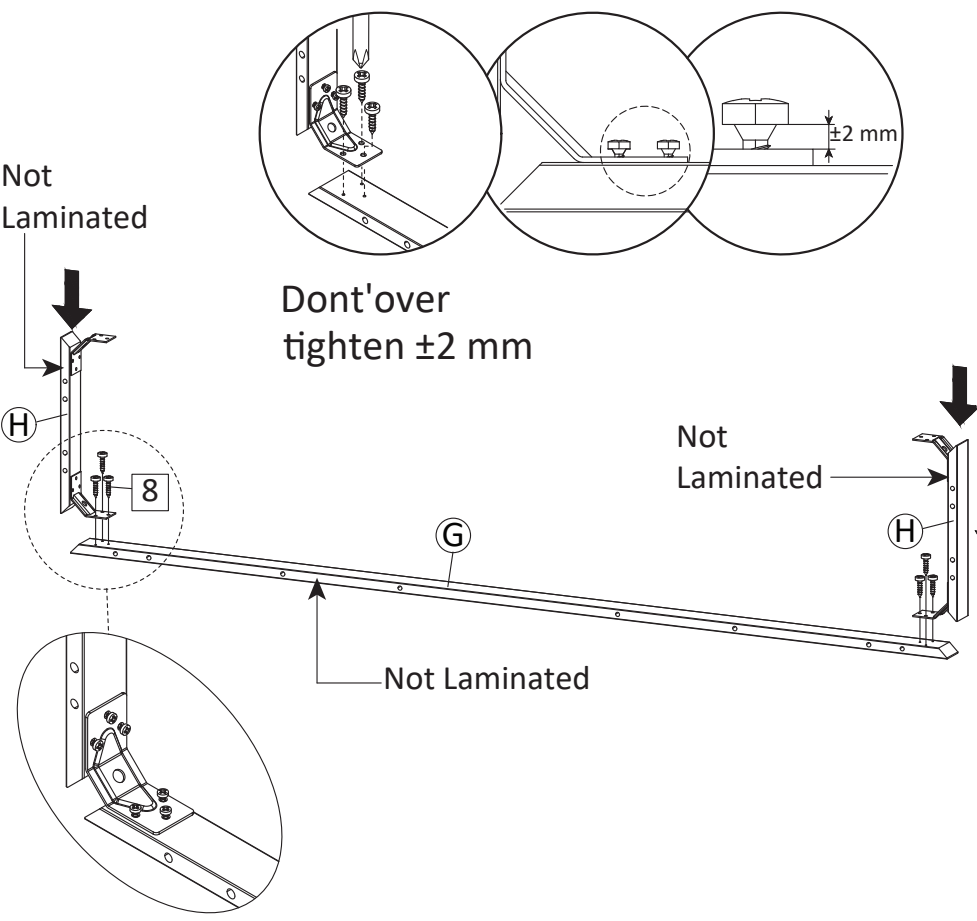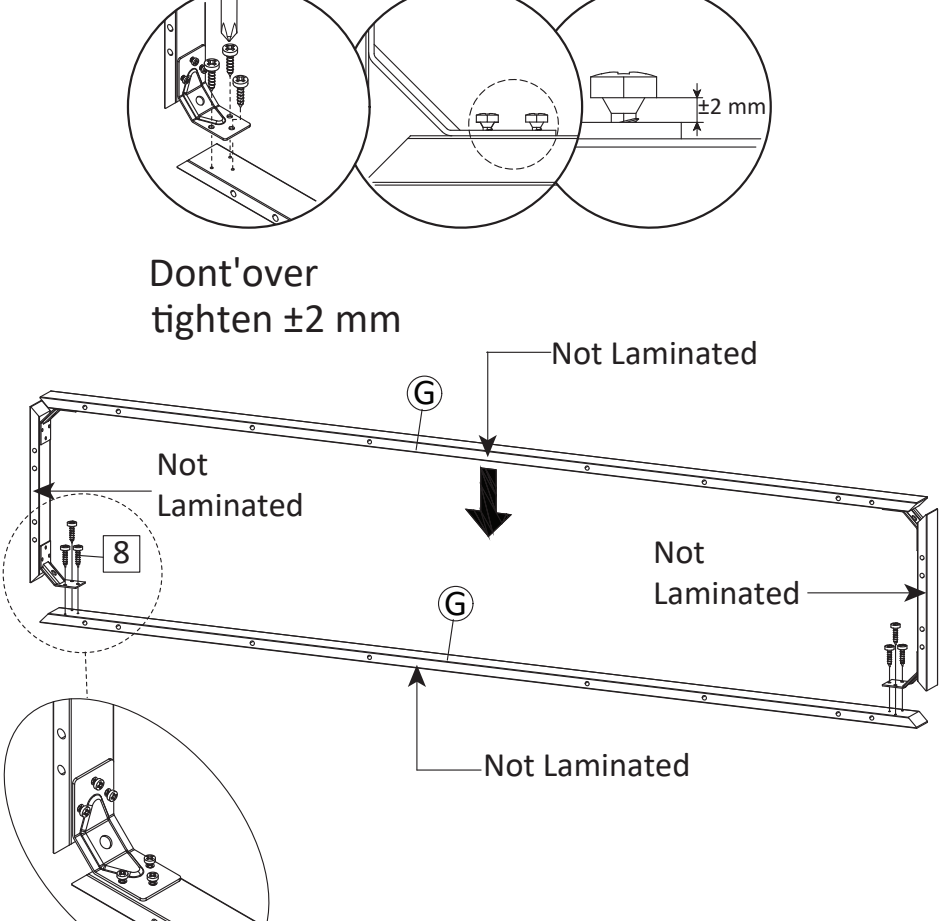 Not Laminated Dont'over tighten ± 2 mm Not Laminated Not Laminated Not Laminated 8 G H	 Dont'over tighten ± 2 mm Not Laminated Not Laminated Not Laminated Not Laminated 8 G H
STEP7: Combine components from step 6 with remaining Bottom Skirt 1 (G), using Screw M4x16mm (HW8). Do not overtight screw yet,leave around 2mm gap.	STEP8: Combine the Bottom Skirt 2 from step 7 with remaining Bottom Skirt 1 (G), using Screw M4x16mm (HW8). Do not overtight screw yet, leave around 2mm gap.

PREPARATION

  - *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

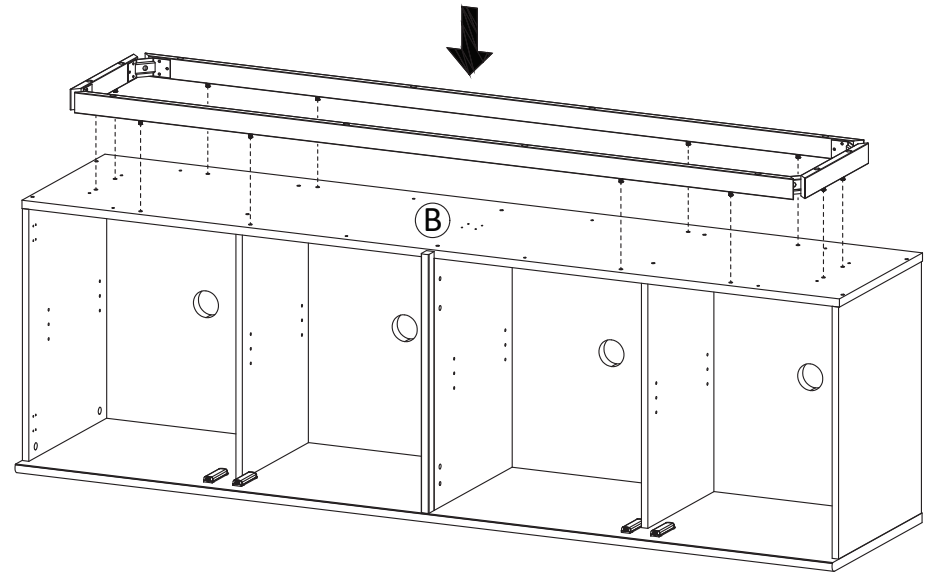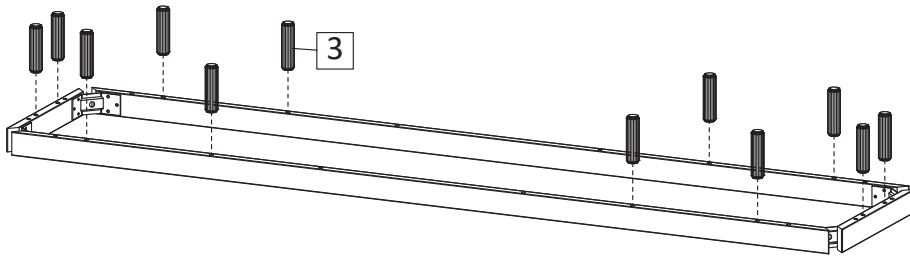

STEP9: Insert Dowel Small (HW3) into assembled bottom skirt.

STEP10: Bring the assembled bottom skirt and insert into Bottom Board of the sideboard.

PREPARATION

 
 
*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

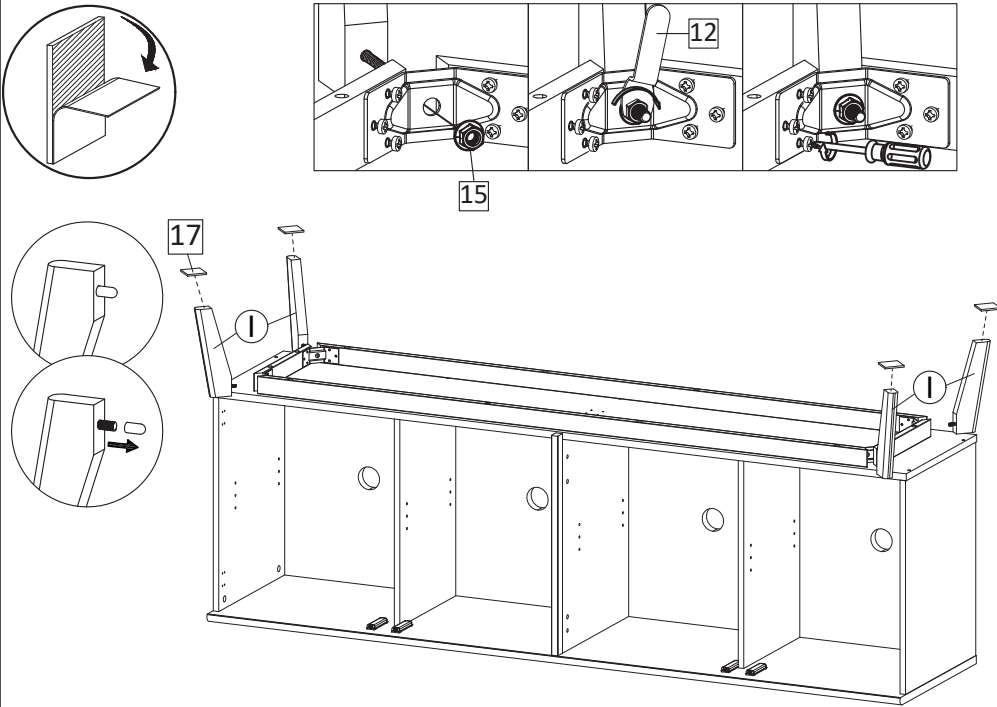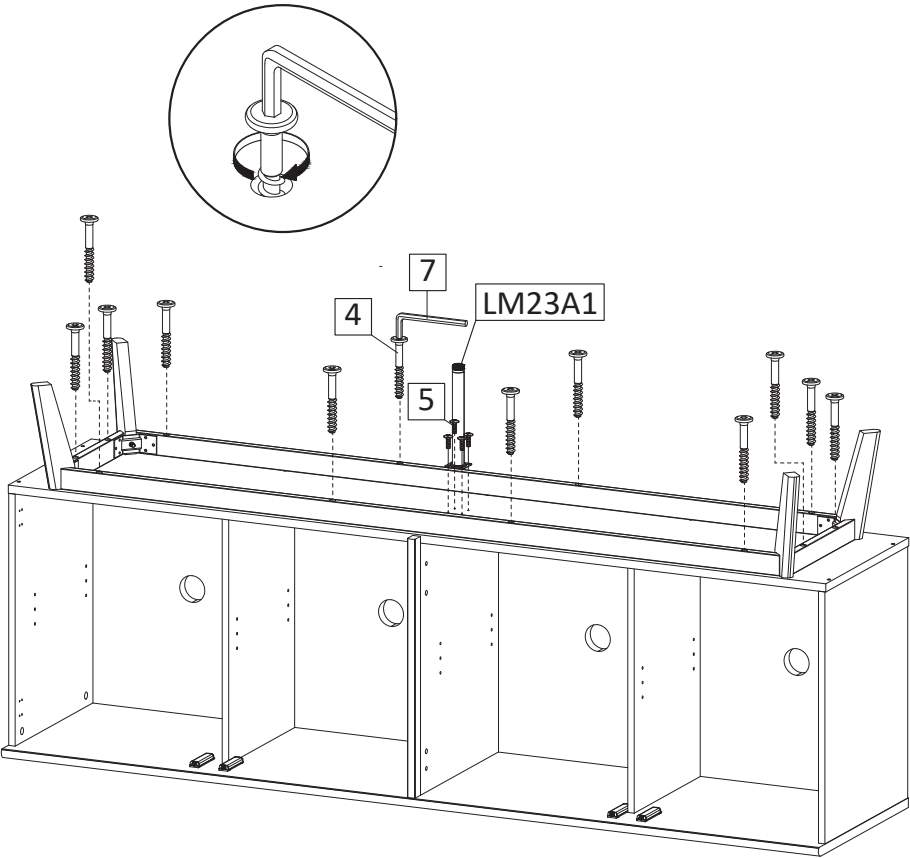	
STEP11: First, let's fix the leg by inserting leg to Corner Brace, Insert Flange Nut (HW15) first into the hanger bolt of leg, tighten all the Flange nut using provided Wrench (HW12). Second, after Ensuring that all legs has been tightened, continue with tighten all screws on the corner brace. Peel off paper from Floor Protector (HW17) and stick it onto the leg.	STEP12: Insert Screw M6.4x53mm (HW4) using Allen Key (HW7) into assembled bottom skirt and bottom board. Install Metal Leg (LM23A1) on Bottom Board and secure with screw M4.5x12.5mm (HW5).

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

STEP13: First insert Dowel Big (HW13) into provided holes on Center Board 1 (E). Then Put Support Board Center (K) on both side and secure with Screw M6x40mm (HW14), Hat Nut (HW19). Hold still the Hat Nut (HW19) using Allen Key (HW7) while tighten Screw (HW14) using Allen Key (HW7).	STEP14: After bringing the product upright, insert Shelf Support (HW9) into the holes on Side Board & Center Board, on the desired level. Then place the Adjustable Shelf (F) by inserting the hole of the shelf into the shelf support.

PREPARATION

 
 
*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

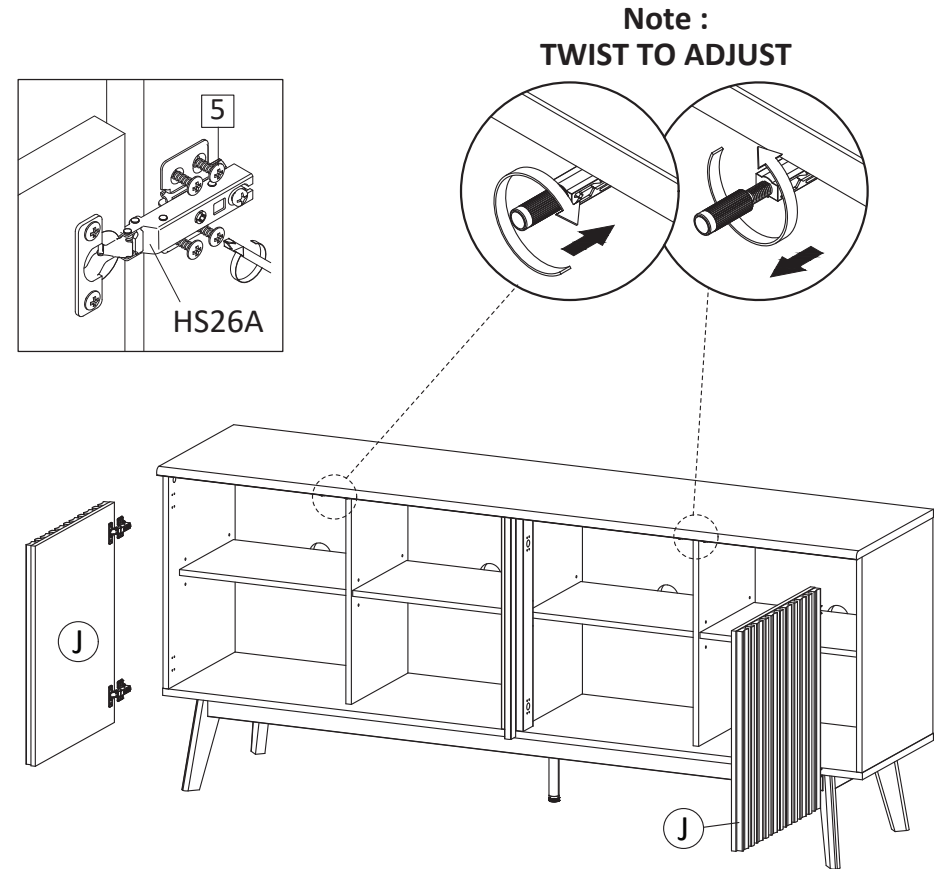
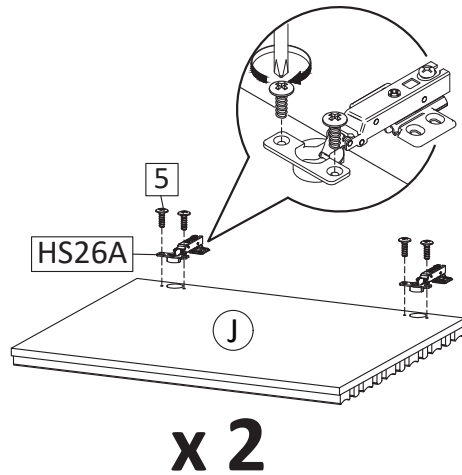


STEP15: Insert the Full Overlay Hinge (HW HS26A) into the pre-drilled holes on the 2 pieces of Frame Door (J). Secure it with Screws M4.5x12.5mm (HW5).



STEP16: Install Frame Door (J) into Side Board Left and Side Board Right. Please review above images carefully. Full Overlay Hinges (HW HS26A) must be used for left and right doors. Adjust the push tool as needed to ensure doors opening and closing smoothly.

PREPARATION

  - *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

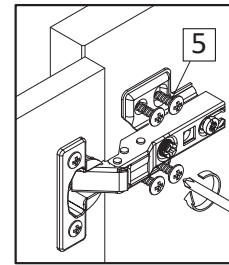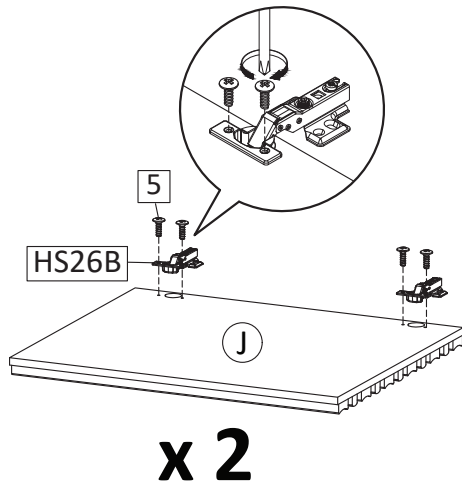

Note :
TWIST TO ADJUST

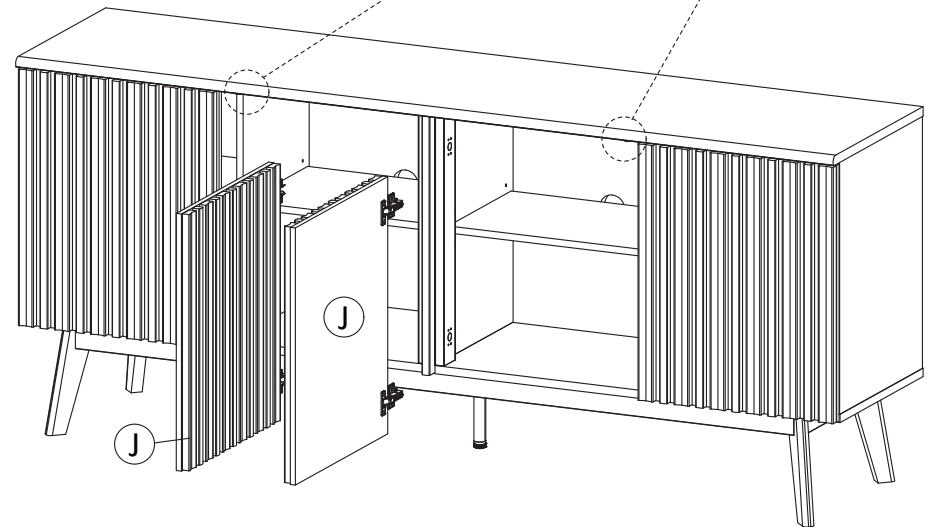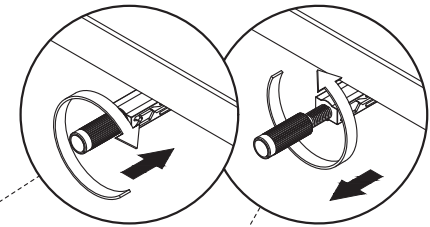  


STEP17: Insert the Half Overlay Hinge (HW HS26B) into the pre-drilled holes on the 2 pieces of Frame Door (J). Secure it with Screws M4.5x12.5mm (HW5).


STEP18: Install Frame Door (J) into Support Board Center. Please review above images carefully. Half Overlay Hinges (HW HS26B) must be used for left and right doors. Adjust the push tool as needed to ensure doors opening and closing smoothly.

PREPARATION

 - *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

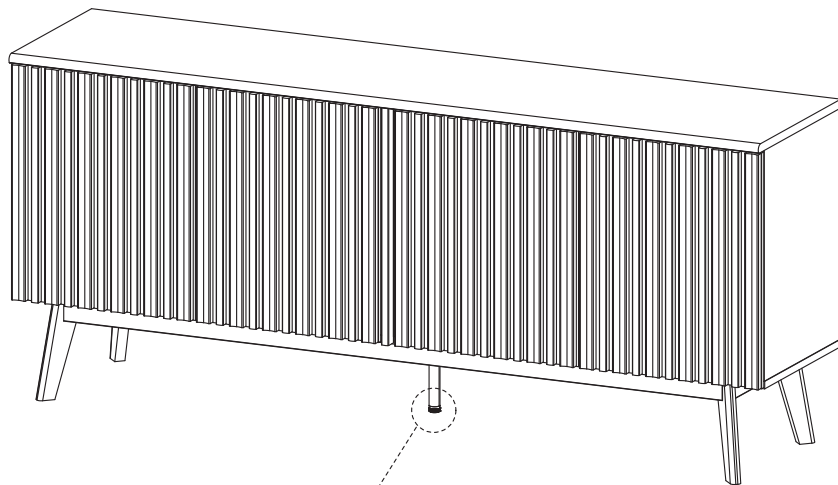

 STEP19: The legs come with adjustable leveller, adjust it as needed until your furniture sit steady on the floor.

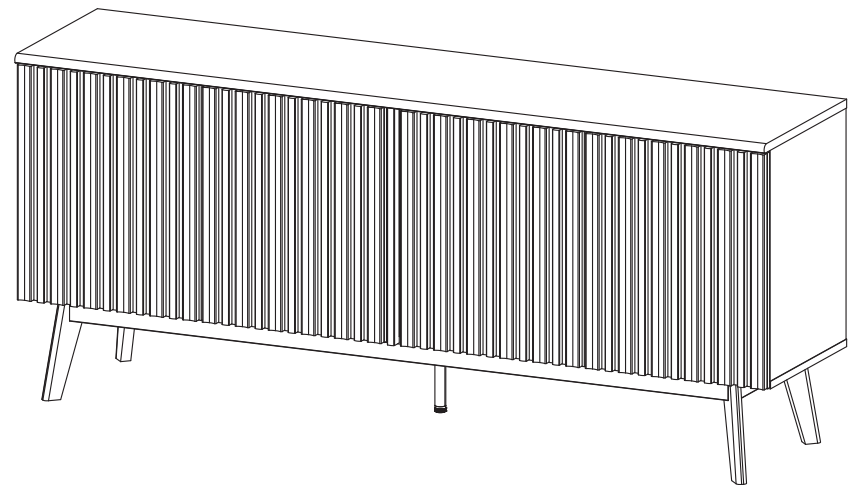






STEP20: Assembly Complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE



Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

     Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

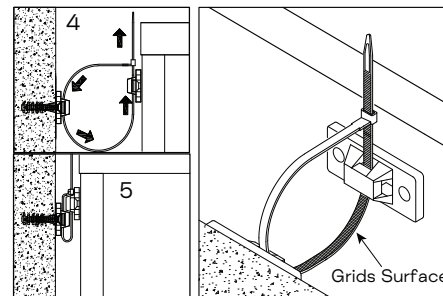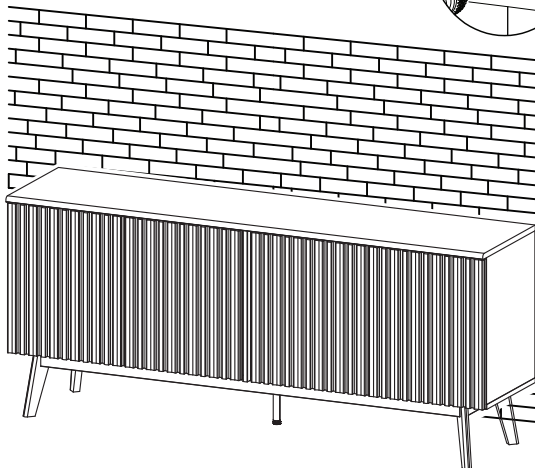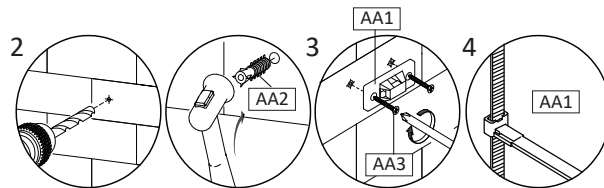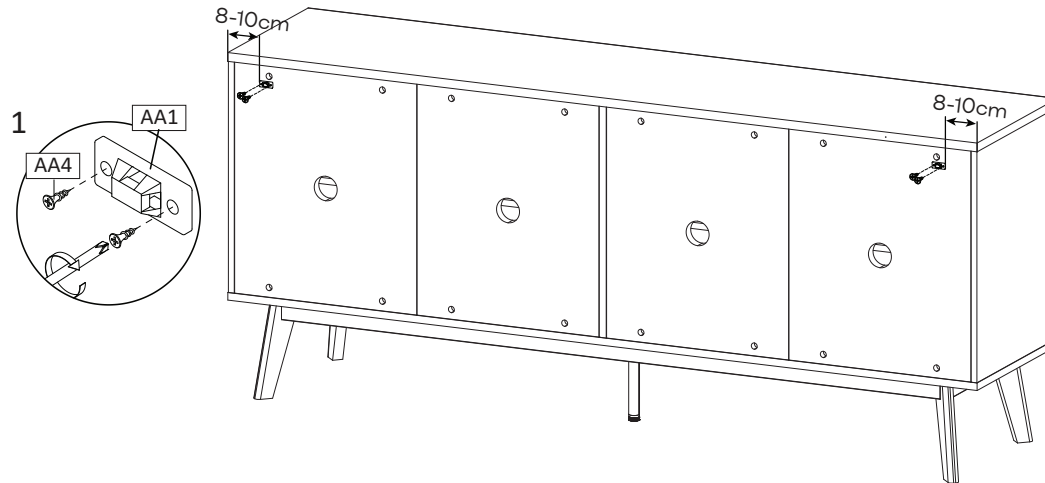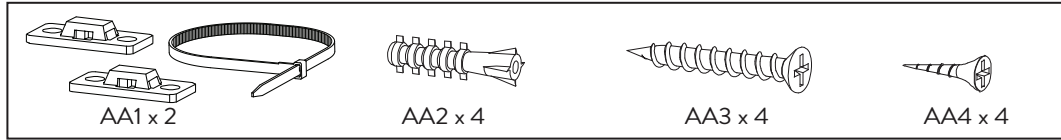


HOW TO ADJUST HINGES

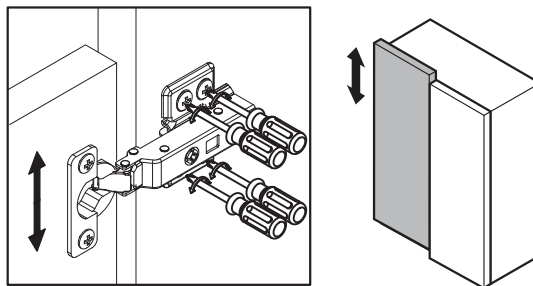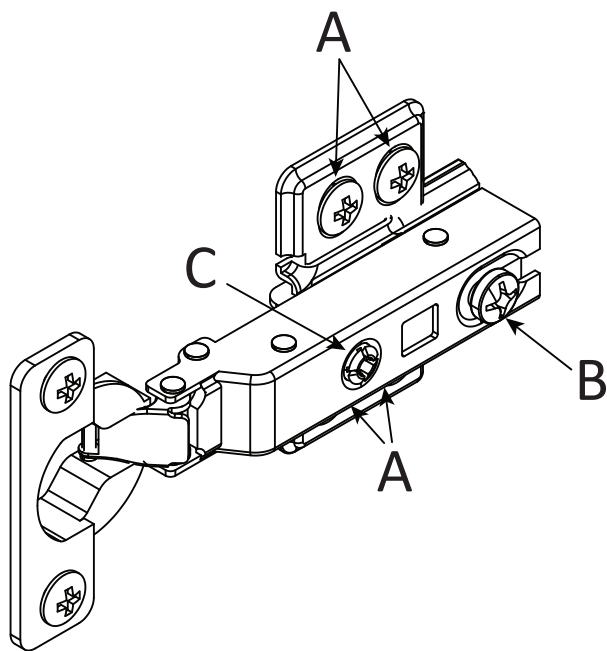  


To adjust the vertical height.

 Loosen the four screws “A” on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

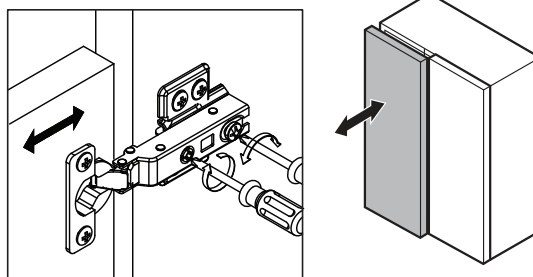

To adjust depth.



 
Loosen screw “B” and adjust door, if the door can not be adjusted, please loosen screw “C”, then try again. Tighten screw “B” and “C”.

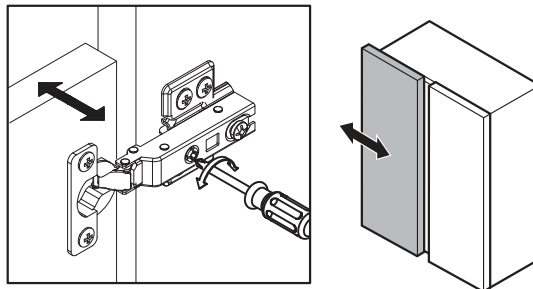

To adjust side ways.



Turning the screw “C” on BOTH hinges on each door.

   HOW TO ADJUST HINGES

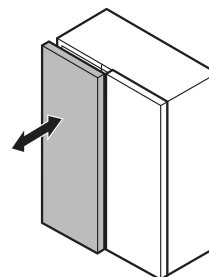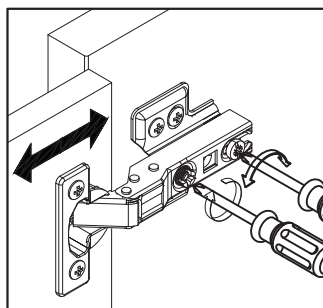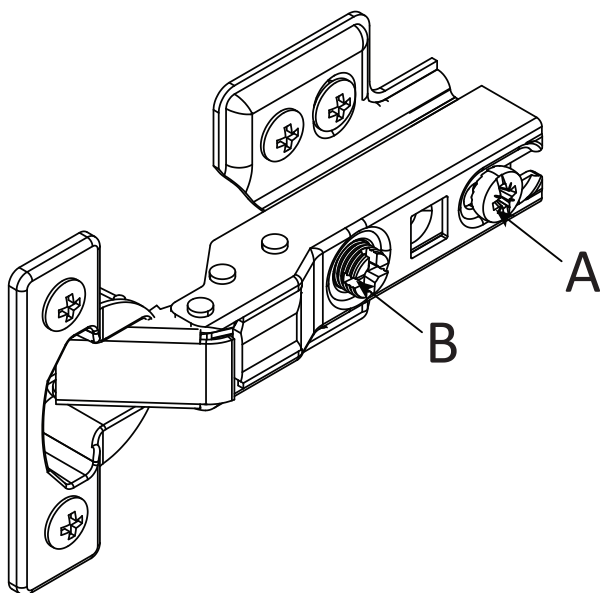

To adjust depth.

  Loosen screw "A" and adjust door forward/backward.
If the door can not be adjusted, please loosen screw "B",
then try again.
Tighten screw "A" and "B".

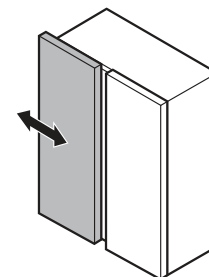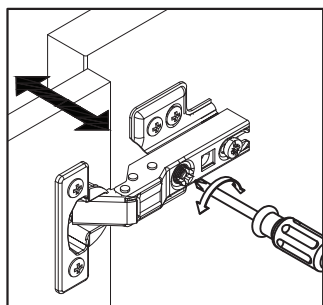

To adjust side ways.

Turning the screw "B" on BOTH hinges
on each door.