CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
1	Sofa Back		1X
2	Sofa Bottom		1X
3L	Sofa&Chair Side Panel 1		3X
3R	Sofa&Chair Side Panel 2		3X
4	Chair Back		2X
5	Chair Bottom	\Diamond	2X
6	Table Top		1X
7	Table Side Panel		2X
8	Table Bottom		1X
А	Allen bolt(M6x35 mm)		40X
В	Flat Washer	0	40X
С	Allen key		1X



Model# PAT2005A
AMASY OUTDOOR LIVING SET
Product Dimensions:

23.6"x26.4"x29.9" H (Chair) 43.3"x26.4"x29.9" H (Sofa) 35.4"x19.7"x11.8" H (Table)

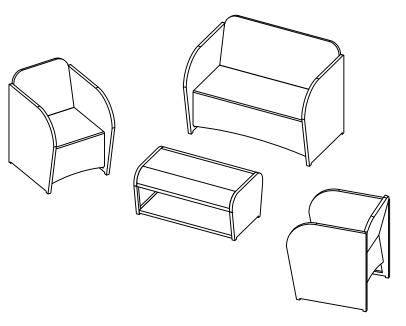

ATTACH YOUR RECEIPT HERE

Serial Number

Purchase Date

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 45 minutes.

Tools Required for Assembly (included): Allen Key

