CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Frame back		2X
В	Tie leg		4X
С	Anti-sitting		2X
D	Anti-title		2X
E	Cloth		1X
F	Fabric Sitting		1X
Н	Screw	€)	8X
I	Screw	®	4X
J	Allen key	LG5	1X

Weight Capacity: 600 Ibs Warning: Do not stand on chair

Warning: Do not over torque bolts / screws








Model# PAT7066


Product Dimensions:24.4" W x 24.8" D x 28.74" H

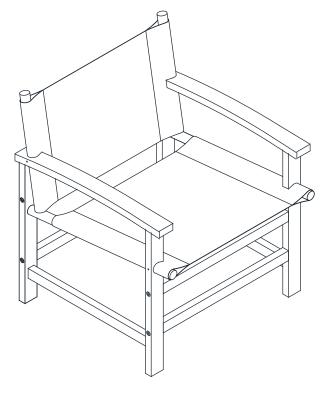

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

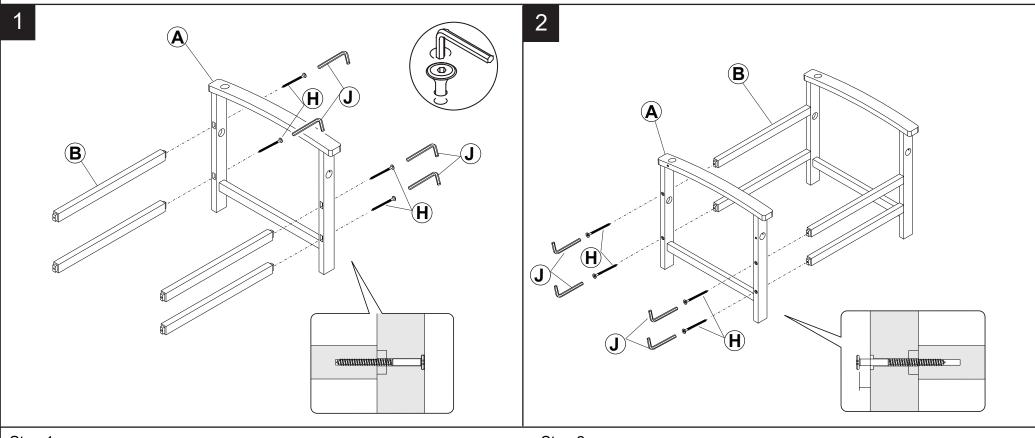

Step 1
Attach Tie leg (B) to Frame back (A) ,use Screw (H) tighten with allen key (J).

Step 2
Attach Tie leg (B) to Frame back (A) ,use Screw (H) tighten with allen key (J).

Follow the instructions.

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

3 Step 3 Step 3

Follow the instructions.

Step 5

Follow the instructions.

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

5

Step 6

allen key (J).

Use Screw (I) to tighten with bake and use Screw (H) tighten with

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.



NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Top Table		1X
В	Frame Leg		4X
С	Bolt	(a) M6x50	8X
D	Washer	M6.5/20X2	8X
E	Allen key	LG4	1X

Weight Capacity: 600 Ibs

Warning: Do not stand on chair

Warning: Do not over torque bolts / screws








Model# PAT7066

Product Dimensions:47.24" W x 23.62" D x 17.71" H

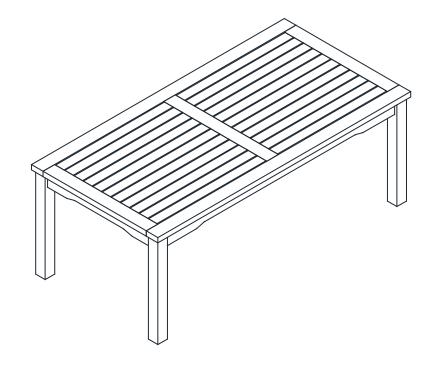


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

1

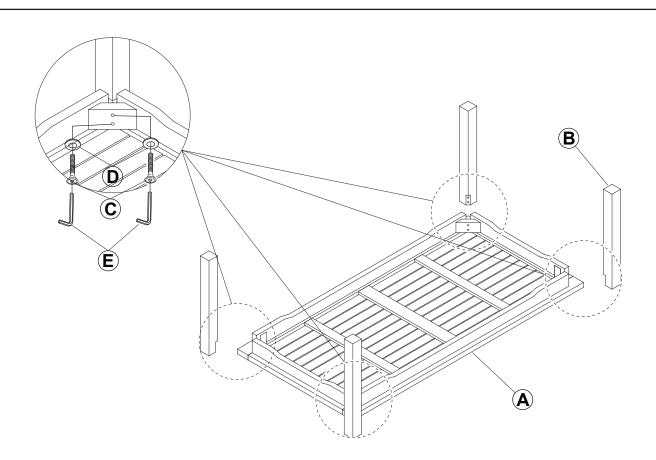



Step 1

Attach Frame Leg (B) to Top table (A) ,use Bolt (C) Washer (D) and tighten with allen key (E).