CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Weight Capacity: 600 Ibs

Warning: Do not stand on table

Warning: Do not over torque bolts / screws








Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Table Top		1X
В	Leg		4X
С	Bolt	M8 X 55	8X
D	Washer	Ø 8.5x20x2mm	8X
Е	Allen key	LG4	2X

Model# PAT7069

Product Dimensions:31.5" W x 31.5" D x 17.7" H

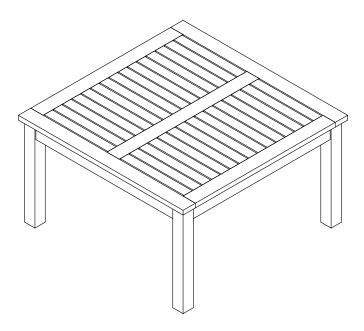


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

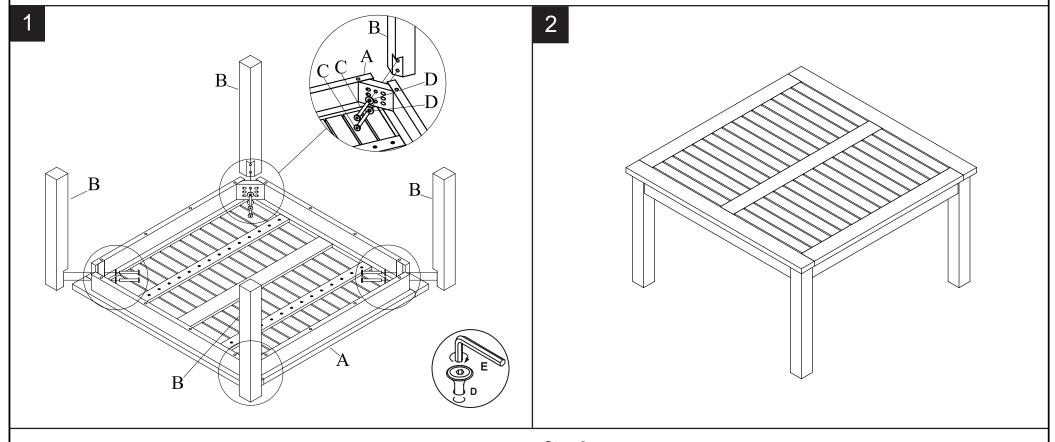

Step 1
Attach Leg (B) to Table Top (A). Use Bolt (C) and Washer (D) tighten with Allen Key (E).

Step 2

Caution: This Table can only be used on a flat, level surface.