CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer.

Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE

*Please make sure that you have all parts indicated before you begin assembly of this item

*This item should be assembled on a soft surface to prevent scratching the finish during assembly


*This item may require periodic tightening

Part List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	ACRYLIC LEG		4X
В	ACRYLIC KNOB		3X
С	SCREWS	Q _{DDDD}	6X
D	TAPPING SCREW	Europe	8X

SAFAVIEH


Item# SFV3573A
Product dimensions:62.25"Wx18"Dx30.5"H

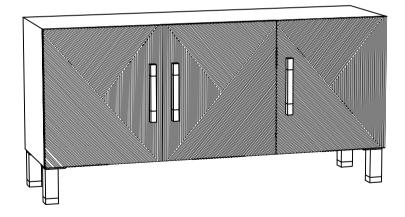

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimate Assembly Time: 12 minutes

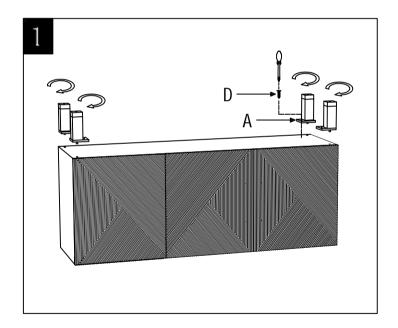

Step 1

Remove all of the components from the cabinet and place them on a carpeted or scratch-free surface.

Place the cabinet top upside down and the bottom side faced up, screw the acrylic leg and tighten them.

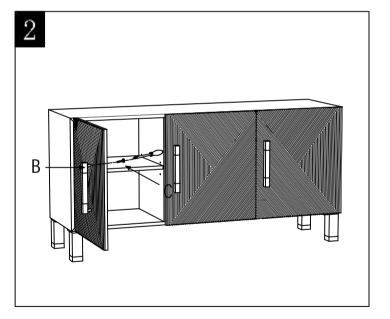

Step 2

Face the cabinet upright. Screw the acrylic knob onto the door.