

CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.





NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item

* This item should be assembled on a soft surface to prevent scratching the finish during assembly

* This item may require periodic tightening

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat		1X
B	Front Leg		2X
C	Back Leg		2X
D	Plastic Washer		4X

SAFAVIEH COUTURE

SFV4745

Dimensions: 29.13"W*32.28"D*44.88"H

Weight Capacity: 275 lbs

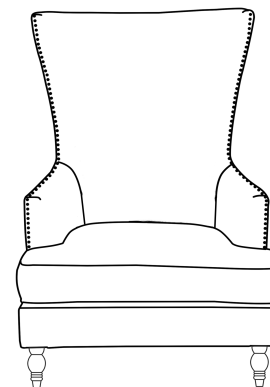

WARNING: DO NOT STAND ON CHAIR

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

**The legs and hardware are located underneath the
Chair in the zipper compartment**


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen key

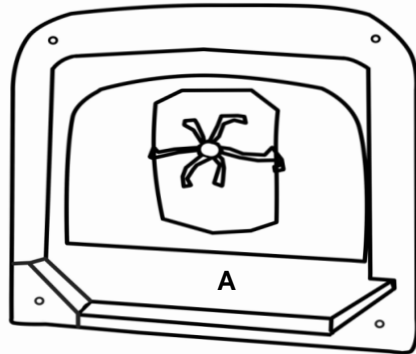


STEP1

OPEN THE ZIPPER ON THE UNDERSIDE OF THE SEAT AND TAKE OUT LEGS AND HARDWARE

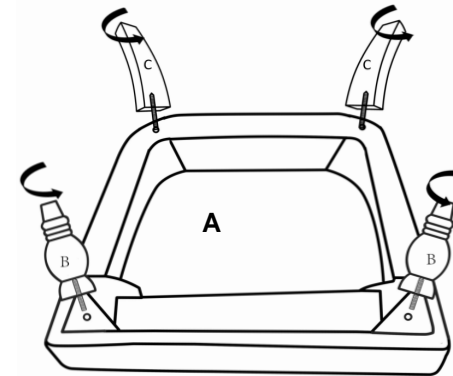

STEP2

ROTATE THE LEGS UNTIL TIGHTEN AS SHOWN IN THE PICTURE. CLOSE THE ZIPPER ON THE UNDERSIDE OF THE SEAT.

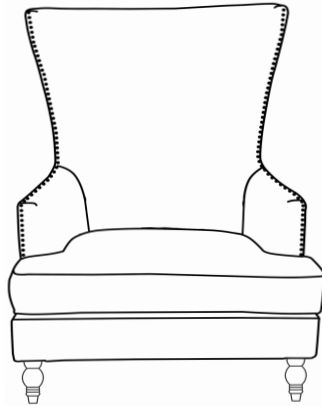

STEP3 PUT THE CHAIR UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEN. IF THE CHAIR WOBBLY, YOU CAN ADJUST LEGS BY ADDING PLASTIC WASHER(D) BEFORE ROTATING.

The legs and hardware are located underneath the Chair in the zipper compartment