

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you having difficulty, our friendly Customer Care team is always here to help. Please email

**customersupport@safavieh.com**
















## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly (included): Allen Key

## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Table Frame		3X	HW3	Acron Nut with Bolt		4X
B	Upper Leg (L: 178mm)		4X	HW4	Full-Thread Bolt 1/4" x 1.2mm x 50mm		4X
C	Middle Leg (L: 334mm)		4X	HW5	Hex Bolt 1/4" x 1.2mm x 90mm		4X
D	Bottom Leg (L: 92mm)		4X	HW6	Split Washer		4X
E	Glass		2X	HW7	Nut		4X
F	Mirror		1X	HW8	Cap		4X
HW1	Allen Key		1X	HW9	Rubber Mat		18X
HW2	Wrench		1X				

 **SAFAVIEH**  
FURNITURE

Model# ACC6203

Product Dimension: 22" x 18" x 26.5"H

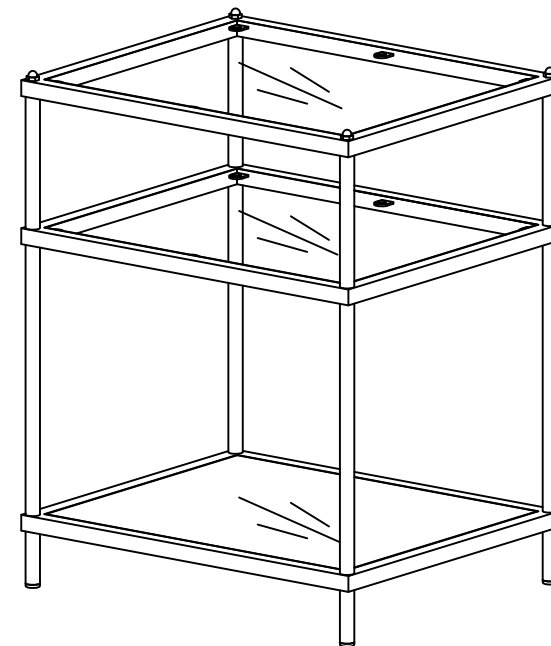

 **WARNING** 


Weight Capacity - 22.05 LBS

Warning : Do not stand on table.

Warning : Do not over torque bolts.


# PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly (included): Allen Key
- \* If you having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

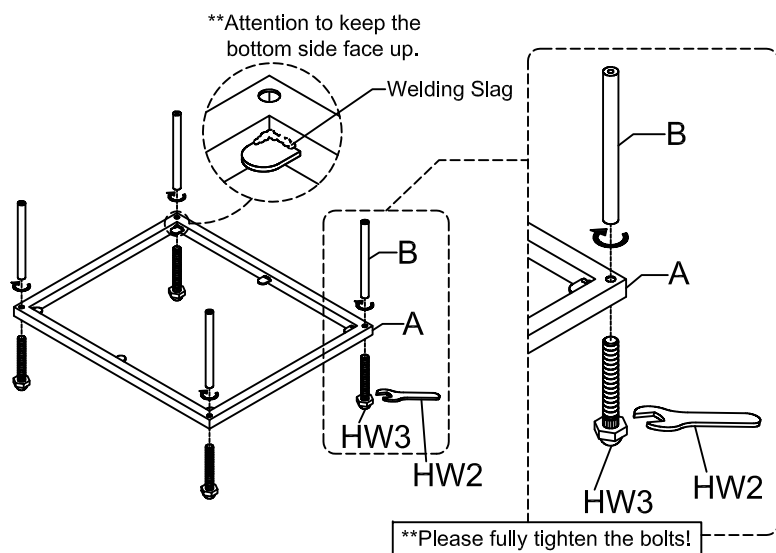

## STEP1 :

Assemble table frame (A) and upper leg (B) with bolt (HW3) and by use of wrench (HW2) as shown in drawing, fully tighten the bolts.

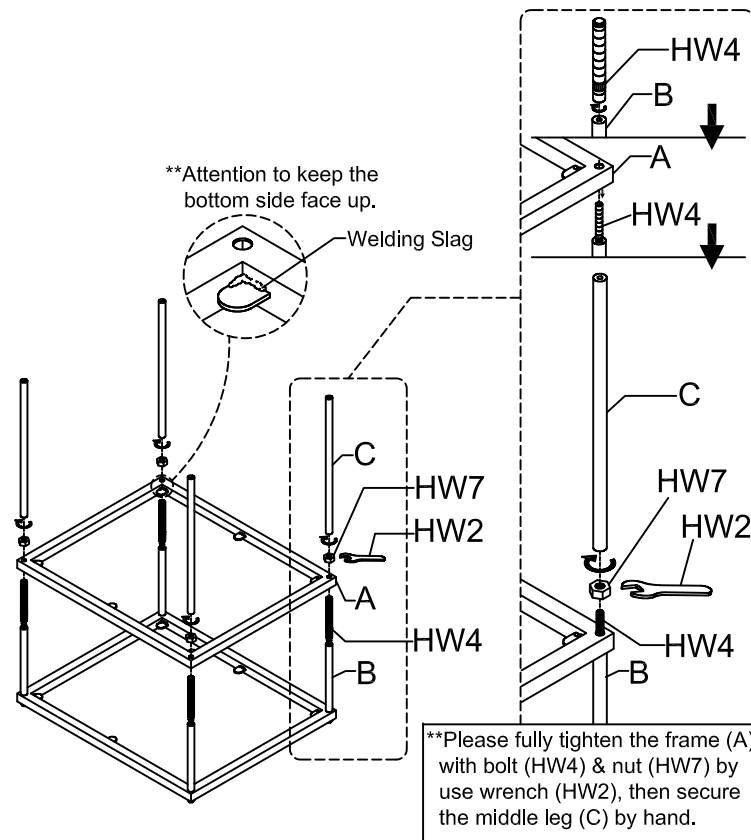


## STEP2 :

Screw in full-thread bolt (HW4) into threaded nut on the tube end of upper leg (B), then insert table frame (A) into assembled frame as shown in drawing, fully tighten the bolts.  
Fully tighten the frame (A) with bolt (HW4) & nut (HW7) by use wrench (HW2) as shown in drawing, then secure the middle leg (C) by hand .


# PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly (included): Allen Key
- \* If you having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

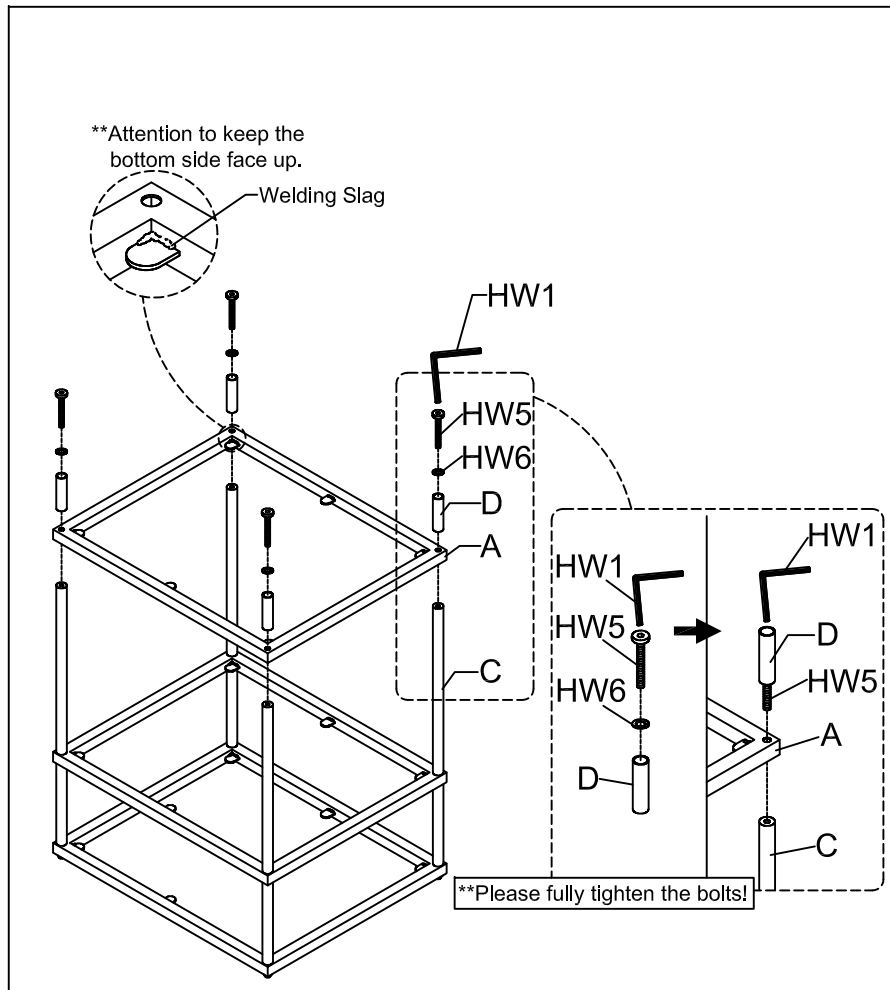

## STEP3 :

Screw in hex bolt (HW5) & split washer (HW6) into threaded nut in the tube of bottom leg (D), then assemble middle leg (C), table frame (A) & bottom leg (D) with hex bolt (HW5) by use the Allen key (HW1) as shown in drawing, fully tighten the bolts.

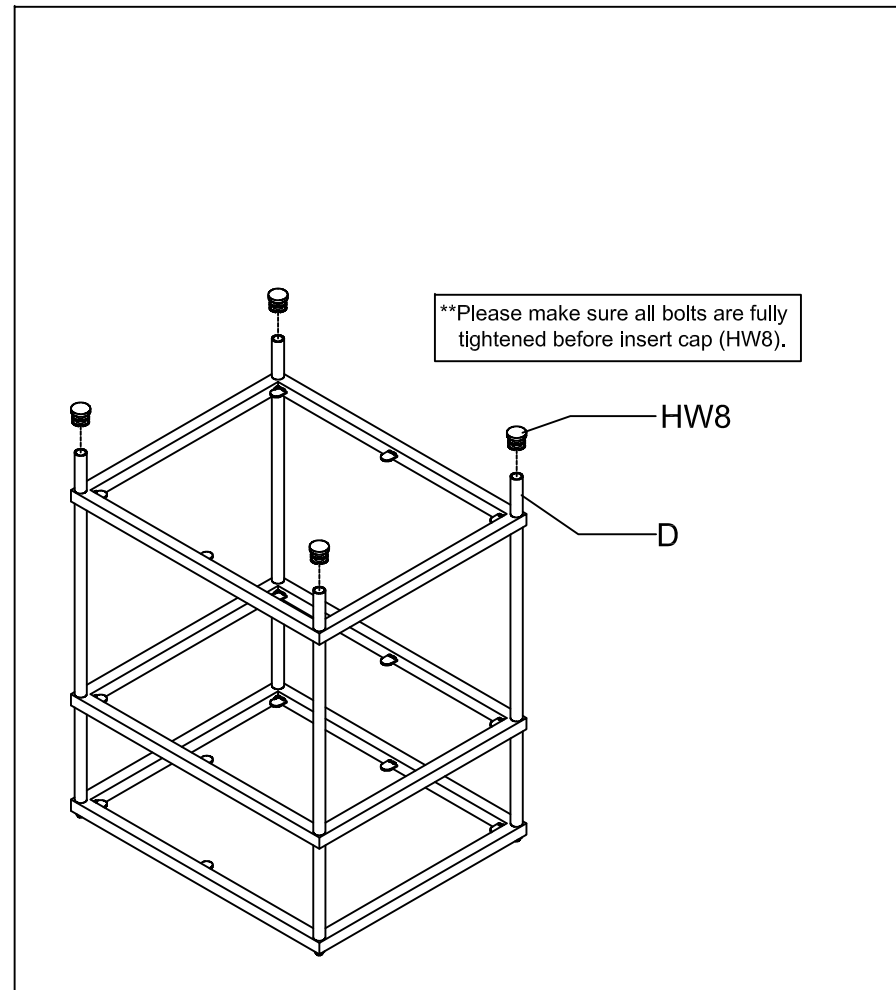


## STEP4 :

Make sure all bolts are fully tightened, then insert cap (HW8) into the tube end of bottom leg (D) as shown in drawing.


## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly (included): Allen Key
- \* If you having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

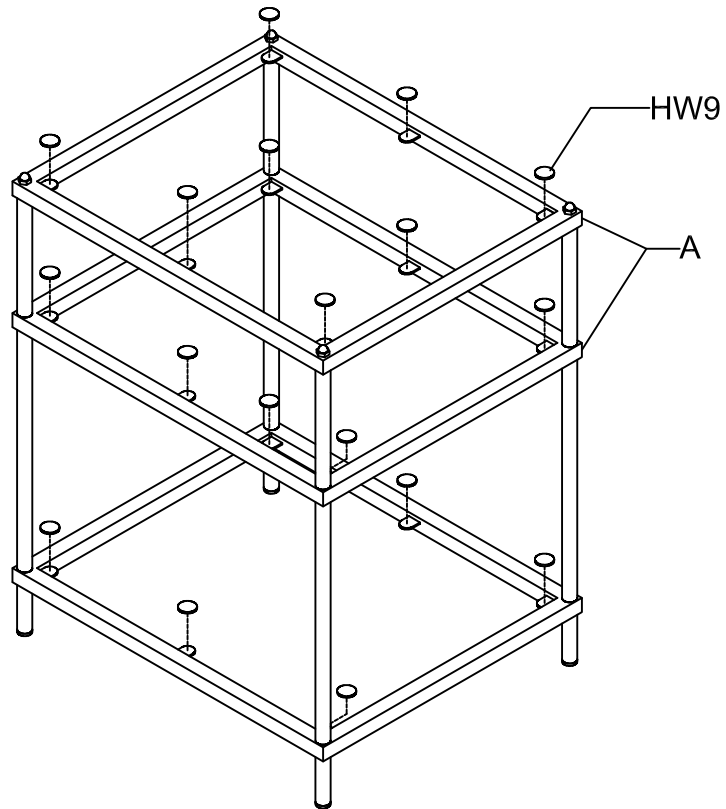

### STEP5 :

Stick rubber mat (HW9) onto the frame (A) as shown in drawing.

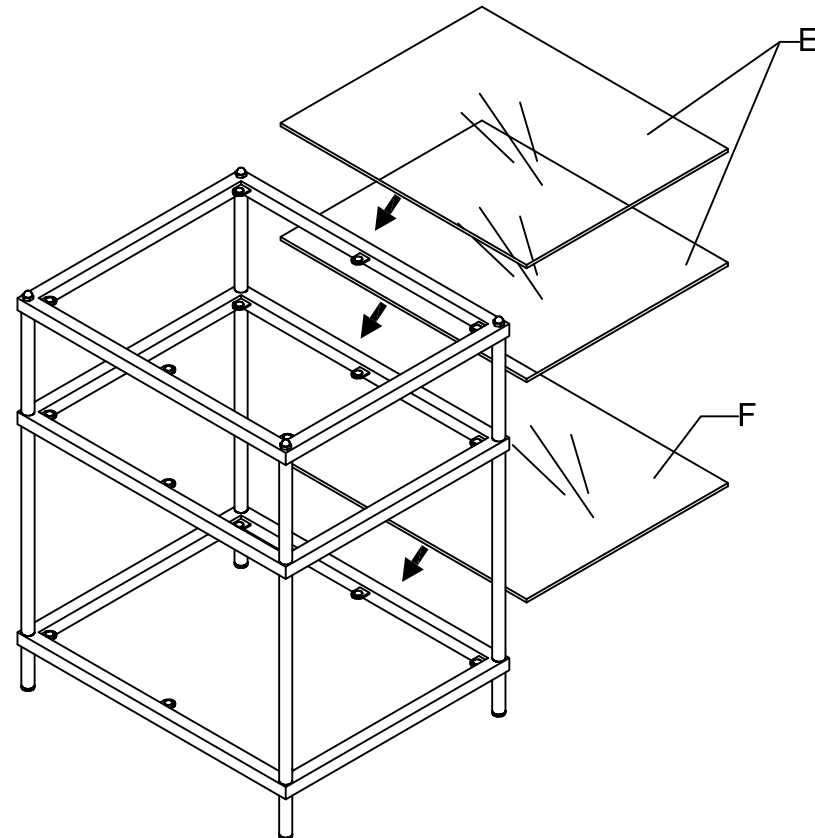

### STEP6 :

Put the glass (E) and mirror (F) on frame (A) as shown in drawing.