

CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE














- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.


 **SAFAVIEH**
FURNITURE

Model# ACH6209

Product Dimensions: 29"W x 29"D x 33-1/2"H

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Back Cushion		1x
B	Seat Frame		1x
C	Armrest(Left)		1x
D	Armrest(Right)		1x
E	Seat Cushion		1x
F	Connecting Bar		2x
G	Side Frame(Left)		1x
H	Side Frame(Right)		1x
HW1	Hex Socket Bolt	 5/16"-18x2-1/2"	13x
HW2	Hex Socket Bolt	 5/16"-18x3-3/4"	2x
HW3	Hex Socket Bolt	 1/4"-20x 5/8"	8x
HW4	Allen Key	 M5	1x
HW5	Allen Key	 M4	1x

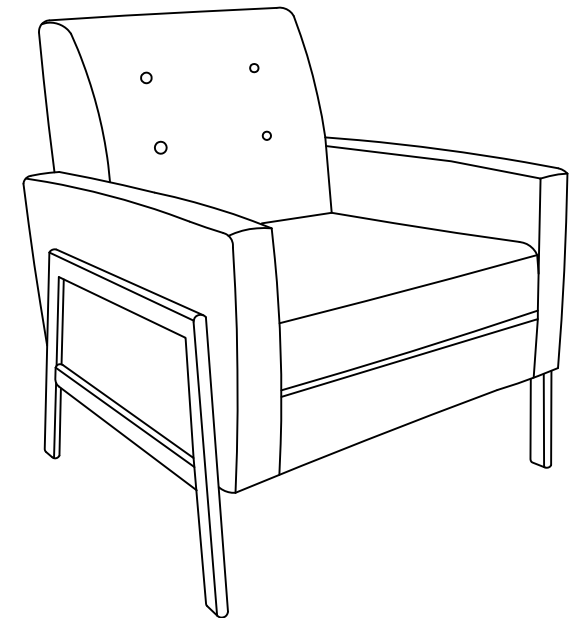


Weight capacity : 275 lbs
WARNING : DO NOT STAND ON THE PRODUCT
WARNING : DO NOT OVER TORQUE BOLTS

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 25 minutes.


Tools Required for Assembly (included): Allen Key

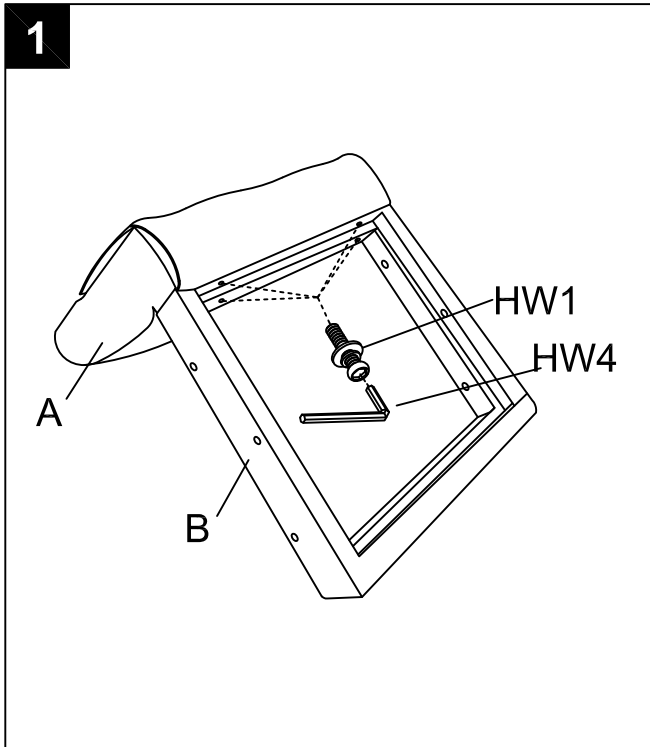

Step 1 :
Uncover Velcro on the non-woven fabric at the underneath of Seat Frame (B), Attach Seat Frame (B) to the Back Cushion (A), Using Allen key (HW4) to lock with 4*Hex Socket Bolt (HW1) into the seat frame to assembly with chair back.

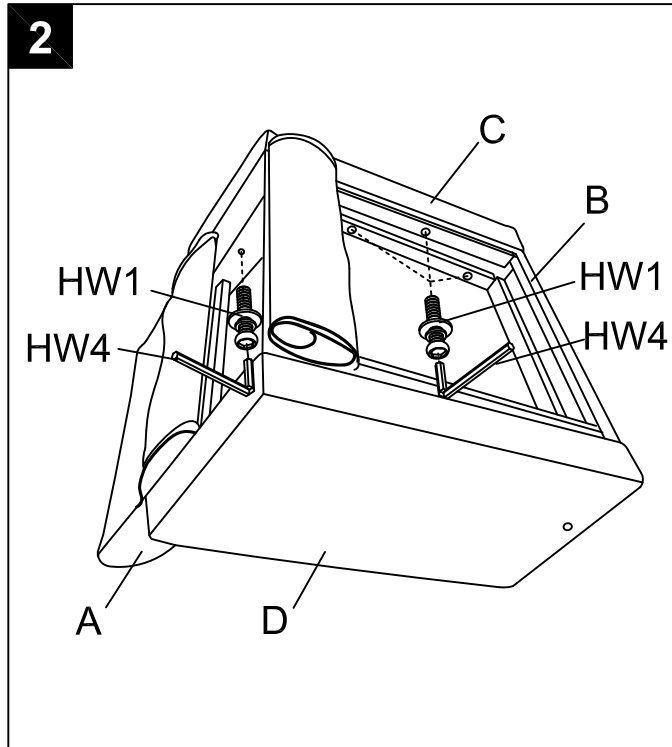

Step 2
Also uncover Velcro from the fabric on the lower back of Back cushion (A), Attach both Armrest (Left) & (Right) (C & D) to the Back cushion (A) / Seat frame (B) in the corresponding position, Using Allen key (HW4) to lock with 8*Hex Socket Bolt (HW1), Then cover the Velcro back and press tight. as picture.

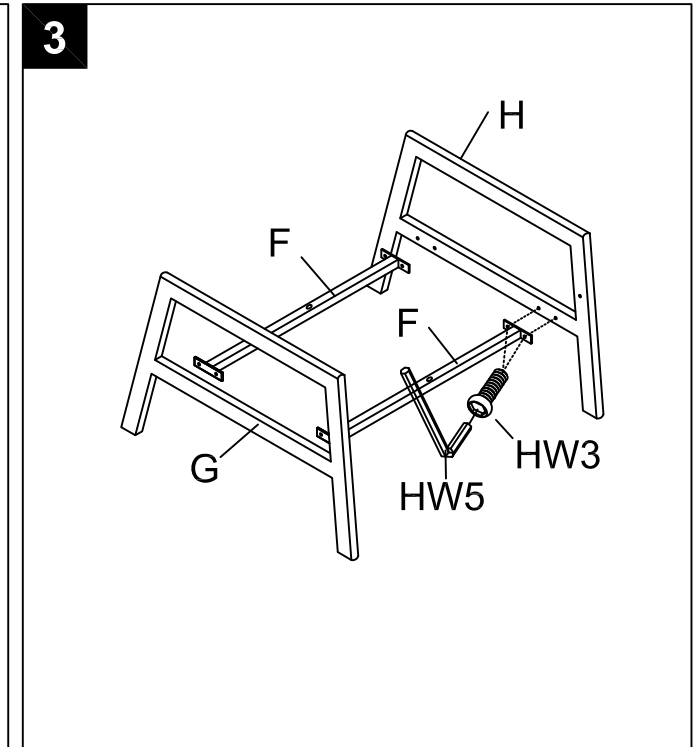


Step 3
Attach 2*Connecting Bar (F) with both Side Frame (Left) & (Right) (G & H), Using Allen key (HW5) to lock with 8*Hex Socket Bolt (HW3).

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 25 minutes.

Tools Required for Assembly (included): Allen Key

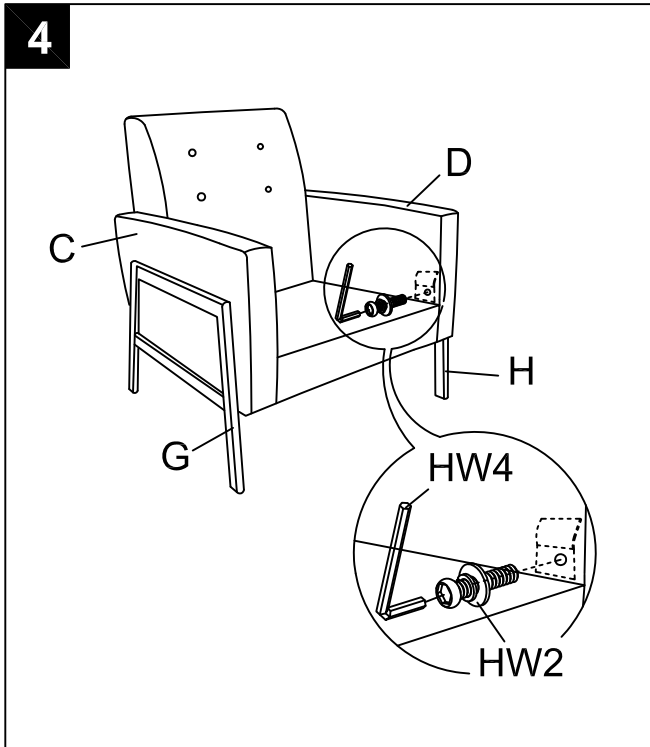


Step 4

Place the assembled upholster cushion on the assembled iron base, then uncover Velcro from the small piece fabric on inside of both Armrest (Left) & (Right) (C & D), Using Allen key (HW4) to lock with 2*Hex Socket Bolt (HW2) with the iron base. Then cover the Velcro back and press tight. as picture.

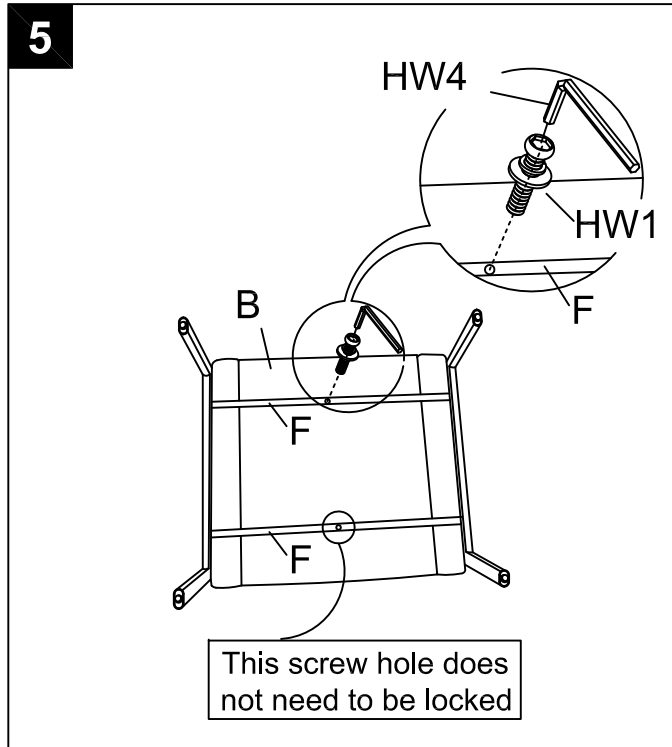

Step 5

Turn the product upside down, Using Allen key (HW4) and 1*Hex Socket Bolt (HW1) to lock the seat frame and the iron base.

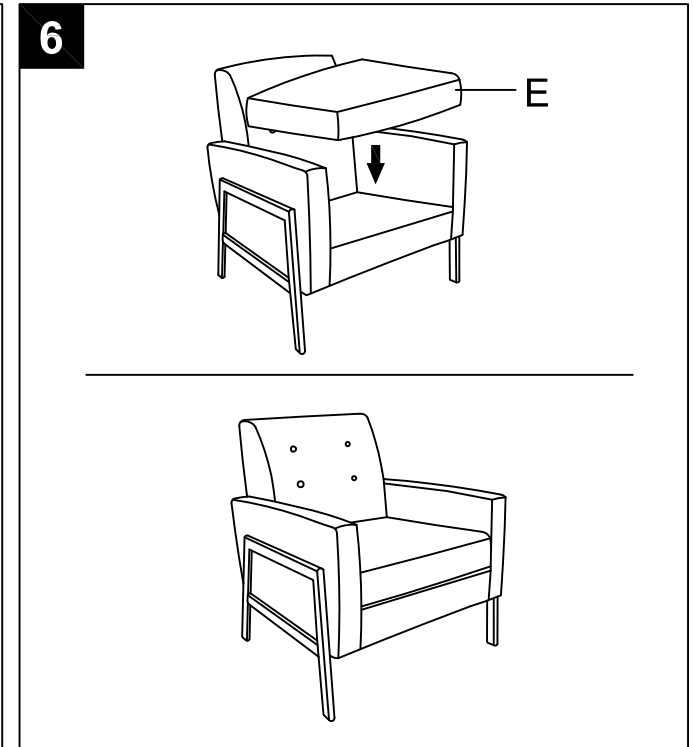

Step 6

Straighten up the assembled product, then place the Seat Cushion (E) on. Assembly is completed.