NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish durning assembly.
- * This item may require periodic tightening.
- * If you having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Dust with a soft, dry cloth. Do not use abrasive cleaner. To clean mirror, spray a small amount of glass cleaner onto a lint-free cloth and wipe mirror clean.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top Frame		1X	HW1	Allen Key		1X
В	Bottom Frame		1X	HW2	Socket Screw 1/4" x 1.2mm x 12mm	()	8X
С	Leg		4X	HW3	Socket Screw 1/4" x 1.2mm x 32mm	@	4X
D	Mirror		2X	HW4	Wheel		4X



Model# BCT8004

Product Dimensions: 29.6"L x 16.5"D x 29.8"H






Weight Capacity - 22 LBS per shelf Warning: Do not stand on Cart. Warning: Do not over torque bolts.


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

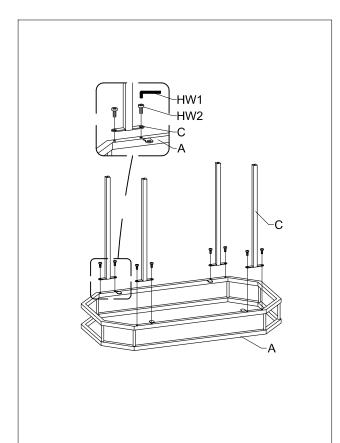


STEP1:

Assemble top frame (A) to leg (C) with bolt (HW2) by use of Allen key (HW1) as shown in drawing.

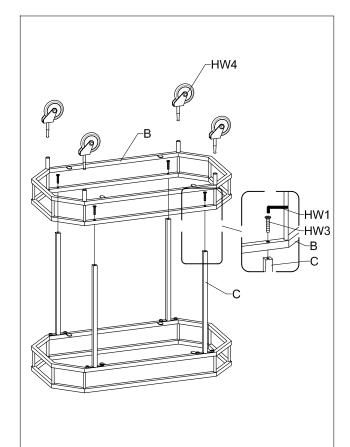

STEP2:

Assemble bottom frame (B) to leg (C) with bolt (HW3) by use of Allen key (HW1) and tighten up.Insert wheel (HW4) into the holes on bottom frame (B) as shown in drawing.

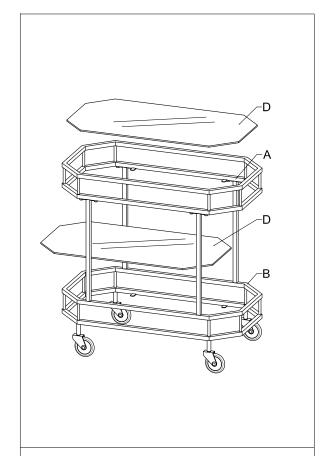

STEP3:

Place mirror (D) onto the top frame (A) and bottom frame (B).