NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item.Refer to parts list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.Do not tighten bolts until completely assembled.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help.
Please email customersupport@safavieh.com

PREPARATTION

*Before beginning assembly of product,make sure all parts are present.Compare parts with part contents list and hardware contents list.
*If an part is missing or damaged,do not attempt to assemble the product.
*Estimated Assembly Time:30 minutes.
*Tools Required for Assembly:Allen Key (included) .

CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

SAFAVIEH FURNITURE

Model# BED6200-F

Product Dimensions: 78-1/2"Wx56-1/2"Dx30"H

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Headboard		1x
B	L/Frame of Headboard		1x
C	R/Frame of Headboard		1x
D	Forepart of Bed fame		1x
E	Midpiece of Bed fame		1x
F	Rearward of Bed fame		1x
G	Center connecting rod		2x
H	Leg		4x
I	Side support leg		4x
J	Center support leg		5x
HW1	Hex socket bolt	1/4"-20 x 5/8"	45x
HW2	Split lock washer	1/4" x Ø3/8"	16x
HW3	Flat washer	1/4" x Ø5/8"	16x
HW4	Allen key	 M4	1x

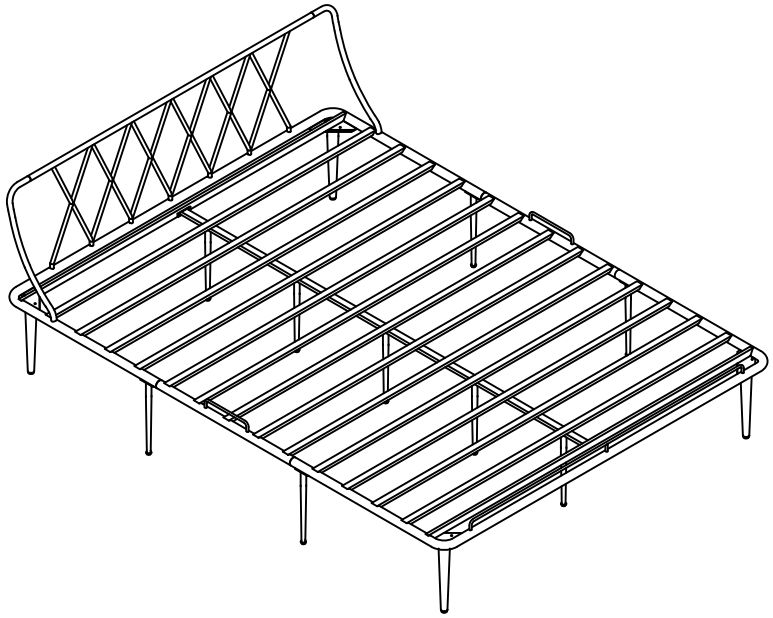

WARNING

Weight capacity : 550lbs
WARNING : DO NOT STAND ON THE PRODUCT
WARNING : DO NOT OVER TORQUE BOLTS

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 30 minutes.
*Tools Required for Assembly: Allen Key (included) .
*If you are having difficulty, our friendly Customer Care team is always here to help.Please email customersupport@safavieh.com

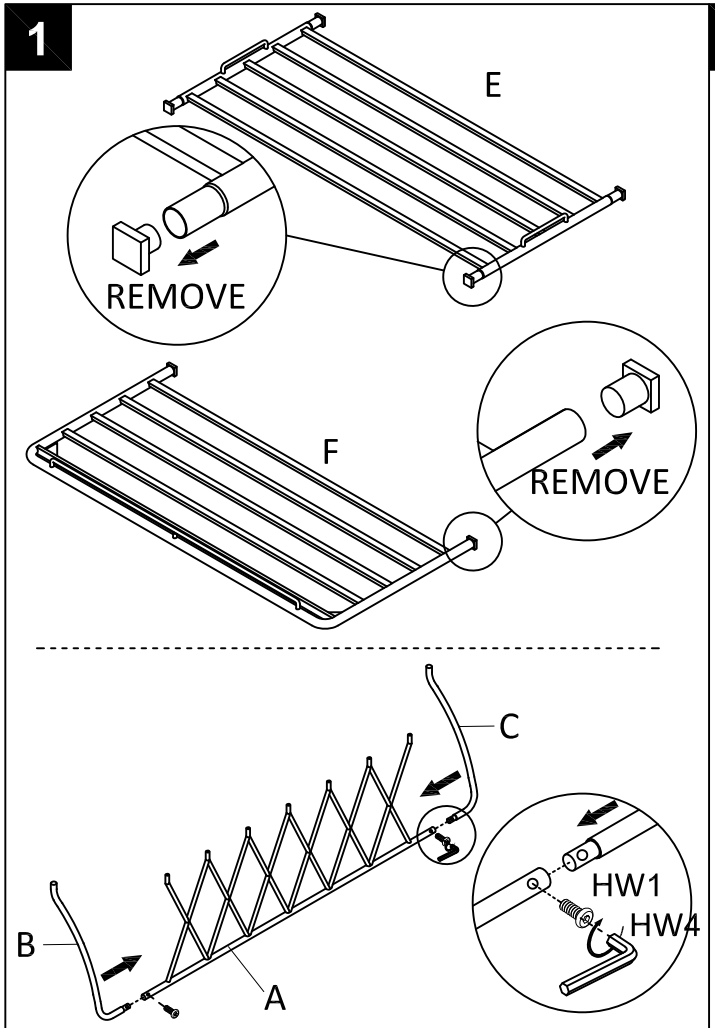

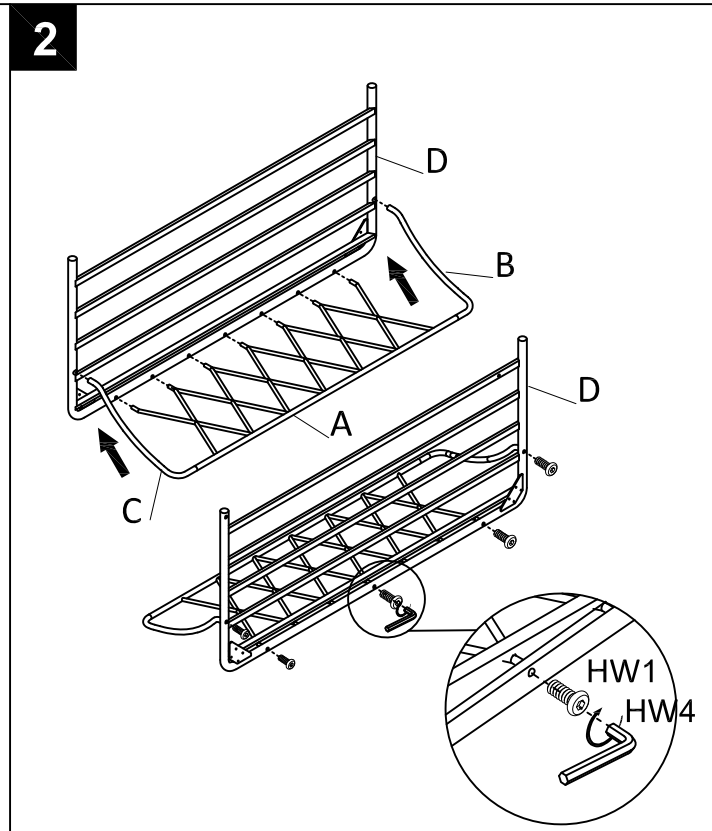

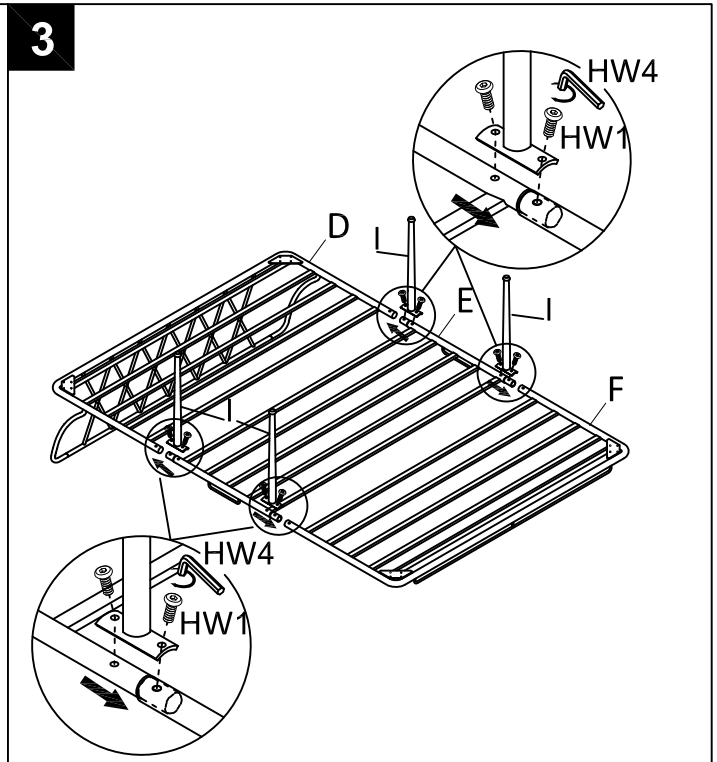

Step 1
Remove the 4*wood plug from Midpiece of Bed fame (E) and remove the 2*wood plug from Rearward of Bed fame (F). Insert the both L/R frame of Headboard (B/C) to Headboard (A) and aligning, Use Allen Key (HW4) to lock through holes on headboard with 2*Hex socket bolts (HW1).

Step 2
Insert the assembled Headboard (as step 1) to the forepart of bed fame (D) and make sure tubes of Headboard are all inserted to the forepart of bed frame, Use Allen Key (HW3) to lock 5*Hex socket bolts (HW1) from the underneath of forepart of bed frame(D), as picture.

Step 3
Insert the midpiece of bed frame (E) to the forepart of bed fame (D) of the semi-assembled bed frame (as step 2), then insert the rearward of bed frame (F) to the midpiece of bed frame (E), And attach 4*side support legs (I) in the corresponding position and aligning, Use Allen Key (HW3) to lock 8*Hex socket bolts (HW1) from the underneath of bed frame(D), as picture.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 30 minutes.
*Tools Required for Assembly: Allen Key (included) .
*If you are having difficulty, our friendly Customer Care team is always here to help.Please email customersupport@safavieh.com

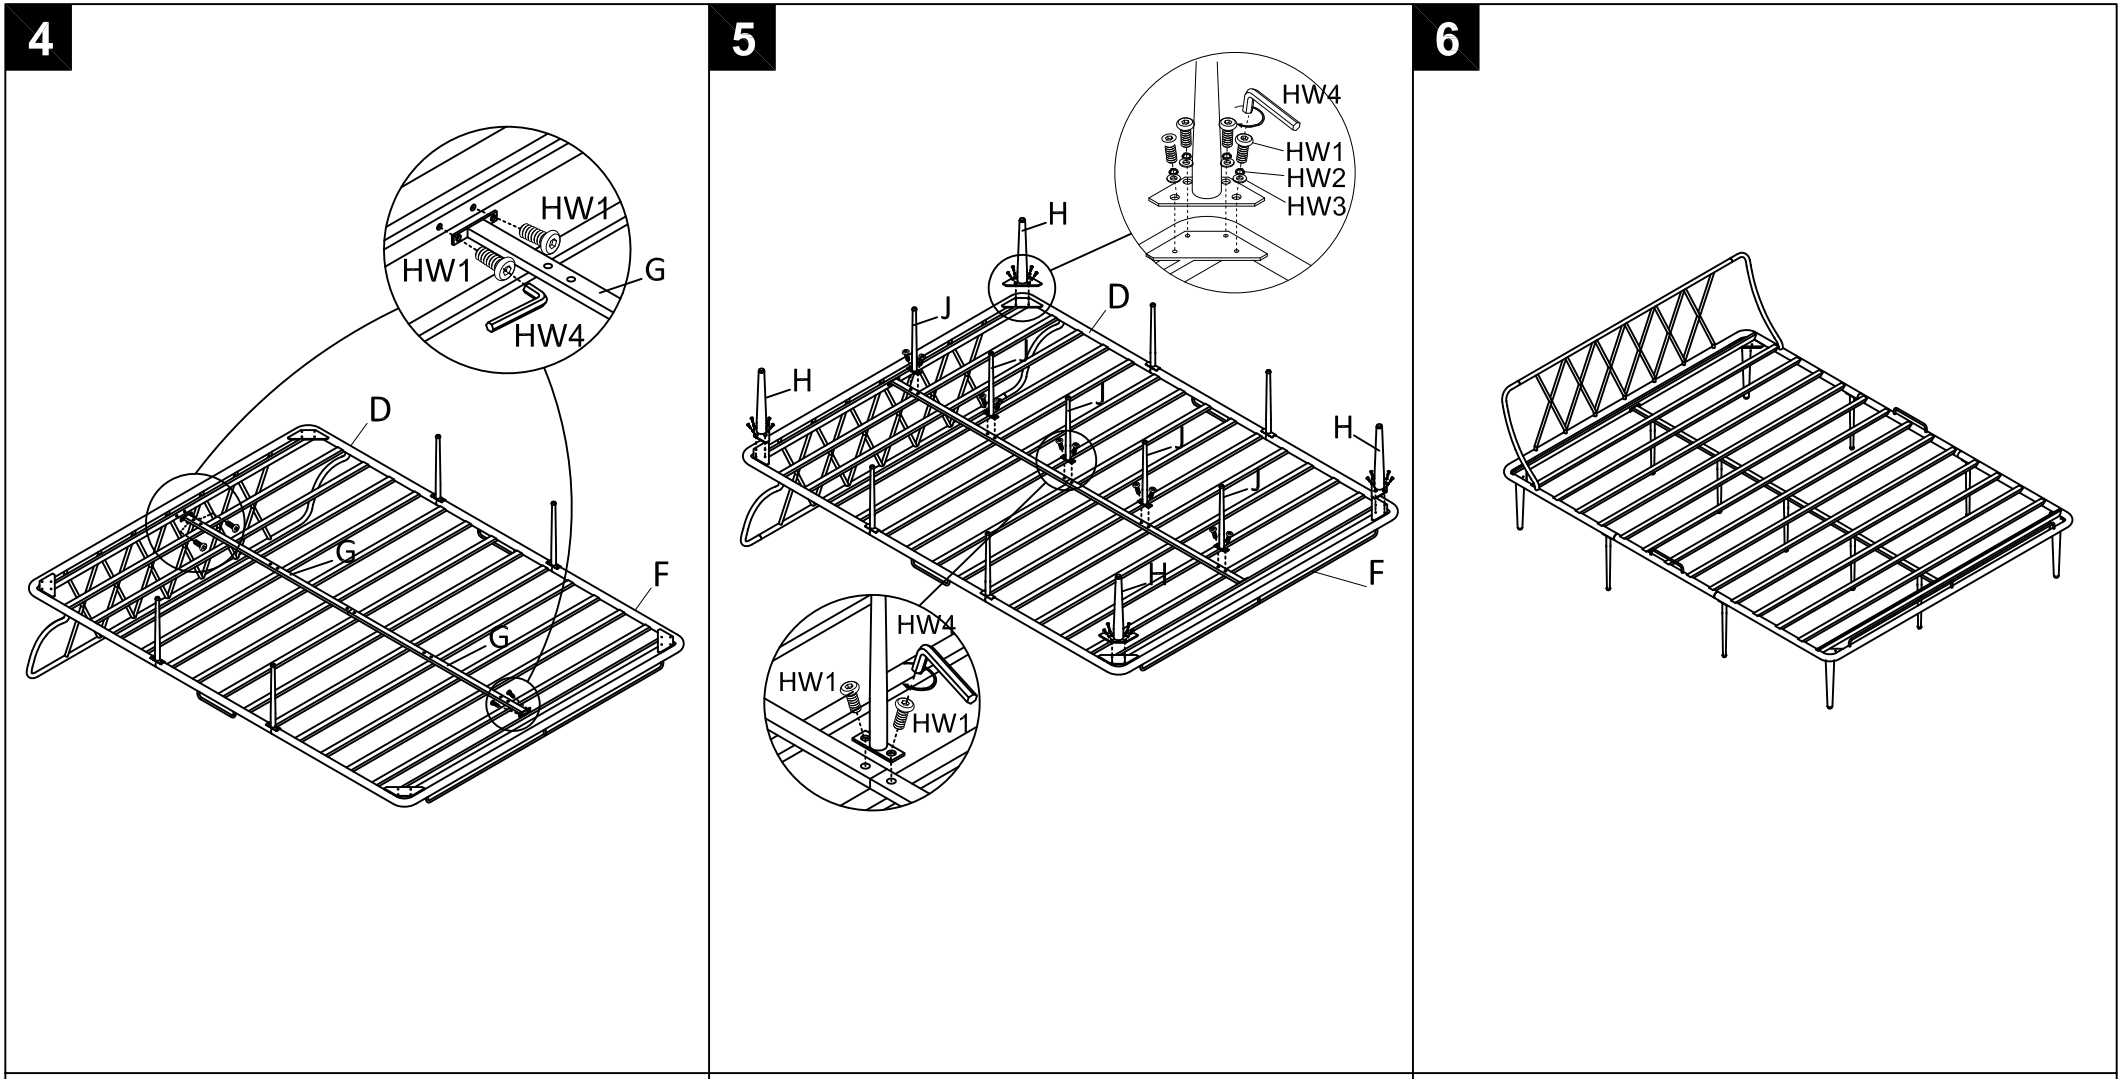

Step 4
Place 2*center connecting rods (G) in the front and rear respectively on underneath of assembled bed frame in the corresponding position and aligning, Use Allen Key (HW3) to lock 4*Hex socket bolts (HW1) with both ends bed frame(D&F), as picture.

Step 5
Attach 5*center support legs (J) to the center connecting rods (G), Use Allen Key (HW3) to lock 10*Hex socket bolts (HW1). Then attach 4*legs (H) to the angle iron pieces of 4 corners of bed frame, Use Allen Key (HW4) to lock flat washer (HW3) & Split lock washer (HW2) with Hex socket bolts (HW1), as picture.

Step 6
Straighten up the assembled metal bed frame, Assembly is completed.

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item.Refer to parts list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.Do not tighten bolts until completely assembled.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help.
Please email customersupport@safavieh.com

PREPARATTION

*Before beginning assembly of product,make sure all parts are present.Compare parts with part contents list and hardware contents list.
*If an part is missing or damaged,do not attempt to assemble the product.
*Estimated Assembly Time:30 minutes.
*Tools Required for Assembly:Allen Key (included) .

CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

SAFAVIEH FURNITURE

Model# BED6200-Q

Product Dimensions: 83-1/2"Wx62-1/2"Dx30"H

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Headboard		1x
B	L/Frame of Headboard		1x
C	R/Frame of Headboard		1x
D	Forepart of Bed fame		1x
E	Midpiece of Bed fame		1x
F	Rearward of Bed fame		1x
G	Center connecting rod		2x
H	Leg		4x
I	Side support leg		4x
J	Center support leg		5x
HW1	Hex socket bolt	1/4"-20 x 5/8"	45x
HW2	Split lock washer	1/4" x Ø3/8"	16x
HW3	Flat washer	1/4" x Ø5/8"	16x
HW4	Allen key	 M4	1x

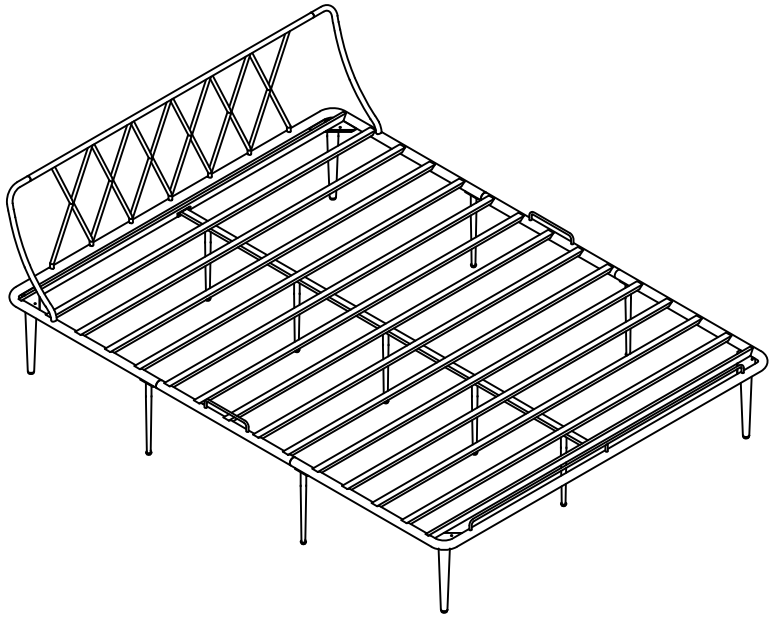

WARNING

Weight capacity : 550lbs
WARNING : DO NOT STAND ON THE PRODUCT
WARNING : DO NOT OVER TORQUE BOLTS

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 30 minutes.
*Tools Required for Assembly: Allen Key (included) .
*If you are having difficulty, our friendly Customer Care team is always here to help.Please email customersupport@safavieh.com

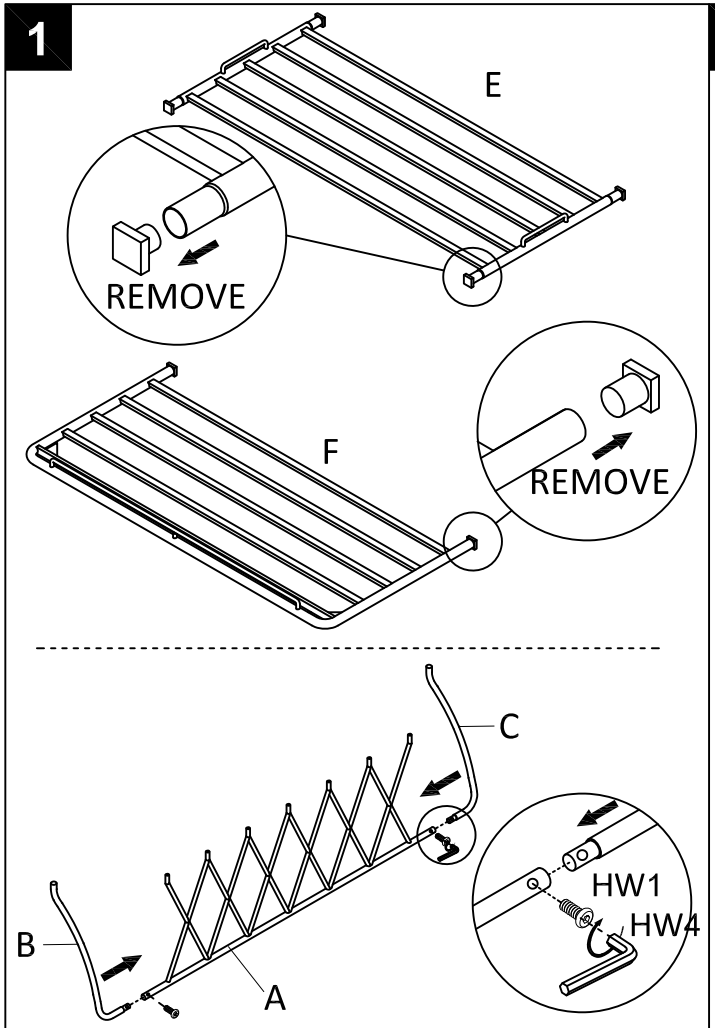

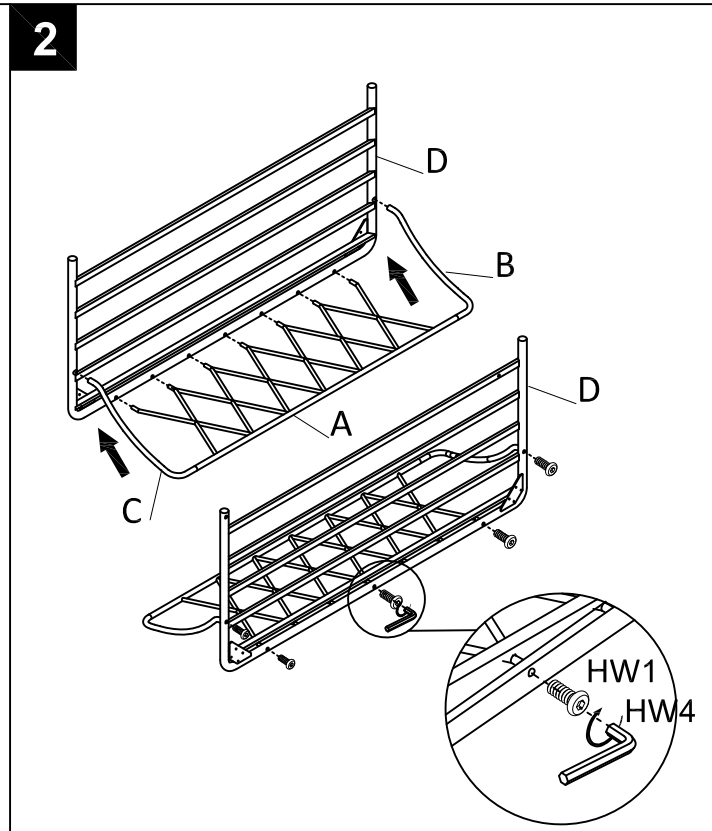

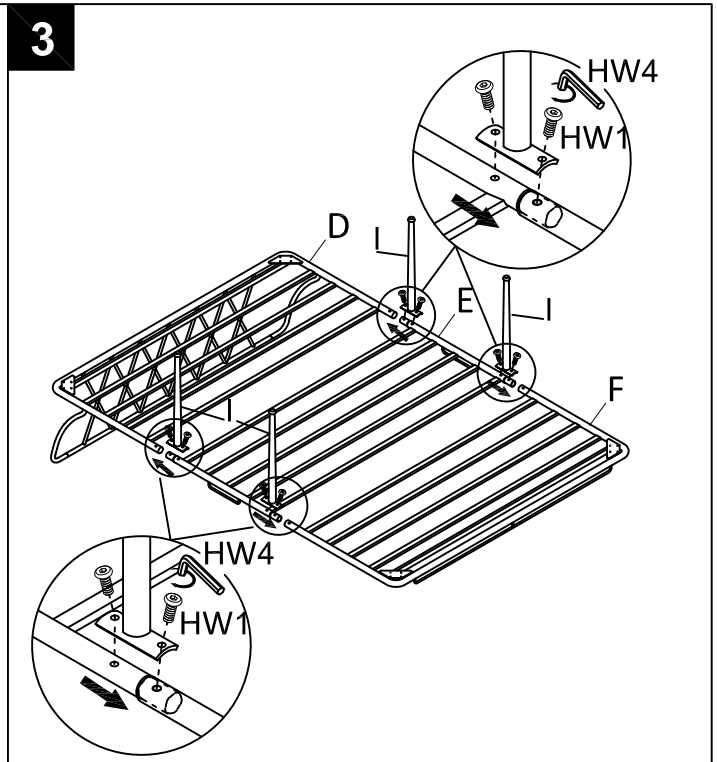

Step 1
Remove the 4*wood plug from Midpiece of Bed fame (E) and remove the 2*wood plug from Rearward of Bed fame (F). Insert the both L/R frame of Headboard (B/C) to Headboard (A) and aligning, Use Allen Key (HW4) to lock through holes on headboard with 2*Hex socket bolts (HW1).

Step 2
Insert the assembled Headboard (as step 1) to the forepart of bed fame (D) and make sure tubes of Headboard are all inserted to the forepart of bed frame, Use Allen Key (HW3) to lock 5*Hex socket bolts (HW1) from the underneath of forepart of bed frame(D), as picture.

Step 3
Insert the midpiece of bed frame (E) to the forepart of bed fame (D) of the semi-assembled bed frame (as step 2), then insert the rearward of bed frame (F) to the midpiece of bed frame (E), And attach 4*side support legs (I) in the corresponding position and aligning, Use Allen Key (HW3) to lock 8*Hex socket bolts (HW1) from the underneath of bed frame(D), as picture.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 30 minutes.
*Tools Required for Assembly: Allen Key (included) .
*If you are having difficulty, our friendly Customer Care team is always here to help.Please email customersupport@safavieh.com

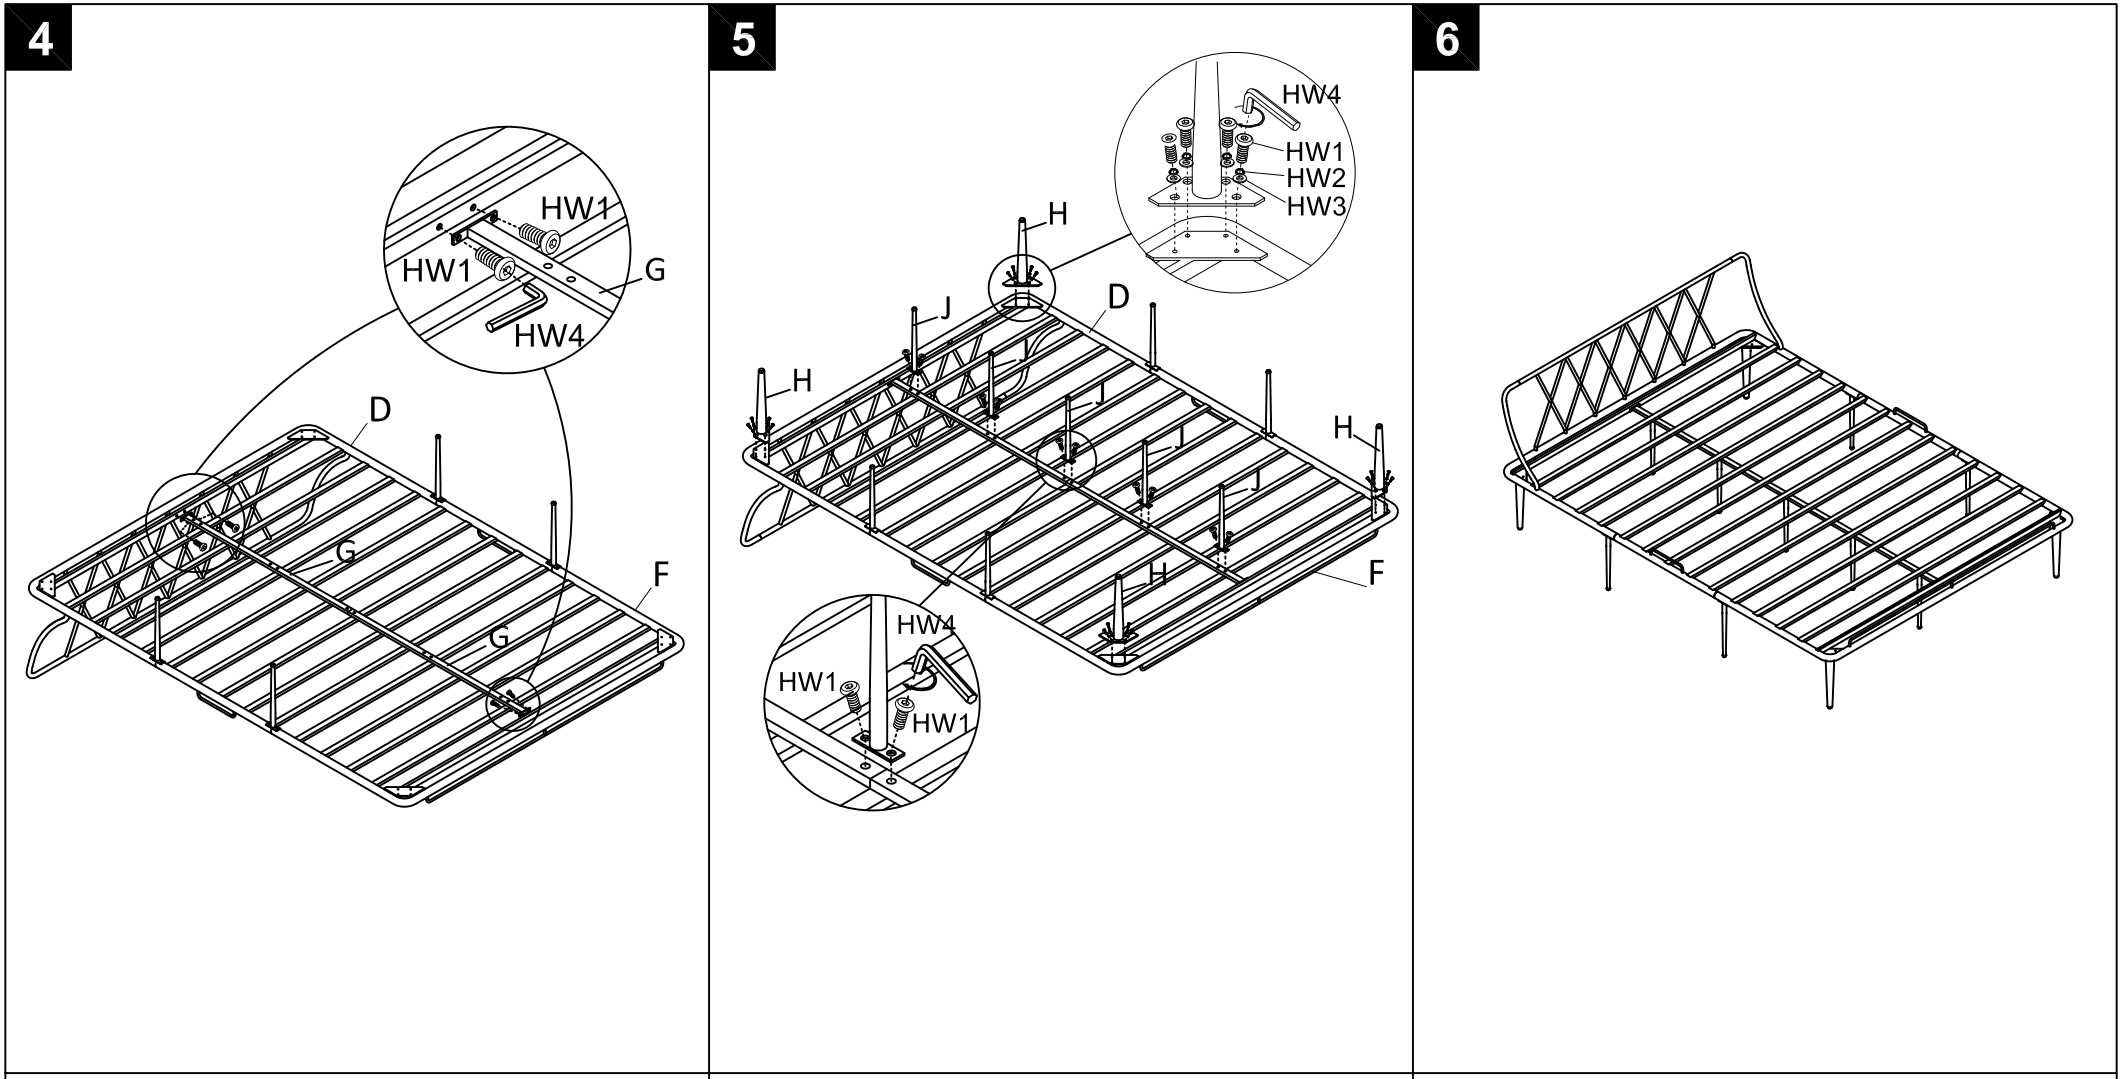

Step 4
Place 2*center connecting rods (G) in the front and rear respectively on underneath of assembled bed frame in the corresponding position and aligning, Use Allen Key (HW3) to lock 4*Hex socket bolts (HW1) with both ends bed frame(D&F), as picture.

Step 5
Attach 5*center support legs (J) to the center connecting rods (G), Use Allen Key (HW3) to lock 10*Hex socket bolts (HW1). Then attach 4*legs (H) to the angle iron pieces of 4 corners of bed frame, Use Allen Key (HW4) to lock flat washer (HW3) & Split lock washer (HW2) with Hex socket bolts (HW1), as picture.

Step 6
Straighten up the assembled metal bed frame, Assembly is completed.