

NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to parts list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.
- *Do not fully tighten the bolts until the product is assembled.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If an part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 30 minutes.
- *Tools Required for Assembly: Allen Key (included) and Philips head screwdriver (not included).

CARE AND MAINTENANCE


UPHOLSTERY CARE

To prevent overall soiling, frequent vacuuming or light brushing is recommended. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.

SAFAVIEH FURNITURE

Model# BED6301-F

Product Dimensions: 60.5"W*85.5"Dx34"H

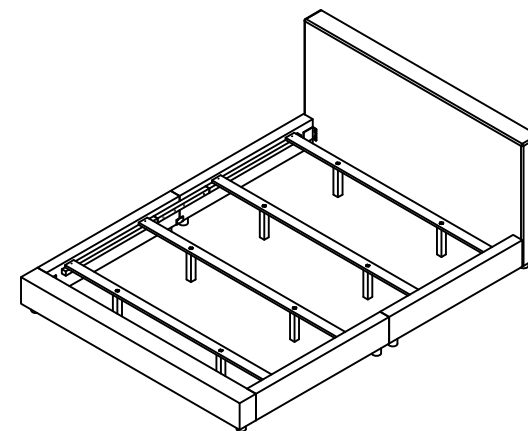














Weight capacity : 550 lbs

WARNING : DO NOT STAND ON THE PRODUCT

WARNING : DO NOT OVERTORQUE BOLTS

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Headboard		1X
B	Footboard		1X
C	Support Legs Of Slats		8X
D	Slat		4X
E	L-Rail		2X
F	R-Rail		2X
G	Wood Bar		2X
H	Plastic Leg		8X

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	Hex Socket Bolt	 5/16"-18 x 2-1/2"	16X
HW2	Allen Key	 5mm	1X
HW3	Wood Screw	 Ø4 x 40mm	8X
HW4	Wood Screw	 Ø4 x 15mm	8X
HW5	Metal Plate	 50 x 33 x 3mm	2X

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 30 minutes.


*Tools Required for Assembly: Allen Key (included) and Philips head screwdriver (not included).

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

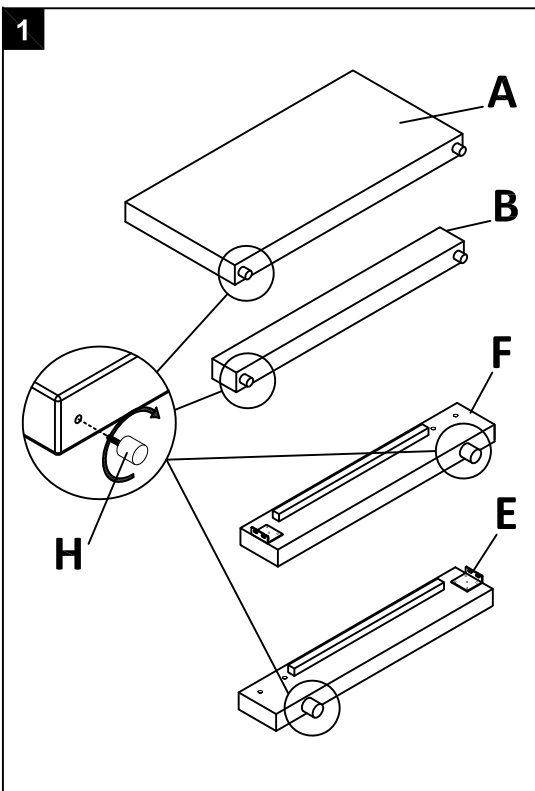


Step 1

Turn 4*Plastic leg (H) by clockwise to locking into the screw hole in the bottom of Headboard (A) and Footboard (B) respectively. Turn 4*Plastic leg (H) by clockwise to locking into the screw hole in the bottom of 2*L-Rails (E) and 2*R-Rails (F) respectively, as picture.

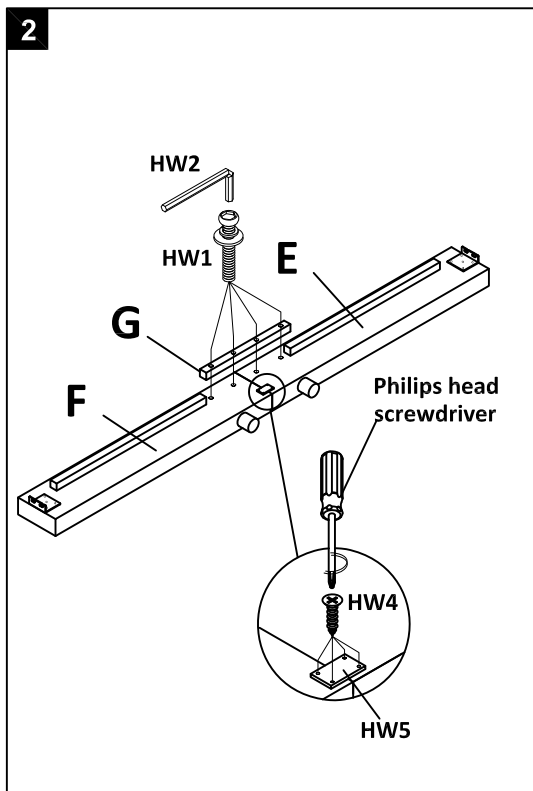


Step 2

Attach Wood Bar (G) to the 2 Rails (E & F), Using Allen Key (HW2) to locking by 4*Hex Socket Bolts (HW1), then lock the both side rails (E & F) (front & rear of rail) tight and alignment with Metal Plate (HW5) and use Philips head screwdriver (tool is not included) to lock 4*Wood screws (HW4). Repeat above procedure for assembly to the other side rail.

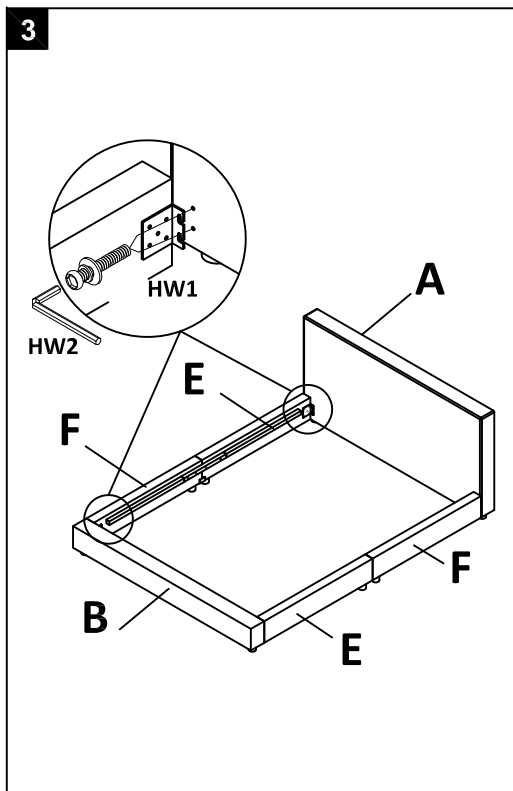

Step 3

Attach the end of assembled 2*side rails to the Headboard (A) and Footboard (B), Using Allen key (HW2) to lock with 8*Hex socket bolts (HW1), as picture.

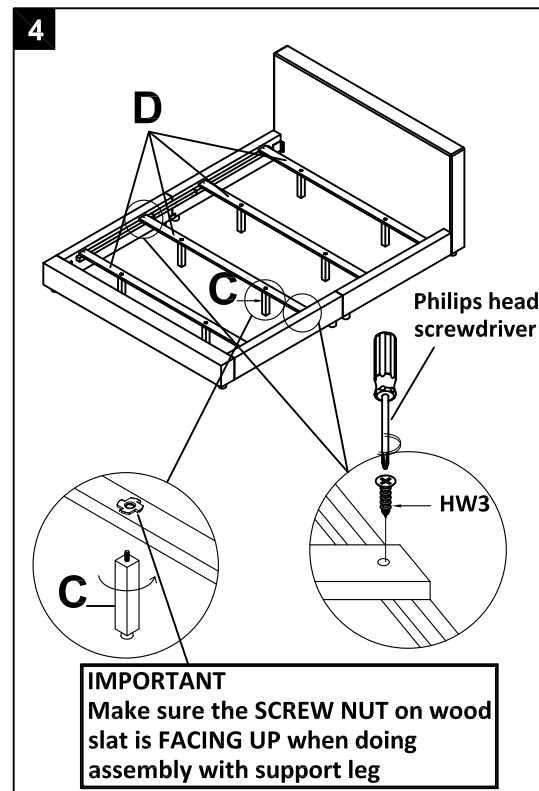

Step 4

Turn 2*Support Legs (C) into each Slat (D); Repeat the same procedure to rest 3 slats. as picture. Lock slats (D) tight with wooden bar (Attached on the inside of both side rails), by using Philips head screwdriver (tool is not included) to lock 8*Wood screws (HW3), as picture. Assembly is completed.

NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to parts list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.
- *Do not fully tighten the bolts until the product is assembled.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If an part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 30 minutes.
- *Tools Required for Assembly: Allen Key (included) and Philips head screwdriver (not included).

CARE AND MAINTENANCE


UPHOLSTERY CARE

To prevent overall soiling, frequent vacuuming or light brushing is recommended. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.

SAFAVIEH FURNITURE

Model# BED6301-Q

Product Dimensions: 66.5"W*91.5"Dx34"H

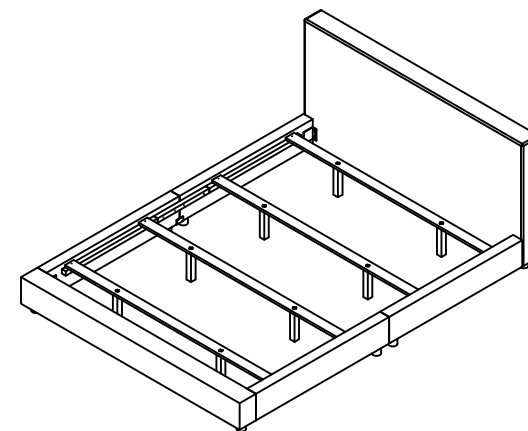














Weight capacity : 550 lbs

WARNING : DO NOT STAND ON THE PRODUCT

WARNING : DO NOT OVERTORQUE BOLTS

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Headboard		1X
B	Footboard		1X
C	Support Legs Of Slats		8X
D	Slat		4X
E	L-Rail		2X
F	R-Rail		2X
G	Wood Bar		2X
H	Plastic Leg		8X

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	Hex Socket Bolt	 5/16"-18 x 2-1/2"	16X
HW2	Allen Key	 5mm	1X
HW3	Wood Screw	 Ø4 x 40mm	8X
HW4	Wood Screw	 Ø4 x 15mm	8X
HW5	Metal Plate	 50 x 33 x 3mm	2X

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 30 minutes.


*Tools Required for Assembly: Allen Key (included) and Philips head screwdriver (not included).

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

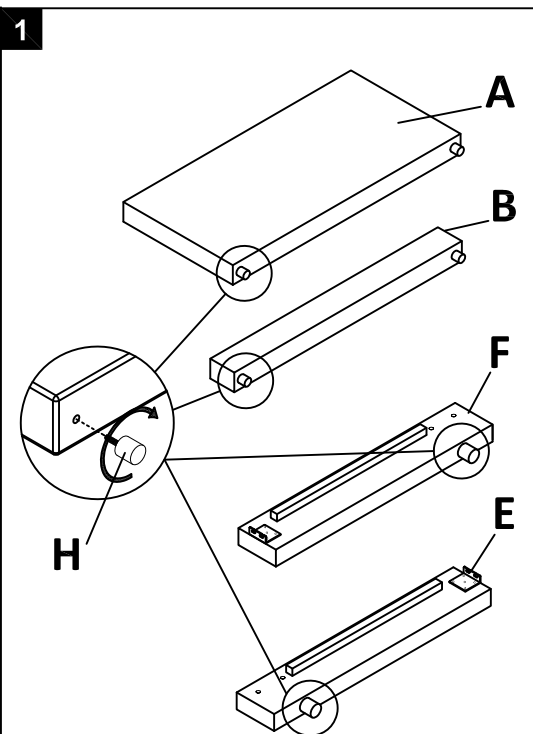


Step 1

Turn 4*Plastic leg (H) by clockwise to locking into the screw hole in the bottom of Headboard (A) and Footboard (B) respectively. Turn 4*Plastic leg (H) by clockwise to locking into the screw hole in the bottom of 2*L-Rails (E) and 2*R-Rails (F) respectively, as picture.

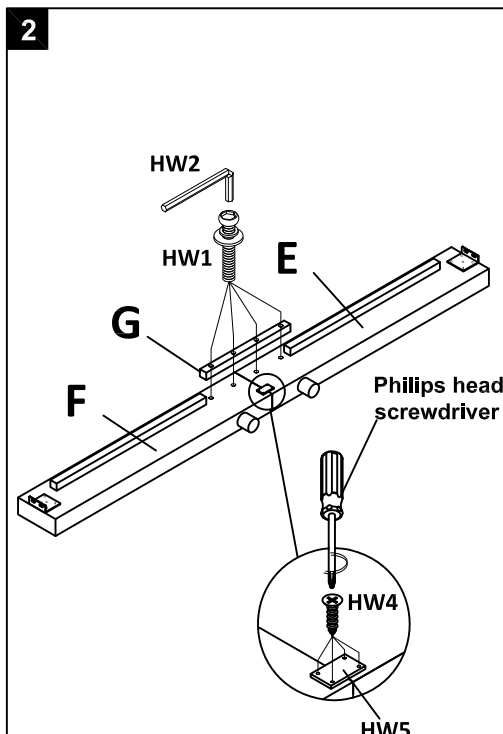


Step 2

Attach Wood Bar (G) to the 2 Rails (E & F), Using Allen Key (HW2) to locking by 4*Hex Socket Bolts (HW1), then lock the both side rails (E & F) (front & rear of rail) tight and alignment with Metal Plate (HW5) and use Philips head screwdriver (tool is not included) to lock 4*Wood screws (HW4). Repeat above procedure for assembly to the other side rail.

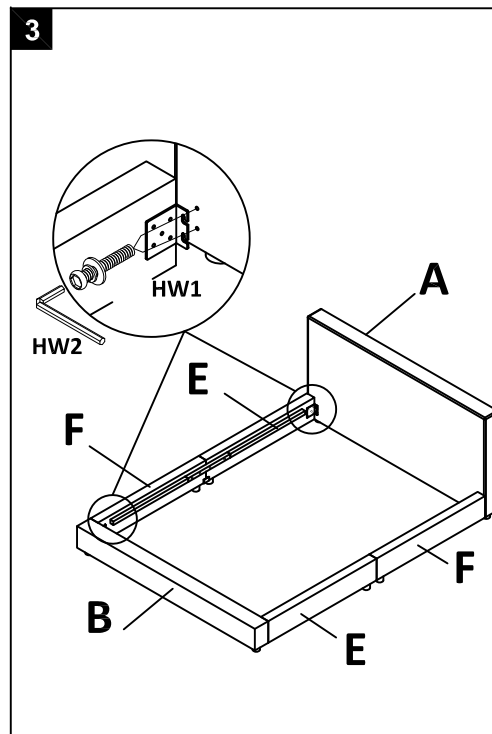

Step 3

Attach the end of assembled 2*side rails to the Headboard (A) and Footboard (B), Using Allen key (HW2) to lock with 8*Hex socket bolts (HW1), as picture.

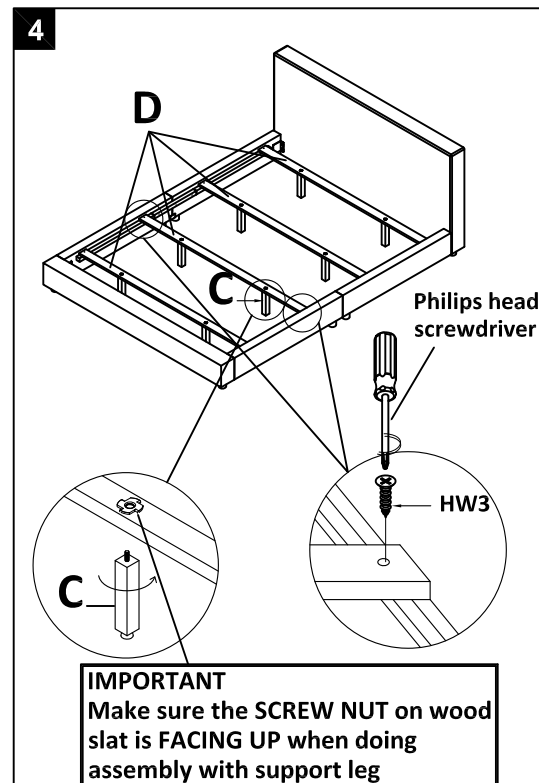

Step 4

Turn 2*Support Legs (C) into each Slat (D); Repeat the same procedure to rest 3 slats. as picture. Lock slats (D) tight with wooden bar (Attached on the inside of both side rails), by using Philips head screwdriver (tool is not included) to lock 8*Wood screws (HW3), as picture. Assembly is completed.