NOTICE

* Please make sure that you have all parts indicated and they are in good condition before you begin assembly on this item. Refer to part list and hardware list below for guidance.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 10 minutes.
* Tools Required: Allen Key (included), Screwdriver (not included).

CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Object placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water of furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

SAFAVIEH FURNITURE




ITEM : BST2700
DIMENSION : W20.1 x D21.9 x H42.1


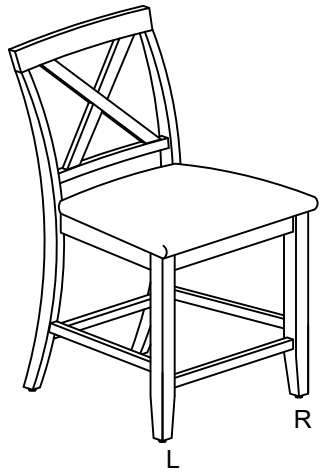


⚠ WARNING ⚠

Weight Capacity- 275 LBS
Warning: Do not stand on Chair
Warning: Do not over torque Bolts


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	
A	BACKREST		1x
B	SEAT		1x
C	RIGHT LEG WITH LABEL "R"		1x
D	LEFT LEG WITH LABEL "L"		1x
E	RIGHT STRETCHER WITH LABEL "R"		1x
F	LEFT STRETCHER WITH LABEL "L"		1x
G	FRONT STRETCHER		1x
HW1	M6 X 35MM JCBC		2x
HW2	M6 X 60MM JCBC		4x
HW3	M6 X 80MM JCBC		4x
HW4	SPRING WASHER M6 X 12MM		10x

PIECE	DESCRIPTION	PICTURE	
HW5	FLAT WASHER M6 X 19MM		10x
HW6	CSK C/B SCREW M4 X 38MM		6x
HW7	ALLEN KEY		1x
HW8	PCV NAIL		4x
SCREWDRIVER			NOT INCLUDED
HAMMER			NOT INCLUDED


PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 10 minutes.
* Tools Required: Allen Key (included), Screwdriver (not included).
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

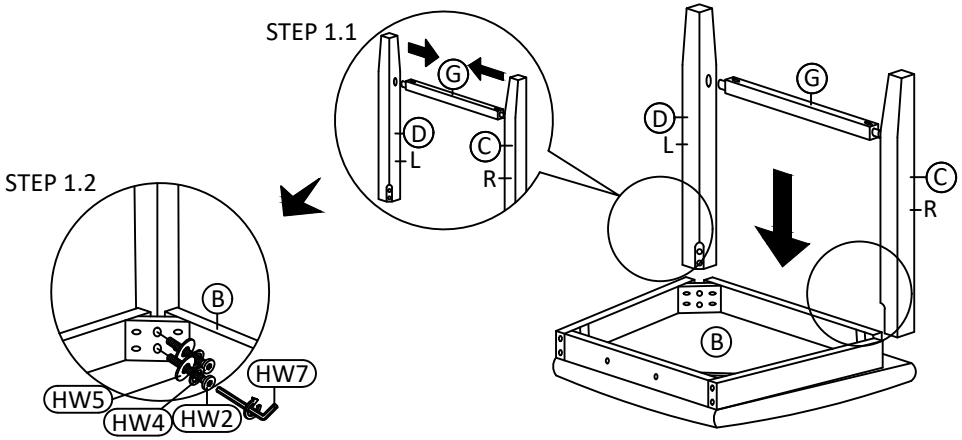

STEP 1: Attach Legs and Front Stretcher

- Attach the legs **(C)** and **(D)** into front stretcher **(G)** as shown in the diagram.
- Insert the legs **(C)** and **(D)** into the seat frame **(B)**.
- Secure each leg using **HW2** (M6 × 60mm) bolts with Spring Washer **(HW4)** first, then Flat Washer **(HW5)**.
- Tighten bolts **loosely**—do not fully tighten yet.

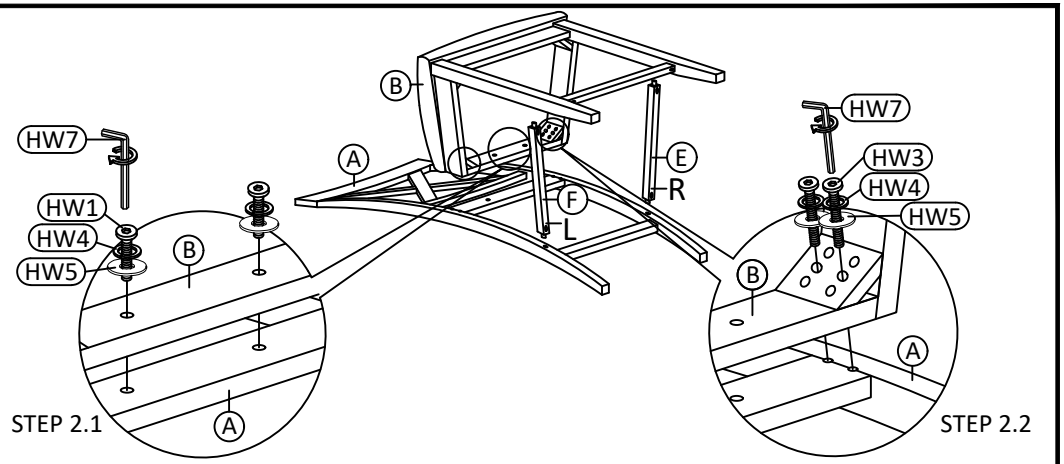


STEP 2: Attach the Seat and Backrest

3.1 Center Hole:

- Position the backrest **(A)** onto the seat frame **(B)** so that the holes align.
- Insert **HW1** (M6 × 35mm) bolts with Spring Washer **(HW4)** first, then Flat Washer **(HW5)** through the aligned holes.
- Tighten bolts **loosely**—do not fully tighten yet.

3.2 Corner Frame:

- Insert **HW3** (M6 × 80mm) bolts with **HW4** and **HW5** into the corner holes of the seat frame as shown.
- Tighten bolts **loosely**. Check the diagram to confirm correct placement.

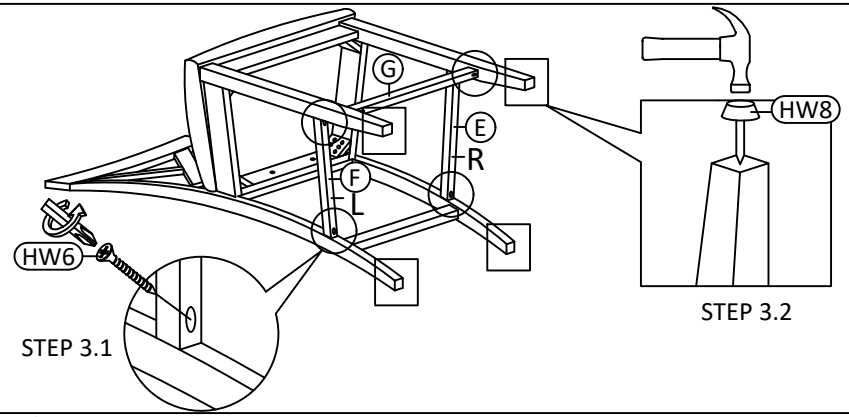


STEP 3: Attach Stretchers

3.1 Stretcher Installation:

- Insert the screw **(HW6)** into the stretchers **(E), (F)** and **(G)** using a screwdriver (not included).
- Tighten the screws loosely. Refer to the diagram for correct placement.

3.2 PVC Nail:

- Insert **(HW8)** into the chair legs using a hammer (not provided).

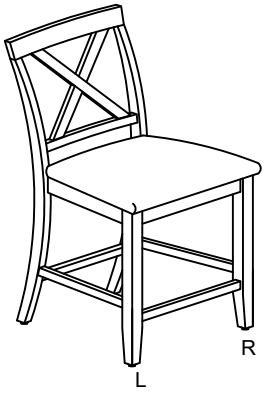

STEP 4: Final Adjustment and Tightening

- Place the chair upright on a flat surface. Ensure all legs are **level**.
- While the chair is stable, use the Allen Key **(HW7)** to fully tighten all bolts **(HW1, HW2,** and **HW3)** used in **STEP 1** and **2**. Use the screwdriver (not included) to fully tighten the screws **(HW6)** used in **STEP 3.**
- Double-check that everything is secure before use.