

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com






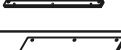

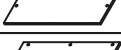
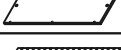





PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 45 minutes.
- * Needed for assembly : 2 people
- * Tools Required for Assembly : Phillips Screwdriver

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

Part List and Hardware List

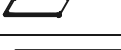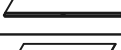PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	LEFT PANEL		1X
C	RIGHT PANEL		1X
D	TOP FRAME		1X
E	BOTTOM FRAME		3X
F	BOTTOM PANEL		1X
G	UPPER BACK PANEL		1X
H	LOWER BACK PANEL		1X
I	DRAWER FRONT		3X
J	DRAWER LEFT		3X
K	DRAWER RIGHT		3X
L	DRAWER BACK		3X
M	DRAWER BASE		3X
N	DRAWER SUPPORT		3X





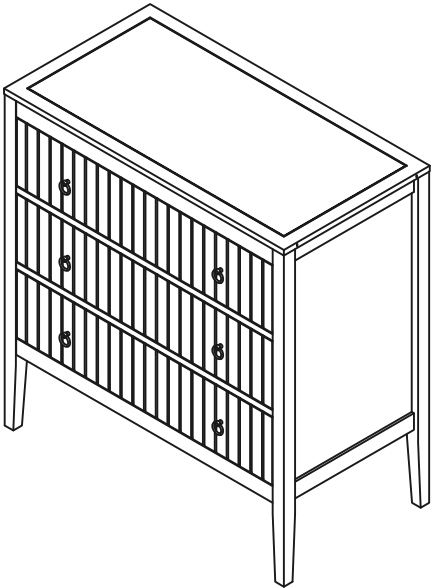




Model# CHS5001
Product Dimensions: 34 1/2"W x 18"D x 36"H





WEIGHT CAPACITY :
TOP : 100 LBS
DRAWER : 30 LBS


**WARNING: DO NOT OVER TORQUE
BOLTS/SCREWS**

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	1 1/4" FLAT HEAD SCREW	M3x32mm 	33X
HW2	3/4" FLAT HEAD SCREW	M3x19mm 	18X
HW3	CAMBOLT	Ø8x32mm 	29X
HW4	CAMLOCK	Ø15x10mm 	29X
HW5	MACHINE SCREW	Ø5x19mm 	6X
HW6	HANDLE	Ø32x15mm 	6X
HW7	DOWEL	Ø 8x28mm 	8X


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 45 minutes.
- * Needed for assembly : 2 people
- * Tools Required for Assembly : Phillips Screwdriver
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

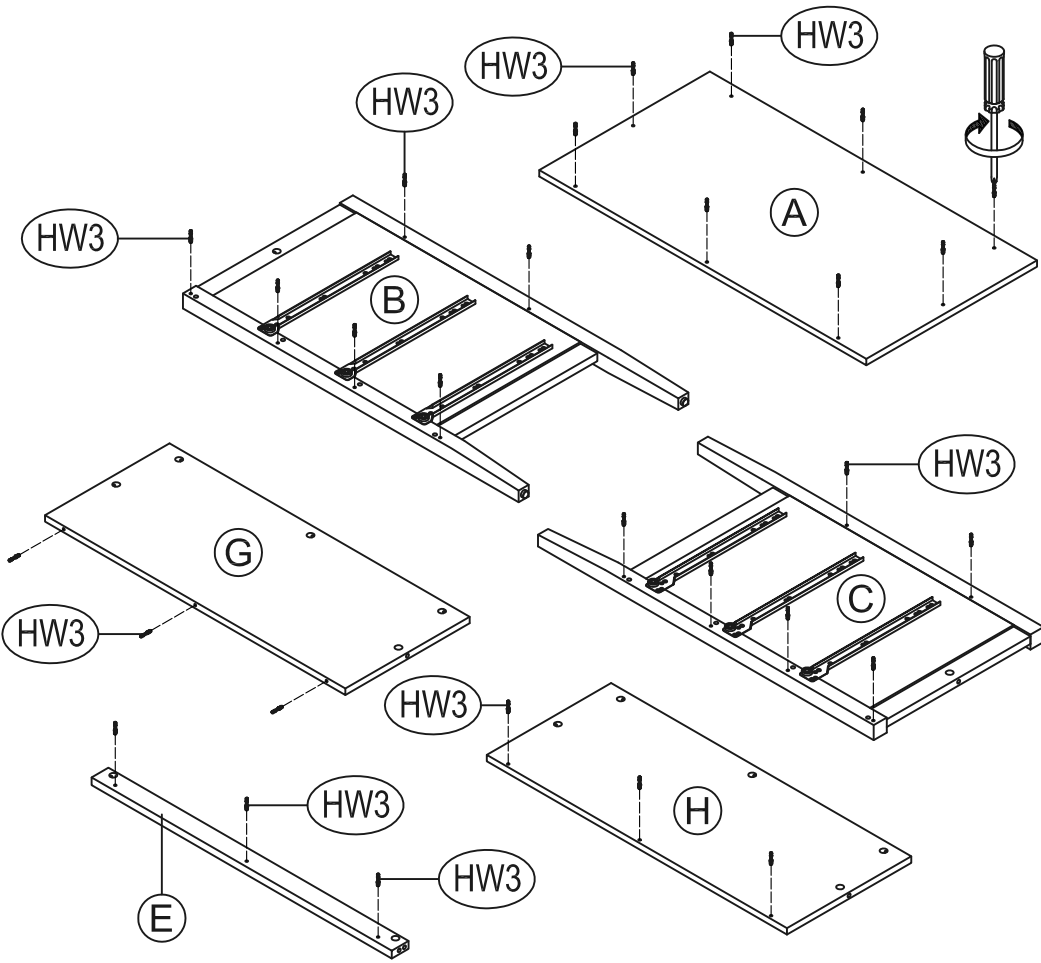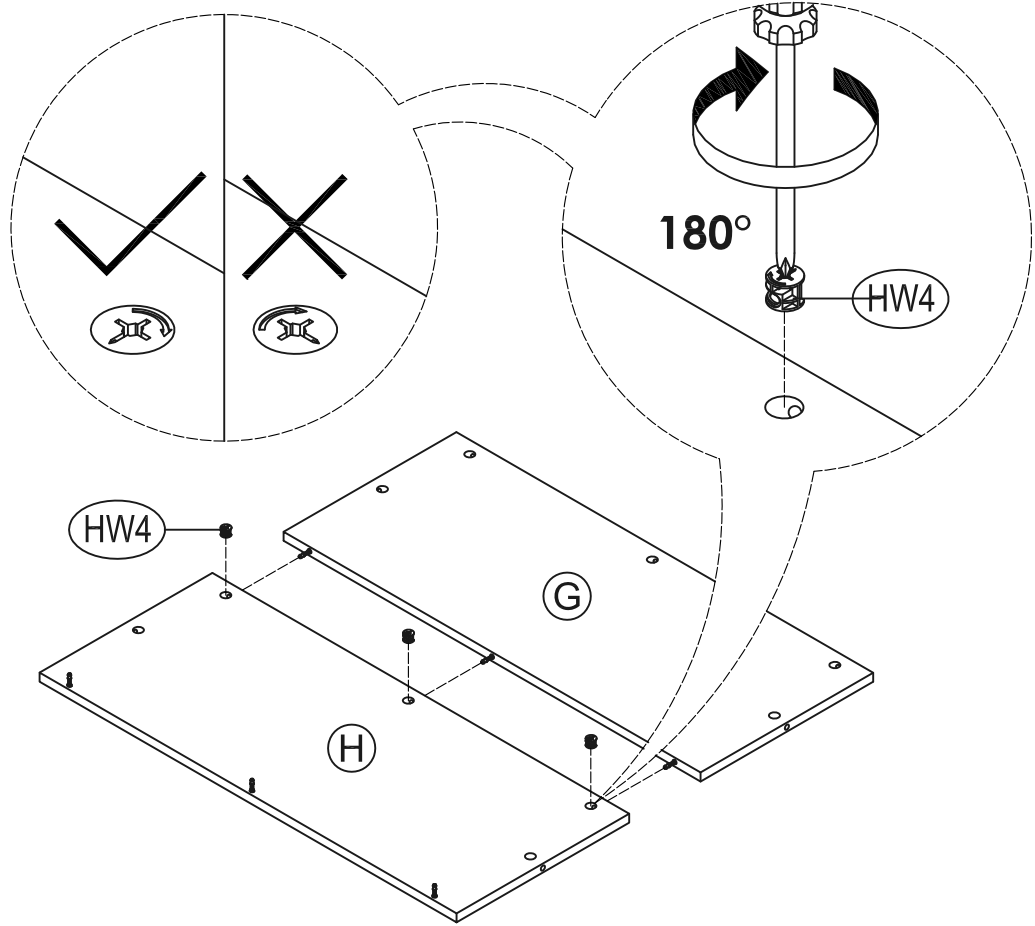
	
<p>STEP 1 ATTACH CAMBOLTS (HW3) TO TOP PANEL (A), LEFT PANEL (B), RIGHT PANEL (C), UPPER BACK PANEL (G), LOWER BACK PANEL (H) AND BOTTOM FRAME (E).</p>	<p>STEP 2 ATTACH LOWER BACK PANEL (H) TO UPPER BACK PANEL (G) USING CAMLOCKS (HW4).</p>

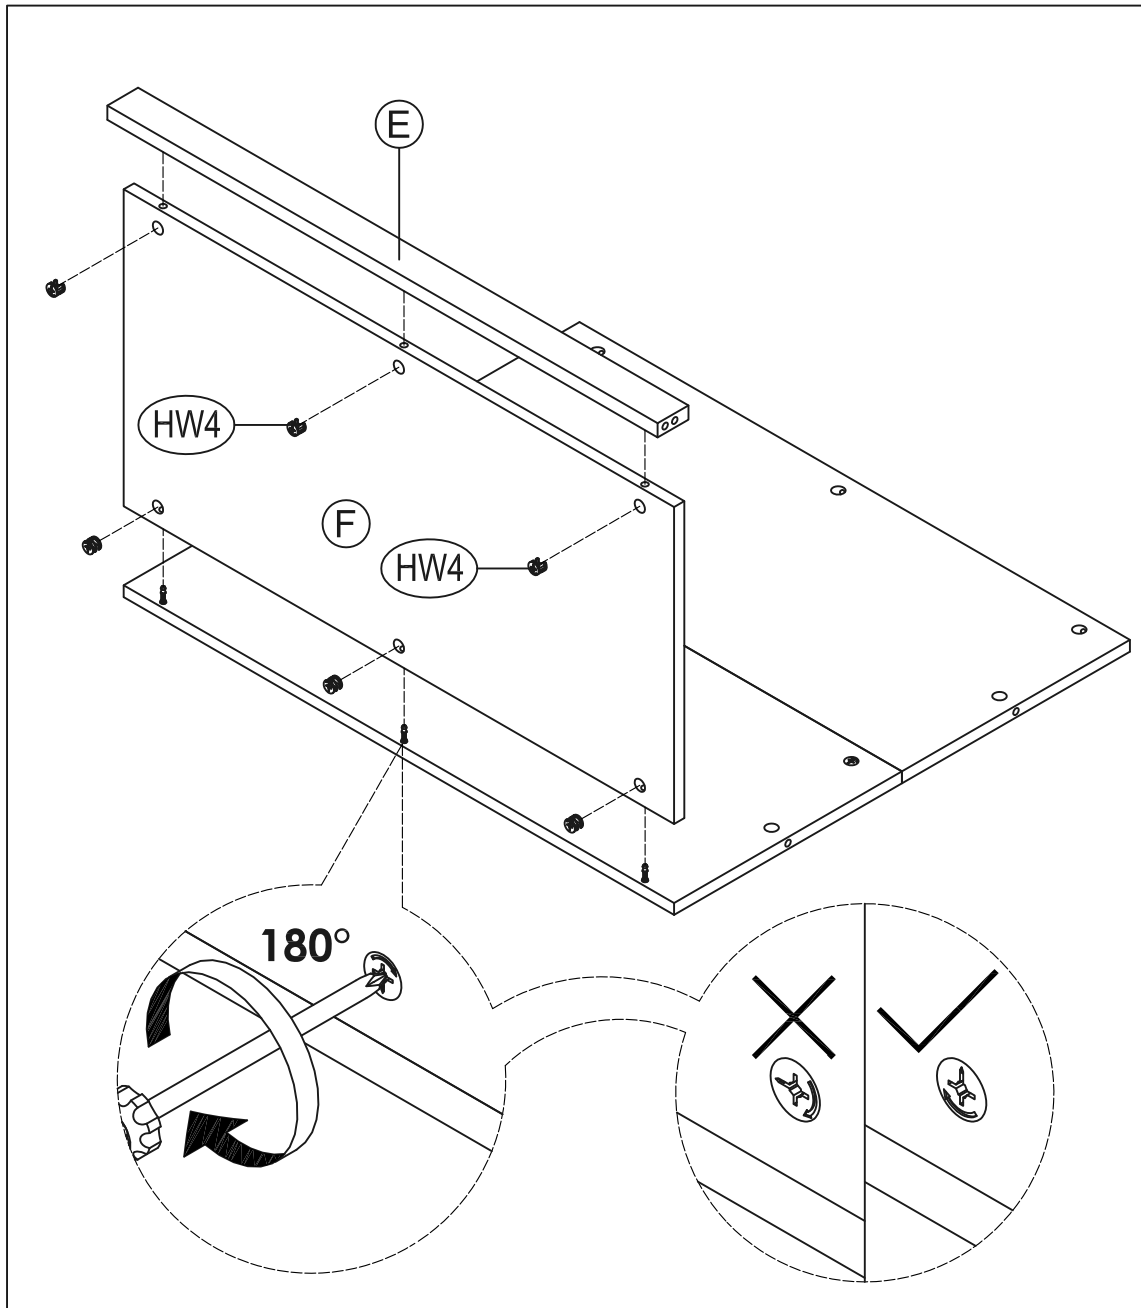


STEP 3 ATTACH BOTTOM PANEL (F) TO UNIT USING CAMLOCKS (HW4).
ATTACH BOTTOM FRAME (E) TO BOTTOM PANEL (F) USING CAMLOCKS (HW4).

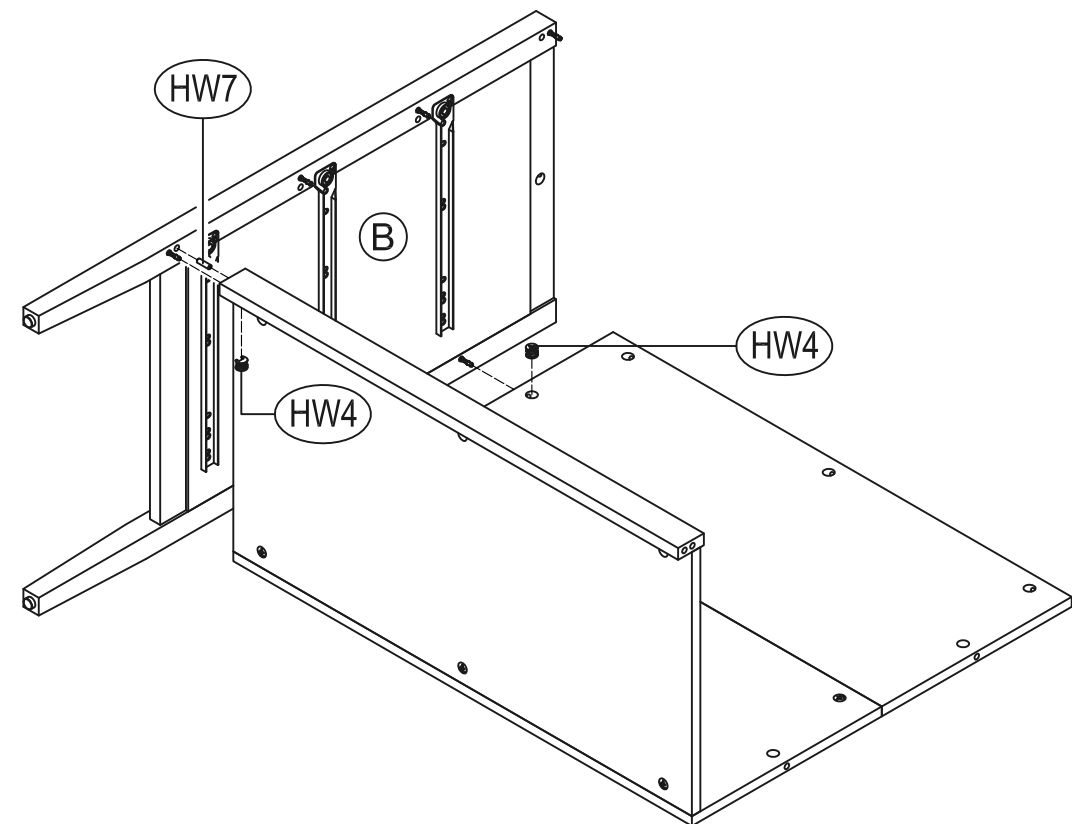


STEP 4 ATTACH LEFT PANEL (B) TO UNIT USING CAMLOCKS (HW4) AND DOWEL (HW7).

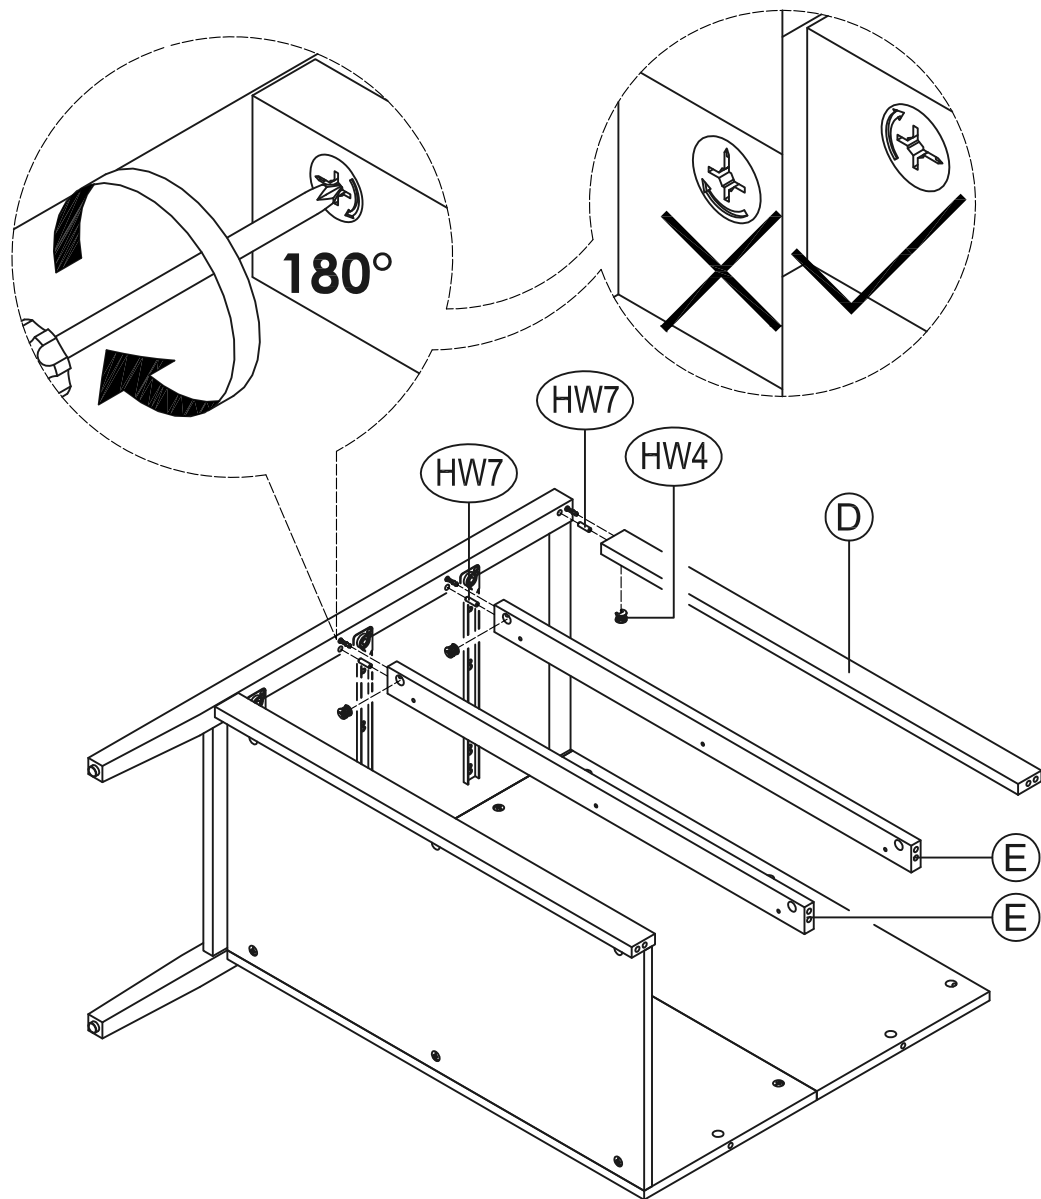


STEP 5 ATTACH TOP FRAME (D) AND BOTTOM FRAMES (E) TO UNIT USING CAMLOCKS (HW4) AND DOWELS (HW7).

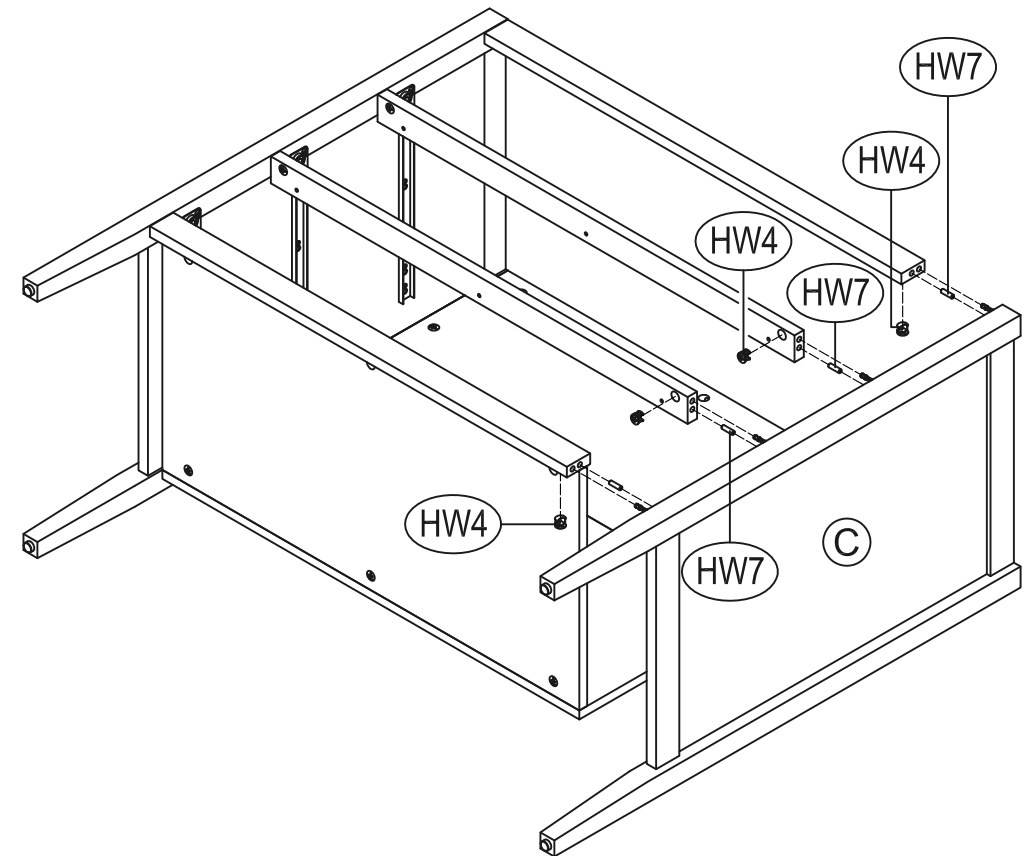


STEP 6 ATTACH RIGHT PANEL (C) TO UNIT USING CAMLOCKS (HW4) AND DOWELS (HW7).

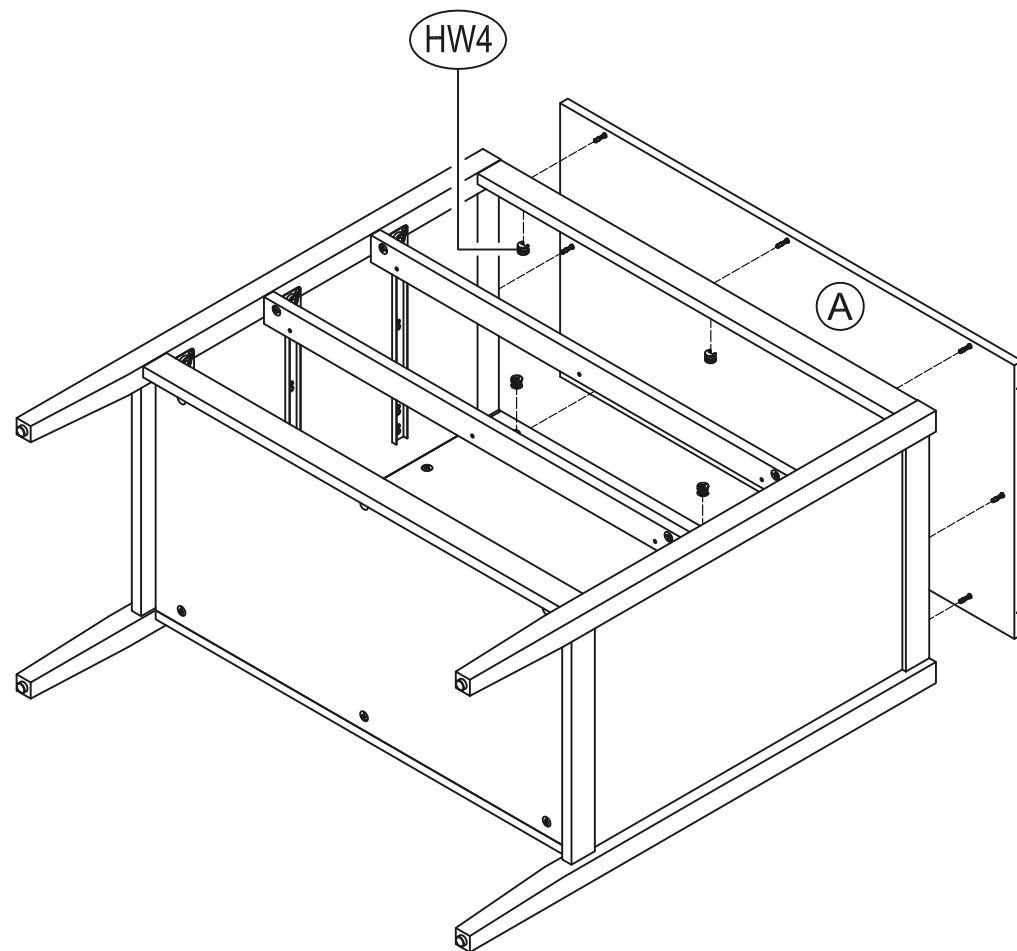


STEP 7 ATTACH TOP PANEL (A) TO UNIT USING CAMLOCKS (HW4).

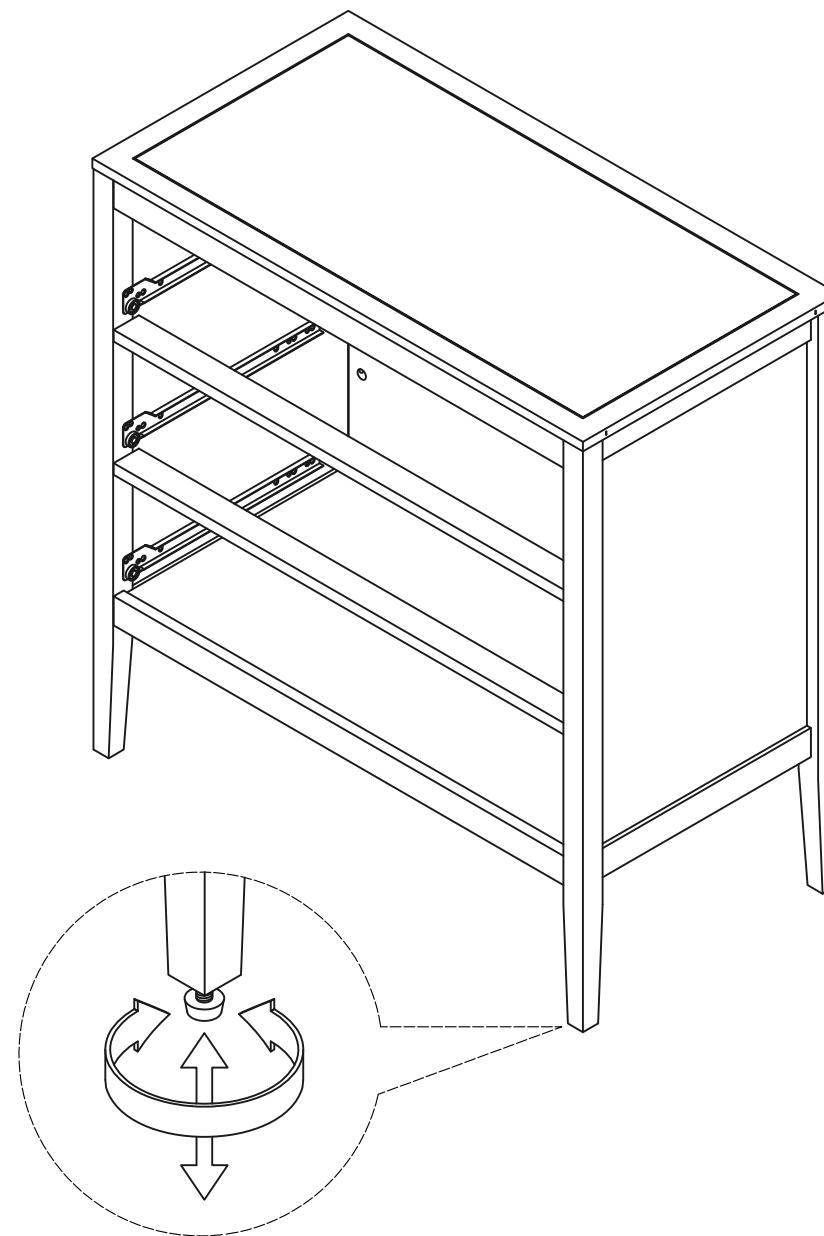


STEP 8 ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.

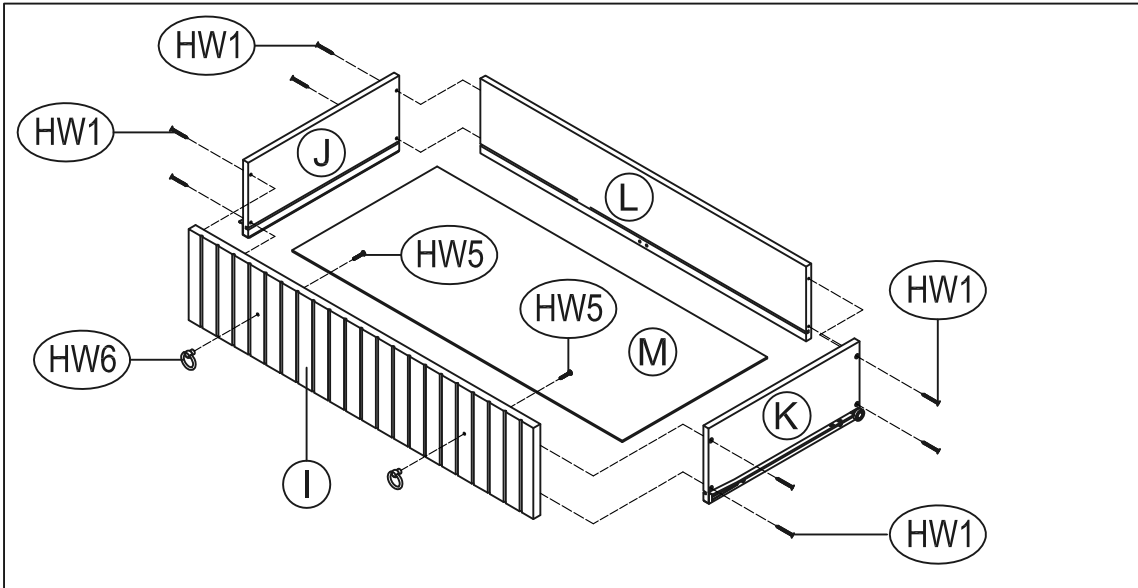


STEP 9 ATTACH HANDLE (HW6) TO DRAWER FRONT (I) USING MACHINE SCREWS (HW5). ATTACH DRAWER LEFT (J) AND DRAWER RIGHT (K) TO DRAWER BACK (L) USING 1 1/4" FLAT HEAD SCREWS (HW1). SLIDE DRAWER BASE (M) INTO THE GROOVE. ATTACH DRAWER FRONT (I) TO DRAWER LEFT (J) AND DRAWER RIGHT (K) USING 1 1/4" FLAT HEAD SCREWS (HW1).

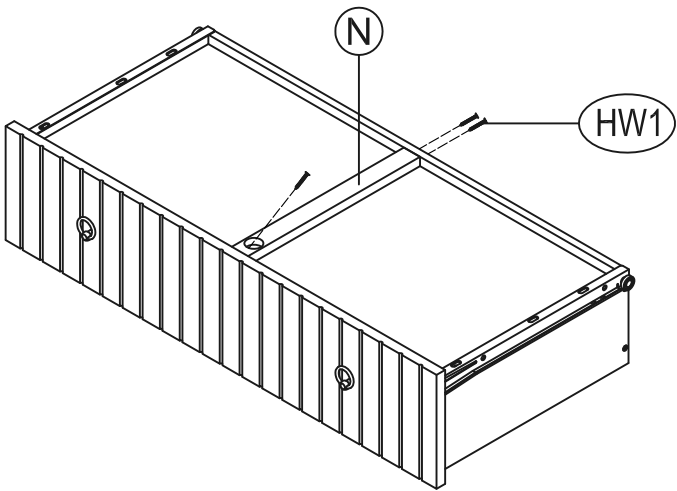


STEP 10 ATTACH DRAWER SUPPORTS (N) TO THE BOTTOM SIDE OF DRAWERS USING 1 1/4" FLAT HEAD SCREWS (HW1).

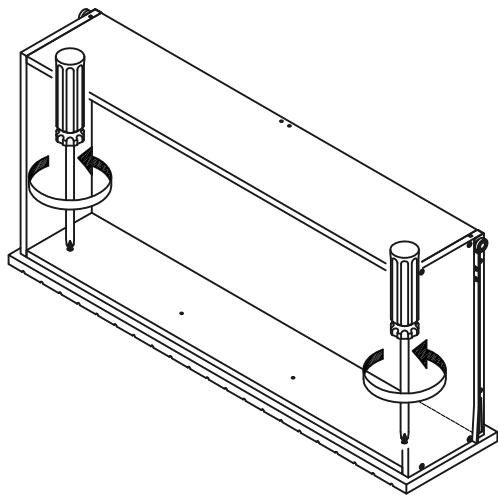


STEP 11 LOOSEN SLIGHTLY THE SCREWS PRE-INSTALLED ON THE BACK OF THE DRAWER FRONTS.

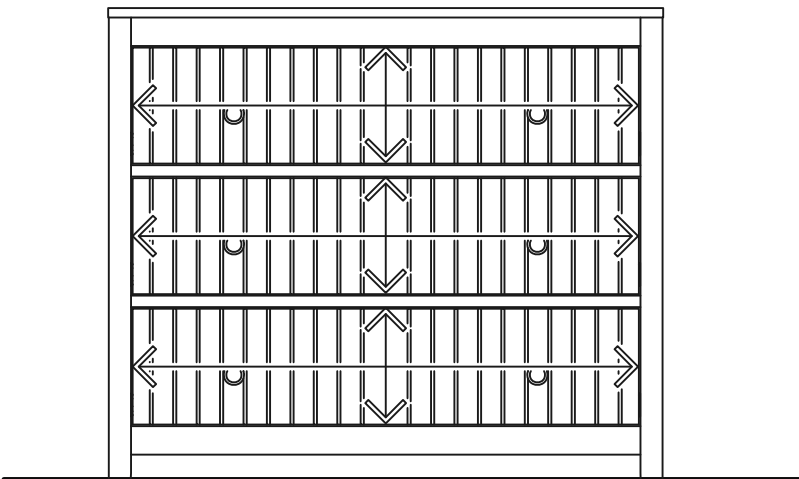

STEP 12 INSERT THE DRAWER INTO THE UNIT, THEN ADJUST THE DRAWER FRONT PANEL LEFT OR RIGHT AND UP OR DOWN UNTIL THE DRAWER GAPS LOOK PROPORTIONAL.

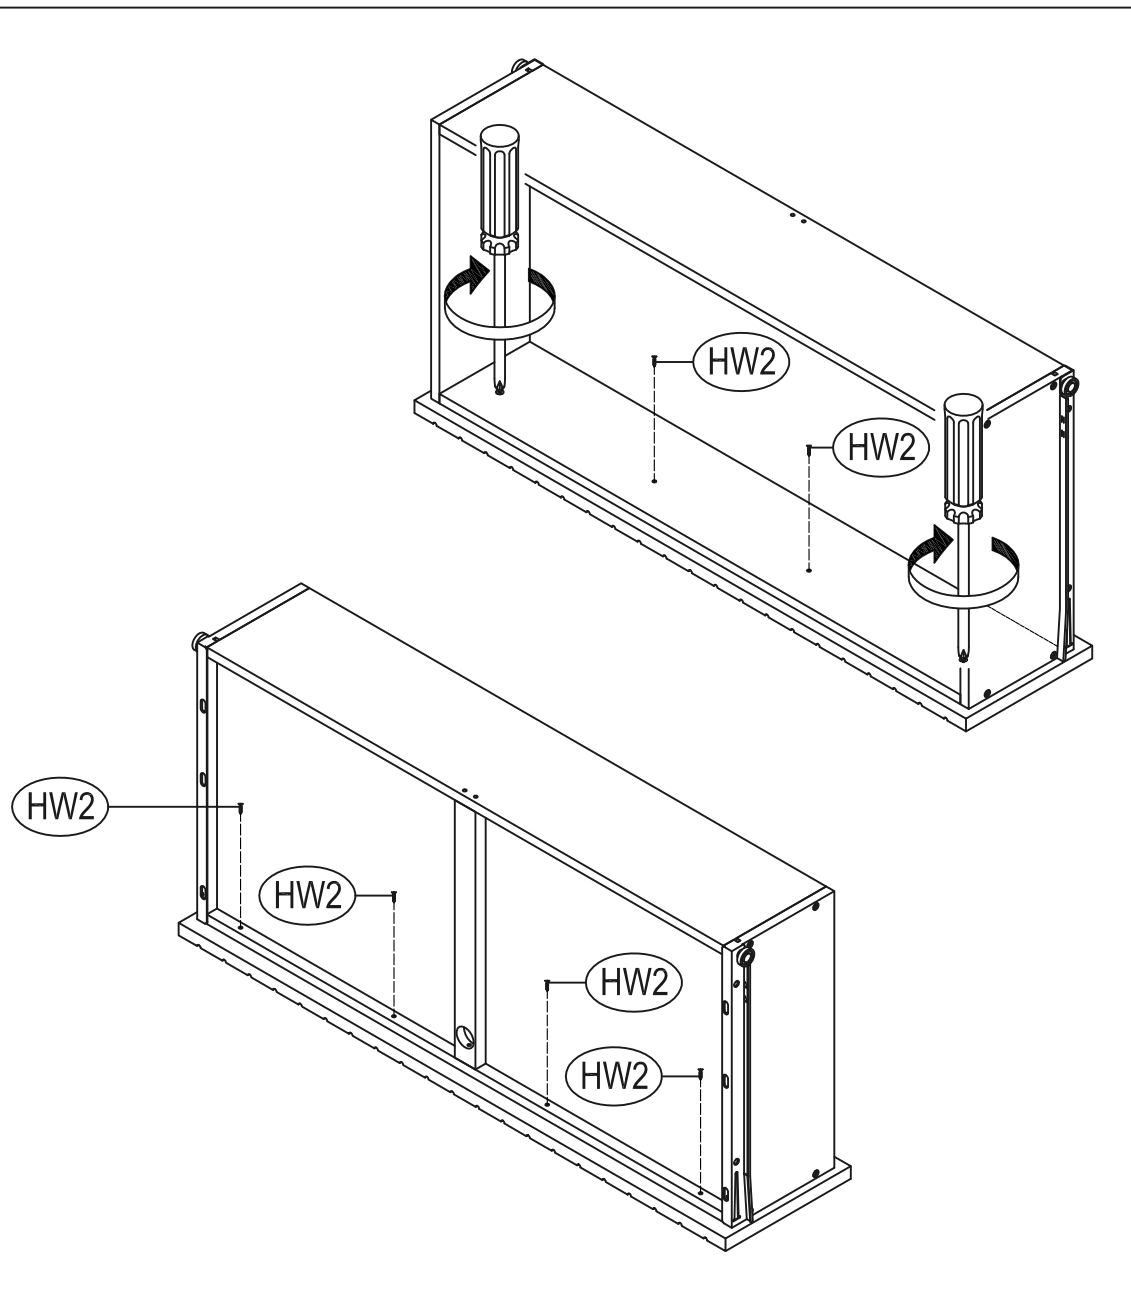

STEP 13 PULL THE DRAWER OPEN SLOWLY AND RE-TIGHTEN THE SCREWS FROM STEP 11. MAKE SURE THE FRONT PANEL DOES NOT MOVE AND LOCK THE DRAWER FRONT PANEL INTO POSITION WITH 3/4" FLAT HEAD SCREWS (HW2).

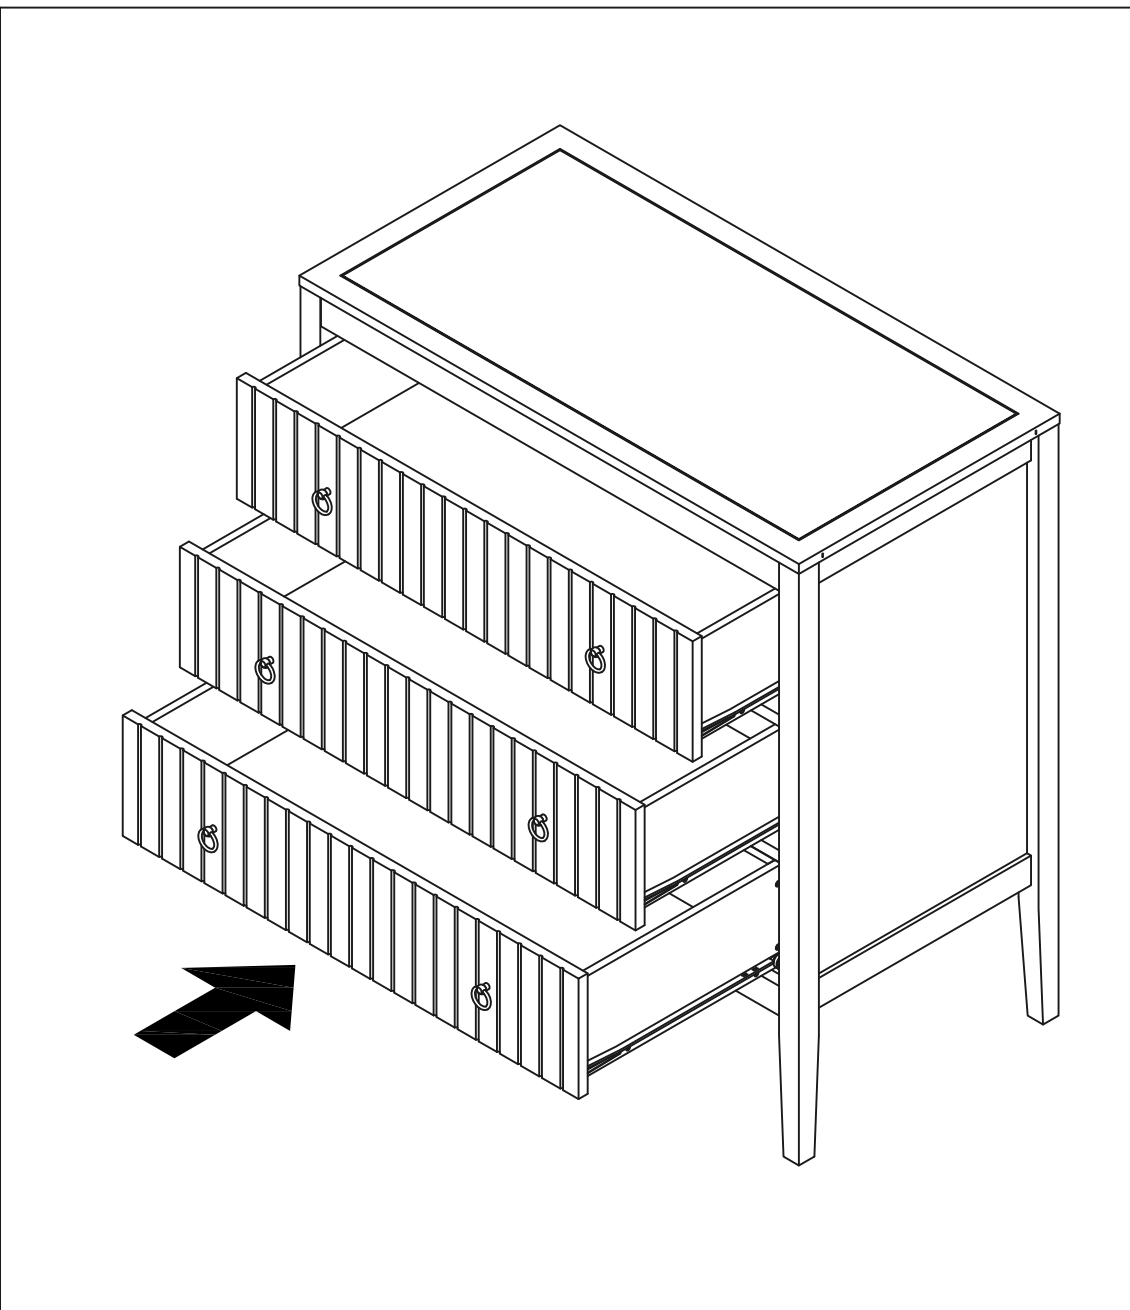

STEP 14 SLIDE THE DRAWERS INTO UNIT.