NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**


PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 90 minutes.
*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discolorration or softtening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax shich should be used on a reguler basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

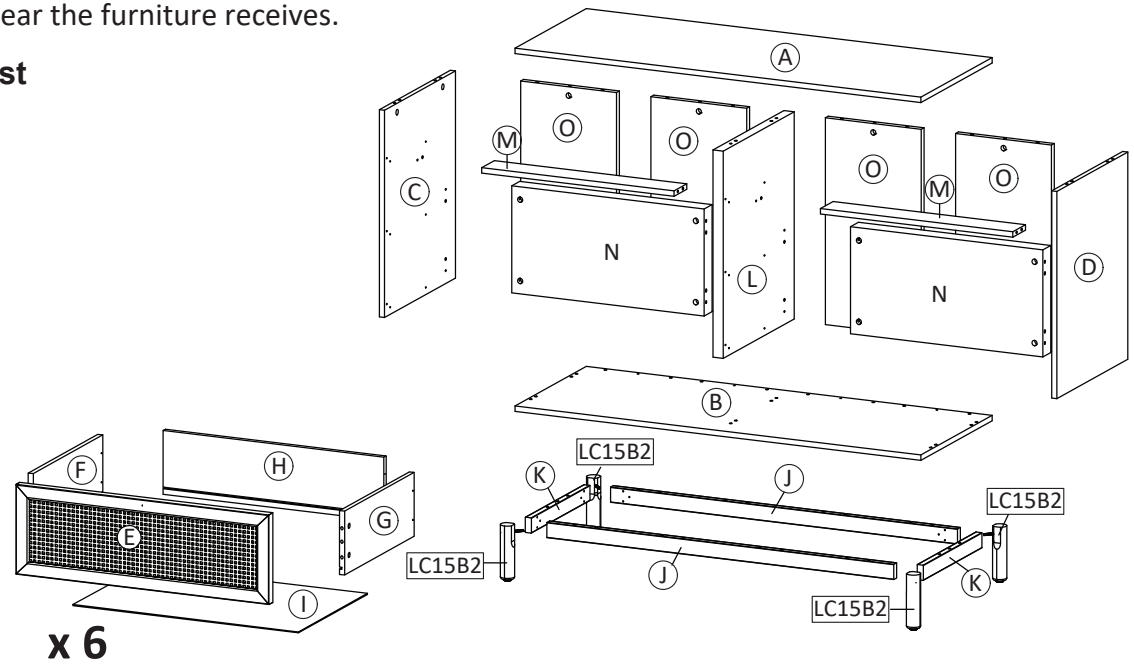


x 6

SAFAVIEH FURNITURE

Model# DRS9600






Product Dimensions: 47”Wx19”Dx30”H

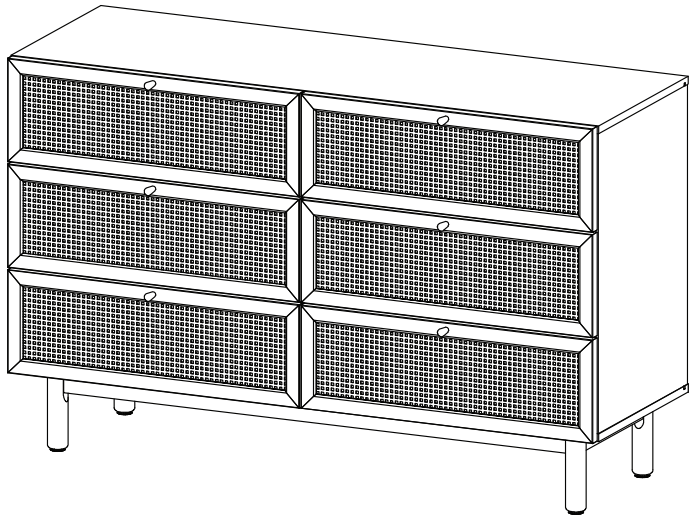

WARNING :

WEIGHT CAPACITY: 79 LBS.
DRAWER LOAD CAPACITY: 24 LBS
Warning : Do not stand on chest.
Warning : Do not over torque bolts.

Hardware List

HW1x46  Ø 6 x 35 mm	HW2x22  Ø 15 mm	HW3x24  Ø 12 mm	HW4x52  Ø 8 x 30 mm	HW5x10  M 7 x 50 mm
HW6x12  M 6.4 x 53 mm	HW7x2 	HW8x24 	HW9x24  M 3.5 x 15.5 mm	HW10x4 
HW11x12  Ø 6 x 30 mm	HW12x36  M 3.5 x 13 mm	HW13x1 	HW14x24  M 4 x 16 mm	HW15x24  M 8 x 39 mm
HW16x6 	HW17x6  M 4 x 25 mm	HW18x46  M 6 x 10.5 mm	HW RM35Ax6 	HW US90x1 
HW BC410x4 				


Part List & HW For Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	1 of 2
B	Bottom Board	1	1 of 2
C	Side Board Left	1	2 of 2
D	Side Board Right	1	2 of 2
E	Front Drawer	6	2 of 2
F	Side Drawer Left	6	1 of 2
G	Side Drawer Right	6	1 of 2
H	Back Drawer	6	2 of 2
I	Bottom Drawer	6	1 of 2
J	Bottom Skirt 2	2	2 of 2
K	Bottom Skirt 1	2	1 of 2
L	Center Board	1	2 of 2
M	Support Board 1	2	2 of 2
N	Support Board 2	2	1 of 2
O	Back Board	4	2 of 2
LC15B2	Leg	4	2 of 2


Piece	Description	Qty	Carton Call
HW1	Cambolt	46	2 of 2
HW2	CamLock Big	22	2 of 2
HW3	CamLock Small	24	2 of 2
HW4	Dowel Big	52	2 of 2
HW5	Screw M 7 x 50 mm	10	2 of 2
HW6	Screw M 6.4 x 53 mm	12	2 of 2
HW7	Allen Key	2	2 of 2
HW8	Wedge	24	2 of 2
HW9	Screw M 3.5 x 15.5 mm	24	2 of 2
HW10	Flange Nut	4	2 of 2
HW11	Dowel Small	12	2 of 2
HW12	Screw M 3.5 x 13 mm	36	2 of 2
HW13	Wrench	1	2 of 2
HW14	Screw M 4 x 16 mm	24	2 of 2
HW15	Screw M 8 x 39 mm	24	2 of 2
HW16	Handle	6	2 of 2
HW17	Screw M 4 x 25 mm	6	2 of 2
HW18	Screw M 6 x 10.5 mm	46	2 of 2
HW RM35A	Drawer Runner	6	2 of 2
HW US90	Anti-Deflection Bar	1	1 of 2
HW BC410	Corner Brace	4	2 of 2

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 90 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

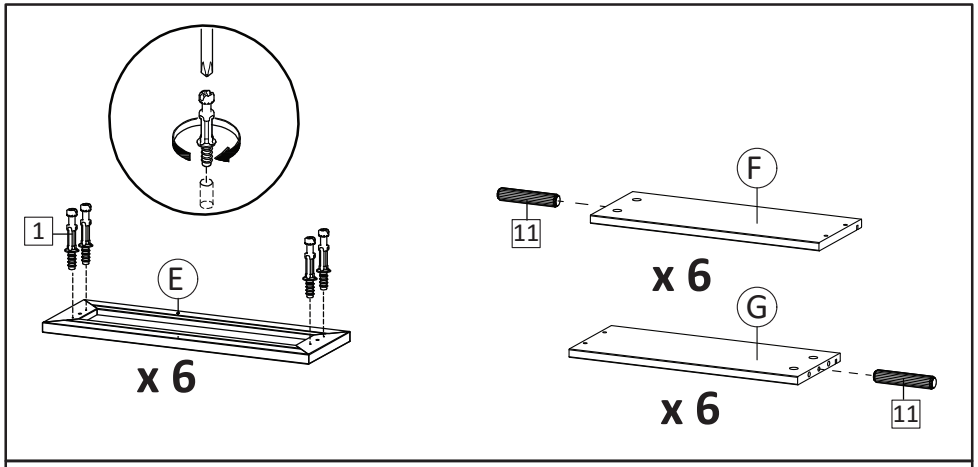


STEP1: Insert Cambolt (HW1) into Front Drawer (E). Insert Dowel Small (HW11) into Side Drawers (F&G).

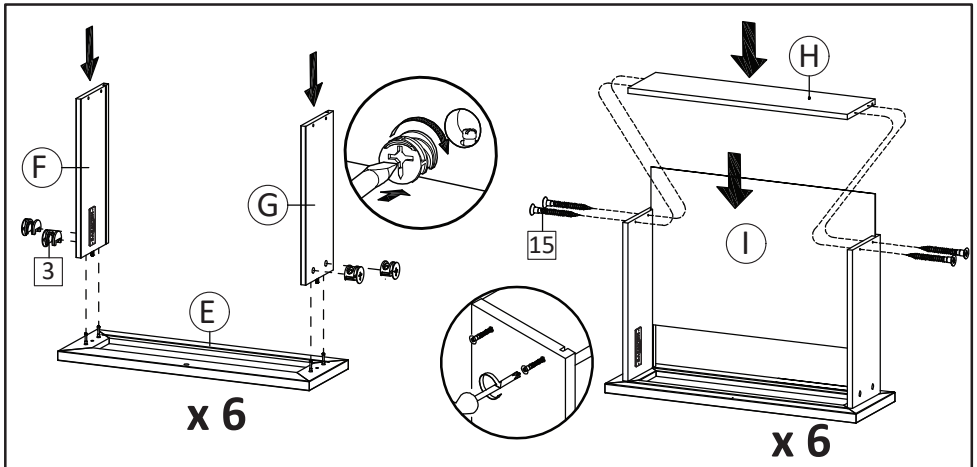

STEP2: Combine Side Drawers (F&G) into Front Drawer (E) then tighten Camlock Small (HW3) using screwdriver. Insert Bottom Drawer (I) then put Back Drawer (H) and secure with Screw M8x39mm (HW15).

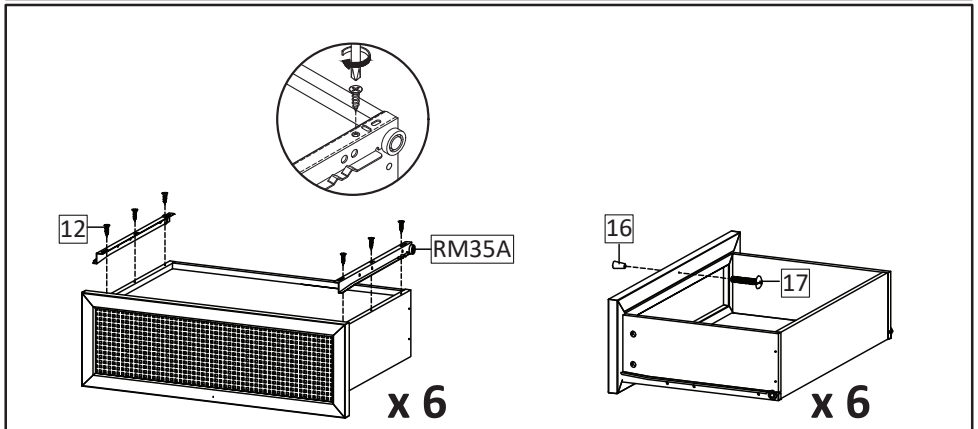


STEP3: Install the Drawer Runner (HW RM35A) into position as shown in picture. Secure with screws M3.5x13mm (HW12). Use Screw M4x25mm (HW17) to attach Handle (HW16) to the Front Drawer.

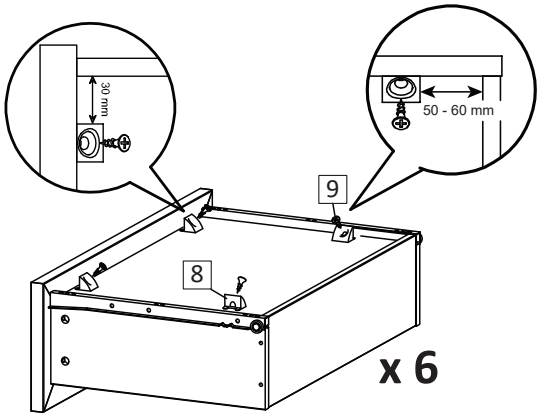


STEP4: Insert the Screw M3.5x15.5mm (HW9) and Wedge (HW8) into the bottom of the drawer according to the picture.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 90 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

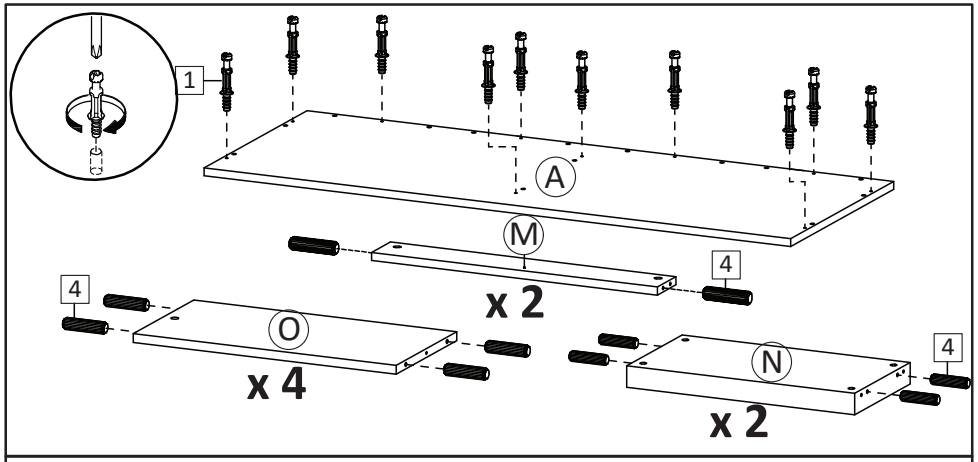


STEP5: Insert Cambolt (HW1) into Top Board (A). Insert Dowel Big (HW4) into Support Board (M),Back Board (O) and Support Board 2 (N).

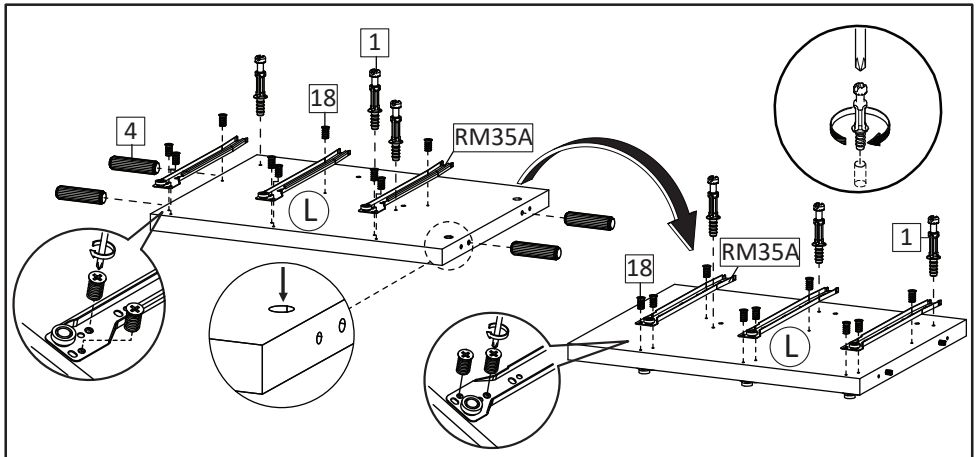

STEP7: Part of Drawer Runner must be installed to Center Board (L) on both sides. Start with the side which has Camlock hole (see arrow). Secure part of the Drawer Runner (HW RM35A) into position as the above image, using screw M6x10.5mm (HW18), then flip the board to access the opposite surface. Continue to secure part of metal runner (HW RM35A) on the surface using screw M6x10.5mm (HW18).

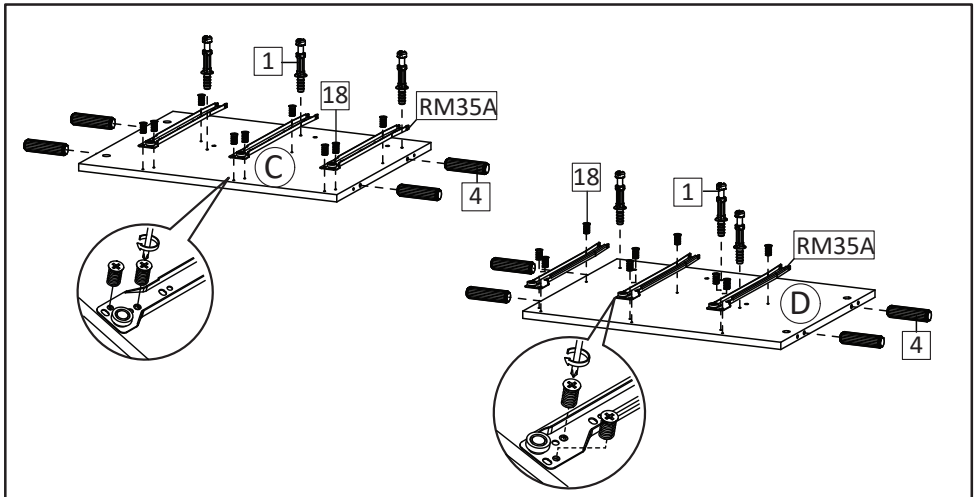


STEP6: Insert Dowel Big (HW4) and Cambolt (HW1) into Side Board Left (C) and Side Board Right (D). Continue with securing part of the Drawer Runner (HW RM35A) into position as the above image, using screw M6x10.5mm (HW18).

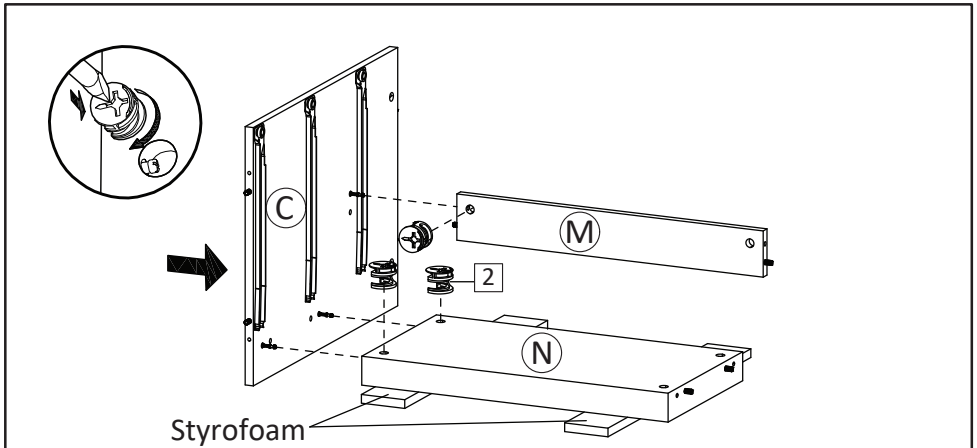


STEP8: Attach Support Board 1 (M) and Support Board 2 (N) into Side Board Left (C). Insert Camlock (HW2) then tighten using screwdriver.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 90 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

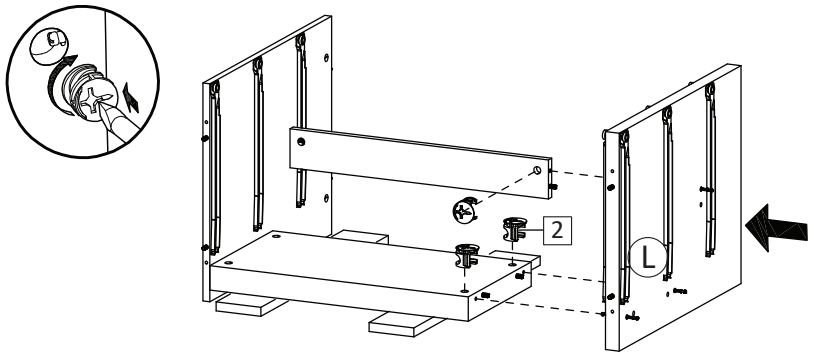


STEP9: Combine the Center Board (L) onto the pre-assembled components. Insert the Camlock (HW2) then tighten using a screwdriver.

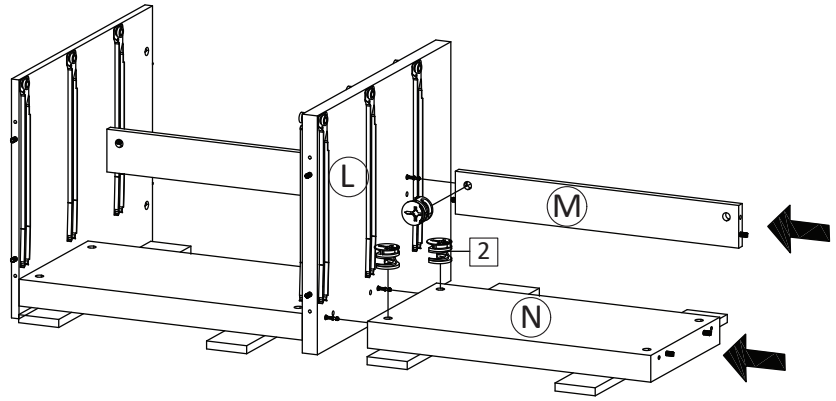

STEP10: Attach Support Board 1 (M) and Support Board 2 (N) into Center Board (L). Insert Camlock (HW2) then tighten using screwdriver.

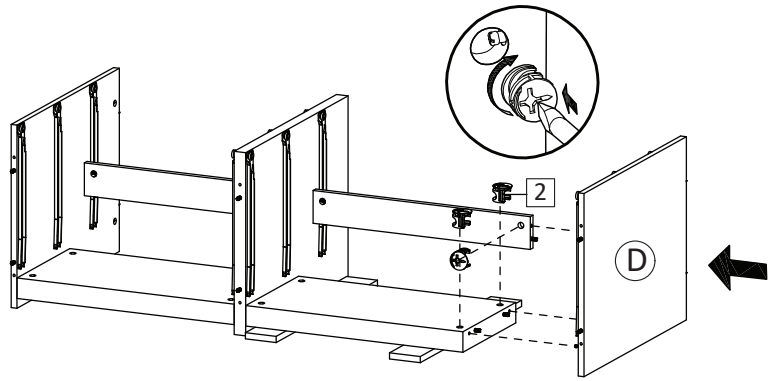


STEP11: Attach the Side Board (D) onto the pre-assembled components. Insert the Camlock (HW2) then tighten using a screwdriver.

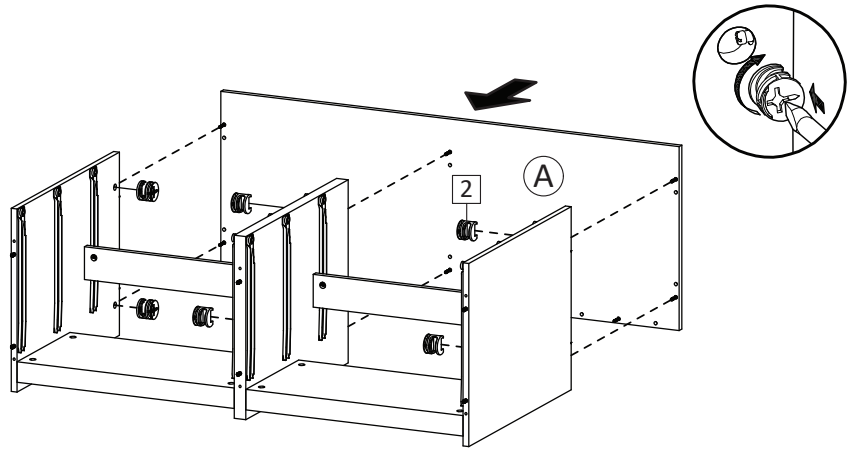


STEP12: Insert the Top Board (A) onto the pre-assembled components. Insert the Camlock (HW2) then tighten using a screwdriver.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 90 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

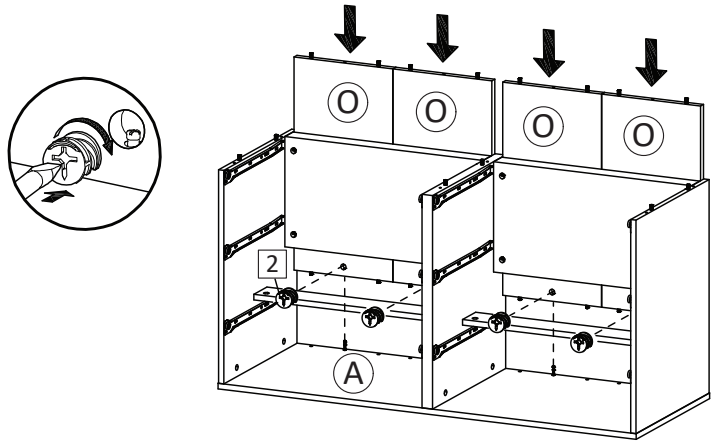


STEP13: Attach Back Boards (O) into Top Board(A). Insert Camlock (HW2) then tighten using screwdriver as picture.

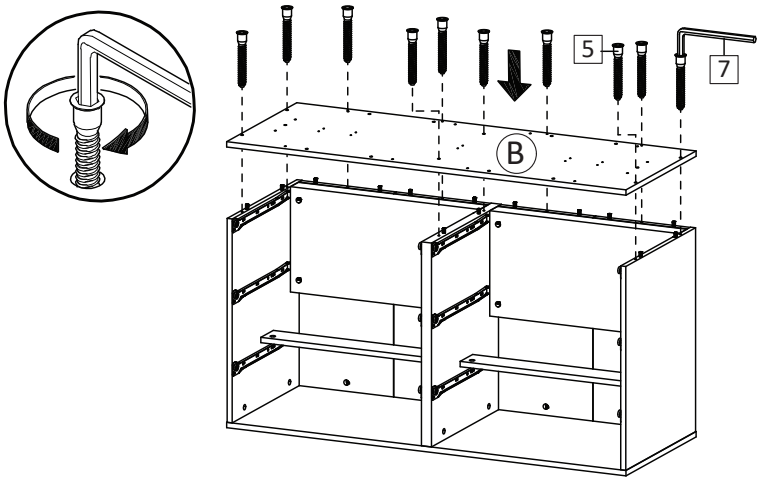

STEP14: Insert Bottom Board (B), secure with Screw M7x50mm (HW5), tighten screws using Allen Key (HW7).

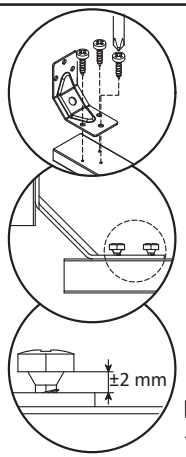


Dont'over tighten ±2 mm

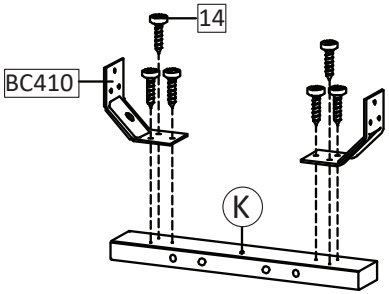

x 2


STEP15: Now let's combine the bottom skirt. Start with installing Corner Brace (HW BC410) into Bottom Skirt 2 (K) using Screw M4x16mm (HW14). Do not overtight screw yet, leave around 2mm gap.

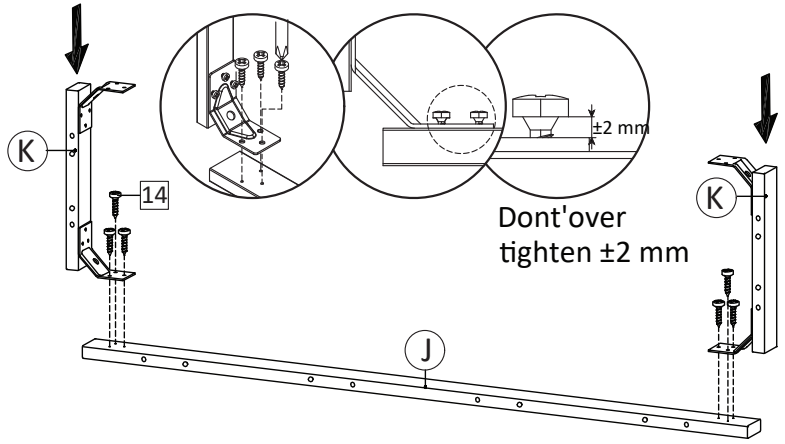


STEP16 : Combine the Bottom Skirt 1 (J) from step 15 with Bottom skirt 2 (K),using Screw M4x16mm (HW14). Do not overtight screw yet, leave around 2mm gap.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 90 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

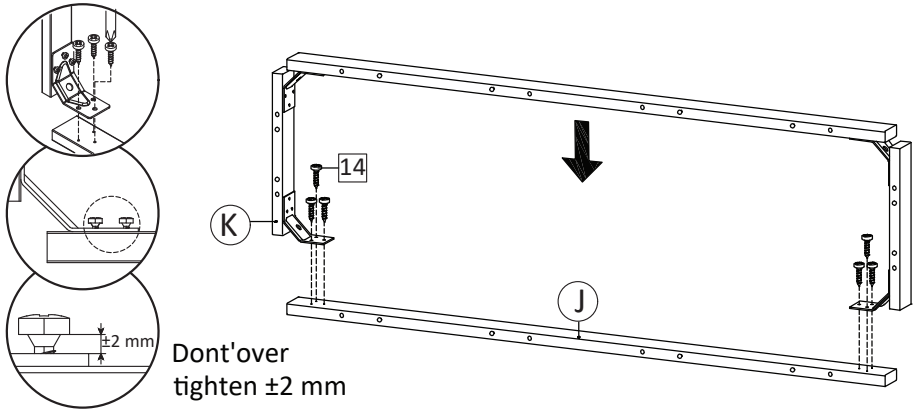


STEP17 : Combine the remaining Bottom Skirt 1 (J) from step 16 with Bottom skirt 2 (K),using Screw M4x16mm (HW14). Do not overtight screw yet, leave around 2mm gap.

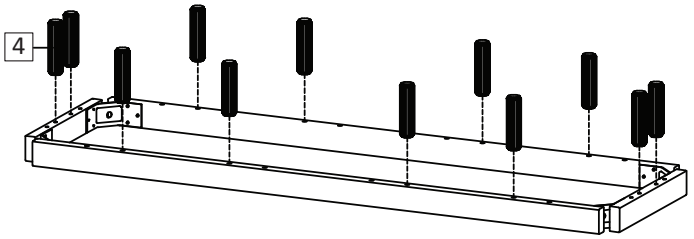

STEP18: Insert Dowel Big (HW4) into assembled Bottom skirt from previous step.

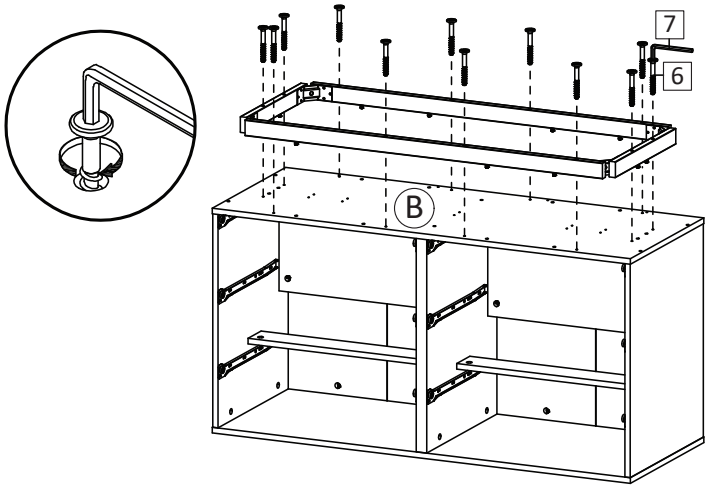


STEP19 Attach the assembled Bottom Skirt onto Bottom Board (B) secure with Screw M6.4x53mm (HW6) using Allen Key (HW7).

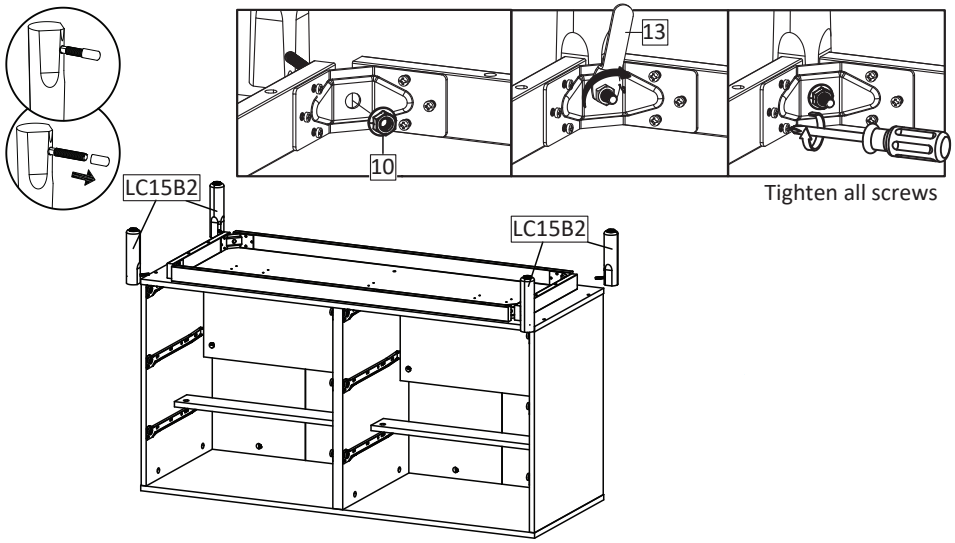


STEP20: First, let's fixing the leg by inserting leg to Corner Brace, Insert Flange Nut (HW10) into the hanger bolt of leg, tighten all the Flange Nut using provided Wrench (HW13). Second, after ensuring that all legs has been tightened, continue with tighten all screws on the corner brace.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 90 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

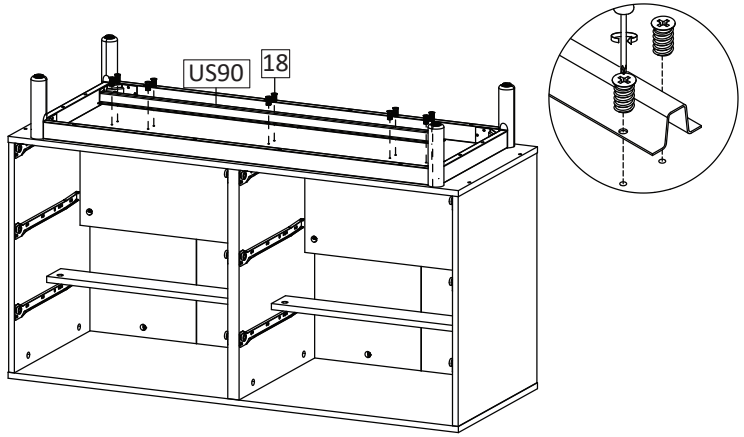

STEP21: Place Anti-Deflection Bar (HW US90), secure with screw M6x10.5mm (HW18), tighten using screwdriver.

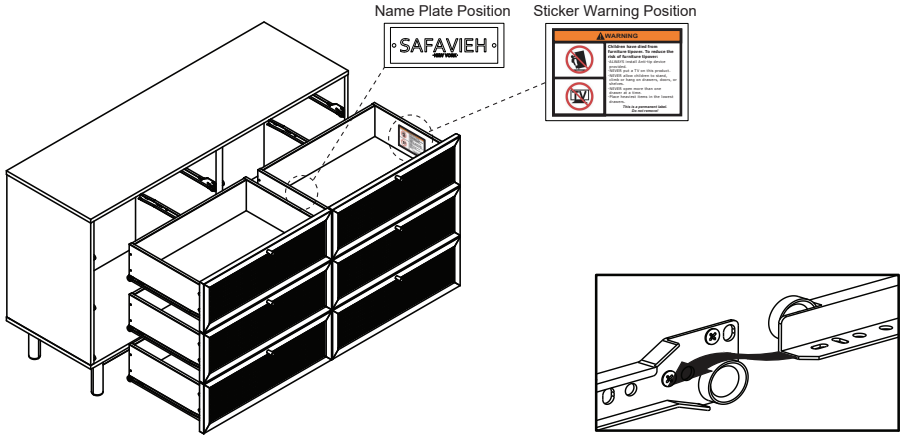


STEP22: Hold the sides of drawer, position the wheel of Drawer Runner at drawer back and the wheel of Drawer Runner at side boards, according to the image. Slide in the drawers one by one into the Sideboard.

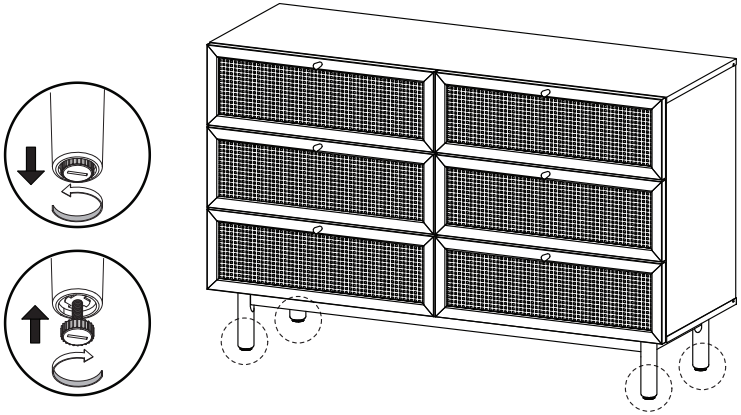


STEP23: Place your furniture on lever floor. The legs come with adjustable leveler,adjust it as needed until your furniture stands steadily on the floor. Assembly is Complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.
The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.
Please consult your local hardware store to ensure you are using the correct hardware for your wall type.


AA1 x 2


AA2 x 4


AA3 x 4


AA4 x 4

1

