

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)














## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 45 minutes.
- \* Tools Required for Assembly : Allen Key,Screwdriver,Wooden hammer.

## CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.

### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top panel		1X
B	Base panel		1X
C	Side panel left		1X
D	Middle panel		1X
E	Side panel right		1X
F	Back panel		1X
G	Leg		4X
H	Drawer panel front		1X
I	Drawer panel left		1X
J	Drawer panel right		1X
K	Drawer panel back		1X
L	Drawer panel base		1X
M	Slide Rail		2X



**Model# DSK2200**

**Product Dimensions: 43.3"W x 19.7"D x 29.7"H**













### ⚠ WARNING ⚠

**Weight Capacity: 70 lbs.**


**Warning:Do not stand on Desk.**

**Warning:Do not over torque bolts.**


PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	Allen Key		1X
HW2	Cambolt M6 x 45 mm		16X
HW3	Camlock		16X
HW4	Dowel		12X
HW5	Screw M5 x 45 mm		8X
HW6	Screw M3.5 x 12 mm		8X
HW7	Screw M4 x 35 mm		4X
HW8	Bolt M6 x 12 mm		16X
HW9	Handle		1X
HW10	Bolt M4 x 20 mm		2X

# PREPARATION


- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 45 minutes.
- \* Tools Required for Assembly : Allen Key,Screwdriver,Wooden hammer.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

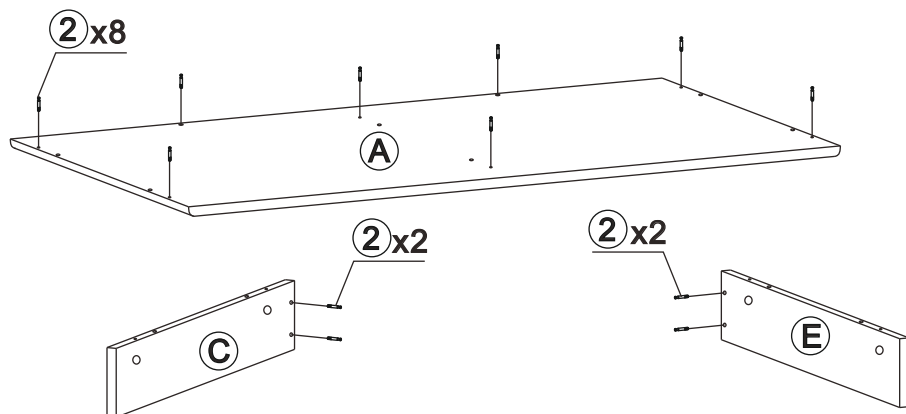


**STEP1:** Insert HW② in pre-drilled holes of part①,③,⑤.

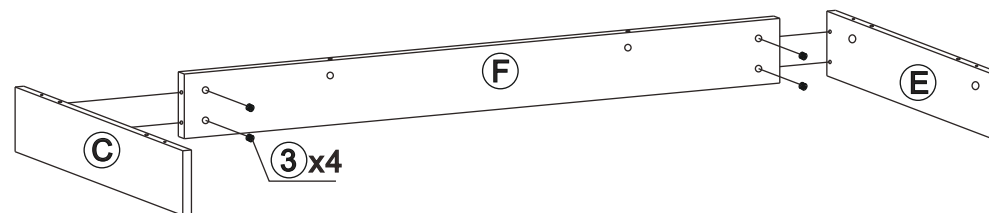


**STEP2:** Put HW③ in pre-drilled holes of part⑥,  
Attach part③,⑤ to ⑥, and tighten HW③.

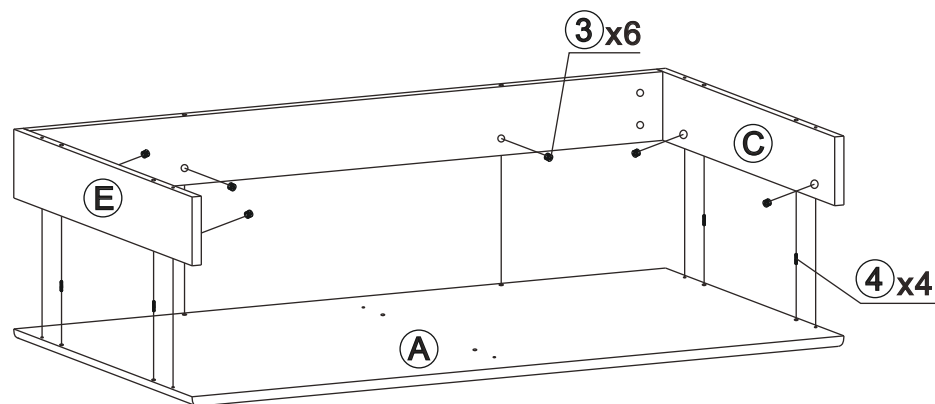


**STEP3:** Flip over the unit, put HW③ in part③,⑤,⑥,insert HW④ in part①,  
Attach the unit to part①, and tighten HW③.

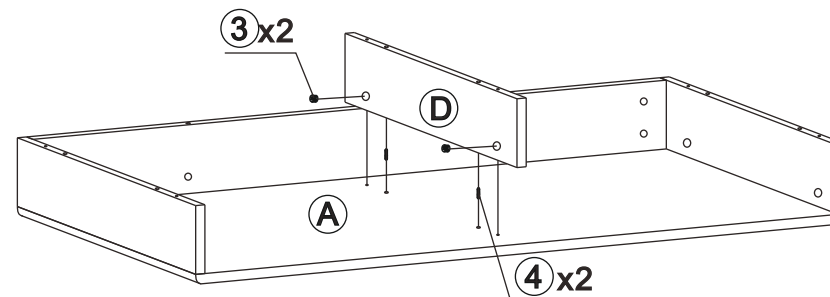


**STEP4:** Put HW③ in pre-drilled holes of part④, insert HW④ in part①,  
Attach part④ to ①, and tighten HW③.

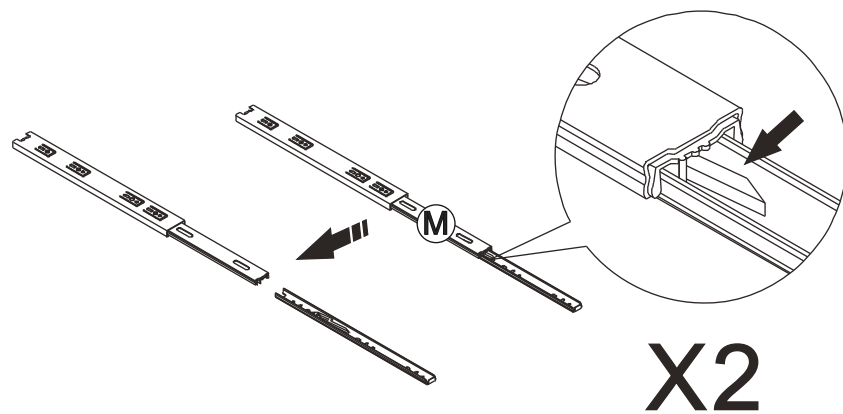


**STEP5:** Press down and pull away.

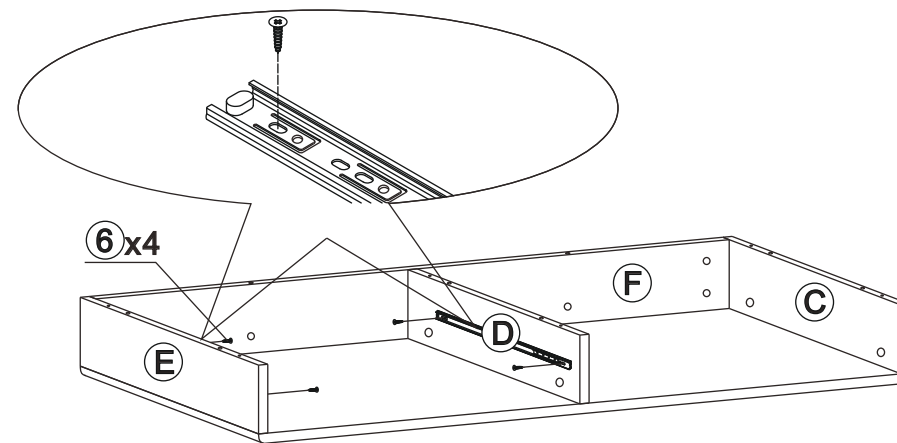


**STEP6:** Attach big part of (M) to part (D), (E) using HW (6).

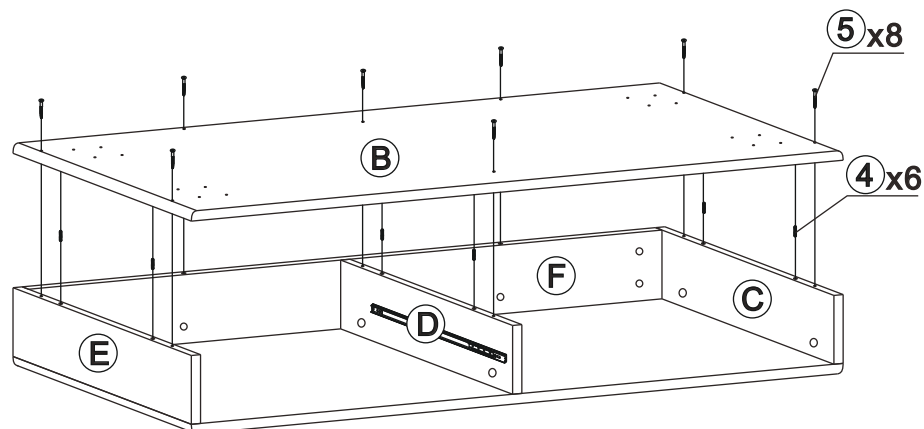


**STEP7:** Insert HW (4) in pre-drilled holes of part (C), (D), (E),  
Attach part (B) to the unit using HW (5).

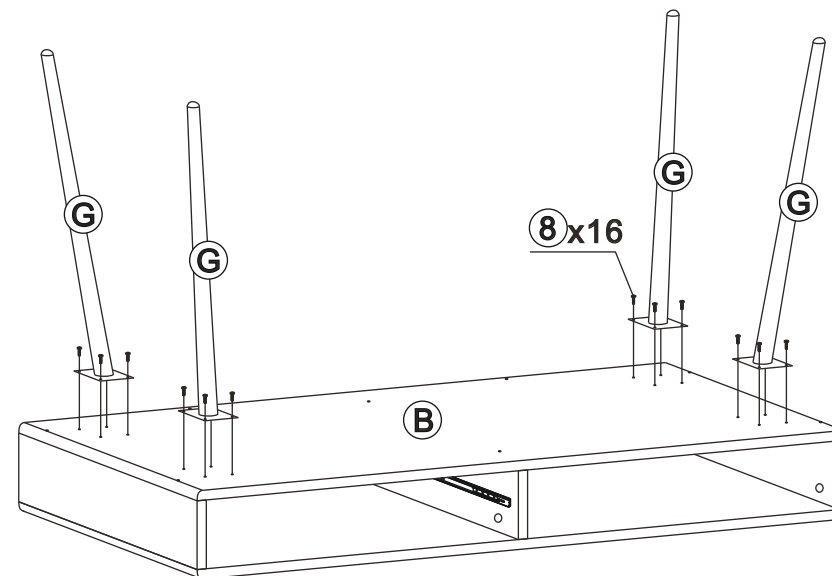


**STEP8:** Attach part (G) to (B) using HW (8).

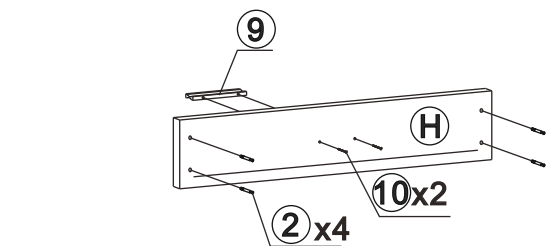


**STEP9:** Attach HW⑨ to part⑨ using HW⑩,  
Insert HW② in pre-drilled holes of part⑨,  
Attach part①,② to ③ using HW⑦.

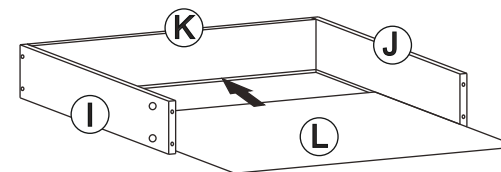

**STEP10:** Insert part④ into the unit,  
Put HW③ in pre-drilled holes of part①,②,  
Attach part④ to ①,②, and tighten HW③.

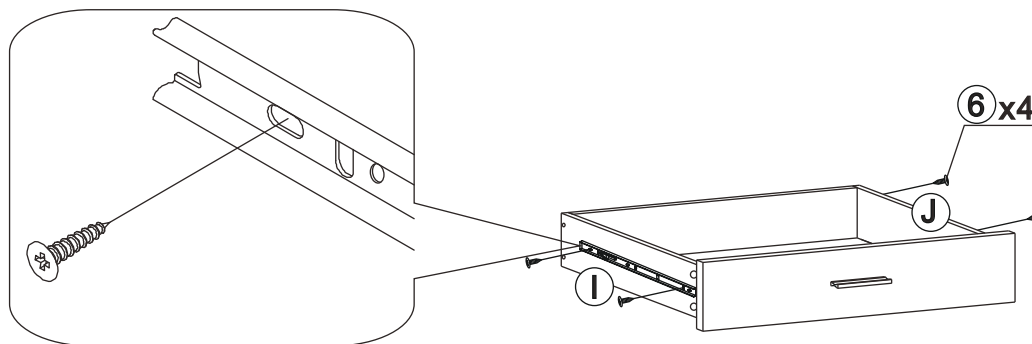

**STEP11:** Attach small part of part⑤ to ①,② using HW⑥.

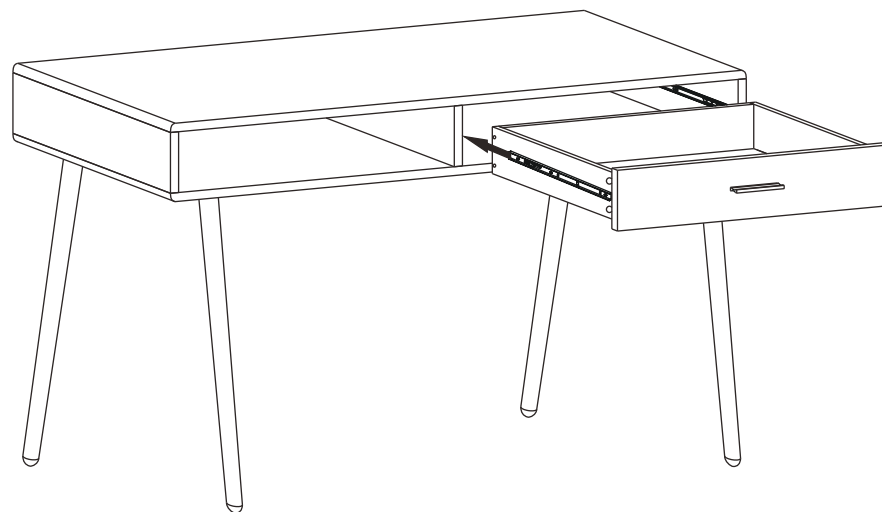

**STEP12:** Slide the drawer into the desk.



**STEP13:** Finish.