

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


















PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly : Allen Key, Screwdriver, Wooden hammer.

CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top Board		1X
B	Bottom Board		1X
C	Side Board Left		1X
D	Back Board		1X
E	Side Board Right		1X
F	Leg Left		1X
G	Leg Right		1X
H	Rod 1		2X
I	Rod 2		1X
J	Drawer Board Front		1X
K	Drawer Side Board Left		1X
L	Drawer Back Board		1X
M	Drawer Side Board Right		1X
N	Drawer Support Board		1X
O	Drawer Bottom Board		1X
P	Drawer Handle		2X
Q	Drawer Slider		2X



Model# DSK2201

Product Dimensions: 43.3"W x 21.7"D x 29.5"H
















⚠ WARNING ⚠

Weight Capacity: 55 lbs.


Warning: Do not stand on Desk.

Warning: Do not over torque bolts.


PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	Screw M3.5 x 12 mm		8X
HW2	Screw M6 x 95 mm		6X
HW3	Screw M6 x 45 mm		2X
HW4	Screw M6 x 20 mm		4X
HW5	Screw M6 x 12 mm		4X
HW6	Dowel		12X
HW7	Screw M6 x 45mm		2X
HW8	Nut M15 mm		2X
HW9	Screw M4 x 35 mm		6X
HW10	Screw M6 x 27mm		6X
HW11	Nut M10 mm		6X
HW12	Screw M4 x 25 mm		10X
HW13	Allen Key		1X

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly : Allen Key,Screwdriver,Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

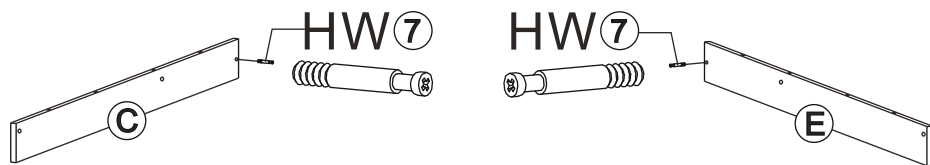


STEP1:Install HW 7 into C.Install HW 7 into E.

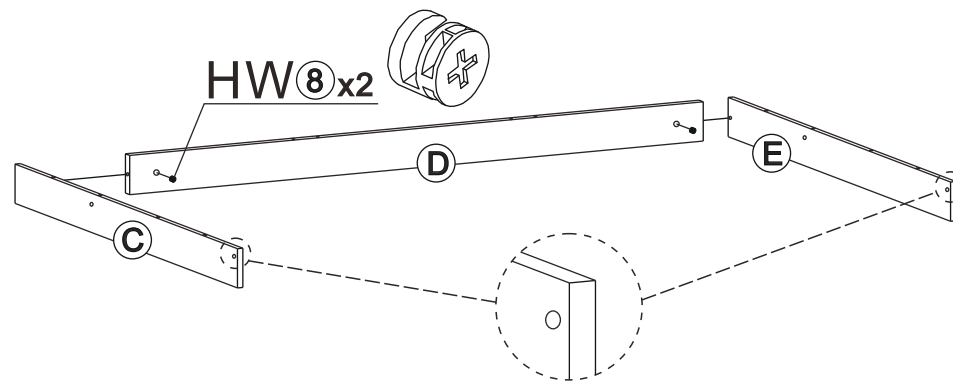


STEP2:Install HW 8 into D.

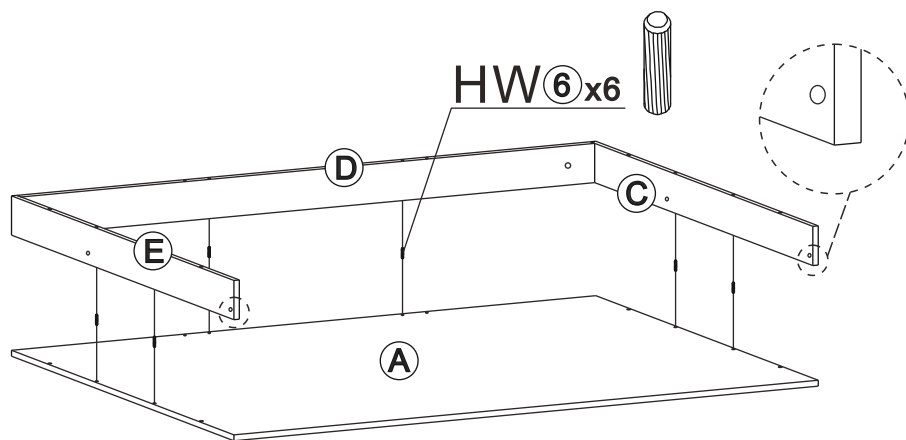


STEP3:Use HW 6 dowel listed to install board A,C,D,E together.

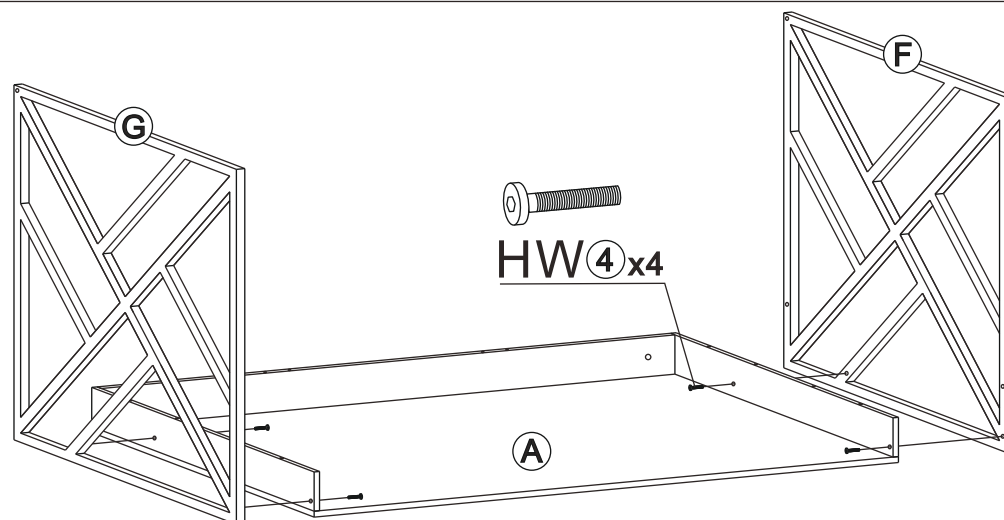


STEP4:Use the listed HW 4 screws to install left leg F and right leg G together.

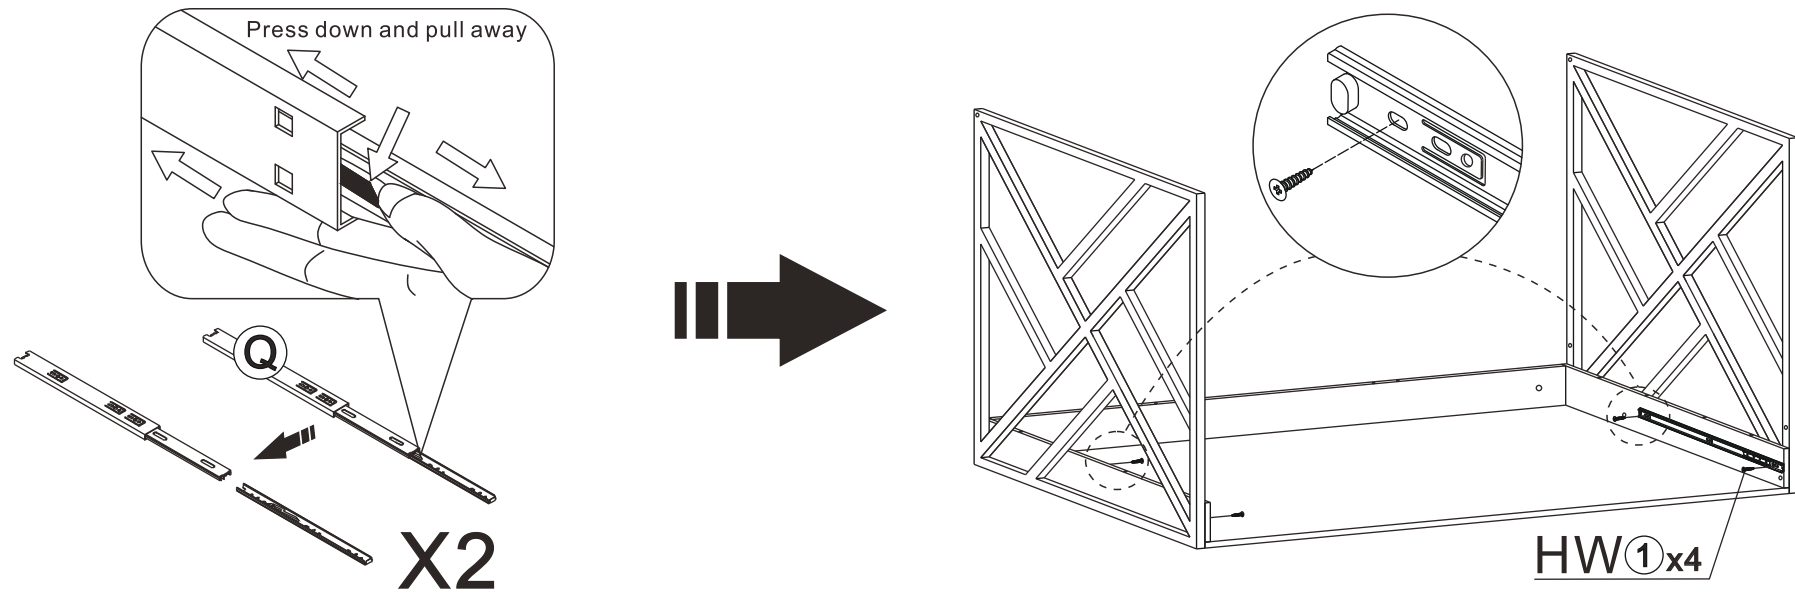


STEP5:Separate the slider into two parts, use HW①screws to install one②into the lateral plate first,and the other②part will install the drawers.

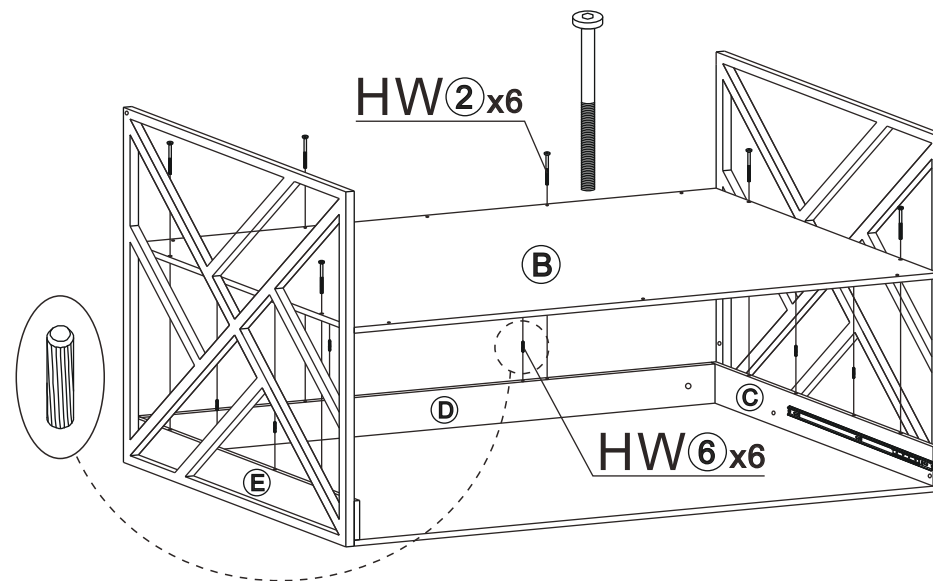


STEP6:Put listed HW⑥dowels into the board of desk③,④,⑤.Use listed HW②screws to install the bottom board of desk⑥.

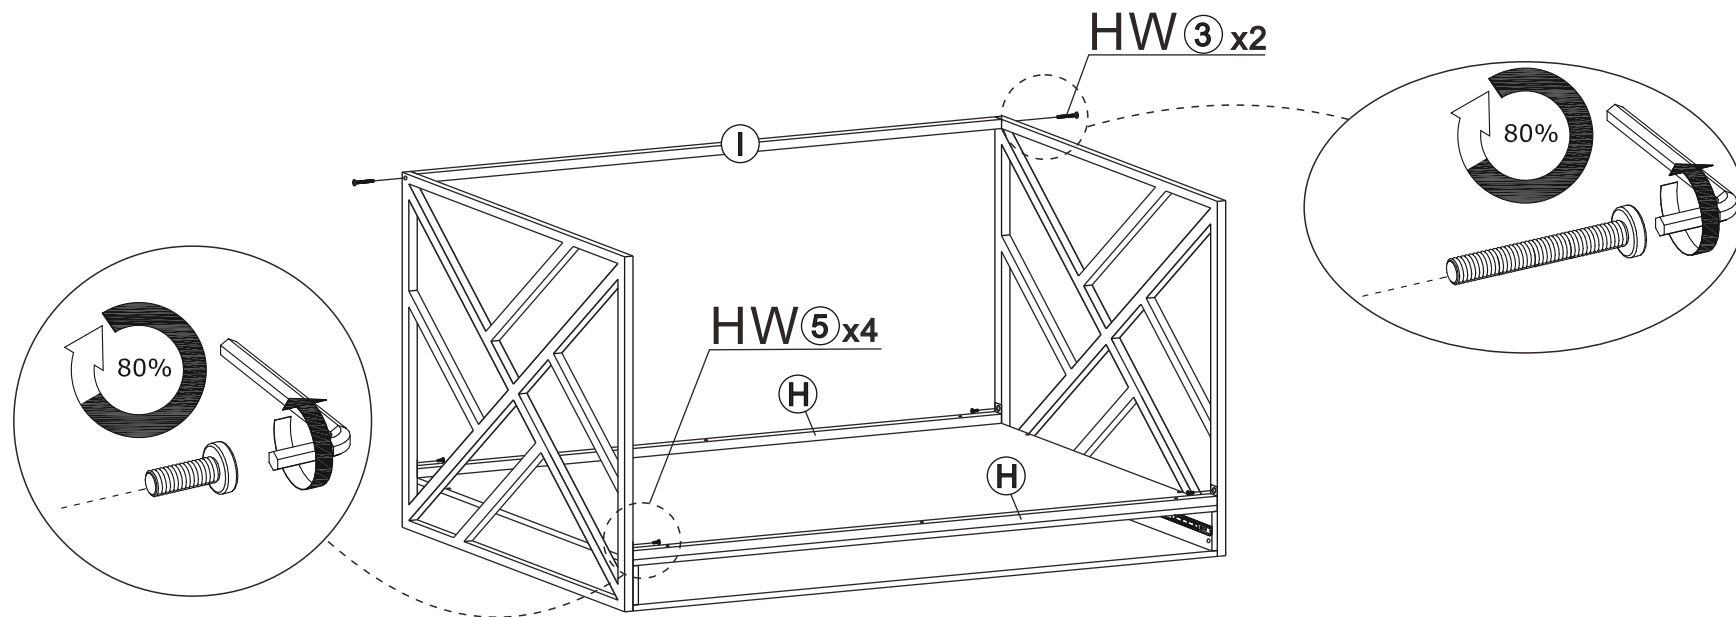


STEP7: Use the listed HW③ screws to install the rod ①, Use the listed HW⑤ screws to install the rod ②, These screws to be 80% locked only.

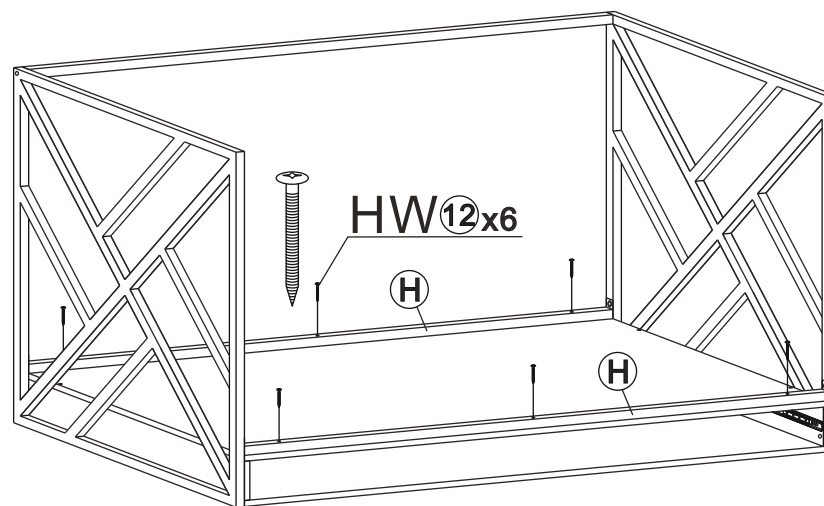


STEP8: Use the listed HW⑫ screws to install two rods ③.

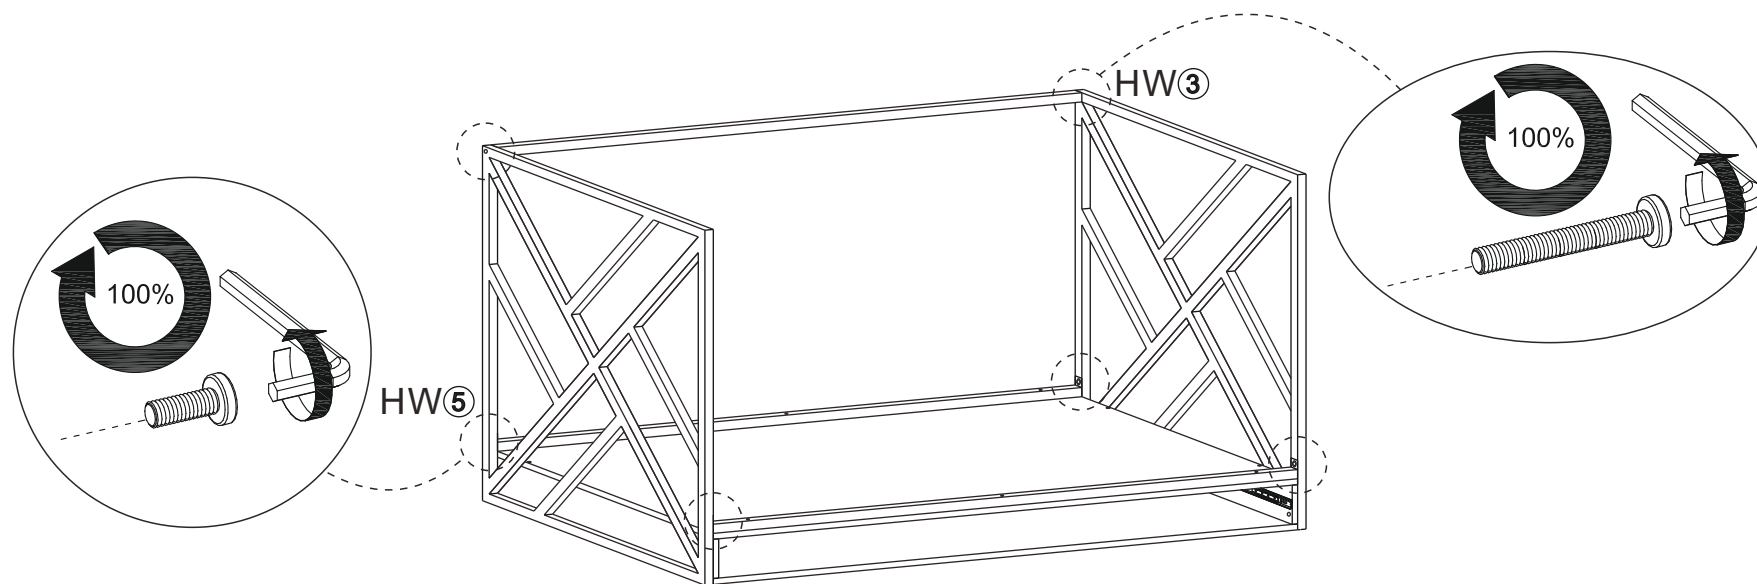


STEP9:HW③, HW⑤screws to be 100% locked .

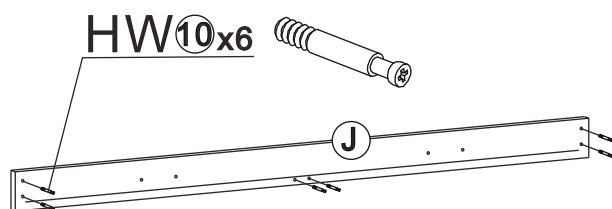


STEP10:Install HW⑩into ①J.

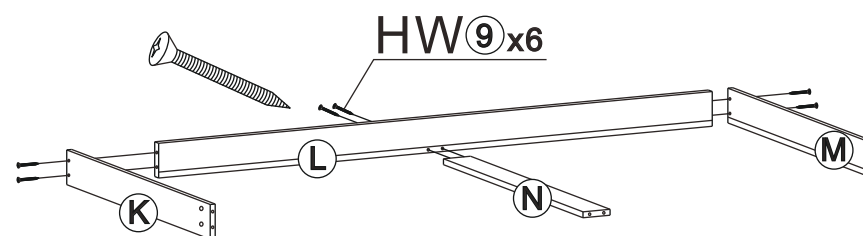


STEP11:Insert HW⑨into①L,①K,①M,①N to put these parts together.

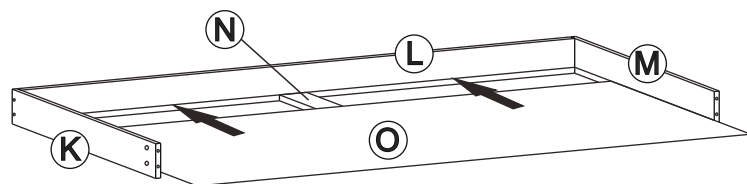


STEP12: Put ① on the top of ②.

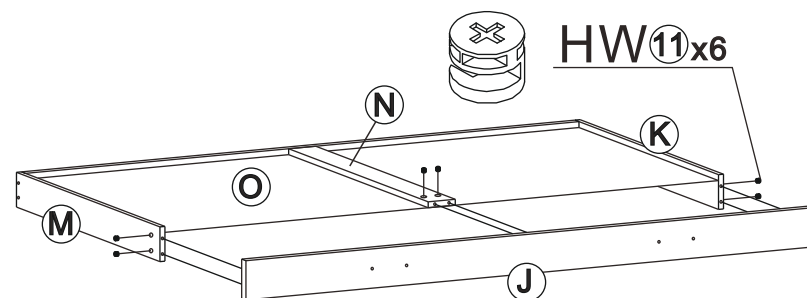


STEP13: Use HW 11 to attach ③ to be the front part of the drawer.

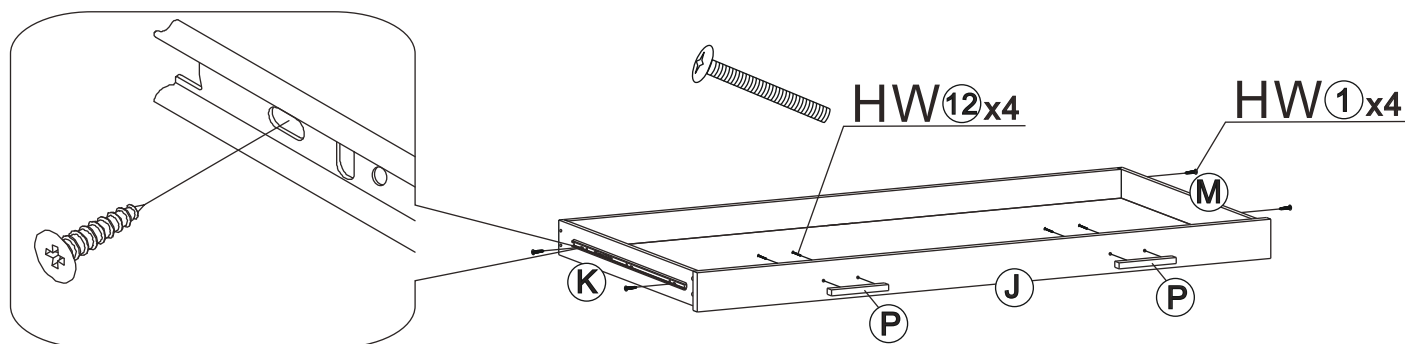

STEP14: Use HW 12 to attach ④ to ⑤. The other part of ⑥ will be installed on the outer part of ⑦ and ⑧.

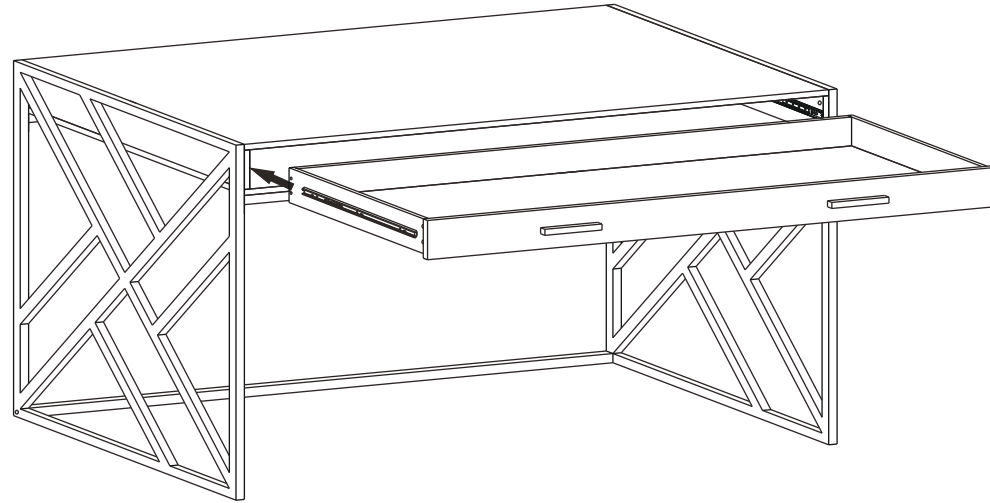

STEP15:Insert the drawer into the desk.

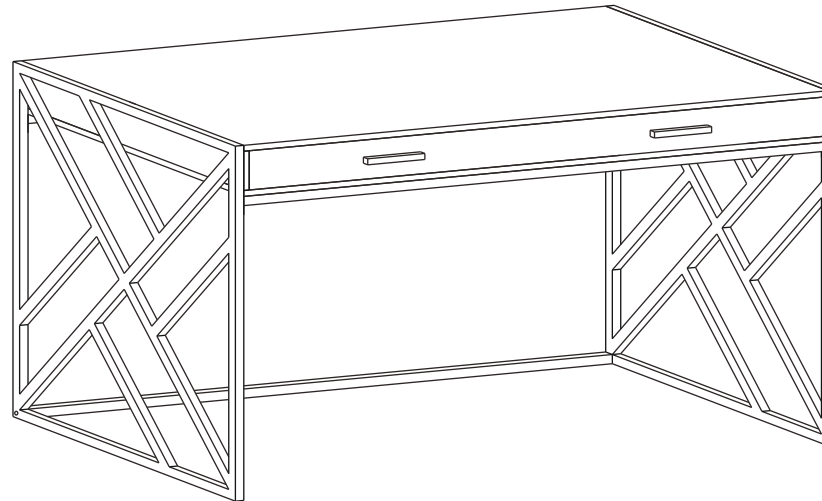

STEP16: Finish