

## CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.  
The use of steam or water-based cleaners may cause excessive shrinking or staining.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.















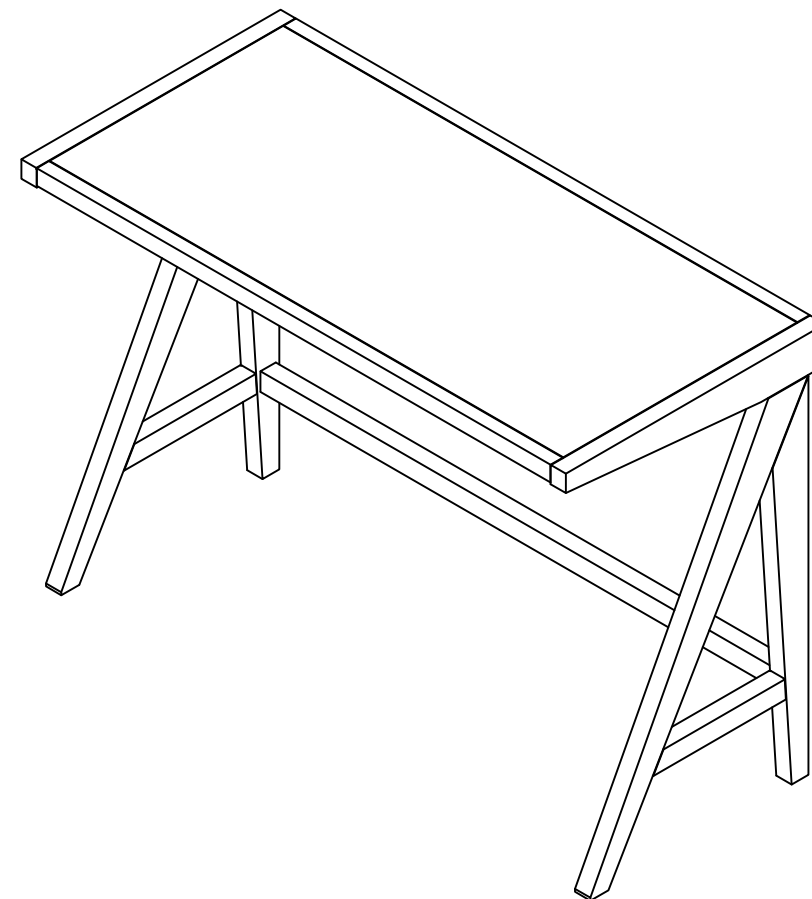
Model# DSK5001

Product Dimensions: 42" W x 20" D x 29 1/2" H

Weight Capacity: 100lbs

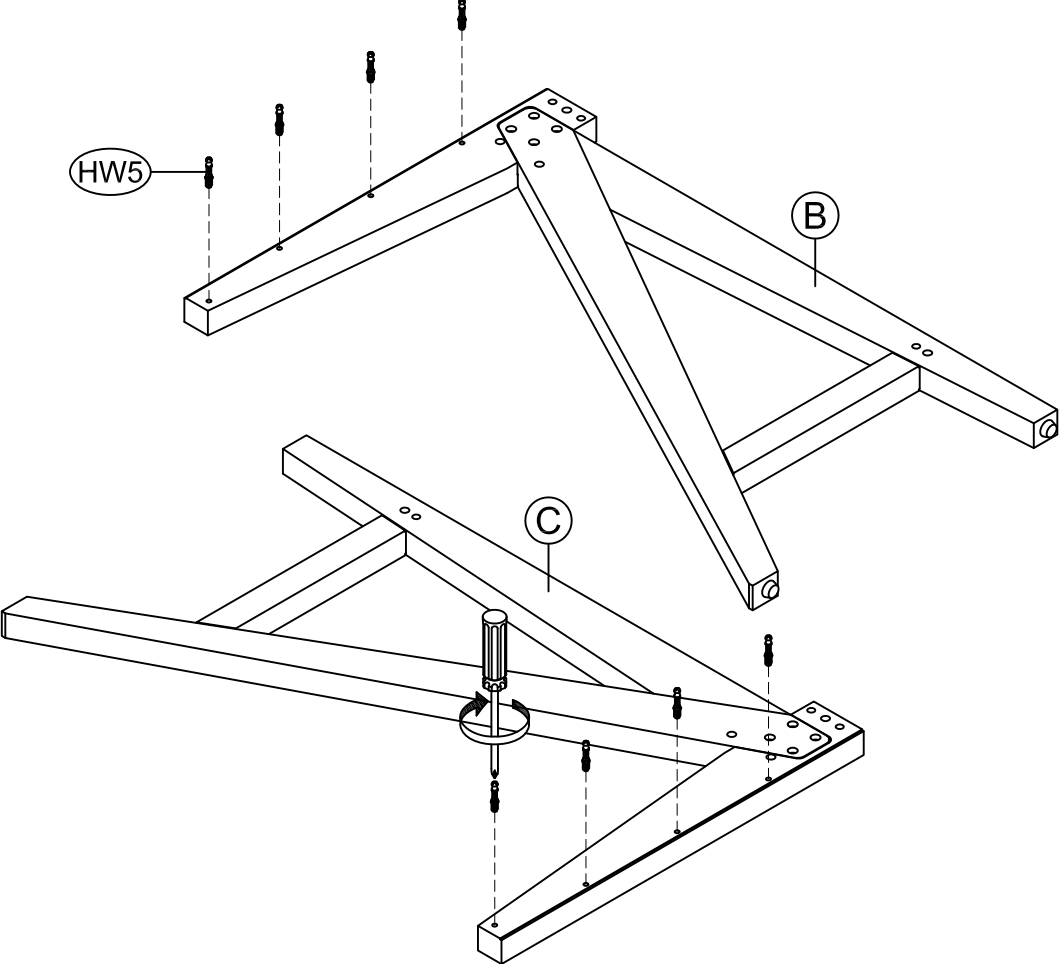
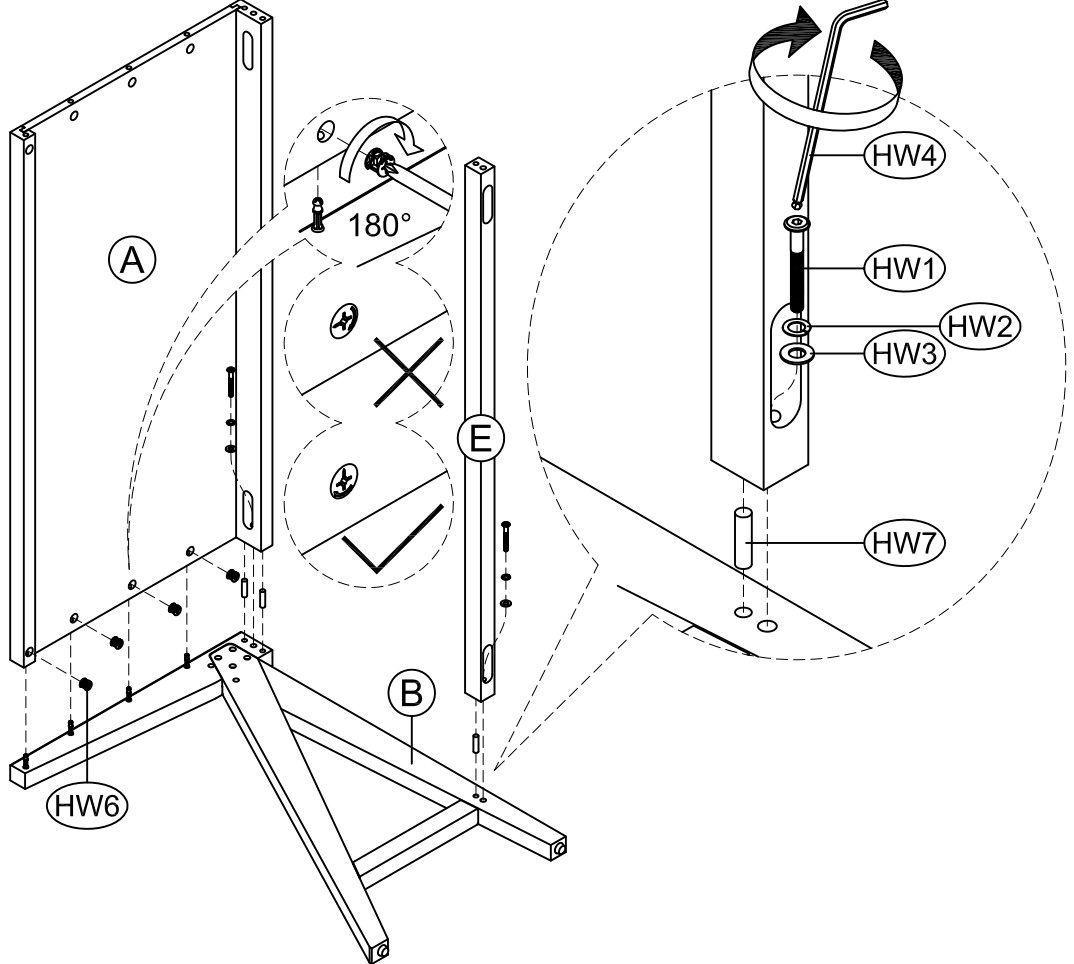
## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	LEFT LEG ASSEMBLY		1X
C	RIGHT LEG ASSEMBLY		1X
D	UPPER STRETCHER		1X
E	LOWER STRETCHER		1X
HW1	60mm HEAD CAP BOLT		8X
HW2	SPRING WASHER		8X
HW3	FLAT WASHER		8X
HW4	ALLEN KEY		1X
HW5	CAMBOLT		8X
HW6	CAMLOCK		8X
HW7	WOODEN DOWEL		6X



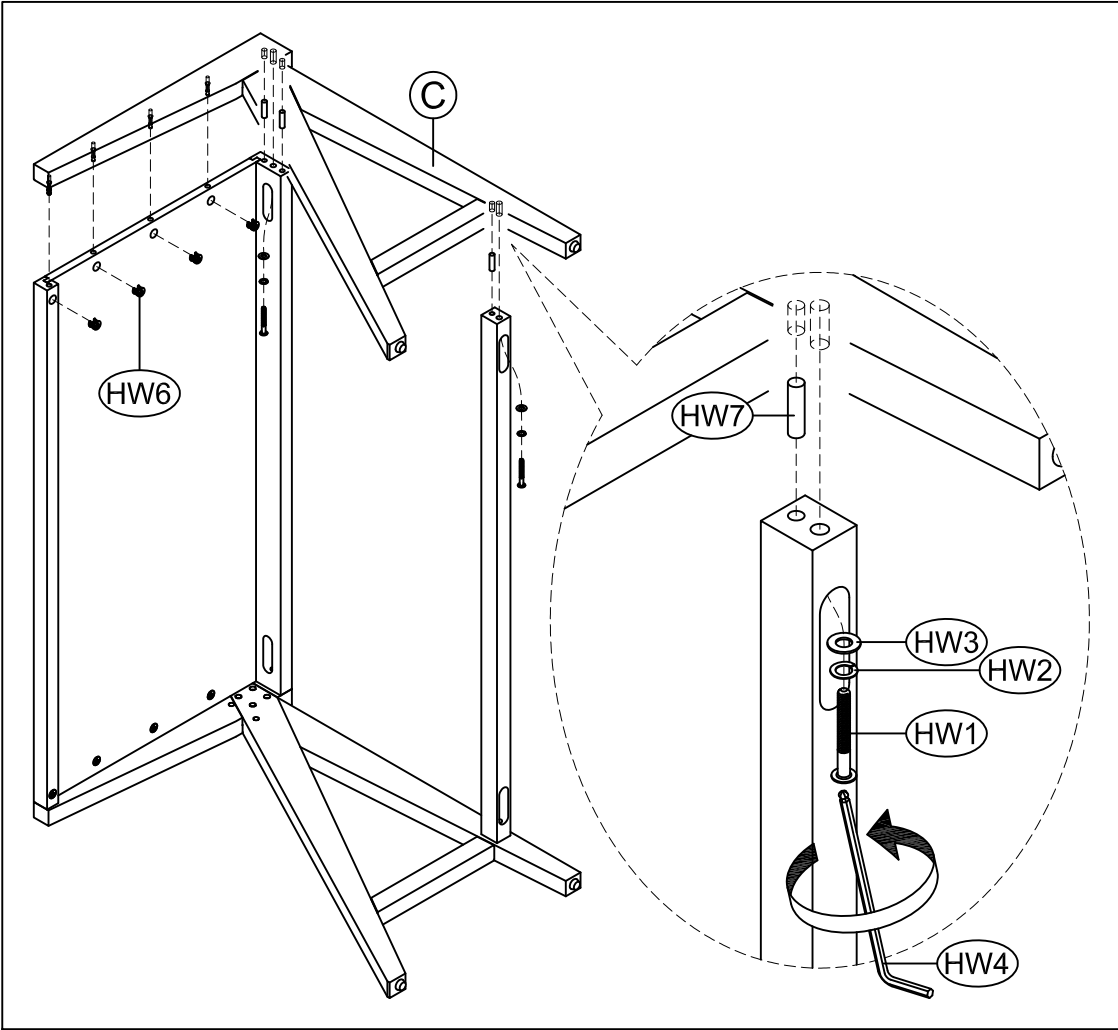
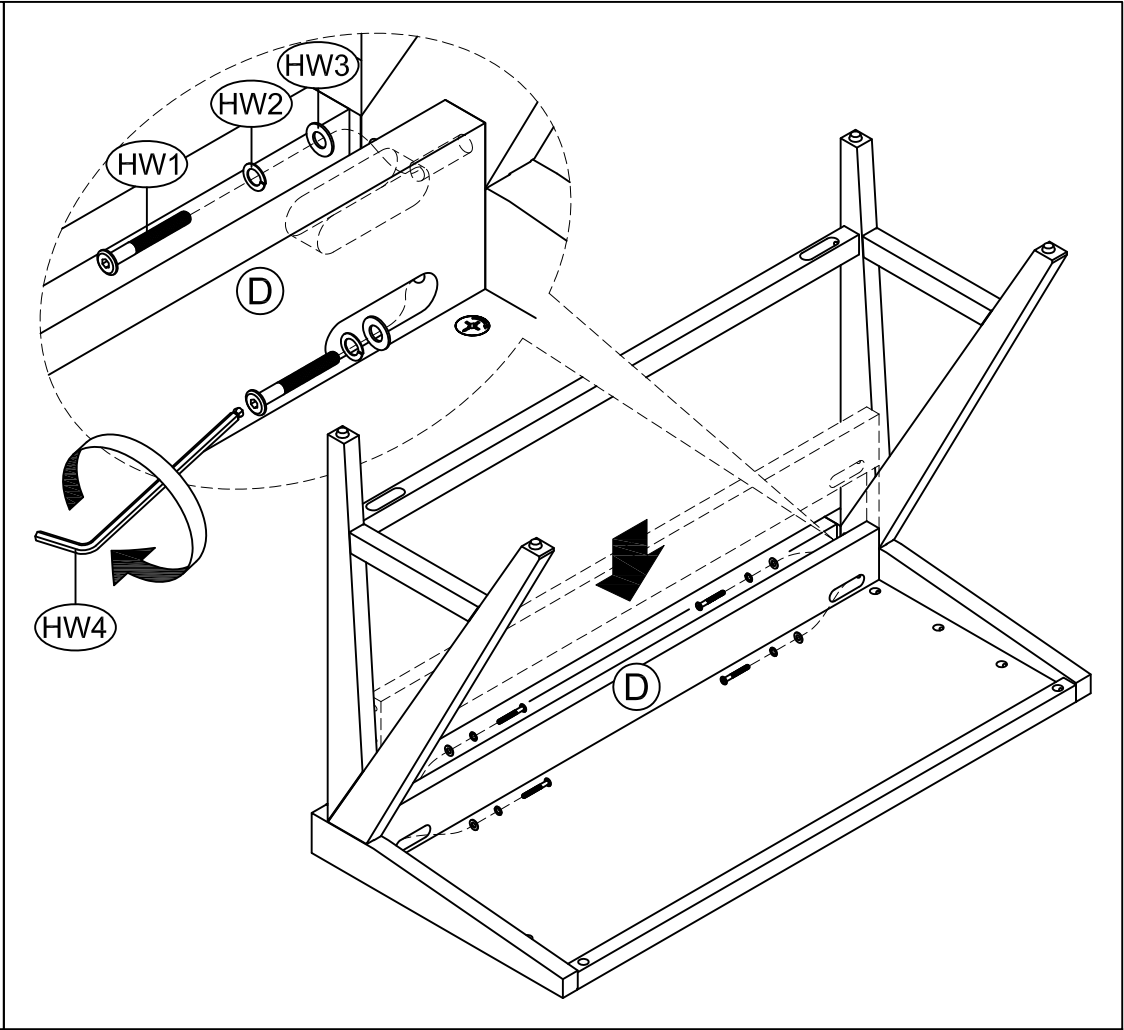
**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 30 minutes.  
Tools Required for Assembly : Phillips Screwdriver

 <p>The diagram shows two leg assemblies, labeled B and C, being joined. Hardware HW5 (screws) are shown being inserted into pre-drilled holes in the legs. A circular arrow indicates the direction of tightening.</p>	 <p>The diagram shows the top panel (A) being attached to the leg assembly (B) using hardware HW4, HW1, HW2, HW3, and HW7. A circular arrow indicates the direction of tightening. A detail view shows the correct orientation of the hardware, with a 180° rotation indicated. Hardware HW6 is shown being inserted into the lower stretcher (E).</p>
<p><b>STEP 1</b> INSERT CAMBOLTS INTO PRE-DRILLED HOLES IN LEFT AND RIGHT LEG ASSEMBLIES, THEN TIGHTEN. SCREW-IN CAMBOLTS MUST BE SCREWED DOWN FLUSH.</p>	<p><b>STEP 2</b> ATTACH TOP PANEL TO LEFT LEG ASSEMBLY USING 60mm HEAD CAP BOLT, SPRING WASHER, FLAT WASHER, CAMLOCKS AND WOODEN DOWELS. ATTACH LOWER STRETCHER TO LEFT LEG ASSEMBLY USING 60mm HEAD CAP BOLT, SPRING WASHER, FLAT WASHER AND WOODEN DOWEL. TIGHTEN BOLTS USING ALLEN KEY.</p>

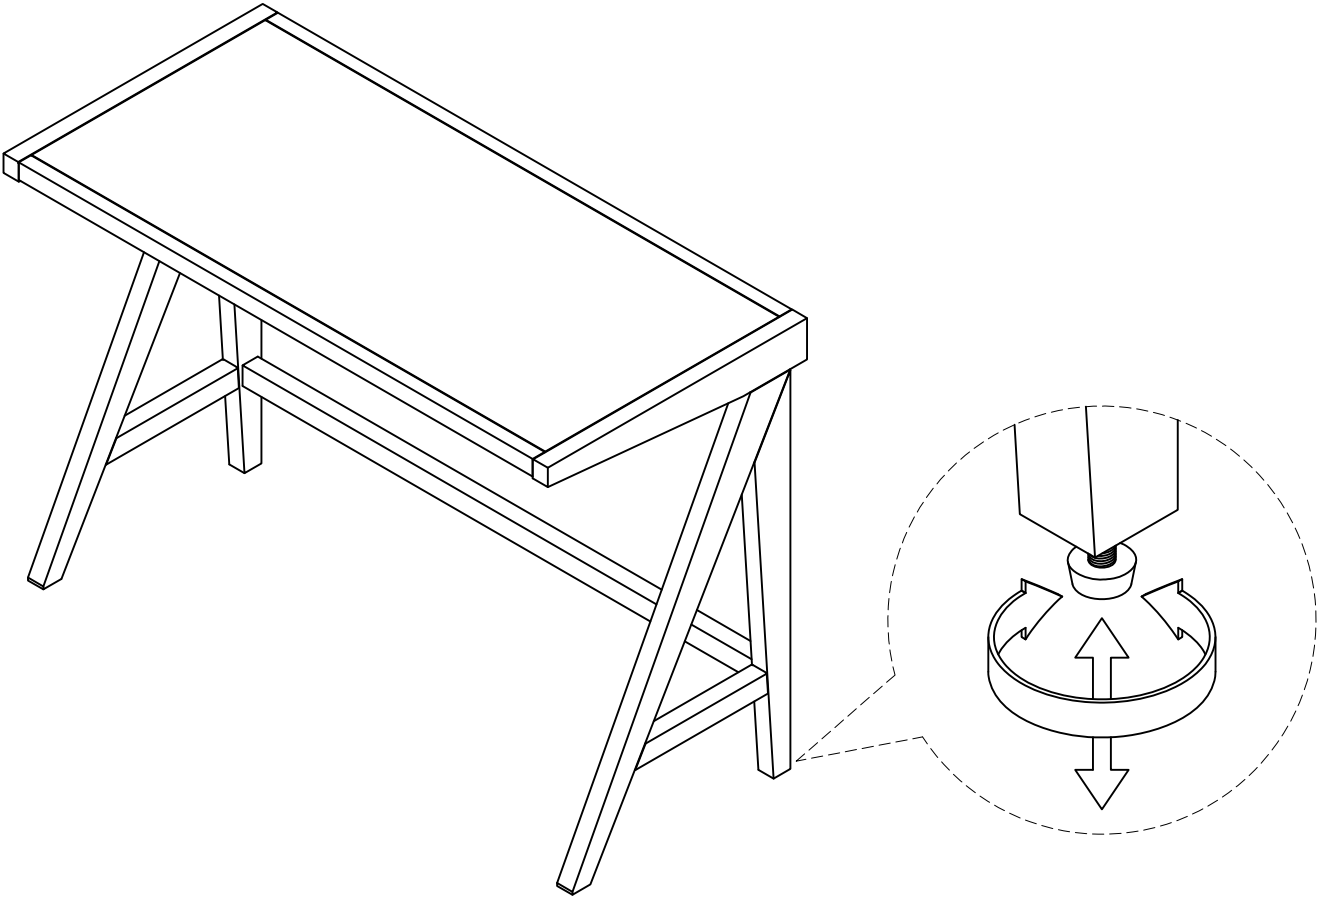
**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 30 minutes.  
Tools Required for Assembly : Phillips Screwdriver

	
<p><b>STEP 3</b> ATTACH RIGHT LEG ASSEMBLY TO UNIT USING 60mm HEAD CAP BOLTS, SPRING WASHERS, FLAT WASHERS, CAMLOCKS AND WOODEN DOWELS. TIGHTEN BOLTS USING ALLEN KEY.</p>	<p><b>STEP 4</b> ATTACH UPPER STRETCHER TO UNIT USING 60mm HEAD CAP BOLTS, SPRING WASHERS AND FLAT WASHERS. TIGHTEN BOLTS USING ALLEN KEY.</p>

**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 30 minutes.  
Tools Required for Assembly : Phillips Screwdriver



**STEP 5** ADJUST THE ADJUSTER BOLT THAT HAS ALREADY ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT