NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (not included): Screwdriver


CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


SAFAVIEH FURNITURE

Model# ETG3102

Product Dimensions: W 31.5" x D 17.7" x H 70.9"

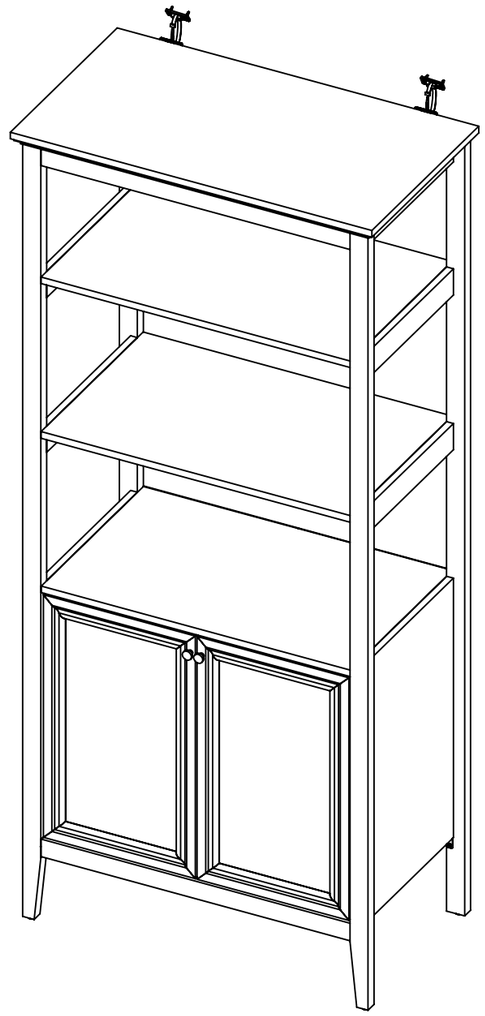

Part List



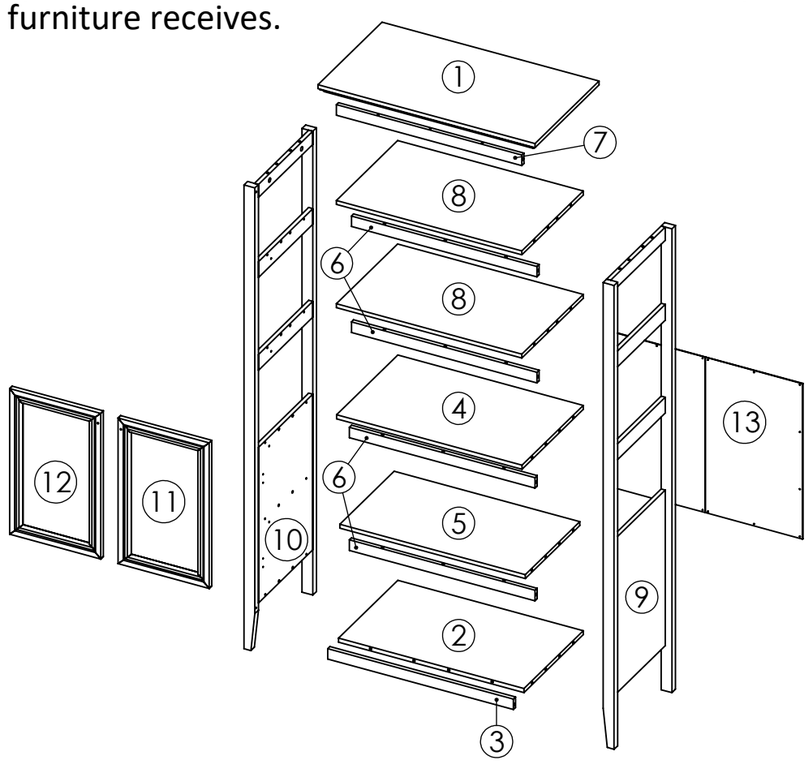





⚠ WARNING

TOTAL WEIGHT CAPACITY: 59 LBS

Shelf Load Capacity: 31 lbs
Storage Load Capacity : 28 lbs
Warning: Do not stand on highboard
Warning: Do not over torque bolt

Hardware List

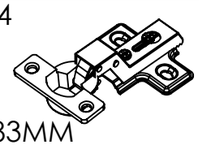HW1x46  Ø6x32MM	HW2x46  Ø15x12MM	HW3x30  Ø8x32MM	HW4x3  Ø6x50MM	HW5x18  Ø6x12MM PH	HW6x16  M5x12MM
HW7x2  Ø4x22MM	HW8x2  HANDLE Ø20	HW9x4  Ø26x83MM	HW10x2  Ø8	HW11x12  Ø20	

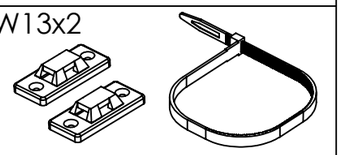Anti-tip restrain pack	
HW12x4  Ø6x15MM	HW13x2 
HW14x4  Ø10x50MM	HW15x4  Ø8x35MM


Part List & HW

Piece	Description	Qty	Carton Call
1	Top Panel	1	1 of 1
2	Bottom Panel	1	1 of 1
3	Plint - Lower	1	1 of 1
4	Fixed Shelf - Center	1	1 of 1
5	Fixed Shelf - Lower	1	1 of 1
6	Plint - Center	4	1 of 1
7	Plint - Upper	1	1 of 1
8	Fixed Shelf - Upper	2	1 of 1
9	Side Panel - Right	1	1 of 1
10	Side Panel - Left	1	1 of 1
11	Door Panel - Right	1	1 of 1
12	Door Panel - Left	1	1 of 1
13	Back Cover	2	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt Ø6x32 mm	46	1 of 1
HW2	Camlock Ø15x12 mm	46	1 of 1
HW3	Wooden Dowel Ø8x32 mm	30	1 of 1
HW4	Screw M6 x 50 mm	3	1 of 1
HW5	Screw M6 x 12 mm (PH)	18	1 of 1
HW6	Screw M5 x 12 mm	16	1 of 1
HW7	Screw Panhead M9 x 22 mm	2	1 of 1
HW8	Handle Ø20	2	1 of 1
HW9	Full Curve Hinge Ø26x83 mm	4	1 of 1
HW10	Bumpers Ø 8	2	1 of 1
HW11	Cover Cap Sticker	12	1 of 1
HW12	Screw M6 x 15 mm	4	1 of 1
HW13	Anti-tip	2	1 of 1
HW14	Screw 10 x 50 mm	4	1 of 1
HW15	Fisher "S" 8	4	1 of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

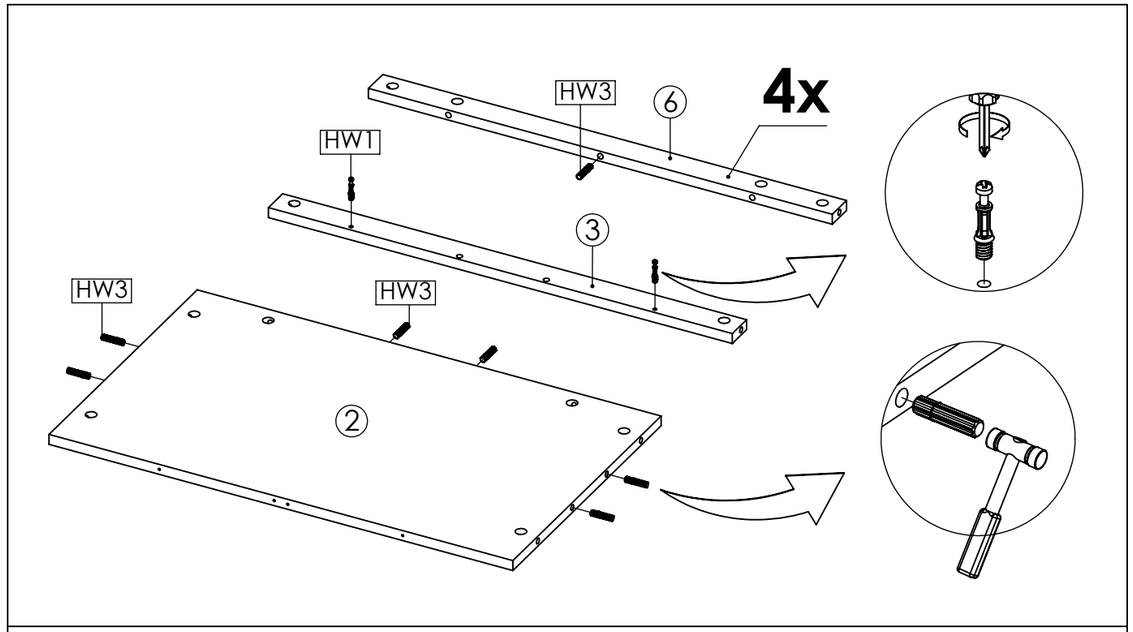


STEP1: Insert wooden dowel (HW3) into bottom panel (2) and plint - center (6). insert cambolt (HW1) into plint - lower (3) tighten it using screwdriver.

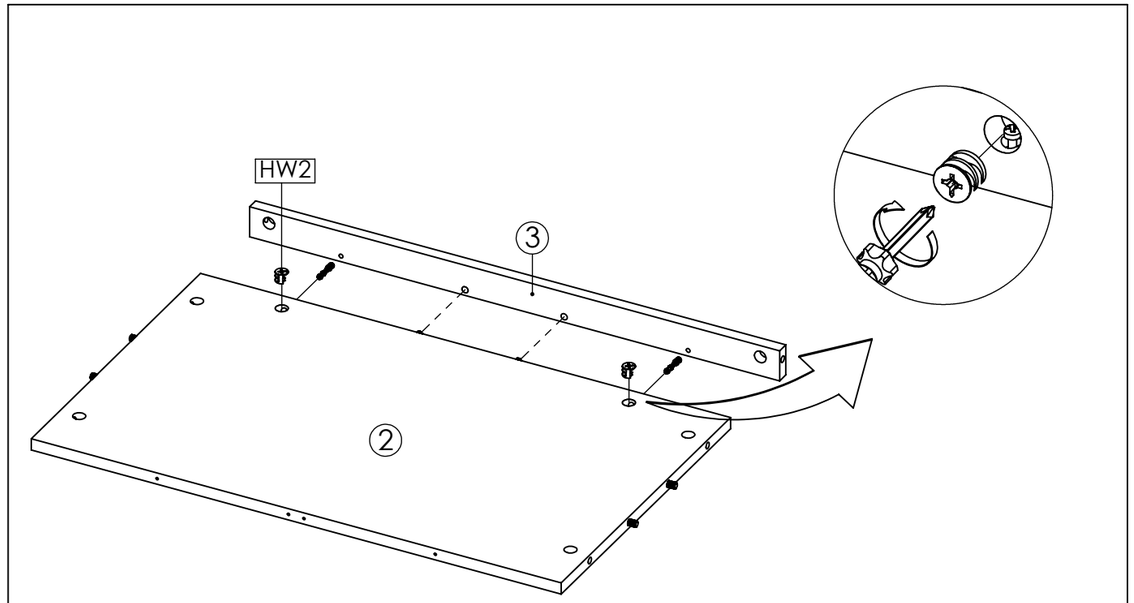


STEP2: Insert plint - lower (3) into bottom panel (2) Secure with camlock (HW2) tighten it using screwdriver.

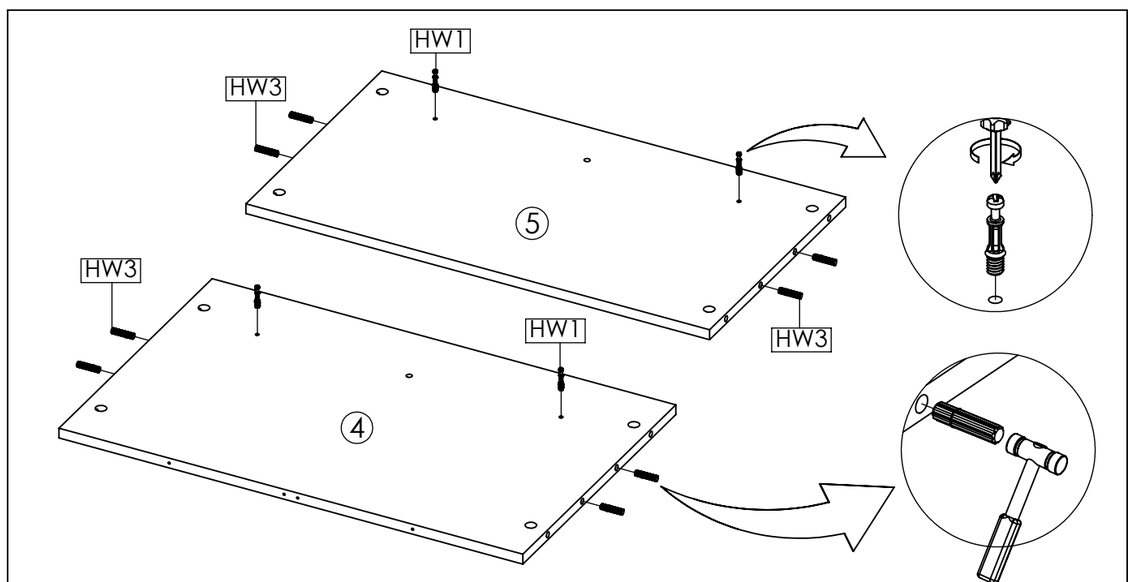


STEP3: Insert wooden dowel (HW3) into fixed shelf - center (4) and fixed shelf - lower (5). insert cambolt (HW1) into fixed shelf - center (4) and fixed shelf - lower (5). tighten it using screwdriver.

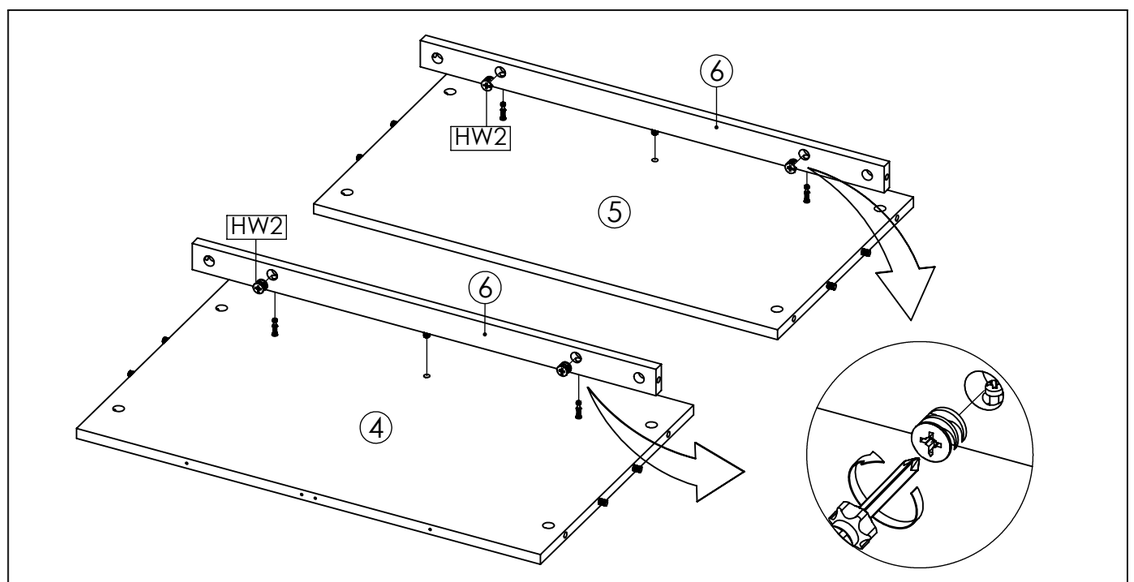


STEP4: Insert plint - center (6) into fixed shelf - center (4) and fixed shelf - lower (5), Secure with camlock (HW2) tighten it using screwdriver.

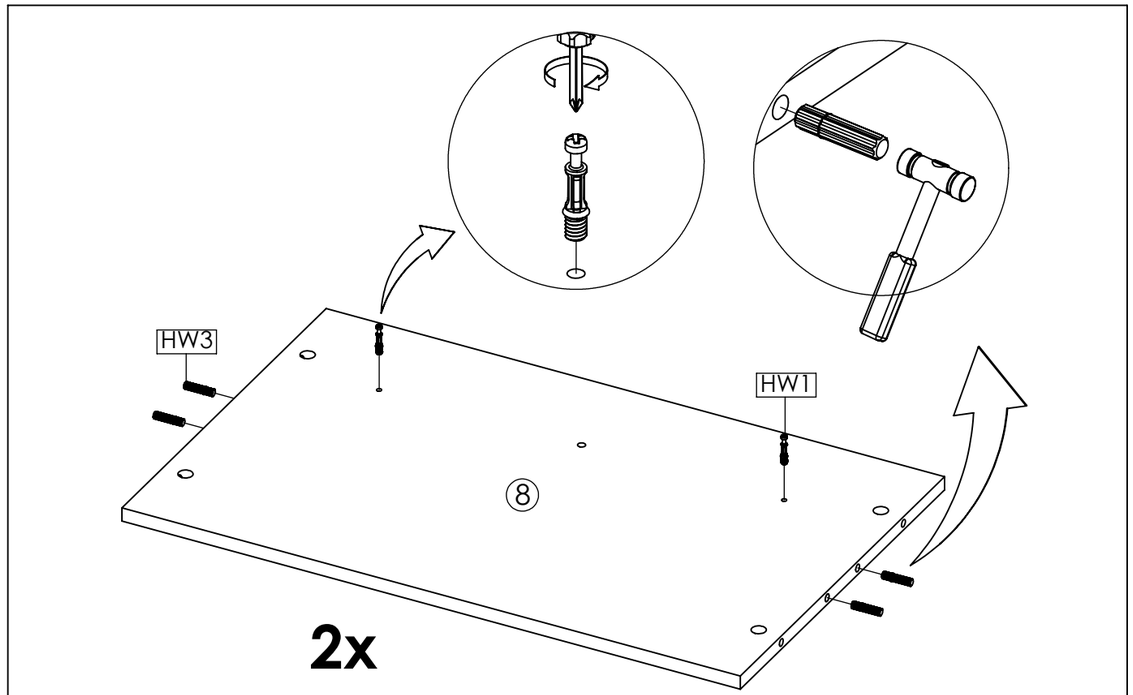


STEP5: Insert wooden dowel (HW3) and cambolt (HW1) into fixed shelf - upper (8), tighten it using screwdriver.

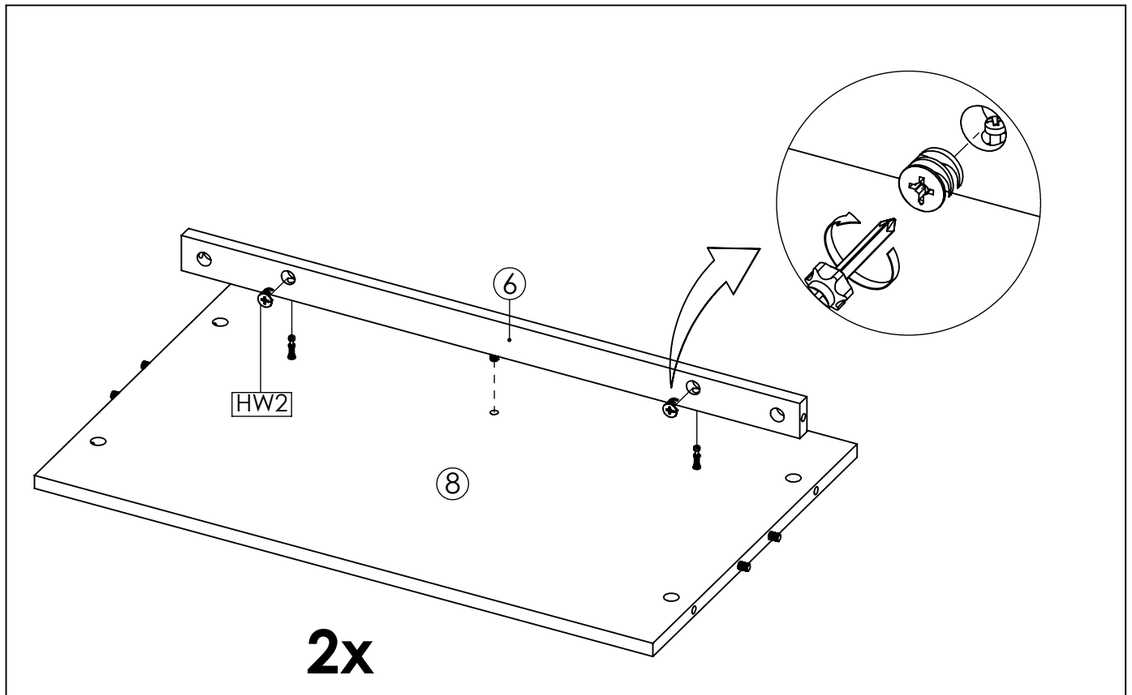


STEP6: Insert plint - center (6) into fixed shelf - upper (8), Secure with camlock (HW2) tighten it using screwdriver.

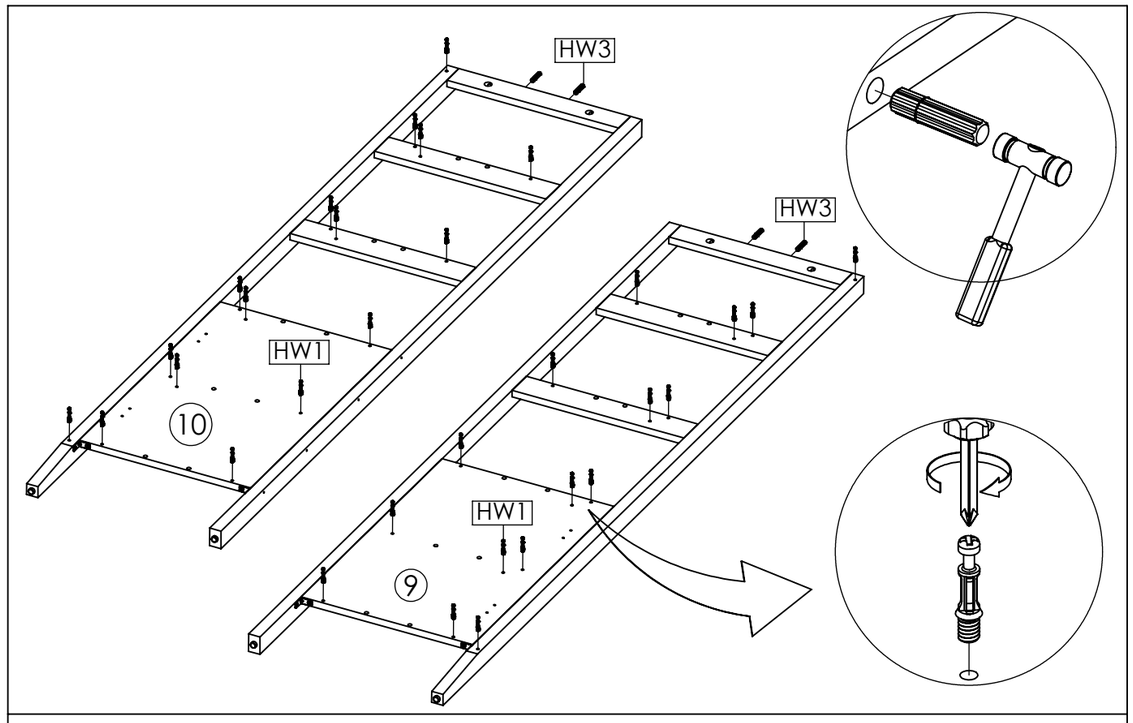


STEP7: Insert wooden dowel (HW3) and cambolt (HW1) into side panel - right (9) and side panel - left (10). tighten it using screwdriver.

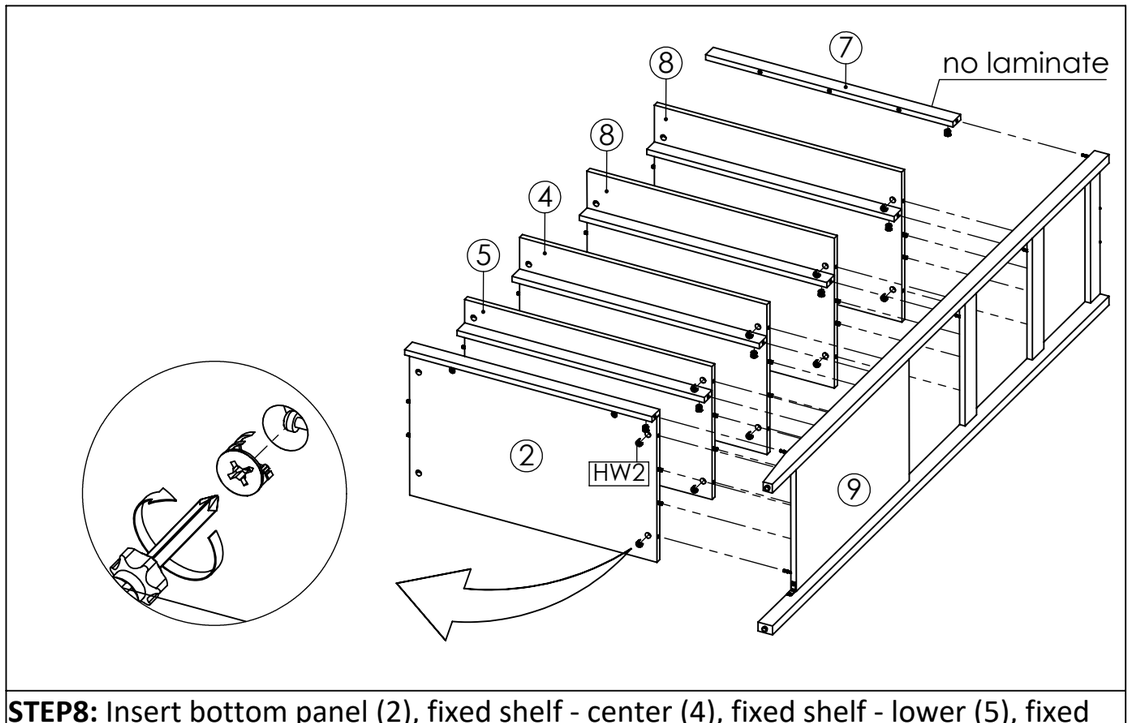


STEP8: Insert bottom panel (2), fixed shelf - center (4), fixed shelf - lower (5), fixed shelf - upper (8) and plint - upper (7) into side panel - right (9). Secure with camlock (HW2) tighten it using screwdriver.

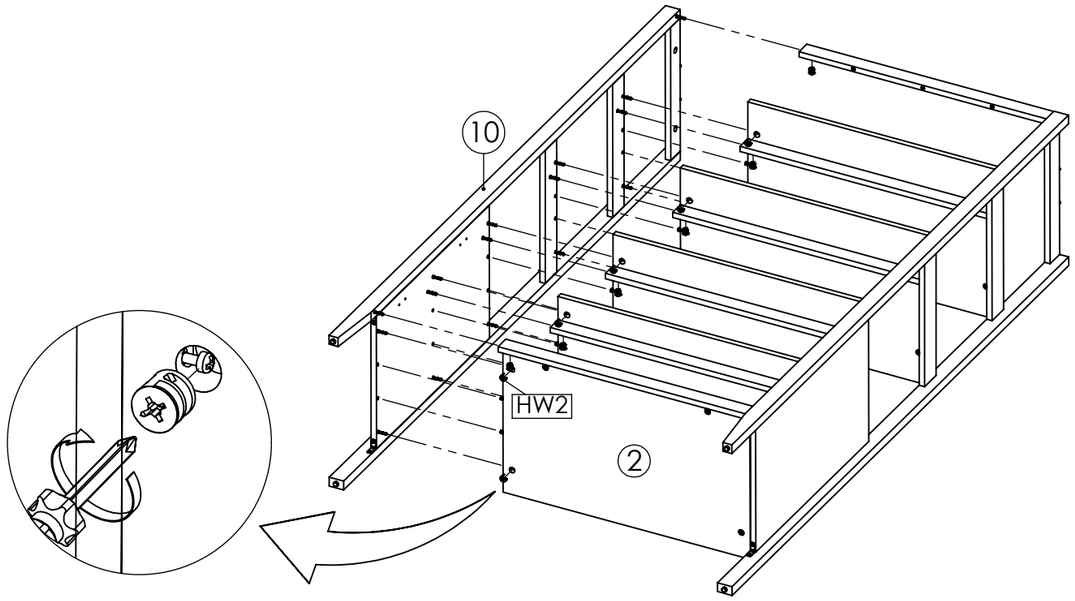


STEP9: Insert side panel - left (10) into position as shown in picture, Secure with camlock (HW2) tighten it using screwdriver.

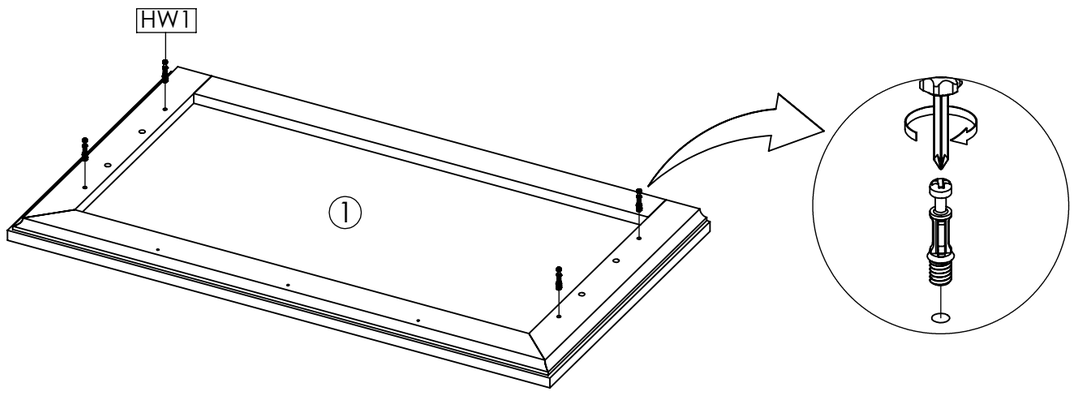


STEP10: insert cambolt (HW1) into top panel (1), tighten it using screwdriver.

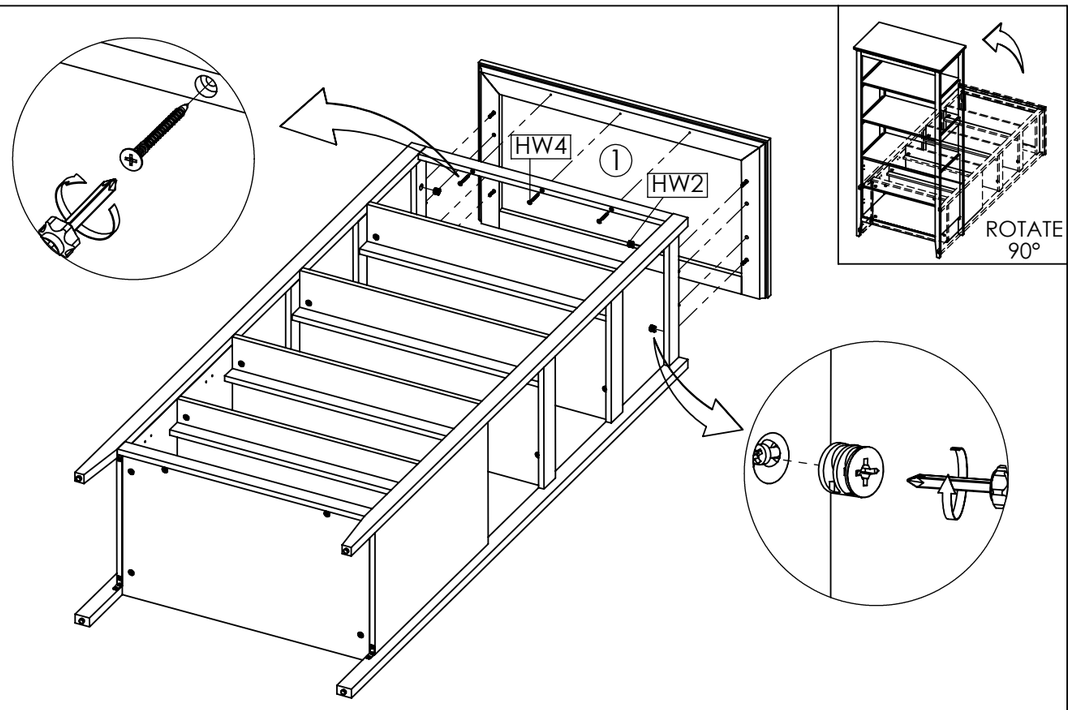


STEP11: insert top panel (1) into position as shown in picture, Secure with screw M6 x 50 mm (HW4) and camlock (HW2) tighten it using screwdriver.

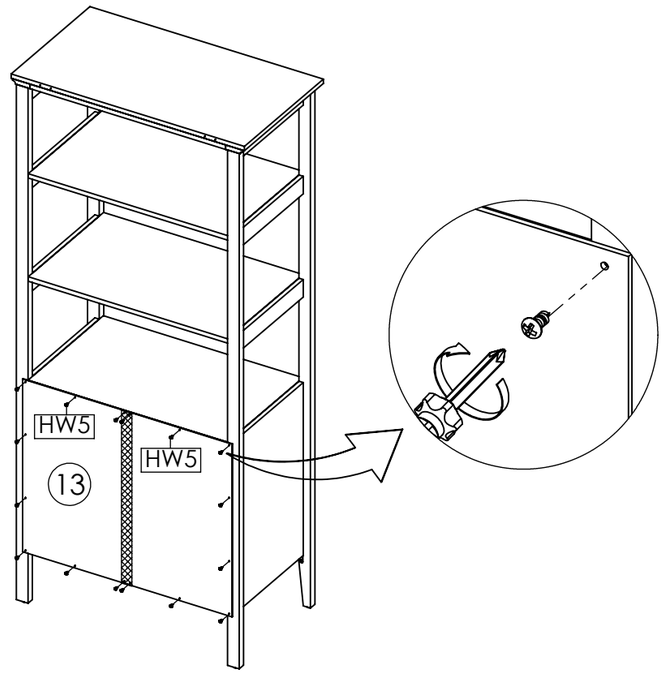


STEP12: Attach back cover (13) into position as shown in picture, Secure with screw M6 x 12 mm (PH) (HW5) tighten it using screwdriver.

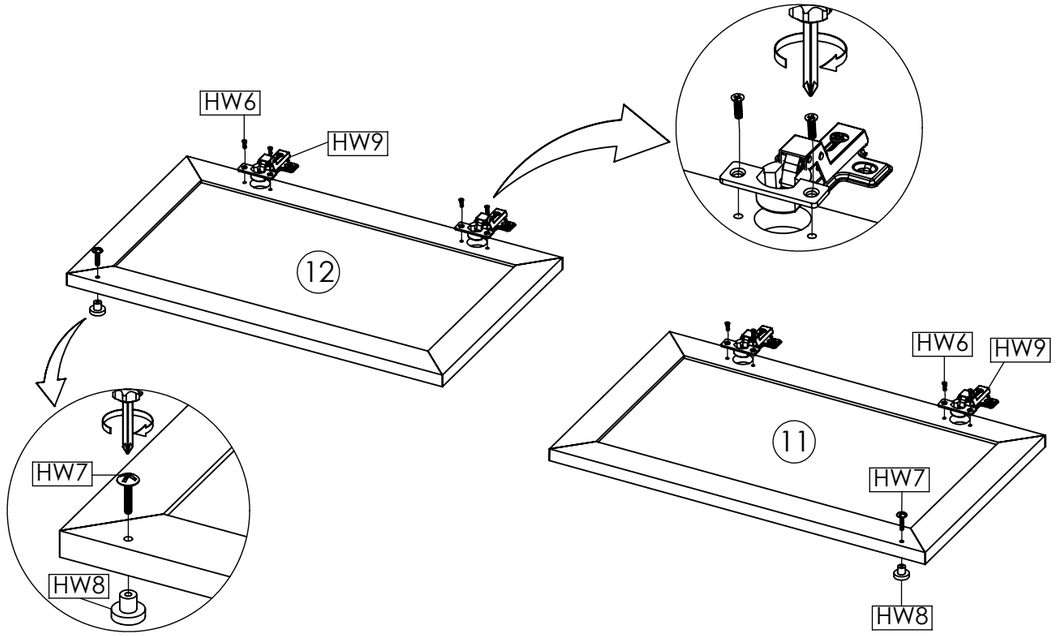


STEP13: Insert full curve hinge (HW9) into door panel - right (11) and door panel - left (12). Scure with screw M5X12 mm (HW6) and handle HW (8) scure with screw panhead M9x22 mm (HW7), tighten it using screwdriver.

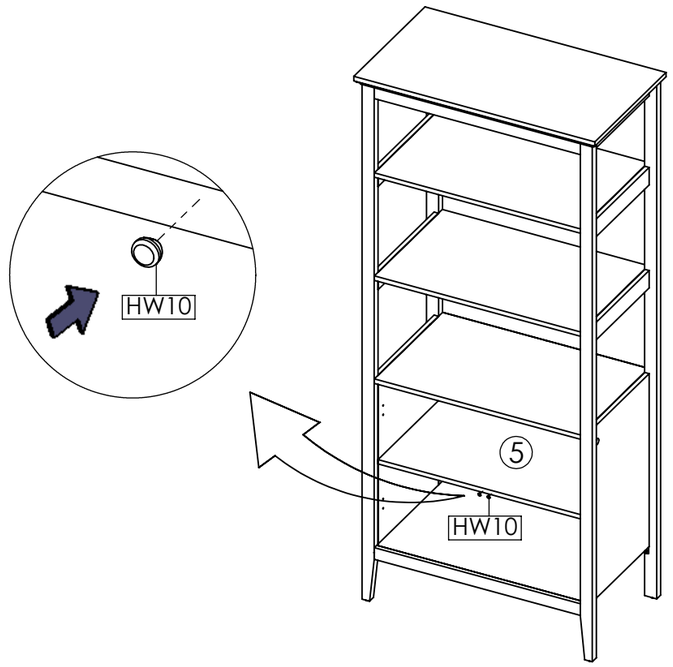

STEP14: Attach bumpers (HW10) into position as shown in picture.

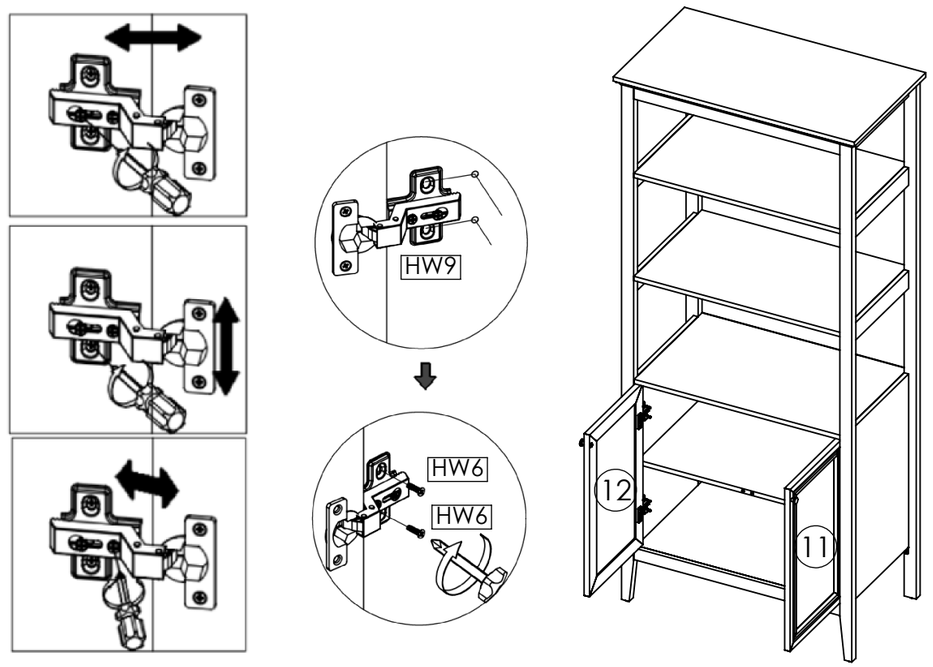

STEP15: Install the full curve Hinge (HW9) Into position as shown in picture, Scure with screw M5X12 mm (HW6). tighten it using screwdriver.

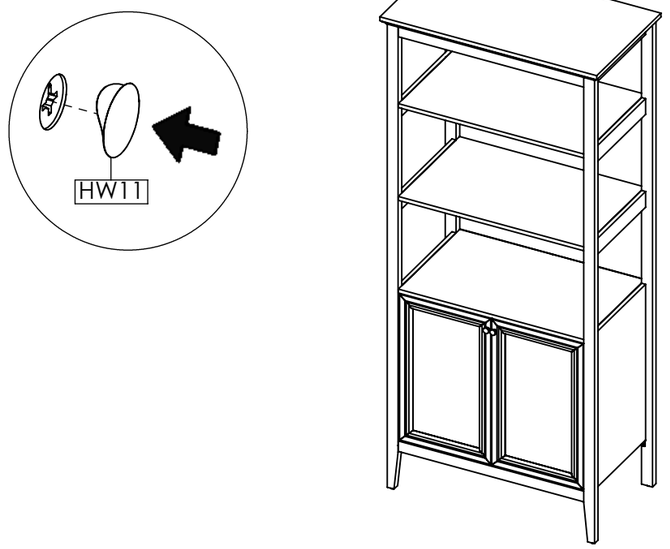

STEP16: Attach Cover Cap Sticker (HW11) to the panel that has lamination and Assembly is complete.




ANTI-TIP RESTRAINT INSTALLATION


WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

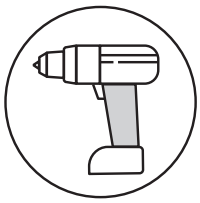

REQUIRED TOOL
8MM / 5/16" DRILL BIT

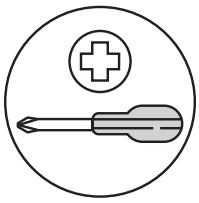


REQUIRED TOOL

Hardware (HW11 / HW7) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.


ANTI-TIP RESTRAINT PACK			
ID	DESCRIPTION		QTY
HW13	BRACKET		4
HW12	M6 × 15MM SCREW		4
HW15	M8 × 35MM		4
HW14	M10 × 50MM SCREW		4
HW13	STRAP		2

1

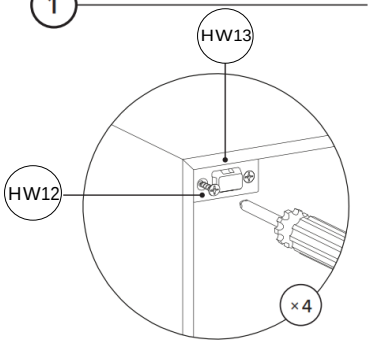


Attach pair of brackets to **"Top Panel"** of the unit. Note there are no existing pilot holes on the product.

2

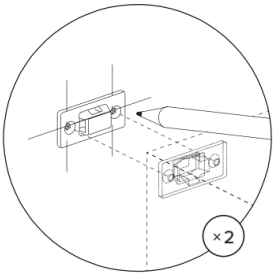


Mark on wall where second pair of brackets should be placed.

3

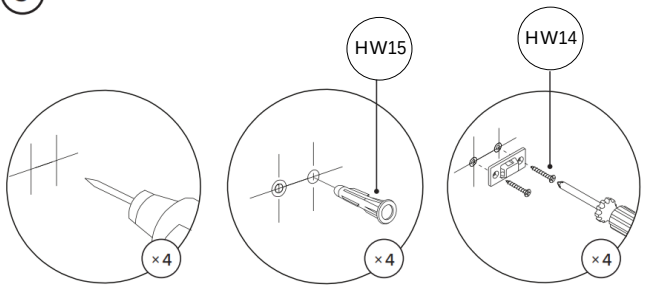


Drill holes in wall using 8mm / 5/16" drill bit.

4A

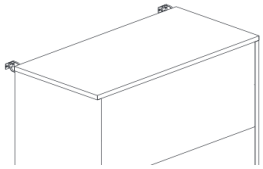

Align brackets on unit with brackets on wall.

4B

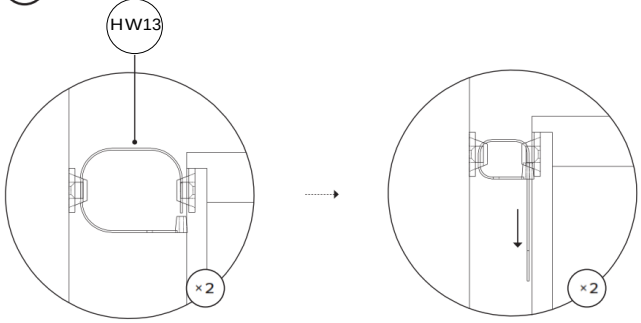

Pull strap down until it snap-locks.