NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * If you are having difficulty, our friendly Customer Care team is always here to help.

Please email customersupport@safavieh.com.

CARE AND MAINTENANCE


Unplug lamps before using any cleaning solutions. Dust shades with a feather duster or with an appropriate vacuum_brush attachment. Wipe with a soft, dry cloth and clean lamp bases with the methods appropriate to the material. Avoid the use of chemicals and household cleaners as they may damage the finish.

Part List and Hardware List


PEICE	DESCRIPTION	PICTURE	QUANTITY	PEICE	DESCRIPTION	PICTURE	QUANTITY
HW1	Jam Nuts ⊘ 12MM		1X	1	Pipe 4		1x
HW2	Tooth Lock washer		1X	J	Pipe 5		1x
С	Lamp Base		1X	К	Shade		1x
D	Pipe 1		1X	L	Lock Ring		1x
E	Pipe 2		1X	М	Bulb		1x
G	Pipe 3		1X	HW5	Allen Key		1x
HW3	Screws ⊘ 4mm		3X	HW6	Allen Key		1x
HW4	Phillips Screws ∅ 4mm	D	3X	HW7	Wrench		1x



Model#FLL7000A Product Dimensions: 12"Lx41.7"Wx76.5"H

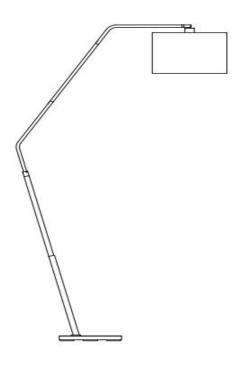

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.

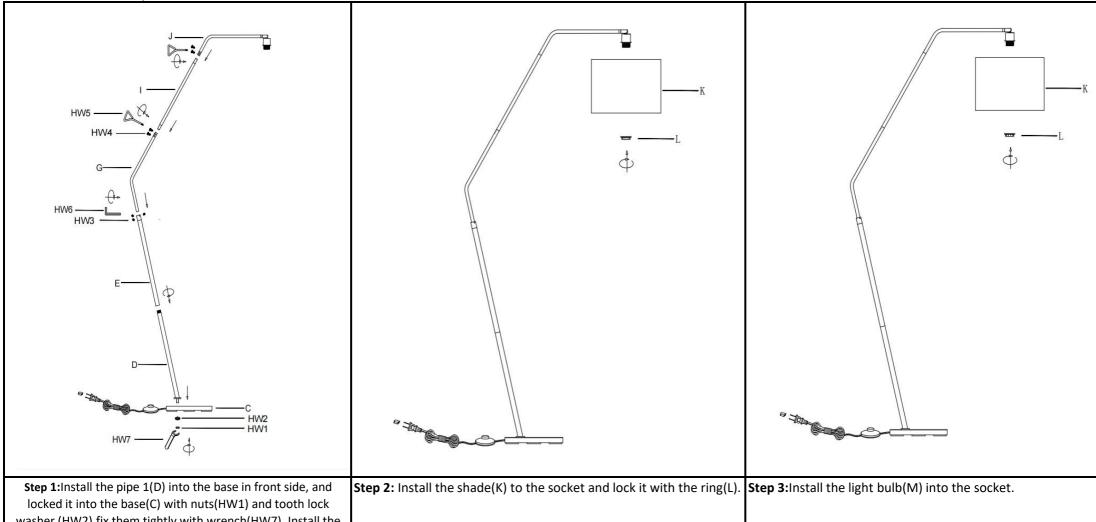

Step 1:Install the pipe 1(D) into the base in front side, and locked it into the base(C) with nuts(HW1) and tooth lock washer (HW2),fix them tightly with wrench(HW7). Install the pipe 2(E) into pipe 1(D), then install the pipe 3(G) into pipe 2(E), lock the pipe 3(G) with screws(HW3) and fix with the allen key(HW6). Lock pipe 4(I) into pipe 3(G), fix it with phillips Screws(HW4) and fix with allen key(HW5). Install pipe 5(J) into pipe 4(I) and lock it with phillips Screws(HW4) and fix with allen key(HW5). Check the floor lamp and ensure is front side and upright to the floor.