
















CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Upper of Headboard		1x
B	Bottom of Headboard		1x
C	L-Post		1x
D	R-Post		1x
E	Connect Bar		1x
F	Side Rail		2x
G	Metal Slat		4x
H	Support leg		4x
I	Footboard		1x
H1	Allen Bolt	 1/4"x2"	6x
H2	Allen Bolt	 1/4"x5/8"	24x
H3	Allen Bolt	 1/4"x3/4"	8x
H4	Spring washer	 1/4"	8x
H5	Flat washer	 $\phi 16*1.0$	8x
H6	Allen Key	 M4	1x

 **SAFAVIEH**
FURNITURE

Model# FOX6297-F

Product Dimensions: 79-1/4"W*56-1/2"Dx59-1/4"H

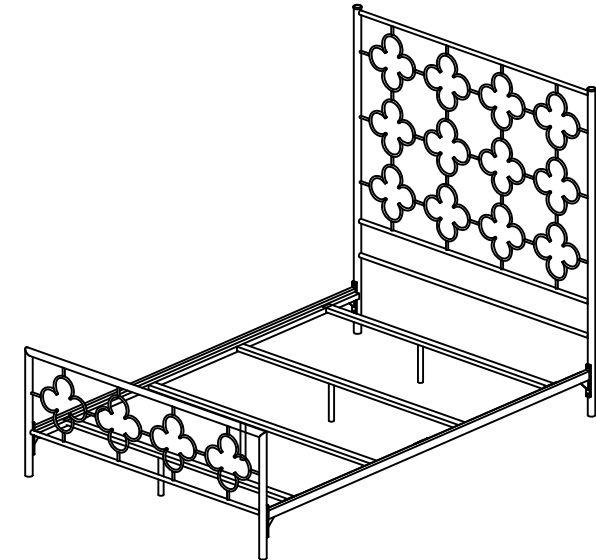


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 40 minutes.

Tools Required for Assembly (included): Allen Key

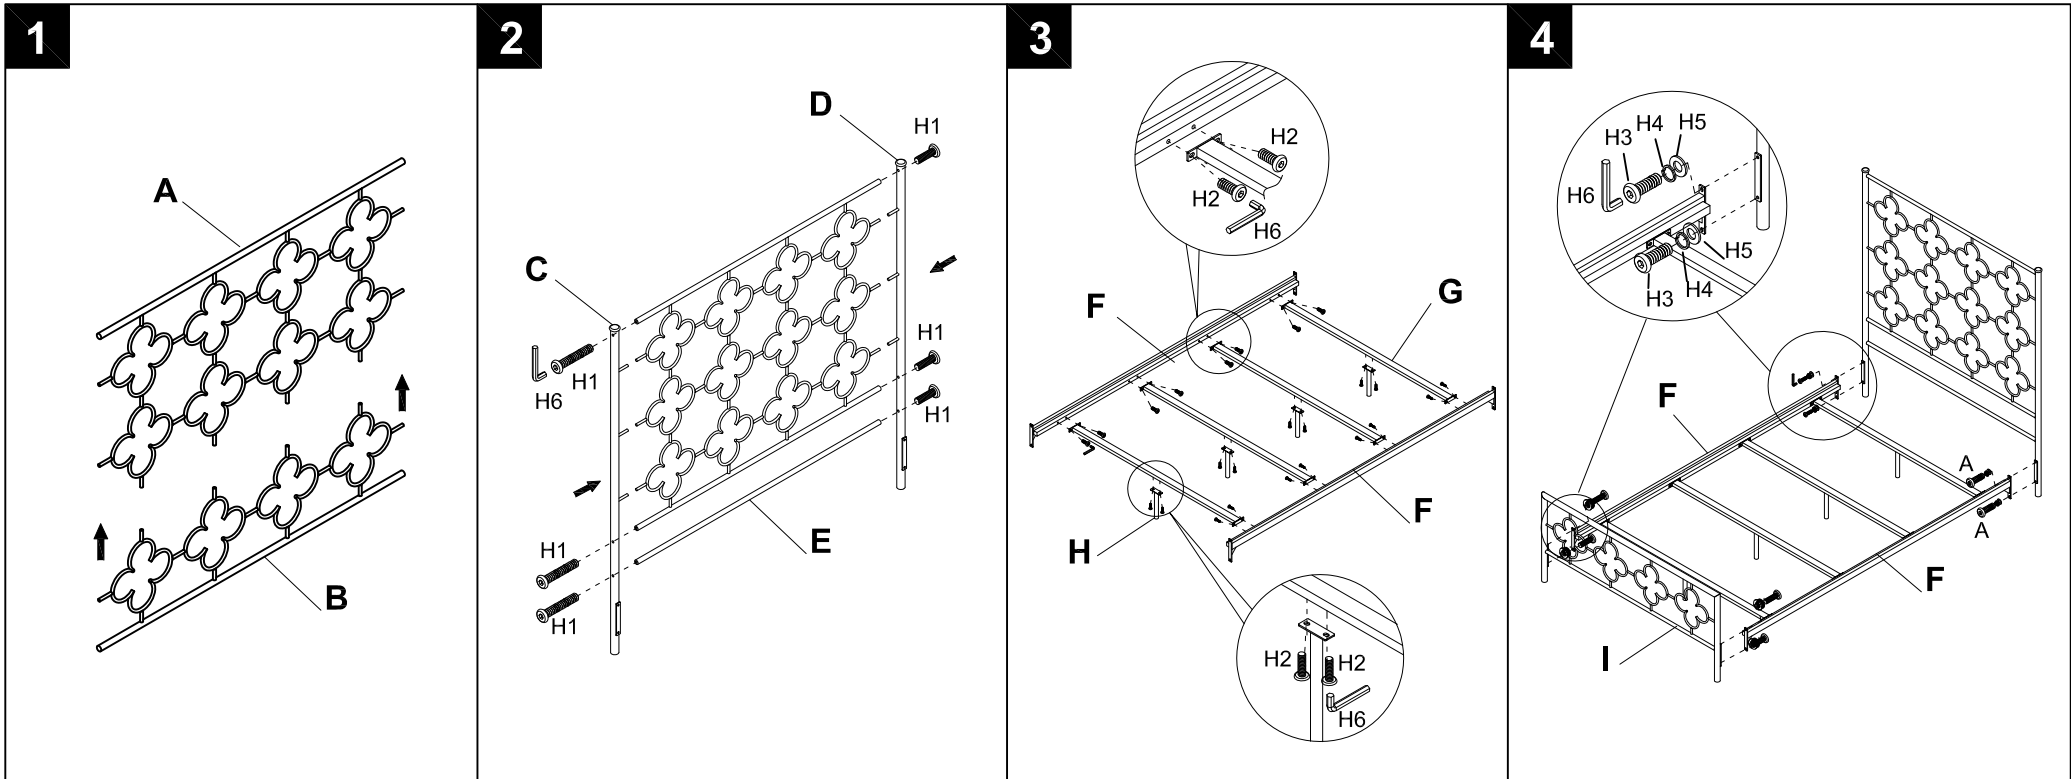

Step 1

Insert the bottom of headboard (B) to the upper of headboard (A), as picture.

Step 2

Attach L-Post (C) and R-Post (D) to the assembled headboard and connect bar (E), Use Allen Key (H6) to lock 6*Allen bolts (H1).

Step 3

Assembly 4*support legs (H) to 4*metal slats (G) by using Allen Key (H6) to lock 8*Allen bolts (H2). Then attach both side rails (F) to the assembled metal slats (G), by using Allen Key (H6) to lock 16*Allen bolts (H2). as picture.

Step 4

Attach assembled side rail (F) with the assembled headboard, by using Allen Key (H6) to lock Allen bolts (H3) with Spring washers (H4) and Flat washer (H5). Then attach Footboard (I) to the another end of side rail (F), by using Allen Key (H6) to lock Allen bolts (H3) with Spring washers (H4) and Flat washer (H5). as picture.
















CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Upper of Headboard		1x
B	Bottom of Headboard		1x
C	L-Post		1x
D	R-Post		1x
E	Connect Bar		1x
F	Side Rail		2x
G	Metal Slat		4x
H	Support leg		4x
I	Footboard		1x
H1	Allen Bolt	 1/4"x2"	6x
H2	Allen Bolt	 1/4"x5/8"	24x
H3	Allen Bolt	 1/4"x3/4"	8x
H4	Spring washer	 1/4"	8x
H5	Flat washer	 $\phi 16*1.0$	8x
H6	Allen Key	 M4	1x

 **SAFAVIEH**
FURNITURE

Model# FOX6297-Q

Product Dimensions: 83"W*62-1/2"Dx59-1/4"H

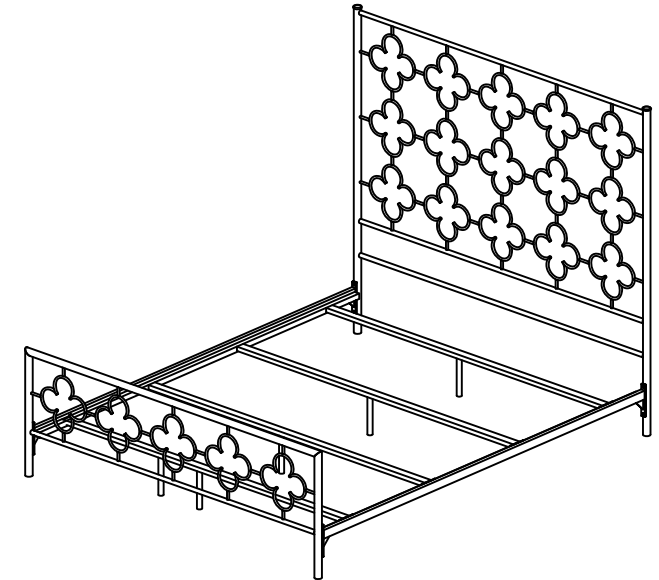


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 40 minutes.

Tools Required for Assembly (included): Allen Key

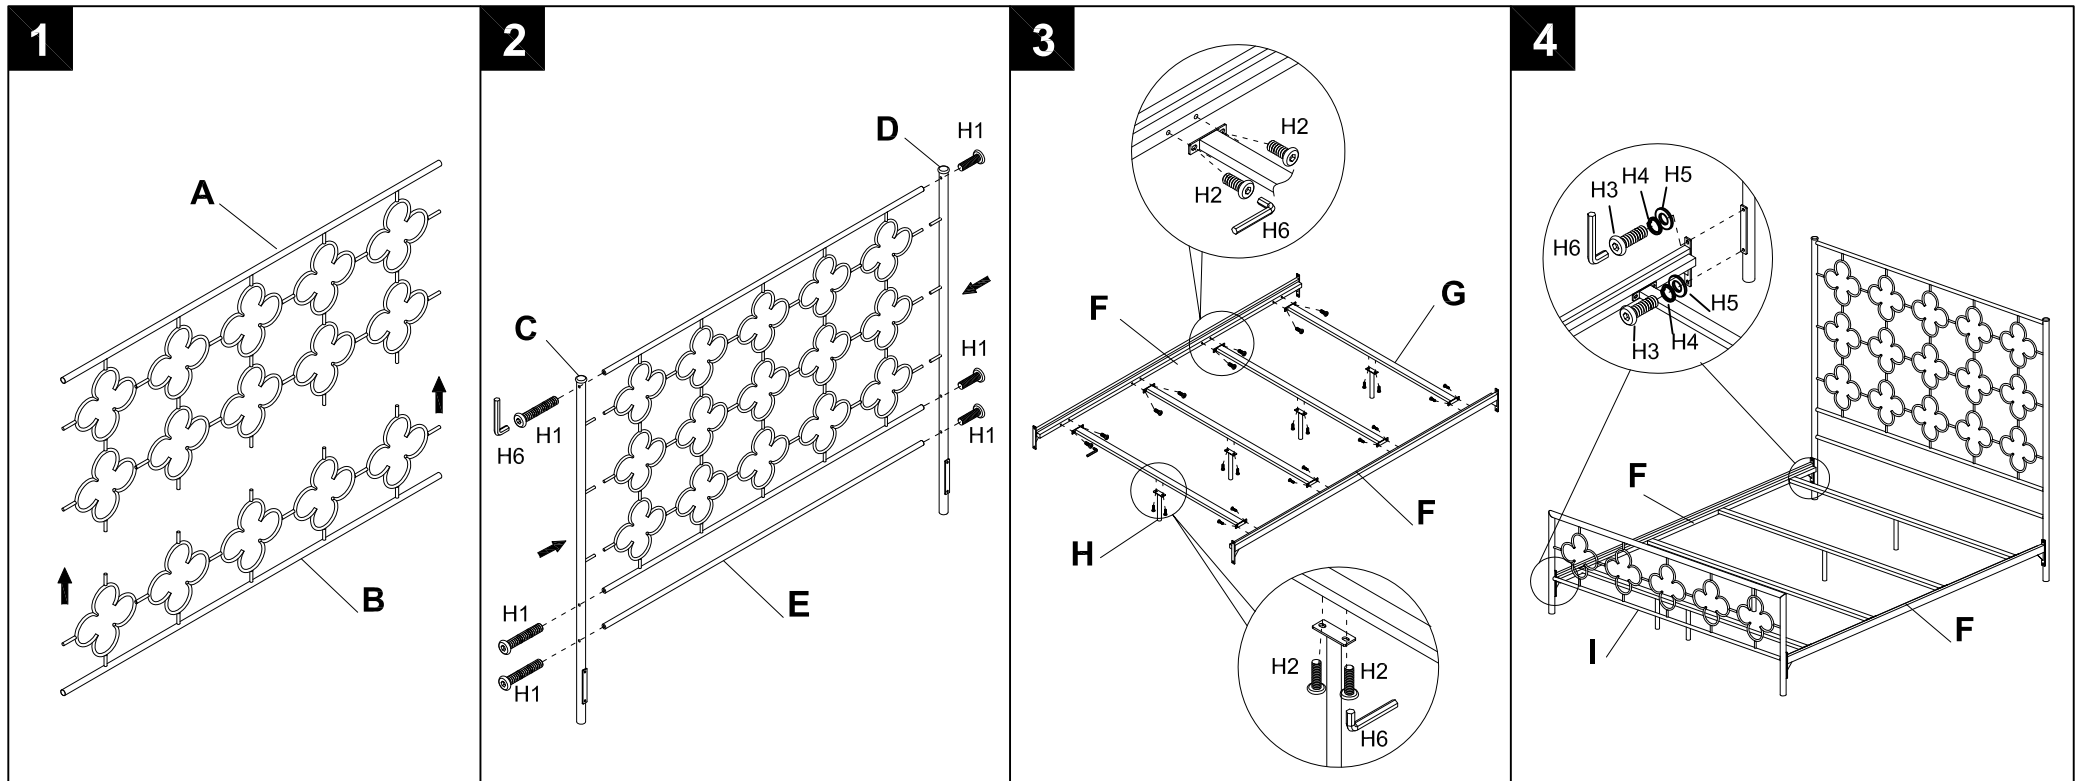

Step 1

Insert the bottom of headboard (B) to the upper of headboard (A), as picture.

Step 2

Attach L-Post (C) and R-Post (D) to the assembled headboard and connect bar (E), Use Allen Key (H6) to lock 6*Allen bolts (H1).

Step 3

Assembly 4*support legs (H) to 4*metal slats (G) by using Allen Key (H6) to lock 8*Allen bolts (H2). Then attach both side rails (F) to the assembled metal slats (G), by using Allen Key (H6) to lock 16*Allen bolts (H2). as picture.

Step 4

Attach assembled side rail (F) with the assembled headboard, by using Allen Key (H6) to lock Allen bolts (H3) with Spring washers (H4) and Flat washer (H5). Then attach Footboard (I) to the another end of side rail (F), by using Allen Key (H6) to lock Allen bolts (H3) with Spring washers (H4) and Flat washer (H5). as picture.