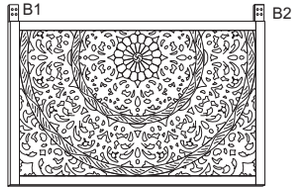
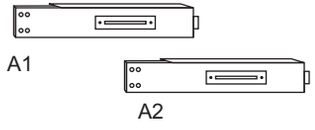
CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE


* Please make sure that you have all parts indicated before you begin assembly for this item
* This item should be assembled on a soft surface to prevent scratching the finish during the assembly.
* This item may require periodic tightening

Part List

LABEL	PICTURE	DESCRIPTION	QUANTITY
Case A		Cabinet Case 60”x3.5”x40”	1
Legs B		18” Legs	2
HARDWARE			
H-1		Allen Bolt	8X
H-2		Allen Key	1X


SAFAVIEH
ACCENTS


Safavieh Item# HBD5300A-Q
Product Dimension : W-60”x D-1.5”x58H”

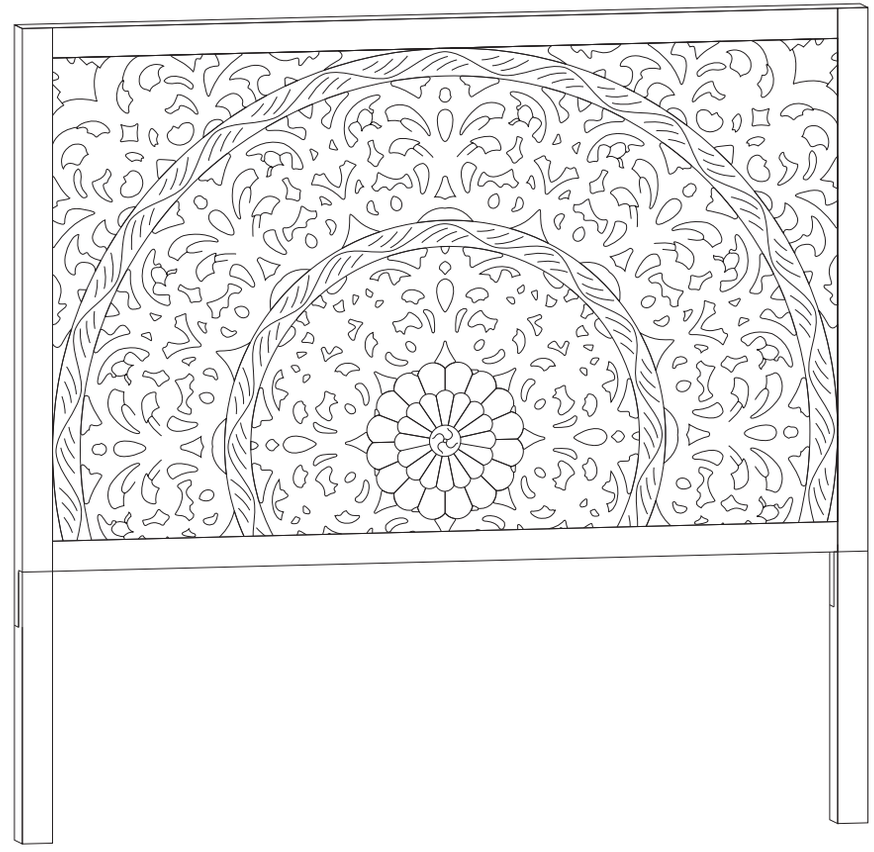

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package content list
If any part is missing or damaged, do not attempt to assembly the product.
Estimated assembly time: 5 minutes

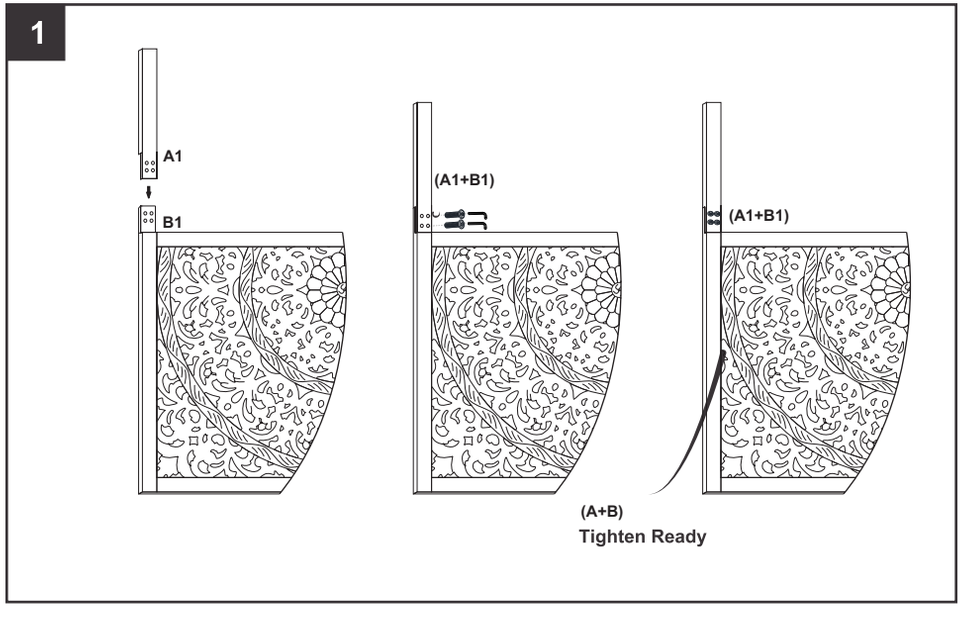

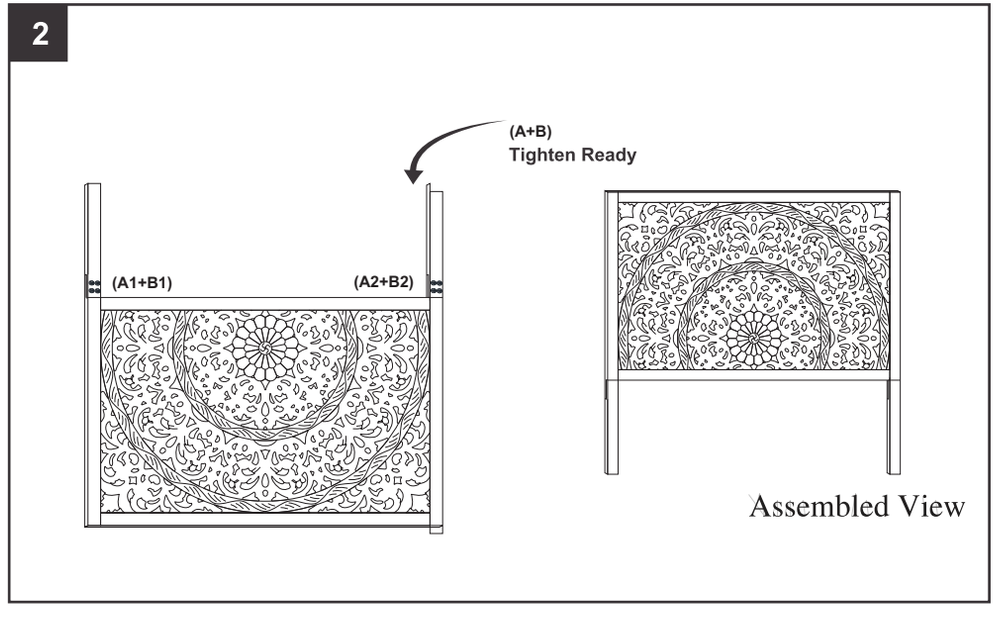

Step 1

Place the Headboard (B - B1,B2) on a non marring padded surface in upside down position.Align legs (A-A1, A2) into the slots, matching (A1- B1),(A2 - B2).

Tighten the Allen volts - alligning holes move in clockwise direction using allen key until legs is secured with case.


Step 2

Turn the product upright. Product assembly is complete and product is ready to use.

HARDWARE LIST

LABEL	PICTURE	DESCRIPTION	QUANTITY	SIZE
H_2-1		Allen Bolt	4X	6mm x 50mm
H_2-2		Washer	8X	12mm Dia,6mm Hole

1

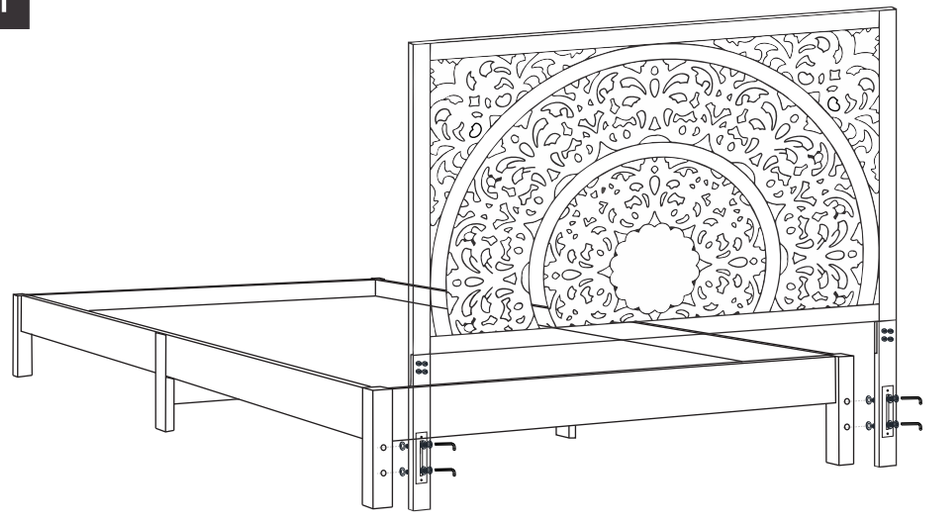

2

