NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**


SAFAVIEH FURNITURE

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key

Model# HBD9600-K


Product Dimensions: 76.97”Wx1.69”Dx30.71”H

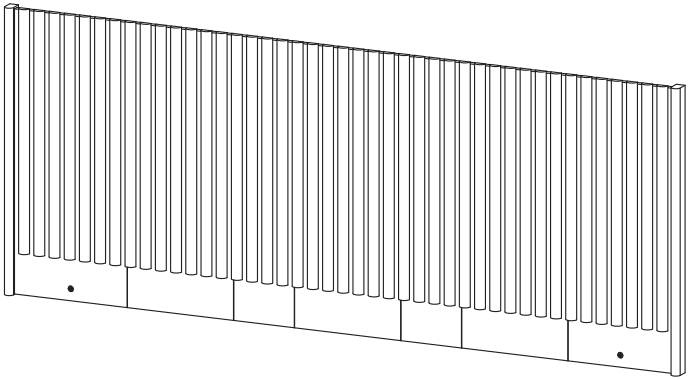







CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

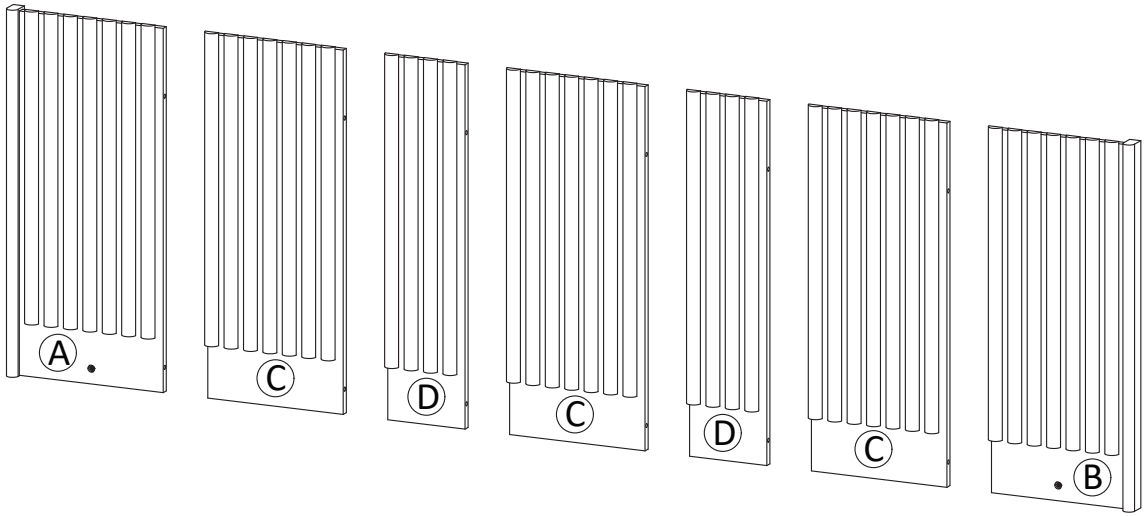

Hardware List

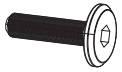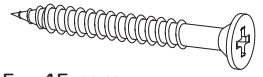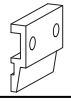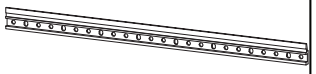HW1x12  Ø 8 x 30 mm	HW2x2  M 6 x 20 mm	HW3x28  M 6.4 x 14 mm	HW4x2 	HW5x18  5.5 x 45 mm	HW6x18 
HW7x2  Ø 15 mm	HW PA05x14 	HW PA61x6 			


Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Frame Headboard Left	1
B	Frame Headboard Right	1
C	Frame Headboard Big	3
D	Frame Headboard Small	2


Piece	Description	Qty
HW1	Dowel	12
HW2	Screw M 6 x 20 mm	2
HW3	Screw M 6.4 x 14 mm	28
HW4	Allen Key	2
HW5	Screw 5.5 x 45 mm	18
HW6	Wall Plug	18
HW7	Screw Cap	2
HW PA05	Short Bracket	14
HW PA61	Long Bracket	6

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

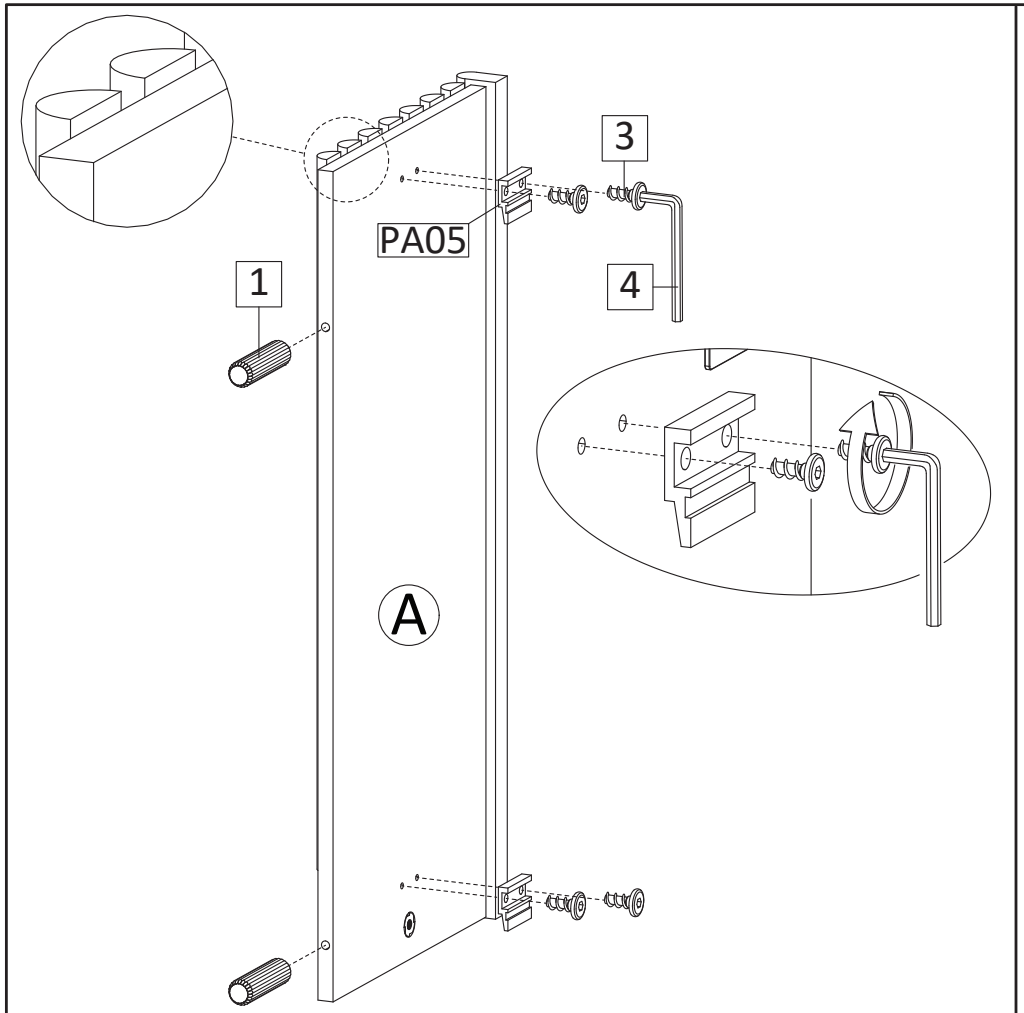


STEP1: Install the Short Bracket (HW PA05) facing the correct direction. Please follow the illustration into Frame Headboard Left (A), tighten the screws 6.4 x 14 mm (HW3) using Allen Key (HW4). Insert Dowel (HW1) into Frame Headboard Left (A).

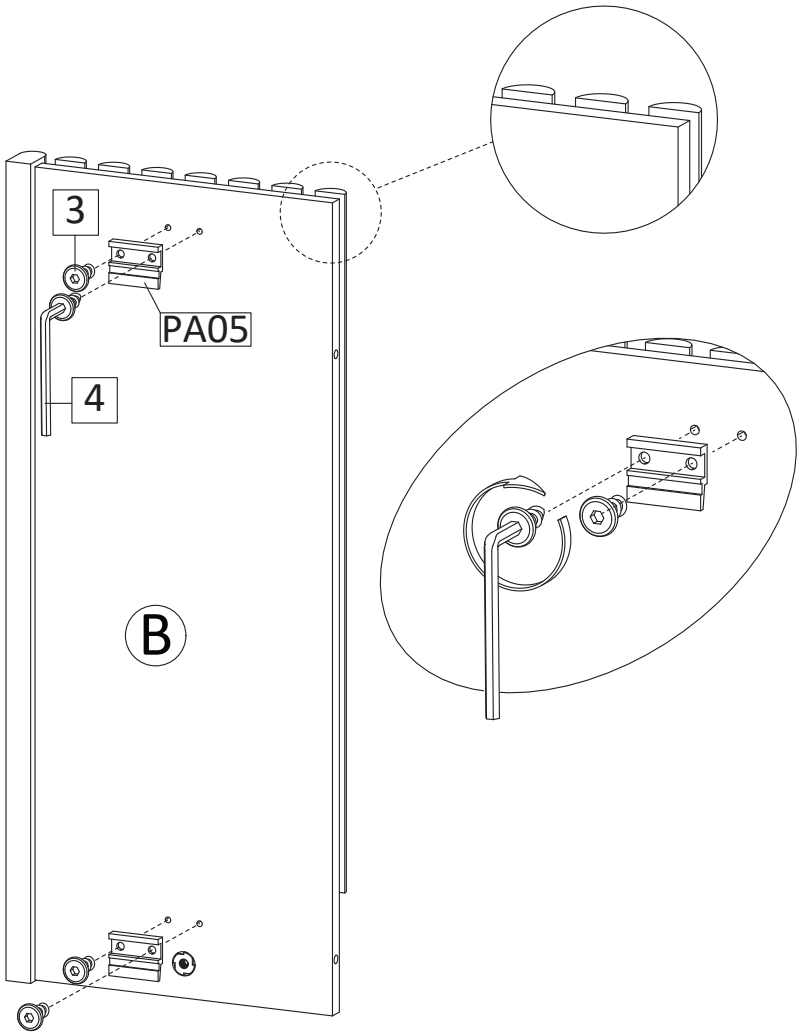


STEP2: Install the Short Bracket (HW PA05) facing the correct direction. Please follow the illustration into Frame Headboard Right (B), tighten the screws 6.4 x 14 mm (HW3) using Allen Key (HW4).

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

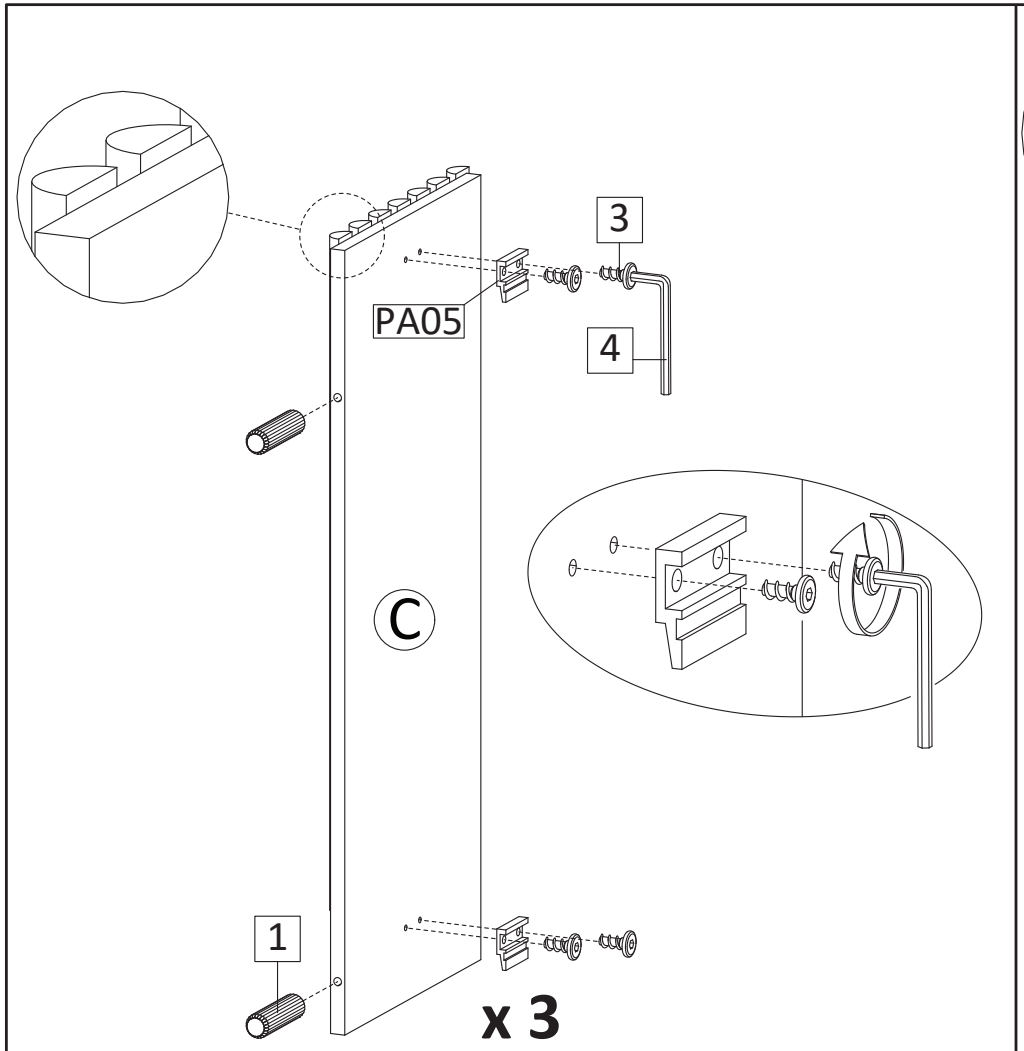

STEP3: Install the Short Bracket (HW PA05) facing the correct direction. Please follow the illustration into Frame Headboard (C), tighten the screws 6.4 x 14 mm (HW3) using Allen Key (HW4). Insert Dowel (HW1) into Frame Headboard (C).

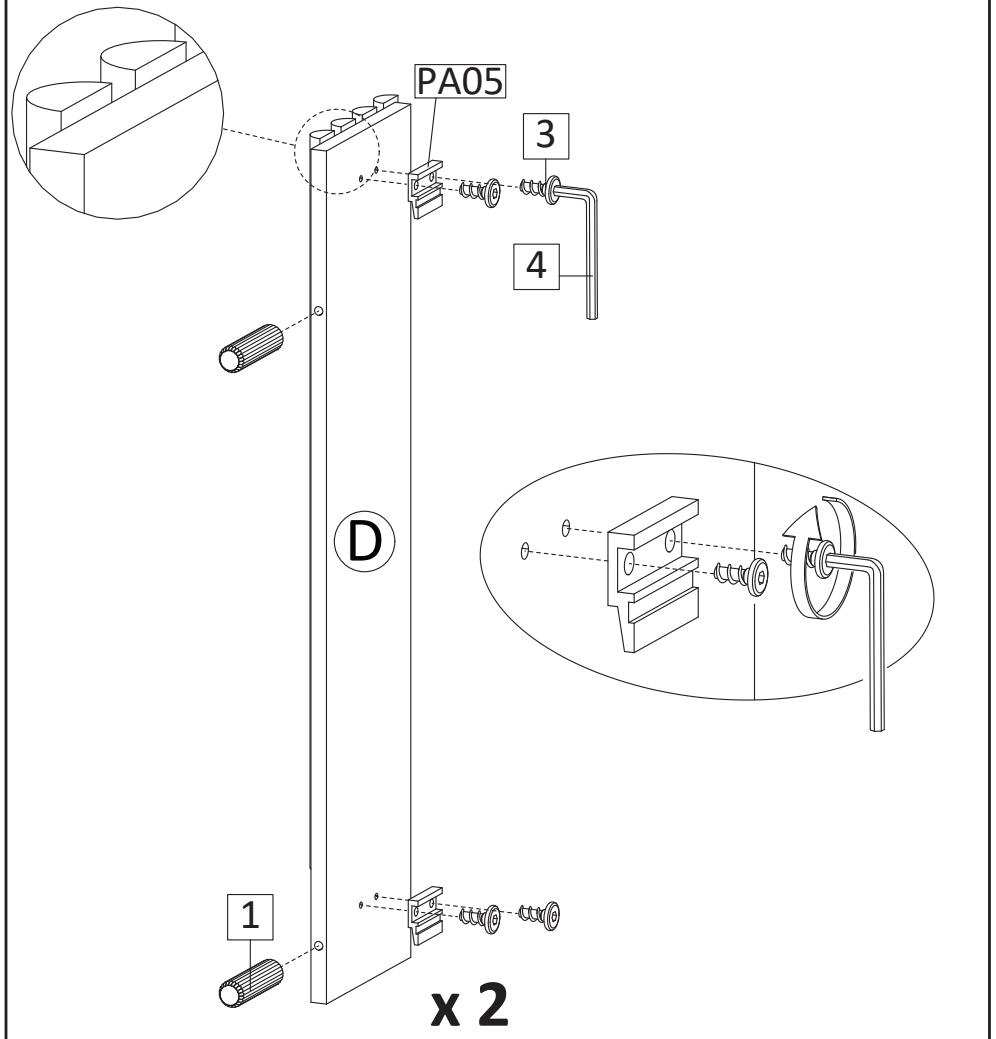


STEP4: Install the Short Bracket (HW PA05) facing the correct direction. Please follow the illustration into Frame Headboard Small (D), tighten the screws 6.4 x 14 mm (HW3) using Allen Key (HW4). Insert Dowel (HW1) into Frame Headboard Small (D).

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

Determine your desired (Y) height,
then subtract by 82.5 mm. This is the drill holes height from the floor (Z).

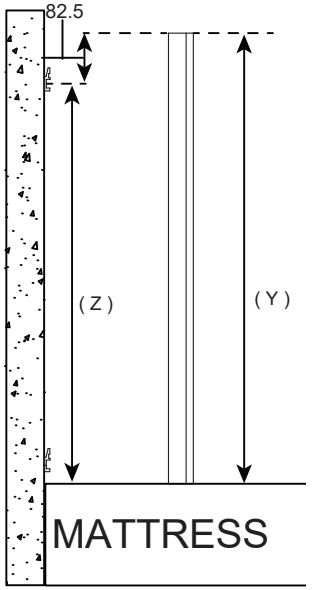


Wall mounting devices

To prevent injury or property damage from the unexpected tipping of furniture, we highly recommend to seek professional advice if unsure of wall constructions.

Properly affixing furniture to your wall will depend on the wall material: concrete, drywall, masonry, or wood will require the appropriate hardware.

Wall Plug (HW6) and screw 5.5x45mm (HW5) provided is suitable for concrete wall only.

please source the right wall anchor and wall screw according to the wall type. Please consult with your local hardware store to ensure you are using the correct hardware for your wall type.

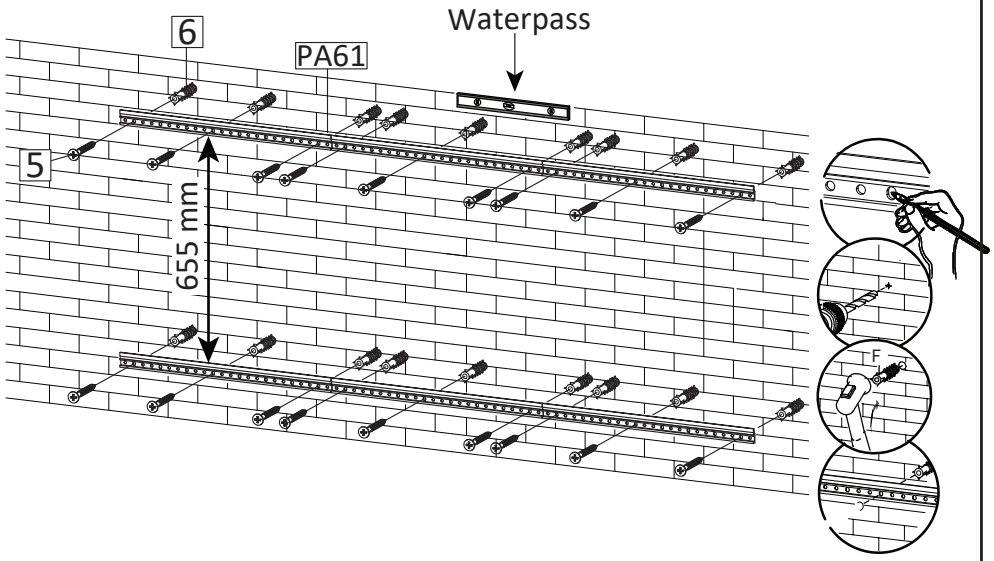


STEP5:Please specify the desired top surface height of the mattress (Y). Subtract (Y) by 82.5 mm and you will get the height of the drilling holes of the mattress (Z). Use (Z) to determine the screw positions of the mattress in step 6.


STEP6:Ensure that the Long Bracket (HW PA61) bar is leveled, use water pass if necessary. Using a pencil, mark the hole on the wall and drill. Insert the suitable wall plug (HW6). Ensure that screw 5.5x45mm (HW5) has been tighten fully before hanging the Headboard onto it.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

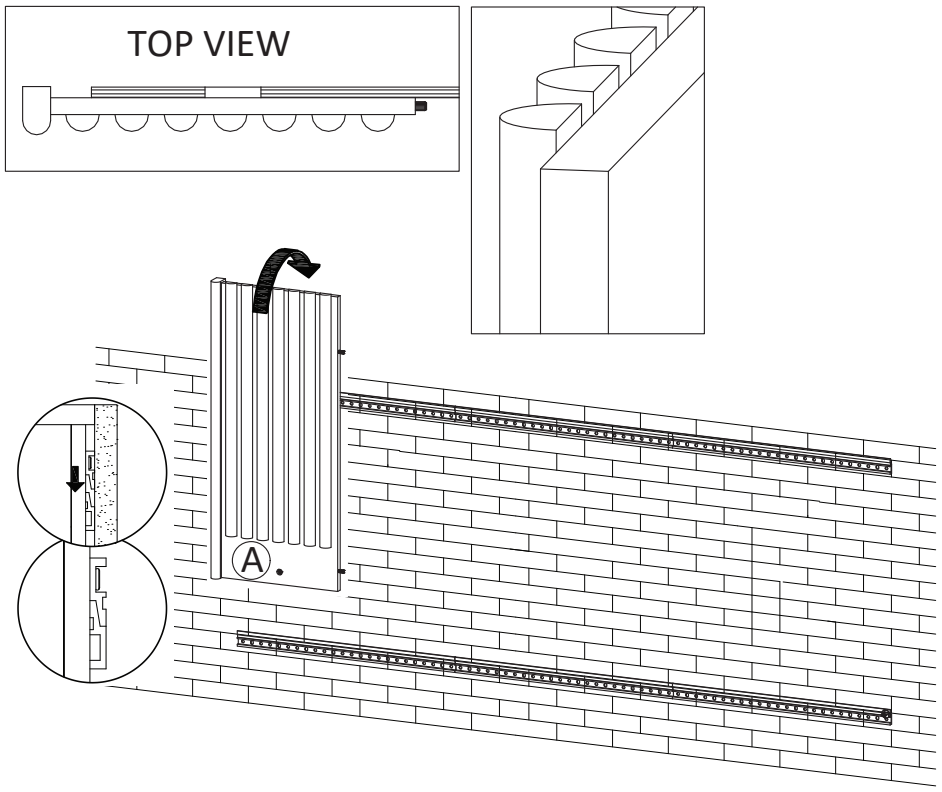


STEP7: Install the Frame Headboard Left (A) onto the Long Bracket. Ensure that it is properly attached and secured to the wall.

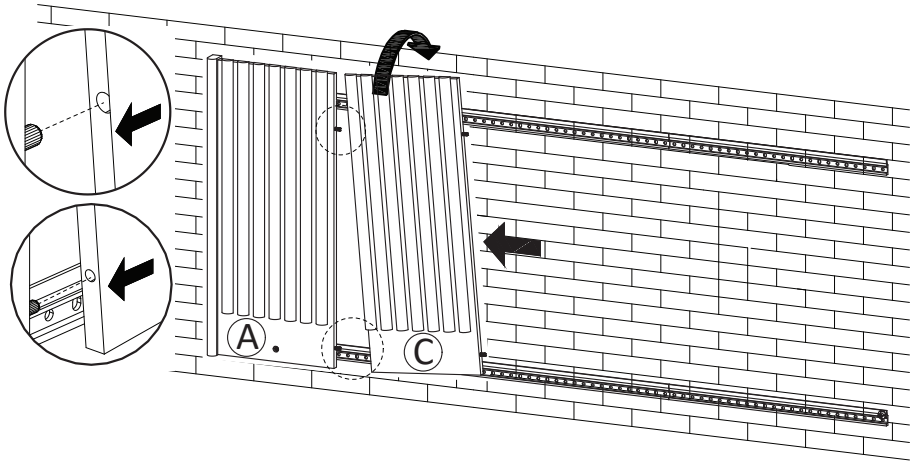


STEP8: Install Frame Headboard Big (C) onto Frame Headboard Left (A) that has been installed on the wall. Please do it as shown in the picture.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

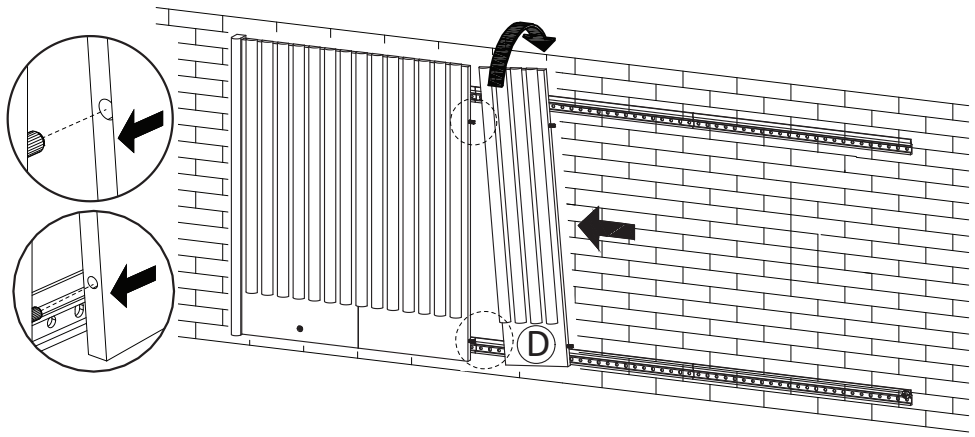


STEP9: Install Frame Headboard Small (D) by combine it with the components that have been installed on the wall. Do it as shown in the picture.

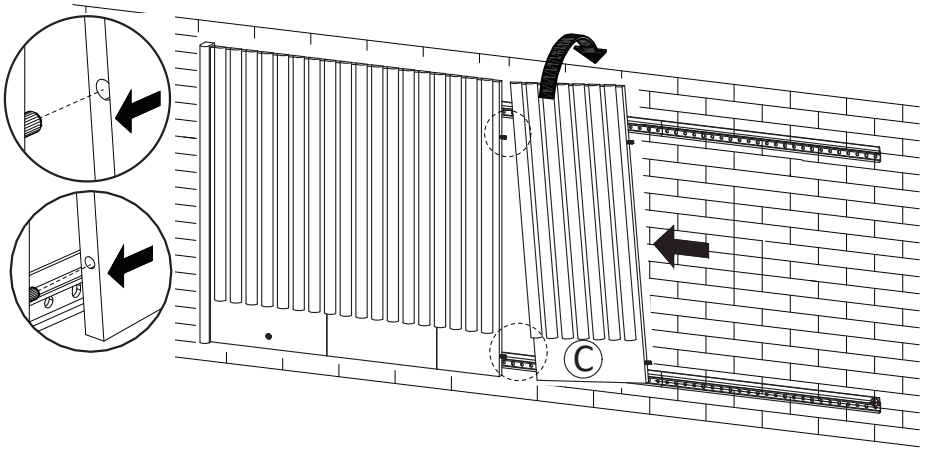


STEP10: Install Frame Headboard Big (C) by combine it with the components that have been installed on the wall. Do it as shown in the picture.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

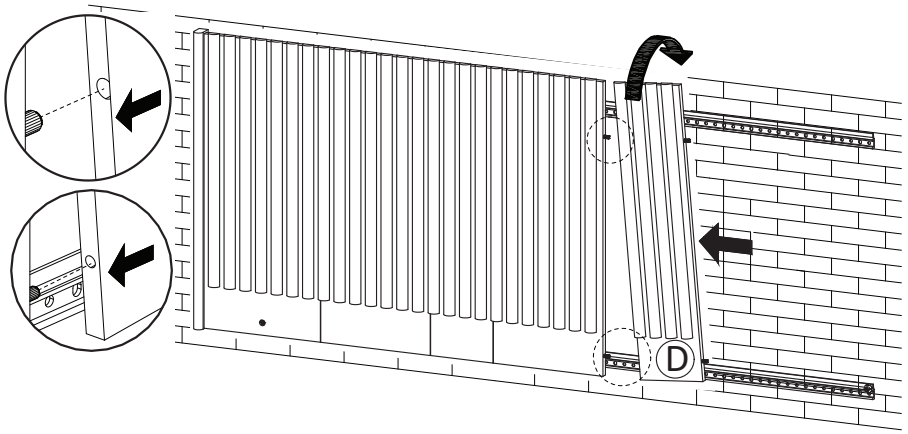


STEP11: Install Frame Headboard Small (D) by combine it with the components that have been installed on the wall. Do it as shown in the picture.

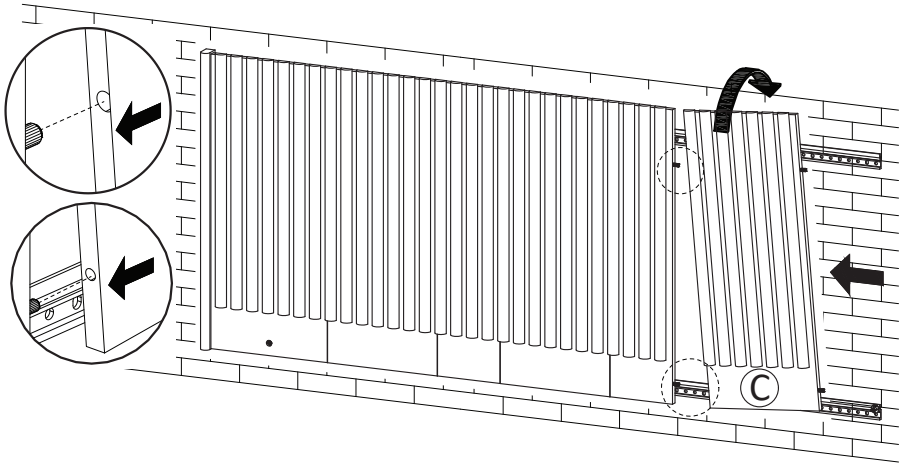


STEP12: Install Frame Headboard Big (C) by combine it with the components that have been installed on the wall. Do it as shown in the picture.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

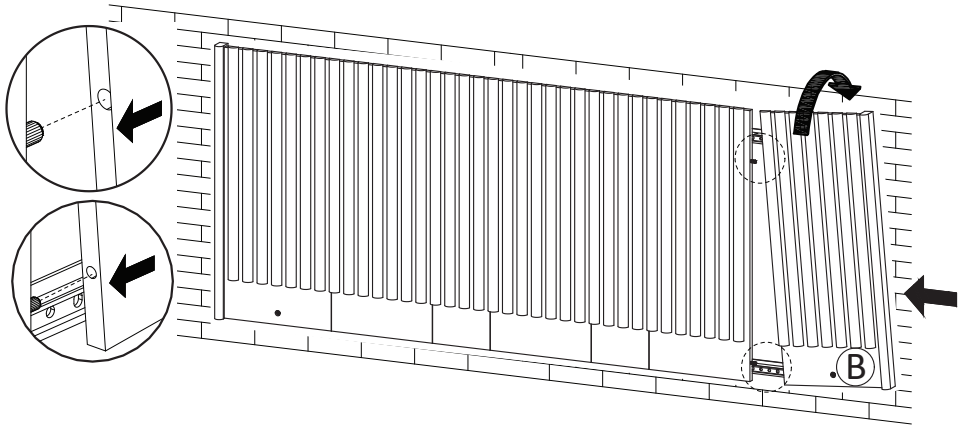


STEP13: Install Frame Headboard Right (B) by combine it with the components that have been installed on the wall. Do it as shown in the picture.

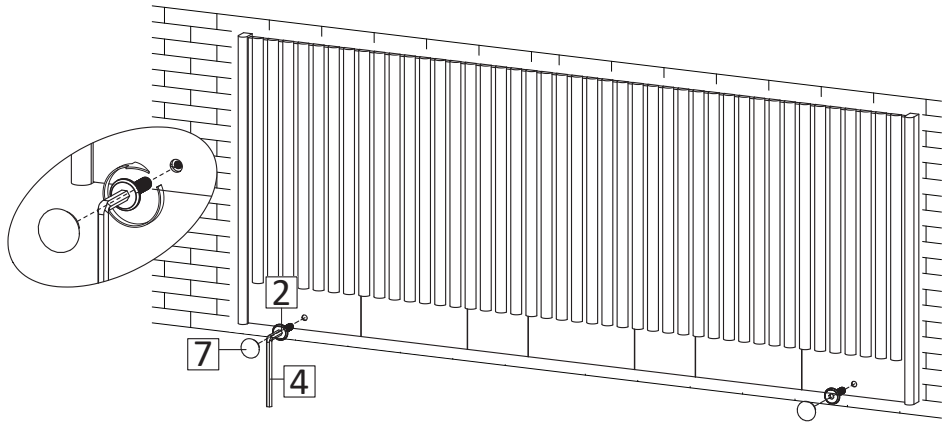

STEP14: Tighten and secure with screws M6x20mm (HW2), tighten the screws using Allen Key (HW4). Install Screw Caps (HW7) over the screws.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

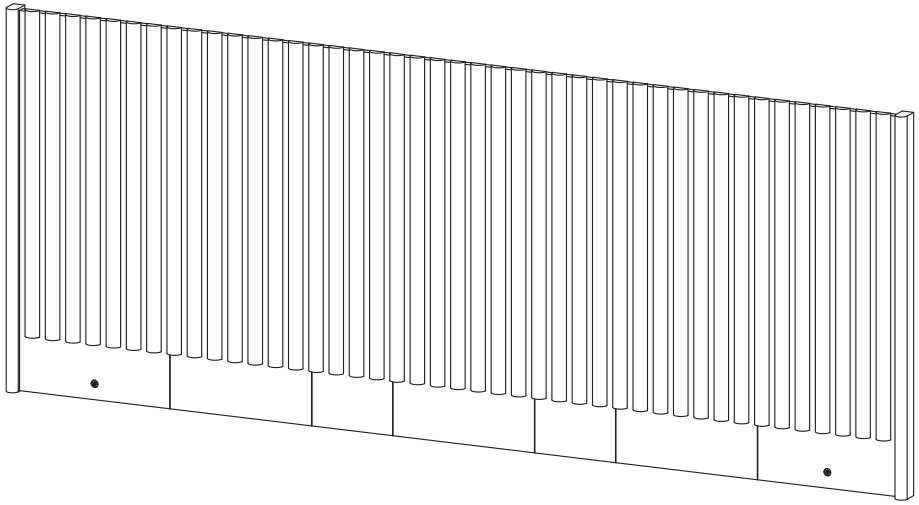

STEP15: Assembly is Complete.

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**


SAFAVIEH FURNITURE

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key

Model# HBD9600-Q


Product Dimensions: 63.11”Wx1.69”Dx30.71”H

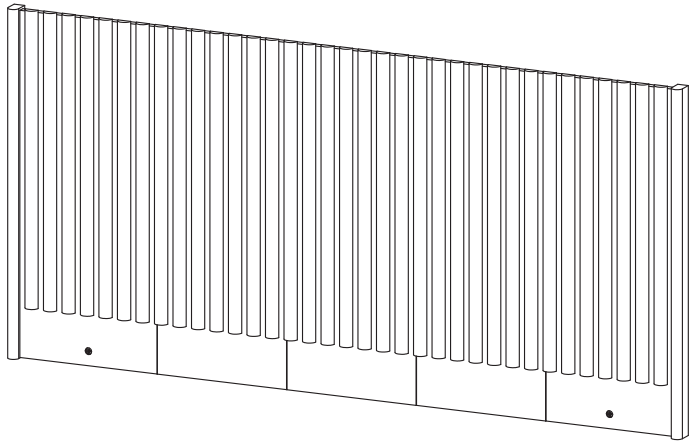







CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

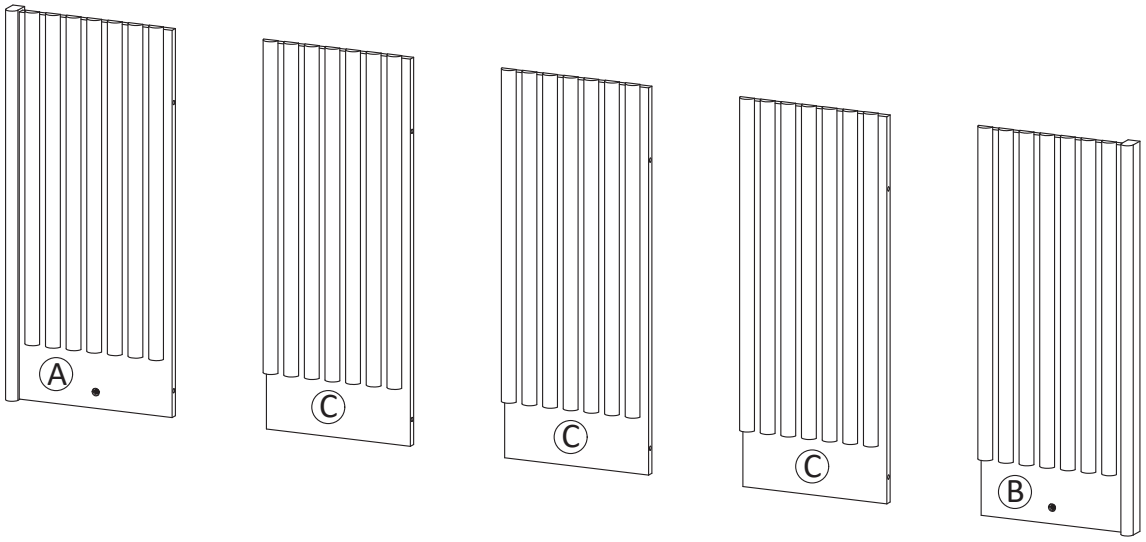

Hardware List

HW1x8  Ø 8 x 30 mm	HW2x2  M 6 x 20 mm	HW3x20  M 6.4 x 14 mm	HW4x2 	HW5x12  5.5 x 45 mm	HW6x12 
HW7x2  Ø 15 mm	HW PA05x10 	HW PA49x6 			


Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Frame Headboard Left	1
B	Frame Headboard Right	1
C	Frame Headboard	3


Piece	Description	Qty
HW1	Dowel	8
HW2	Screw M 6 x 20 mm	2
HW3	Screw M 6.4 x 14 mm	20
HW4	Allen Key	2
HW5	Screw 5.5 x 45 mm	12
HW6	Wall Plug	12
HW7	Screw Cap	2
HW PA05	Short Bracket	10
HW PA49	Long Bracket	6

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

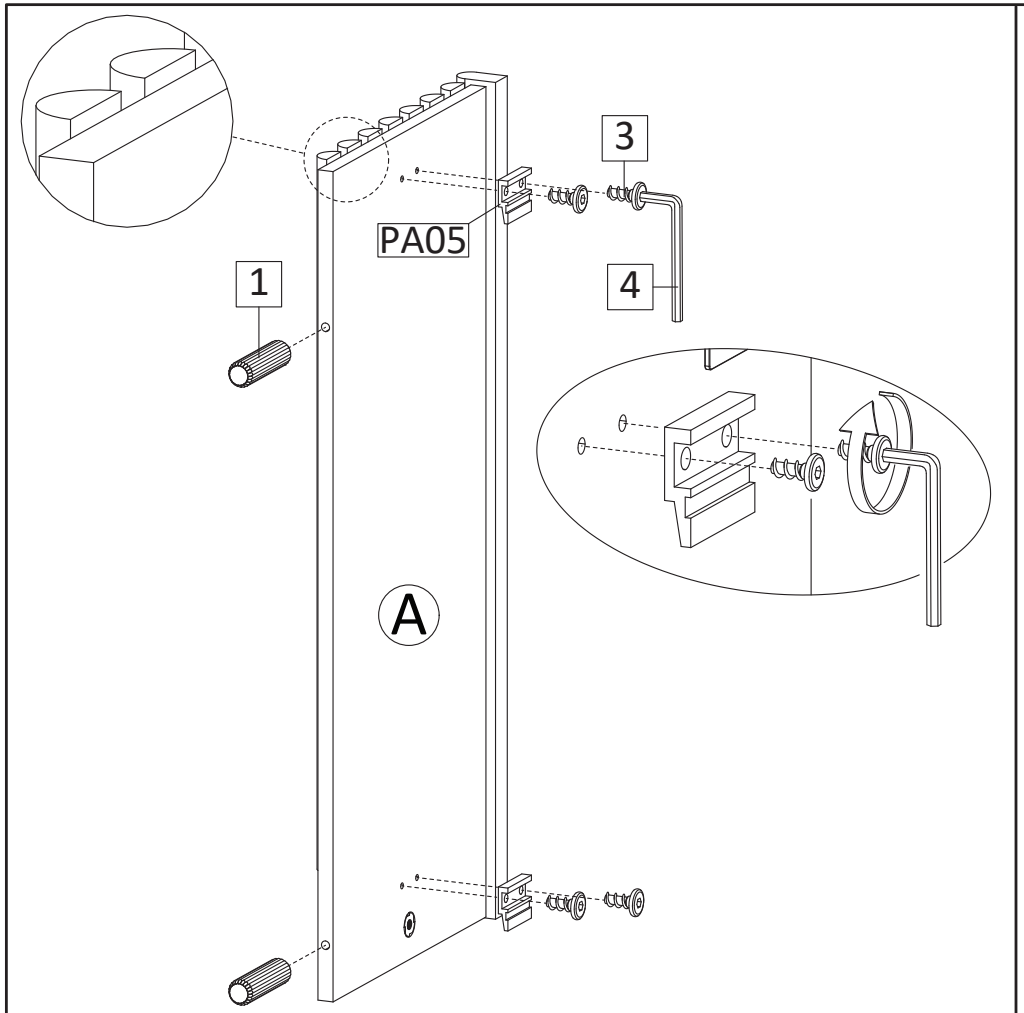


STEP1: Install the Short Bracket (HW PA05) facing the correct direction. Please follow the illustration into Frame Headboard Left (A), tighten the screws 6.4 x 14 mm (HW3) using Allen Key (HW4). Insert Dowel (HW1) into Frame Headboard Left (A).

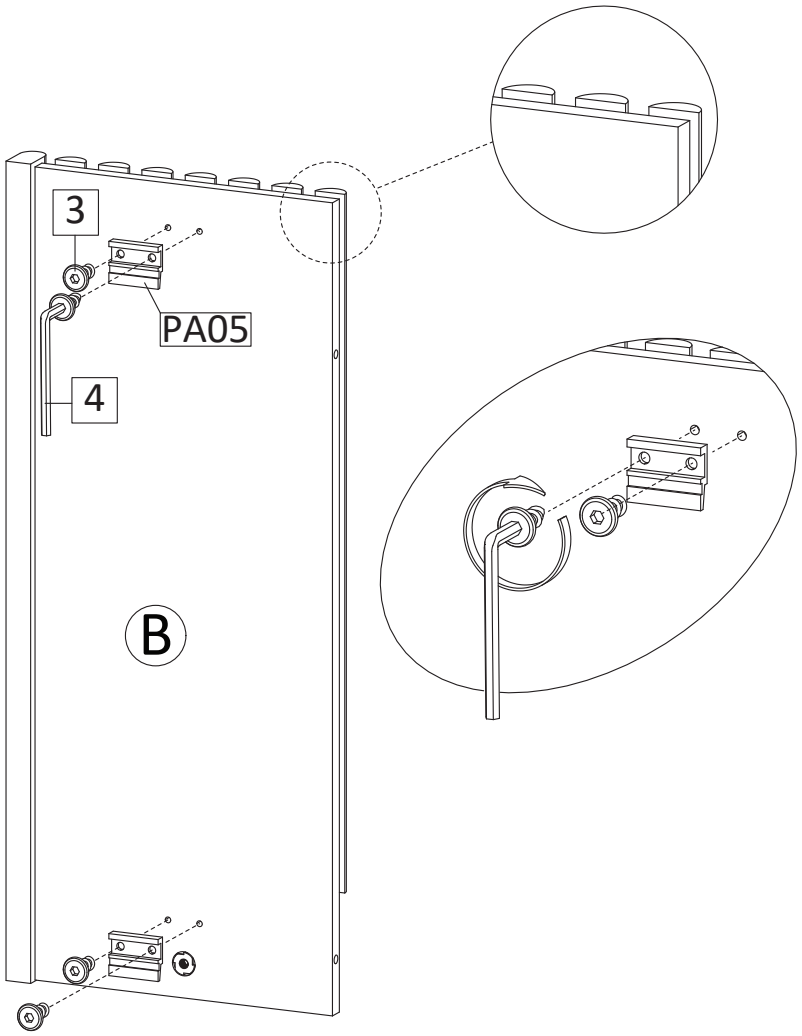

STEP2: Install the Short Bracket (HW PA05) facing the correct direction. Please follow the illustration into Frame Headboard Right (B), tighten the screws 6.4 x 14 mm (HW3) using Allen Key (HW4).


PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

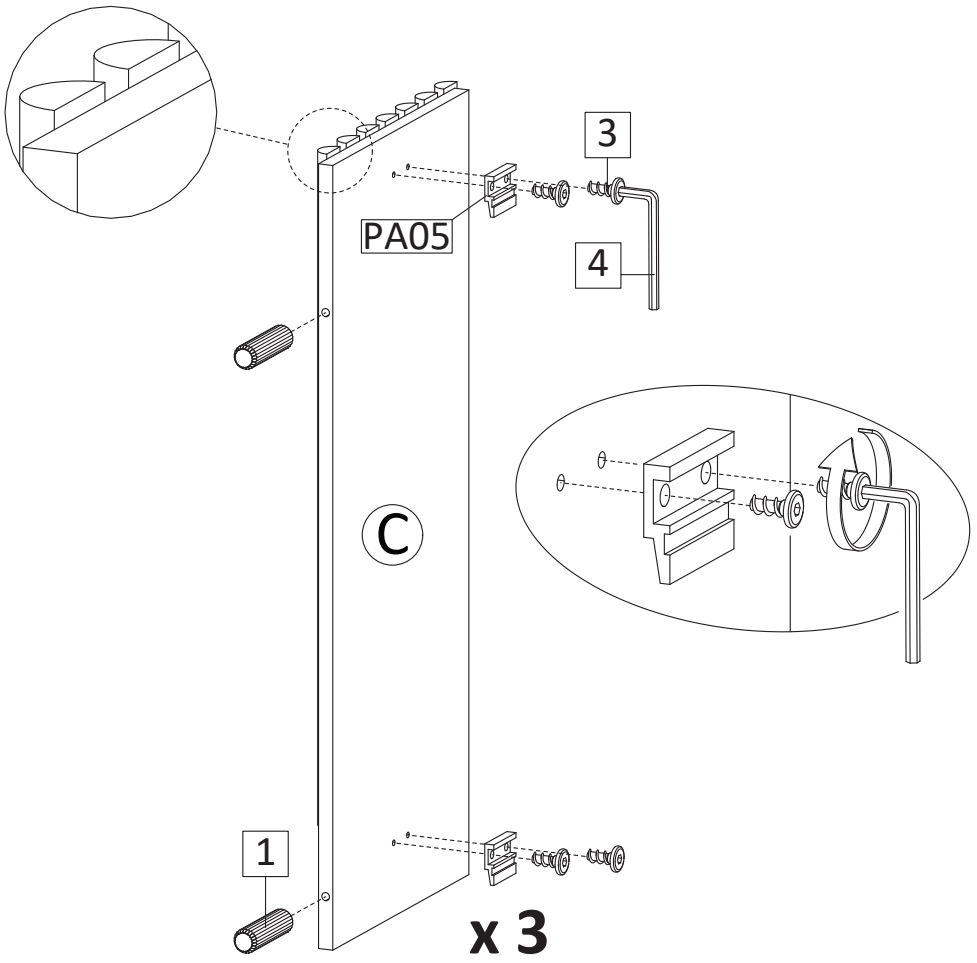

STEP3: Install the Short Bracket (HW PA05) facing the correct direction. Please follow the illustration into Frame Headboard (C), tighten the screws 6.4 x 14 mm (HW3) using Allen Key (HW4). Insert Dowel (HW1) into Frame Headboard (C).

Determine your desired (Y) height,
then subtract by 82.5 mm. This is the drill holes height from the floor (Z).

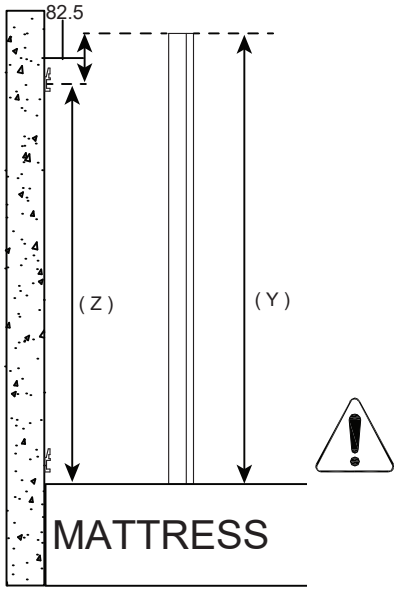

Wall mounting devices

To prevent injury or property damage from the unexpected tipping of furniture, we highly recommend to seek professional advice if unsure of wall constructions.

Properly affixing furniture to your wall will depend on the wall material: concrete, drywall, masonry, or wood will require the appropriate hardware.


Wall Plug (HW6) and screw 5.5x45mm (HW5) provided is suitable for concrete wall only.

please source the right wall anchor and wall screw according to the wall type. Please consult with your local hardware store to ensure you are using the correct hardware for your wall type.


STEP4: Please specify the desired top surface height of the mattress (Y). Subtract (Y) by 82.5 mm and you will get the height of the drilling holes of the mattress (Z). Use (Z) to determine the screw positions of the mattress in step 5.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

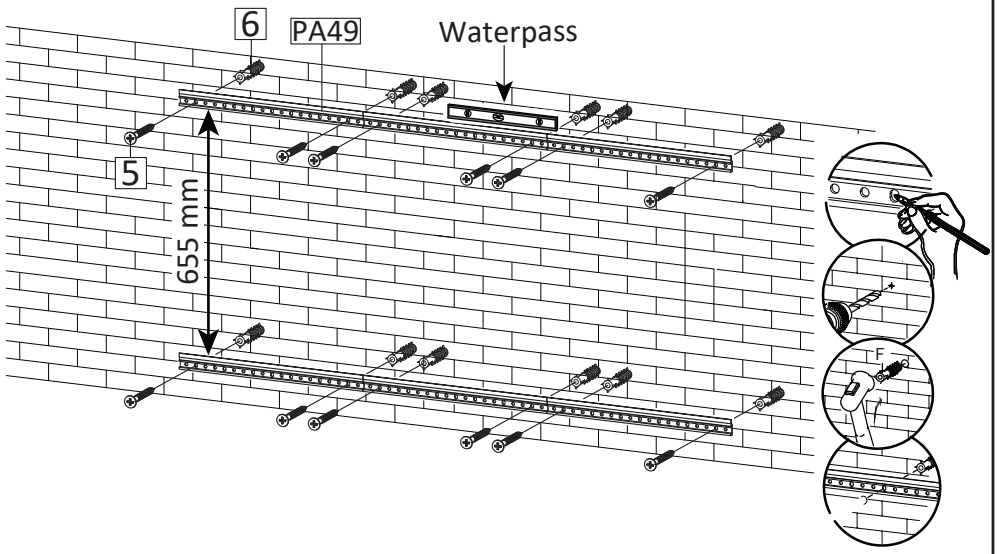


STEP5: Ensure that the Long Bracket (HW PA49) bar is leveled, use water pass if necessary. Using a pencil, mark the hole on the wall and drill. Insert the suitable wall plug (HW6). Ensure that screw 5.5x45mm (HW5) has been tighten fully before hanging the Headboard onto it.

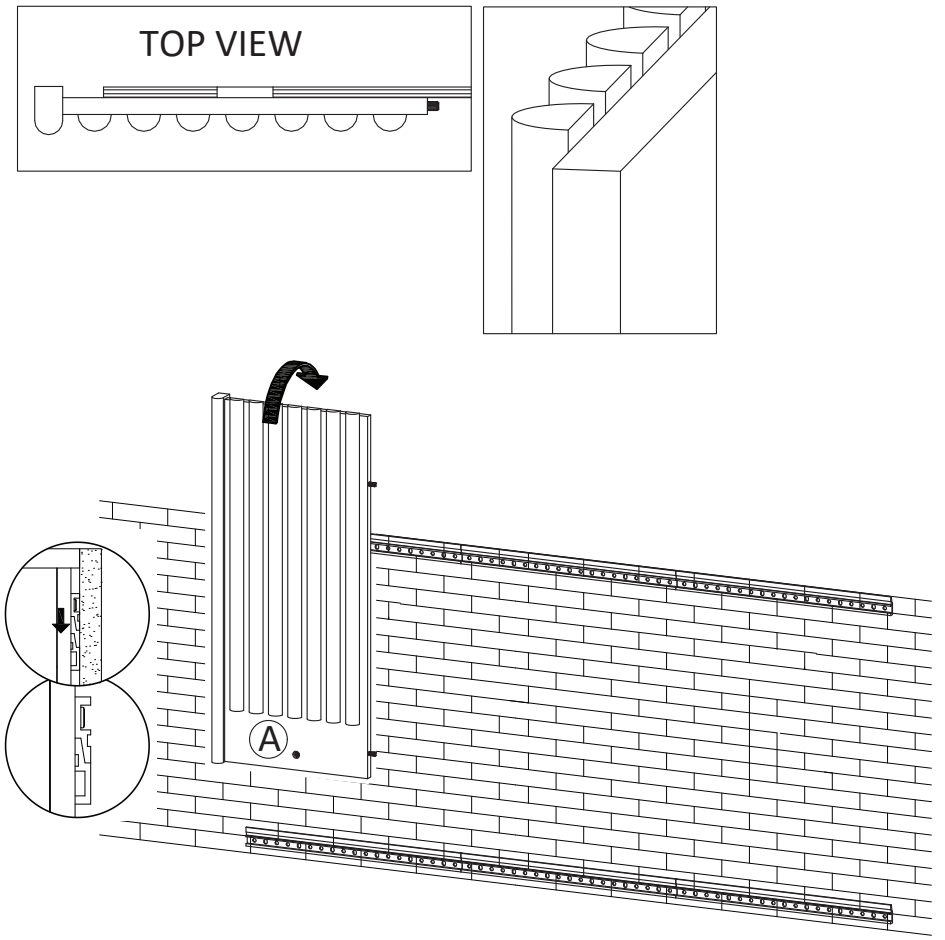


STEP6: Install the Frame Headboard Left (A) onto the Long Bracket. Ensure that it is properly attached and secured to the wall.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

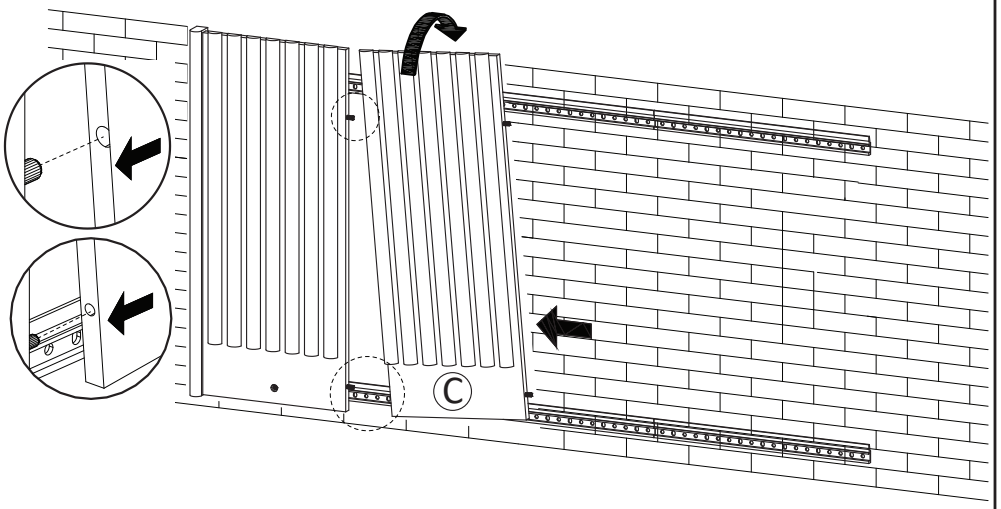


STEP7: Install Frame Headboard (C) onto Frame Headboard Left (A) that has been installed on the wall. Please do it as shown in the picture.

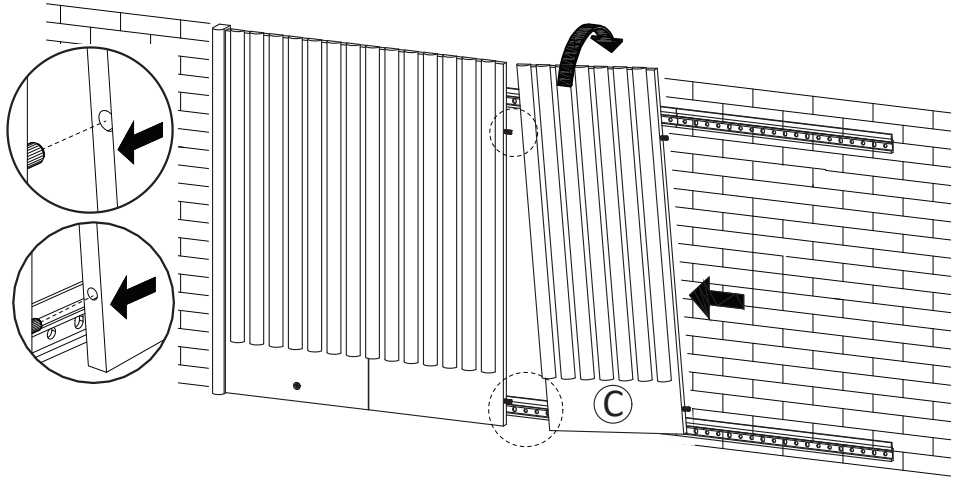


STEP8: Install Frame Headboard (C) by combine it with the components that have been installed on the wall. Do it as shown in the picture.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

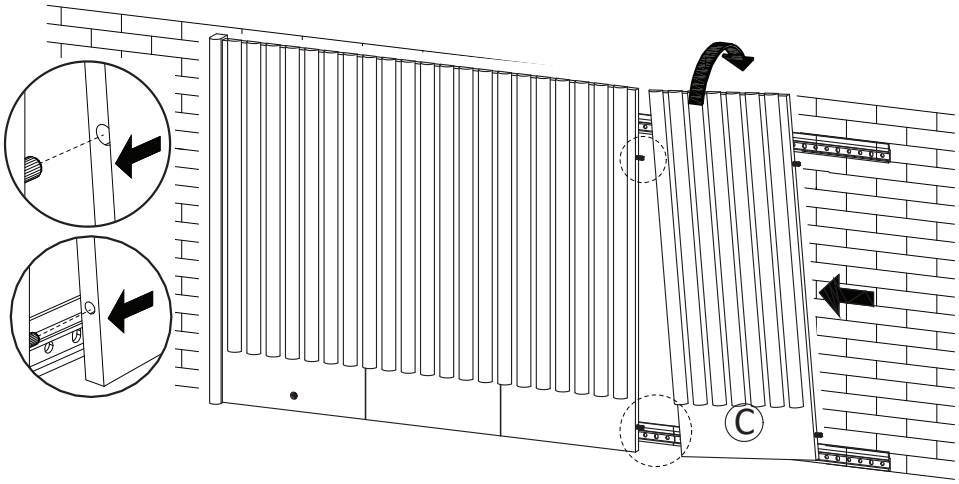


STEP9: Install Frame Headboard (C) by combine it with the components that have been installed on the wall. Do it as shown in the picture.

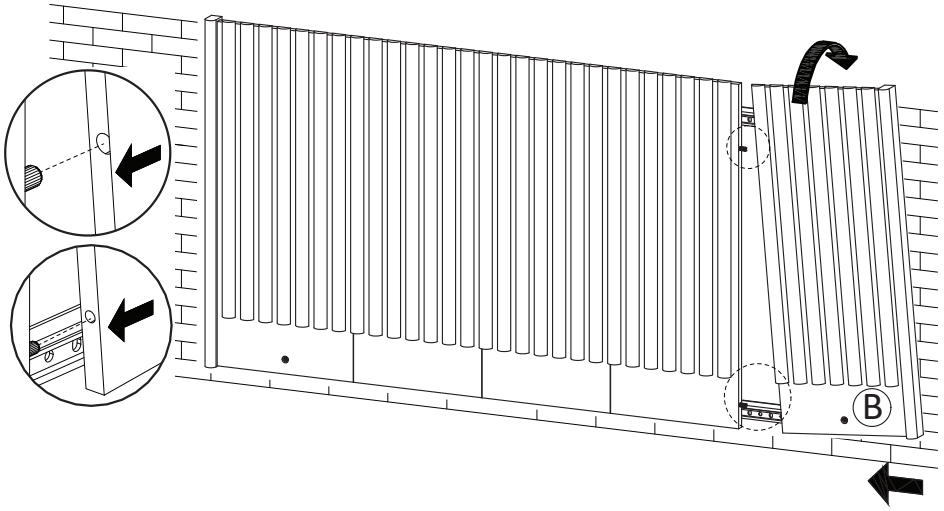


STEP10: Install Frame Headboard Right (B) by combine it with the components that have been installed on the wall. Do it as shown in the picture.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

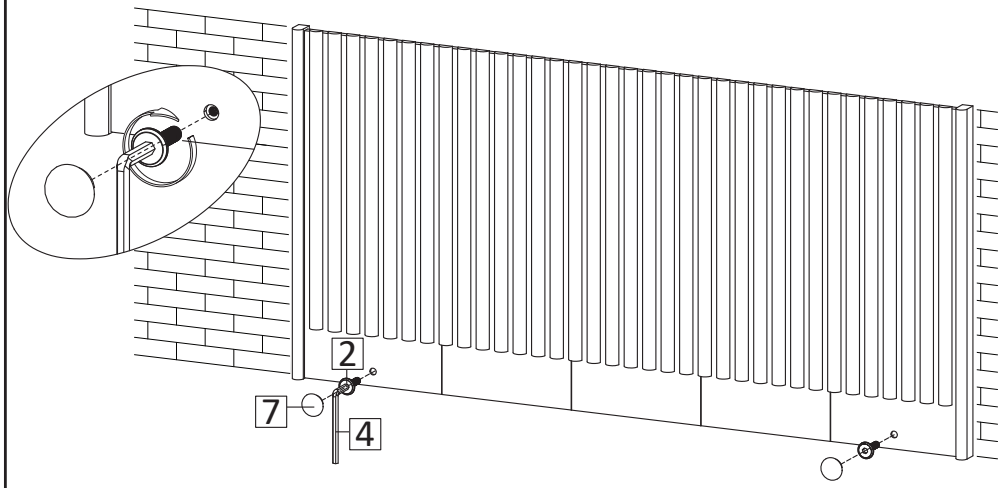

STEP11: Tighten and secure with Screws M6x20mm (HW2), tighten the screws using Allen Key (HW4). Install Screw Caps (HW7) over the screws.

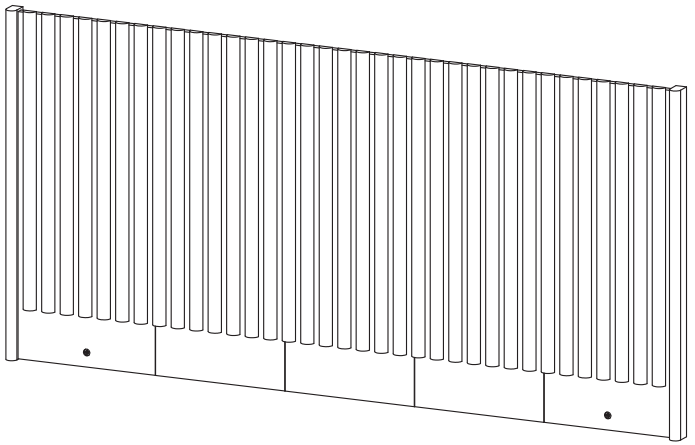

STEP12: Assembly is Complete.