

## CARE AND MAINTENANCE

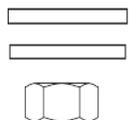

Unplug lamps before using any cleaning solutions. Dust shades with a feather duster or with an appropriate vacuum-brush attachment. Wipe with a soft, dry cloth and clean lamp bases with the methods appropriate to the material. Avoid the use of chemicals and household cleaners as they may damage the finish.

## NOTICE & IMPORTANT SAFETY INSTRUCTIONS

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* To reduce the risk of fire, electrical shock or injury to persons or property, please follow the guideline below for safe use and installation
- \*The external flexible cable or cord of this luminaire cannot be replaced;  
If the cord is damaged, the luminaire shall be destroyed

\*\*This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. this plug will fit in a polarized outlet only one way. if the plug does not fit fully in the outlet, reverse the plug, if it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. do not attempt to defeat this safety feature.

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A.B.C	nut.mat.washer		1X	D	Base		1X
E	steel plate		1X	P	Shade		1X
Z	Wrench key		1X	Q	RING		1X
G.H.I.M. L.K.N.Y. X	Lamp base		1X	R	Bulb		1X
J	SCREW		1X	T	Finial		3X

 **SAFAVIEH**  
LIGHTING

Model# LIT4355A

Product Dimensions:

L62 " X W18" X H85-3/4"





## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the prod

Estimated Assembly Time: 15 minutes.

1. Insert tube(G) to the base(D) and steel plate(E), then secure by flat washer(C).plat mat(B) and hex nut (A) using wrench key(Z)-INCLUDED

2. Stand the assembled base onto a flat surface

3. Insert tube (H) into tube(G)

4. Insert tube (I) into tube(H)

5. Insert Arm (M) into tube(I) and secure with thumb screw(J)

6. Insert arm (N) into arm(M)

7. Insert arm (Y) into arm(N)

8. Insert metal (X) into arm(Y) and secure with screw(W)

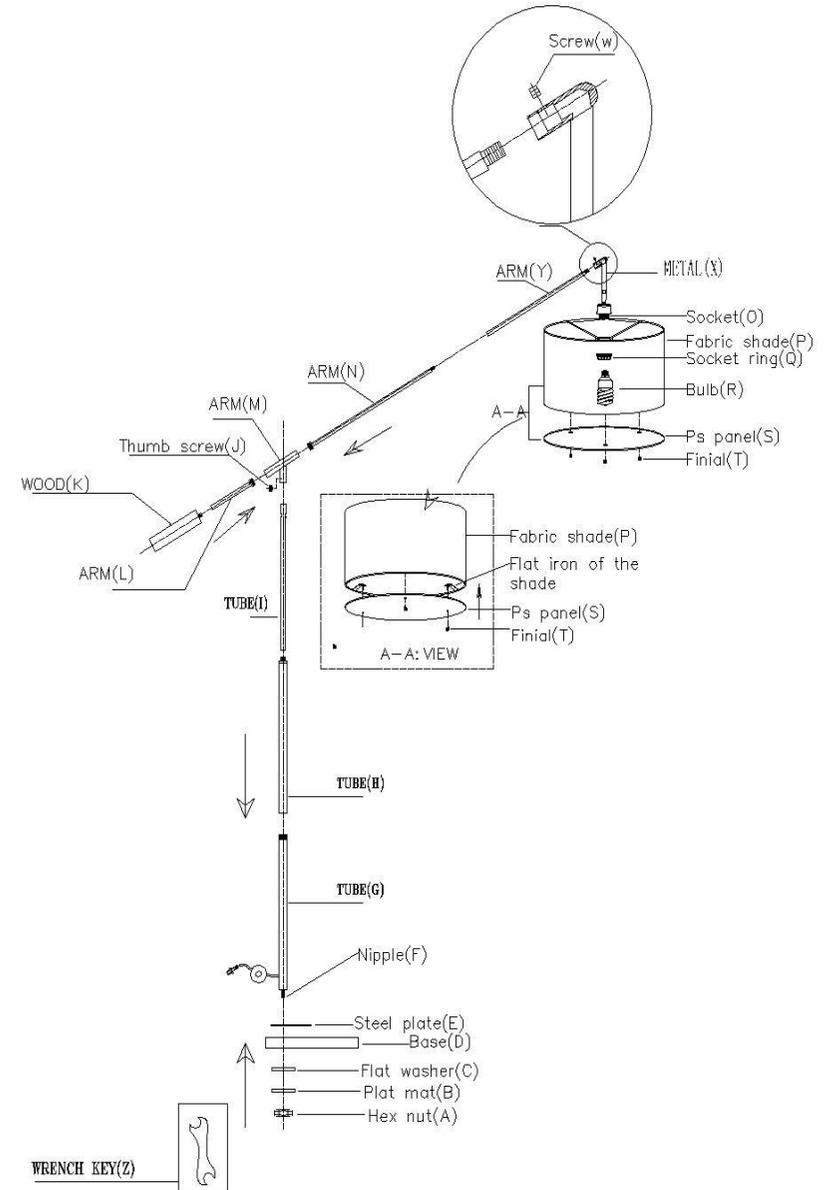
9. Put shade(P) onto socket(O) and secure it with socket ring(Q),

insert 23W CFL bulb(R)-(INCLUDED)

10. Put PS panel(S) onto the shade(P) and secure it with Finial(T)

11.Insert arm(L) into arm(M).

12.Inset wood(K) into arm(L).



ENJOY YOUR LAMP