

## Assembly Instruction

CAUTION: Read instruction carefully and turn electicity off at main circuit breaker panel before

beginning installation.

ITEM #:LIT4389A



To clean the outside fo the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly damperned clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes

#### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
Α	Mounting bar		1X	G	Bulb	Q	4X
A1	Mounting screw		2X				
В	Canopy		1X	Н	Socket sleeve		4X
С	Lock	Ū	1X	I	Fixture		1X
D	Out ring	<del>- 11-1</del>	1X	J	Resin cover		1X
Е	Chain	† 0 0	1X	K	Wire nut		3X
F	Lock	Q	1X				

## Installation

#### Step 1

Unpack all parts from cartons carefully Unfold the battered lampbody to correct shape at first


Thread lock(F) to the fixture(I)

Fixing one end of chain(E) to the lock (F)

Thread resin cover(J) to the fixture(I)


Place socket sleeve(H) and bulb(G) to the

socket

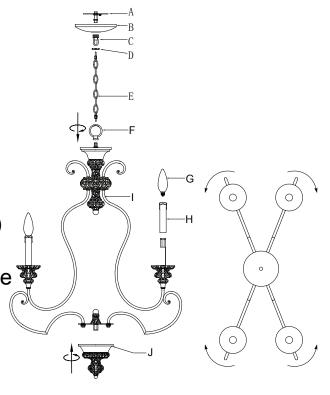

## Step 2 Wire connection

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:		
Black	White		
* Parallel Cord(round & smooth)	* Parallel Cord(square& ridged)		
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brown,Gold or Black without Tracer(colored stripes)		
Insulated Wire(not green) with copper metal conductor	Insulated Wire(not green) with Silver metal conductor		



\*Note: When parallel wire(SPTI & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left.)



# Step 3

Installing the mounting bar(A) with mounting screw(A1), and secure canopy(B) with the lock (C) and tighten with out ring(D)

#### Step 4

Installing whole body to the top lock(C)

## Step 5

Consult a qualified electrician to ensure correct branch circuit conductor

**ENJOY YOUR LAMP**