


# SAFAVIEH LIGHTING

## Assembly Instruction

**CAUTION:** Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

**ITEM#:LIT4413A**

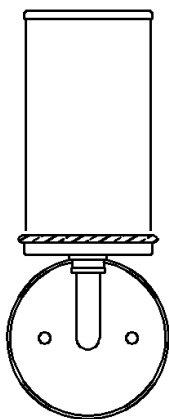

## Care and Cleaning










To clean the outside of the fixture, use a dry or slightly dampened clean cloth(use clean water, never a solvent)to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth(use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time:30 minutes


## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Wire Nut		3X	F	Socket Cup		1X
B	Mounting Plate		1X	G	Canopy Nut		2X
C	Mounting Screw		2X	H	Glass Shade		1X
D	Lamp Body		1X	I	Bulb		1X
E	Socket		1X				

# Installation


## Step 1

Unpack all parts from cartons carefully.  
Separate the Mounting Plate(B) from the canopy of Lamp body(D) by removing Canopy Nut(G) anti-clockwise.

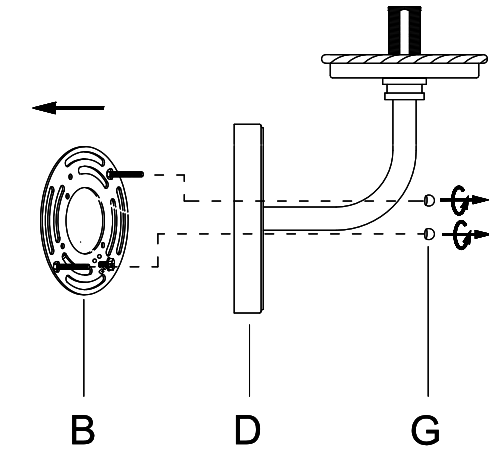


## Step 2

Attach the Mounting Plate(B) to the junction box and fix it by turning the Mounting Screw(C) clockwise till tight.

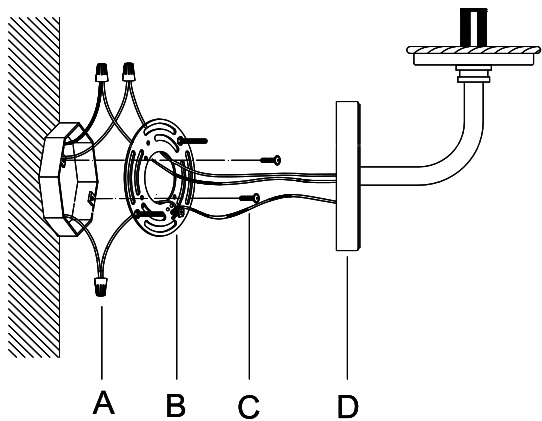

## Step 3 Wire connection

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:
Black	White
*Parallel Cord(round&smooth)	*Parallel Cord(square&ridged)
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brwn,Gold or Black without Tracer(colored stripes)
Insulated Wire(not green)with copper metal conductor	Insulated Wire(not green)with Silver metal conductor




\*Note: When parallel wire(SPTI&SPTII)is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left)



## Step 4

Attach the Canopy of the lamp body(D) onto the Mounting Plate(B) and fix it with Canopy nuts(G) clockwise.

Place the Glass Shade(H)onto the plate of the Lampbody and fix the Glass Shade(H) by turning the Socket Cup(F) Clockwise as diagram.

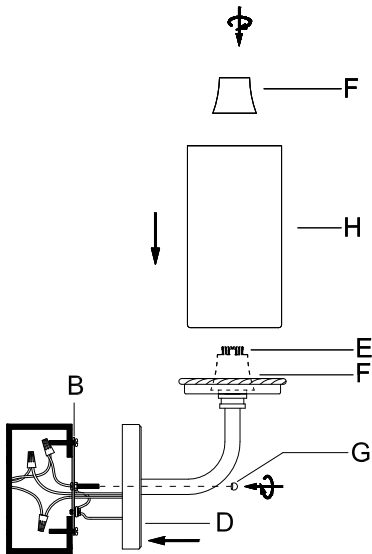

Insert the bulb (I) into the Socket(E). **Be sure to use the bulb with wattage not exceed than specified on the fixture.**

**PLEASE USE TYPE "B" BULB MAX 40-WATT OR CFL MAX 13-WATT OR LED MAX 9-WATT  
THERE IS 1\* LED 4-WATT BULB IN THE BOX.**

## Step 5

Consult a qualified electrician to ensure correct branch circuit conductor

ENJOY YOUR LAMP

