

# **Assembly Instruction**

<u>CAUTION:</u> Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

ITEM#:LIT4414A

#### **Care and Cleaning**

To clean the outside of the fixture, use a dry or slightly dampened clean cloth(use clean water, never a solvent)to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth(use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time:30 minutes

#### **Part List and Hardware List**

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
А	shade		1X	-	mounting screw		2X
В	shade		1X	J	mounting bracket		1X
С	ring	1	1X	K	machine screw	Kumm	2X
D	embroidered fabric		1X	L	wire connector		3X
E	tube		4X	M	ground screw		1X
F	threaded rob	प्रमृत्य सामाने	1X	Ν	canopy		1X


G	acylic	 1X	0	screw ball	2X
Н	finial	1X	Р	bulb	3X

#### Installation

# Step 1

Unpack all parts from cartons carefully. Fix shade(A) and shade(B) with ring (C) Put the shade(D) onto the shade(A) Connect tube (E) together screw threaded rob (F)


Fix acrylic (G) with screw ball (H)

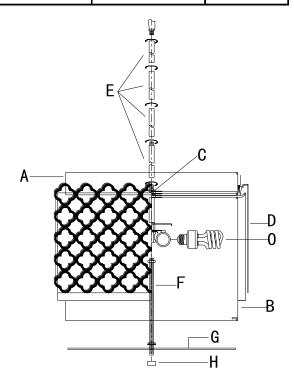

### Step 2


Fix the mounting bracket(J) to the outlet box with machine screw(K).

Fix the canopy (N)with provided screw ball (O)

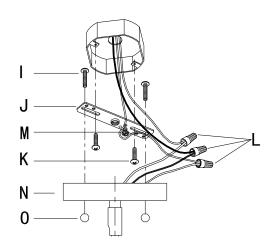

# Step 3 Wire connection

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:		
Black	White		
*Parallel Cord(round&smooth)	*Parallel Cord(square&ridged)		
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brwn,Gold or Black without Tracer(colored stripes)		
Insulated Wire(not green)with copper metal conductor	Insulated Wire(not green)with Silver metal conductor		



\*Note: When parallel wire(SPTI&SPTII)is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left)




#### **Grounding Instructions:**

- a) For installation in the United States: Wrap ground wire from outlet box around green ground screw (N)on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
- b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

#### Step 4

Install the bulb (P)

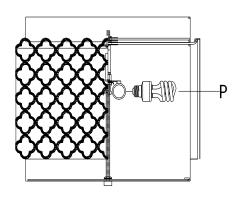

PLEASUE USE ON/OFF TYPE"B" BULB MAX 60-WATT OR CFL BULB MAX 13-WATT THERE ARE 3PCS CFL 13 -MATT BULB IN THE BOX

#### Step 5

Consult a qualified electrician to ensure correct branch circuit conductor

**ENJOY YOUR LAMP**