
SAFAVIEH

Assembly Instruction

CAUTION: Read instruction carefully and turn electicity off at main circuit breaker panel before beginning installation.

ITEM #:LIT4423A

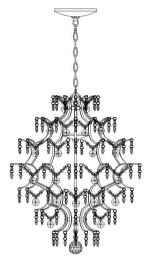

Care and Cleaning

To clean the outside fo the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.


To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly damperned clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
Α	Mounting bar		1X	20 - 27	500 to gr	7	4.V	500000		Д	6 1/
A1	Mounting Screw	<u></u>	2X	F	Body frame		1X	K	Bulb cover		3X
В	Canopy		1X	G	Dropper	28 €	84X	L	Dropper		1X
С	Lock		1X	Н	Dropper		48X	М	Wire nut	®	3X
D	Out ring		1X	1	Dropper		12X				
E	Chain	0	1X	J	Bulb	Û	3X				

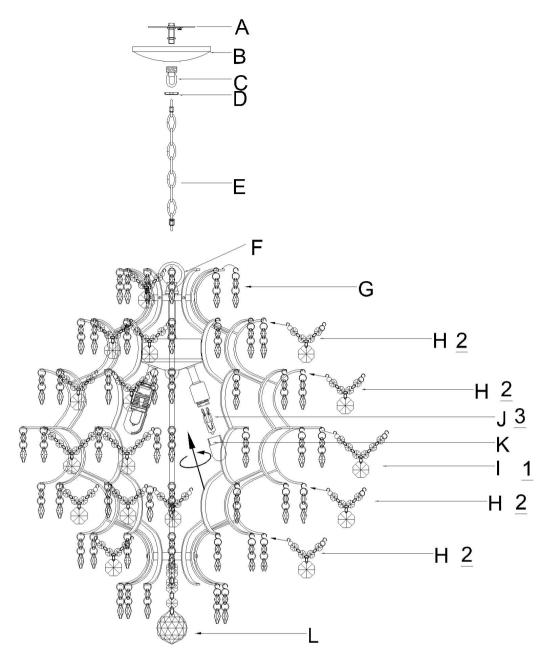

Installation


Step 1

Unpack all parts from cartons carefully Screw the chain(E) to the lock(C) of the lampbody(F) Place bulb(J) to the socket and then bulb cover(K) Hang list:


Hang dropper(G) on all metal arm
Hang dropper(H) on the # 2 metal frame
Hang dropper(I) on the # 3 metal frame
Hang dropper(K) on the # 1 metal frame
Hang dropper(L) on the bottom

Step 2 Wire connection

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:			
Black	White			
* Parallel Cord(round & smooth)	* Parallel Cord(square& ridged)			
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brown,Gold or Black without Tracer(colored stripes)			
Insulated Wire(not green) with copper metal conductor	Insulated Wire(not green) with Silver metal conductor			



*Note: When parallel wire(SPTI & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth. (See illustration on left.)

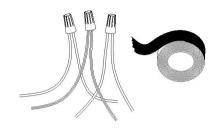

Step 3


Installing the mounting bar(A) with mounting screw(A1), and secure canopy(B) with the lock (C) and tighten with out ring(D)


Step 4

Installing whole body to the top lock(C)



Consult a qualified electrician to ensure correct branch circuit conductor

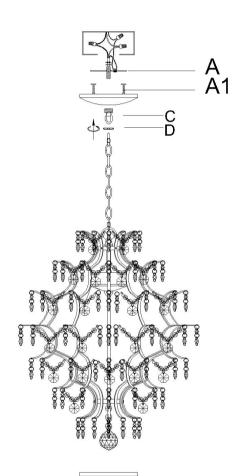

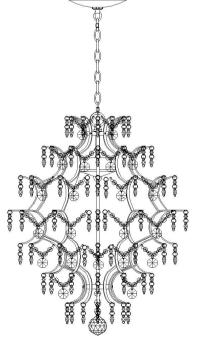

ENJOY YOUR LAMP