SAFAVIEH

Assembly Instruction

CAUTION: Read instruction carefully and turn electicity off at main circuit breaker panel before beginning installation.

ITEM #:LIT44 28A



Care and Cleaning

To clean the outside fo the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly damperned clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
Α	Mounting bar		1X	G	Dropper	\$	1X	М	Lampbody		1X
A1	Mounting screw	(present	2X		2.58801	•			Lampoody		
В	Canopy		1X	Н	Socket cover		5X	N	Wire nut		3X
С	Lock		1X	I	Dropper	ê	20X				
D	Out ring		1X	J	Dropper	\$	10X				
E	Chain	4 000	1X	К	Crystal ball		1X				
F	Bulb	\Diamond	5X	L	Metal finial	₽	1X				

Installation

Step 1

Unpack all parts from cartons carefully Screw the chain(E) to the lock(C) of the lampbody(M) Place socket cover(H) to the socket then bulb(F) Place crystal ball (K) to the nipple of the lampbody(M) and tighten with metal finial(L) Hang the dropper(I) on the metal arm(a.b.c) Hang the dropper(G) on the metal finial(L)

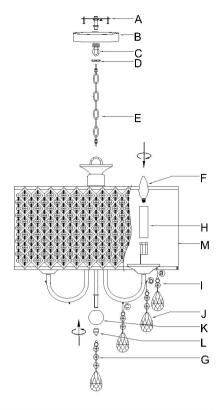

Step 2 Wire Connetion

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:			
Black	White			
* Parallel Cord(round & smooth)	* Parallel Cord(square& ridged)			
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brown,Gold or Black without Tracer(colored stripes)			
Insulated Wire(not green) with copper metal conductor	Insulated Wire(not green) with Silver metal conductor			



*Note: When parallel wire(SPTI & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth. (See illustration on left.)



Step 3

Installing the mounting bar(A) with mounting screw(A1), and secure canopy(B) with the lock (C) and tighten with out ring(D)



Installing whole body to the ceiling by lock

Step 5

Consult a qualified electrician to ensure correct branch circuit conductor

