


SAFAVIEH LIGHTING

Assembly Instruction

CAUTION: Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

ITEM#:LIT4491A

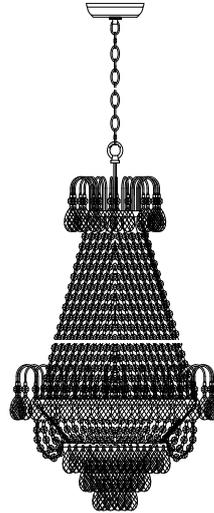

Care and Cleaning

To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture.

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time:30 minutes

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Wire Nut		3X	G	Hanging Loop		1X
B	Mounting Plate		1X	H	Upper Frame		1X
C	Mounting Screw		2X	I	Lampbody		1X
D	Canopy		1X	J	Tube		1X
E	Chain		1X	K	Shade		1X
E1	Closable Link		2X	L	Bulb		3X
F	Fixture Loop		1X				

Installation

Step 1

Unpack all parts from cartons carefully.

Insert the wires of the Lampbody(I) through one end of the Tube(J), fix it by turning the Tube(J) clockwise.


Place the Upper Frame(H) onto the threaded portion of the Tube(J) and fix it by turning the Hanging Loop(G) clockwise till tight.

Screw the Chain(E) to the lock of the Canopy (D) and Hanging Loop(G) with Closable Link(E1) as diagram

Insert each hook of acrylic beads of Upper Frame (H) to the holes in the the Lampbody(I) as diagram.


Attach the Shade(K) to the Lampbody(I) by inserting the hooks of the Shade(K) to the holes of the Lampbody(I)

Insert each hook of acrylic beads of Shade(K) to the holes in the the Lampbody(I) as diagram.

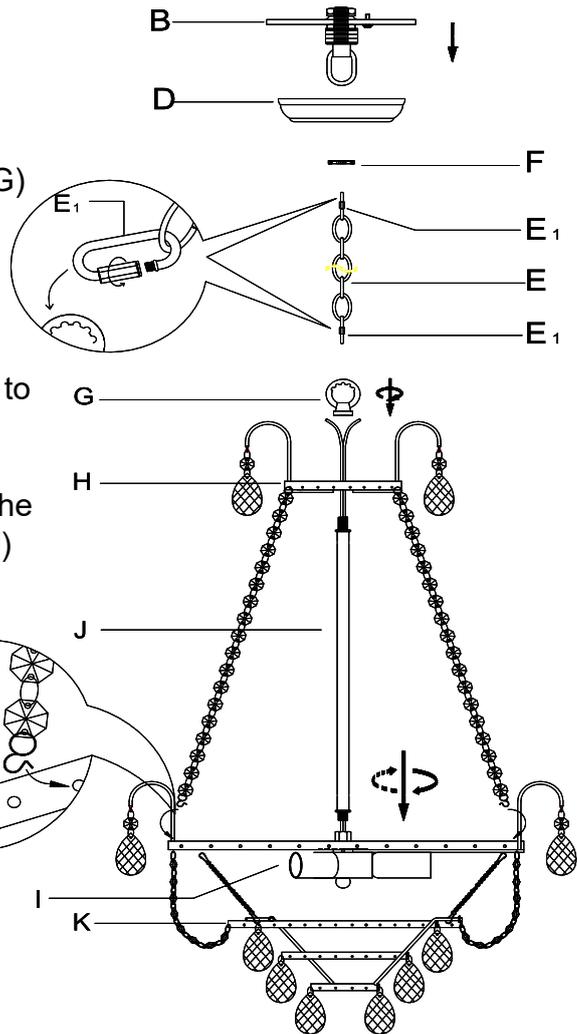

Step 2 Wire connection

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:
Black	White
*Parallel Cord(round&smooth)	*Parallel Cord(square&ridged)
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brwn,Gold or Black without Tracer(colored stripes)
Insulated Wire(not green)with copper metal conductor	Insulated Wire(not green)with Silver metal conductor



*Note: When parallel wire(SPTI&SPTII)is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left)

Grounding Instructions:

a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.


b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

Step 3

Install the Mounting Plate(B) to the junction box with Mounting Screw (C)

Attach the Canopy(D) to the junction box and fix it by turning the Fixture Loop(F) clockwise to the lock of the Mounting Plate(B).

Insert the bulbs (L) into the Socket of the Lampbody(I)

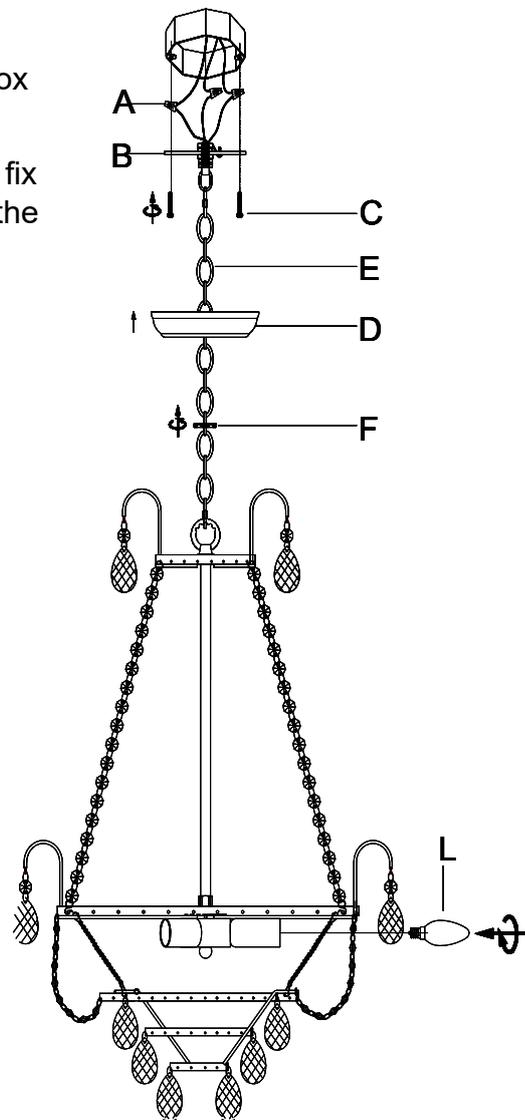

**PLEASE USE TYPE "B" BULB MAX 40-WATT OR CFL BULB MAX 13-WATT OR LED MAX 9-WATT
THERE ARE 3*4W LED BULBS IN THE BOX.**

Step 5

Consult a qualified electrician to ensure correct branch circuit conductor.

ENJOY YOUR LAMP