

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)











## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 40 minutes.
- \* Tools Required for Assembly : Allen Key, Screwdriver, Wooden hammer.

## CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.


### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top Panel		1X
B	Bottom Panel		1X
C	Side Panel Left		1X
D	Middle Panel		1X
E	Side Panel Right		1X
F	Back Panel		2X
G	Shelf		2X
H	Leg		5X
I	Left Door		1X
J	Right Door		1X



**Model# MED2200**

**Product Dimensions: 53.1"W x 15.7"D x 29.5"H**

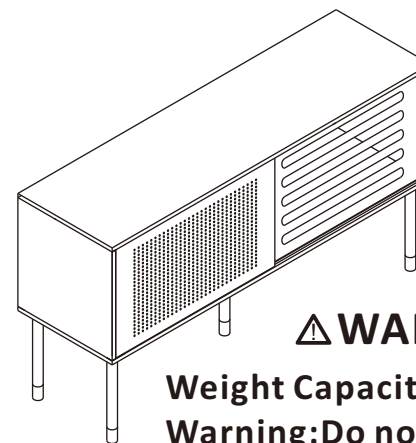

















### ⚠ WARNING ⚠

**Weight Capacity: 50 lbs.**


**Warning: Do not stand on TV Stand.**

**Warning: Do not over torque bolts.**


PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	Cambolt M6 x 45 mm		6X
HW2	Camlock		6X
HW3	Dowel		12X
HW4	Screw M5 x 45 mm		6X
HW5	Screw M5 x 14 mm		20X
HW6	Wedge		8X
HW7	Screw M3.5 x 18 mm		8X
HW8	Bolt		8X
HW9	Door Holder		4X
HW10	Door Wheel		4X
HW11	Screw M4 x 14 mm		24X
HW12	Screw M4 x 12 mm		2X
HW13	Screw M4 x 40 mm		2X
HW14	Cloth Strap		2X
HW15	Washer		4X
HW16	Plastic Screw Anchor		2X

## PREPARATION


- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 40 minutes.
- \* Tools Required for Assembly : Allen Key,Screwdriver,Wooden hammer.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

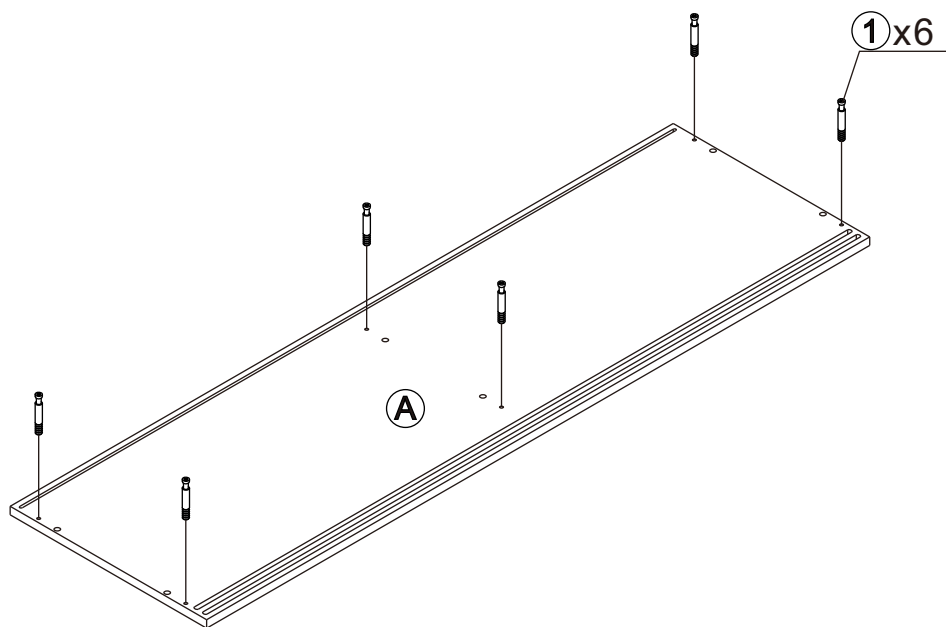


**STEP1:**Install HW① on part①.

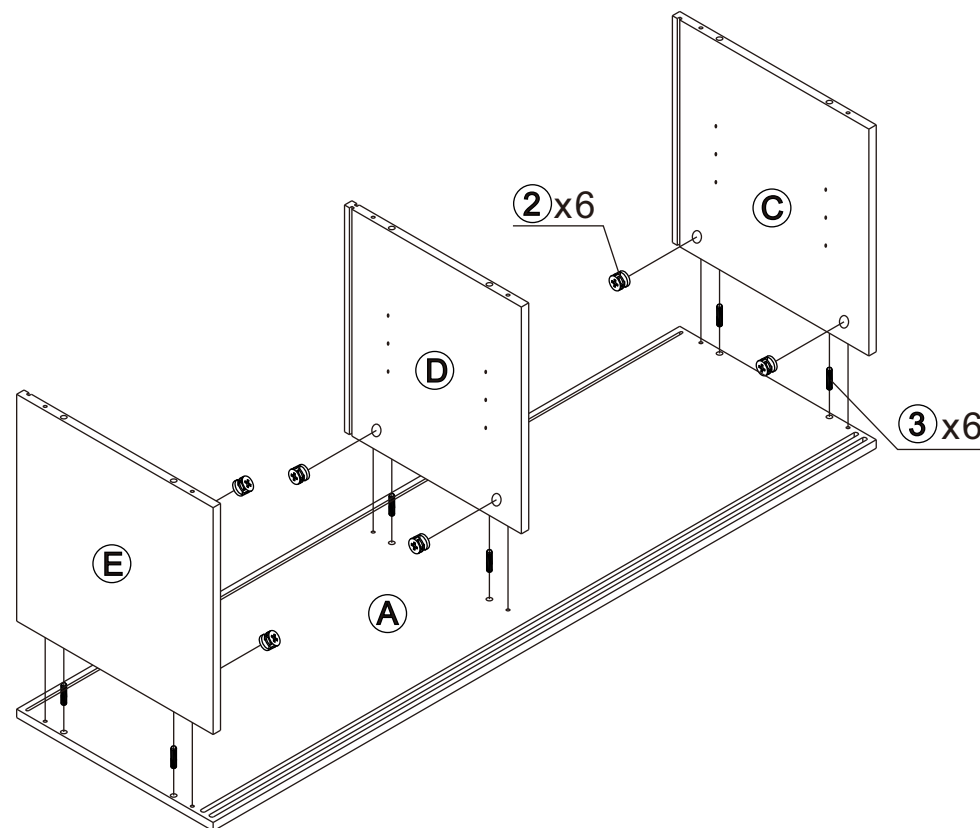


**STEP2:**Insert HW③ in part①,insert HW② in part③,④,⑤,  
Attach part③,④,⑤ to ①,fasten HW② to install them together.

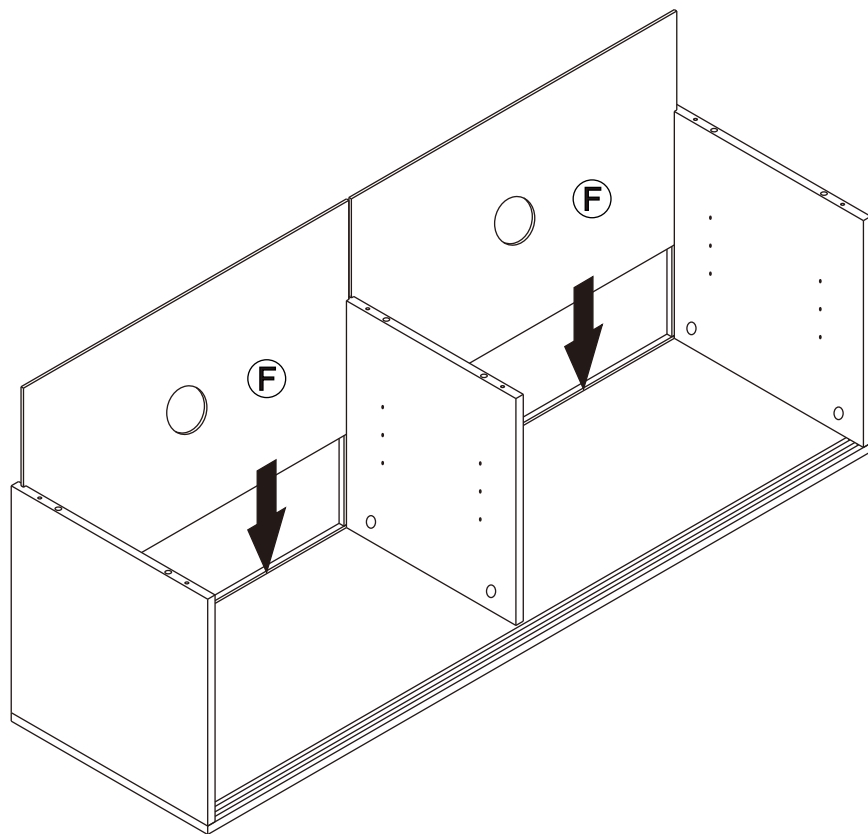


**STEP3:**Insert partⒻ in the frame of partⒶ,Ⓒ,Ⓓ,Ⓔ.

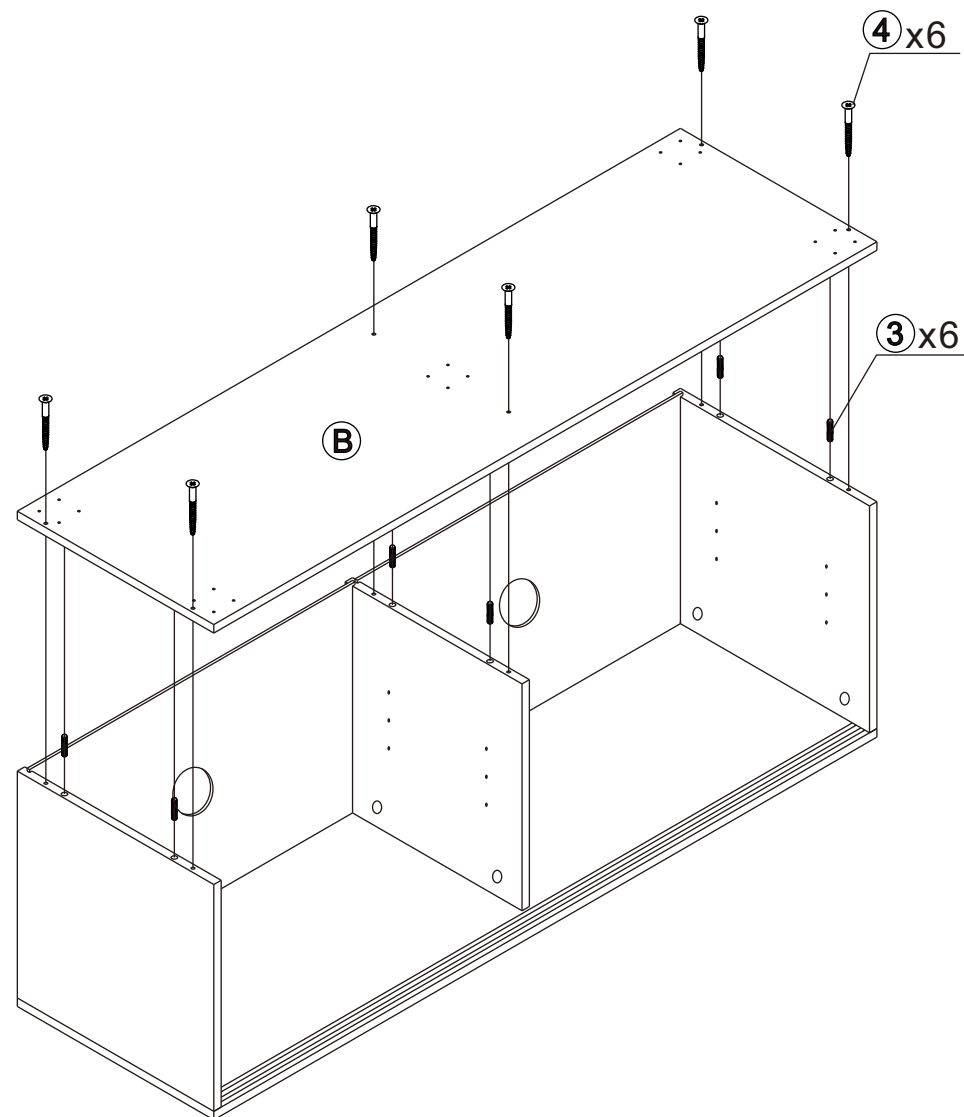


**STEP4:**Insert HWⒹ in partⒸ,Ⓓ,Ⓔ, use HWⒺ to install partⒼ on Ⓒ,Ⓓ,Ⓔ.

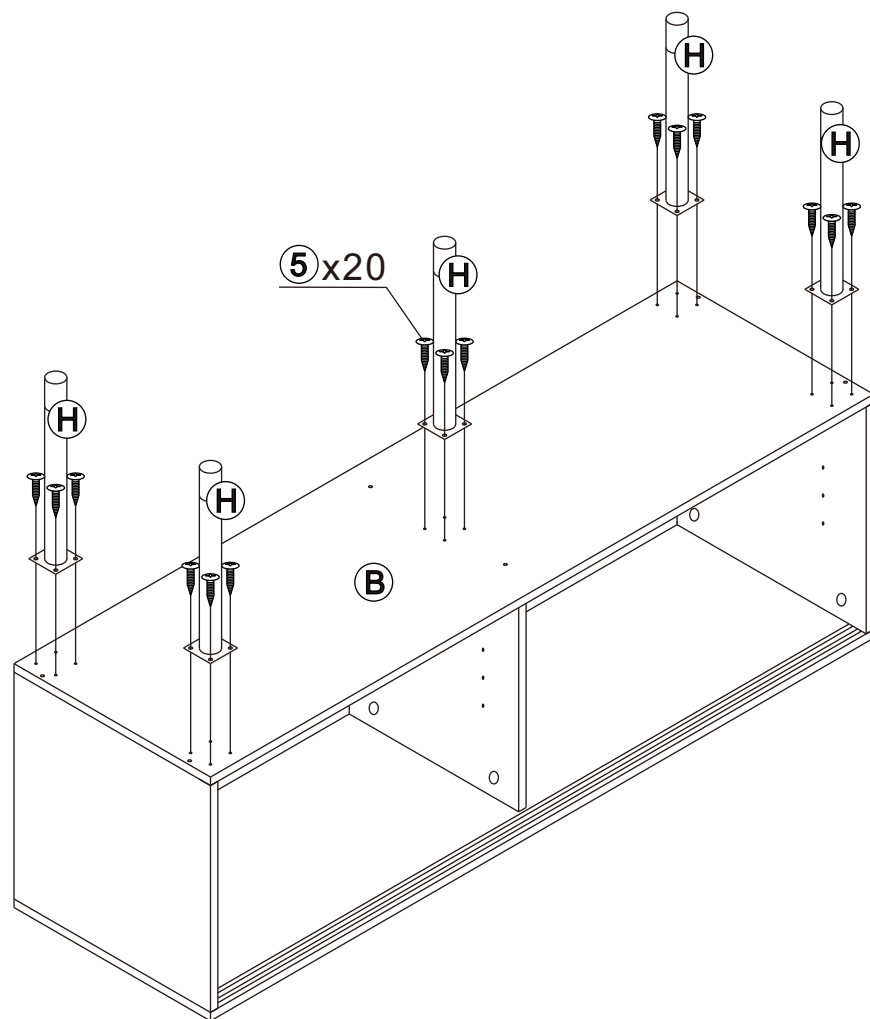


**STEP5:**Use HW⑤ to install part④ on ③.

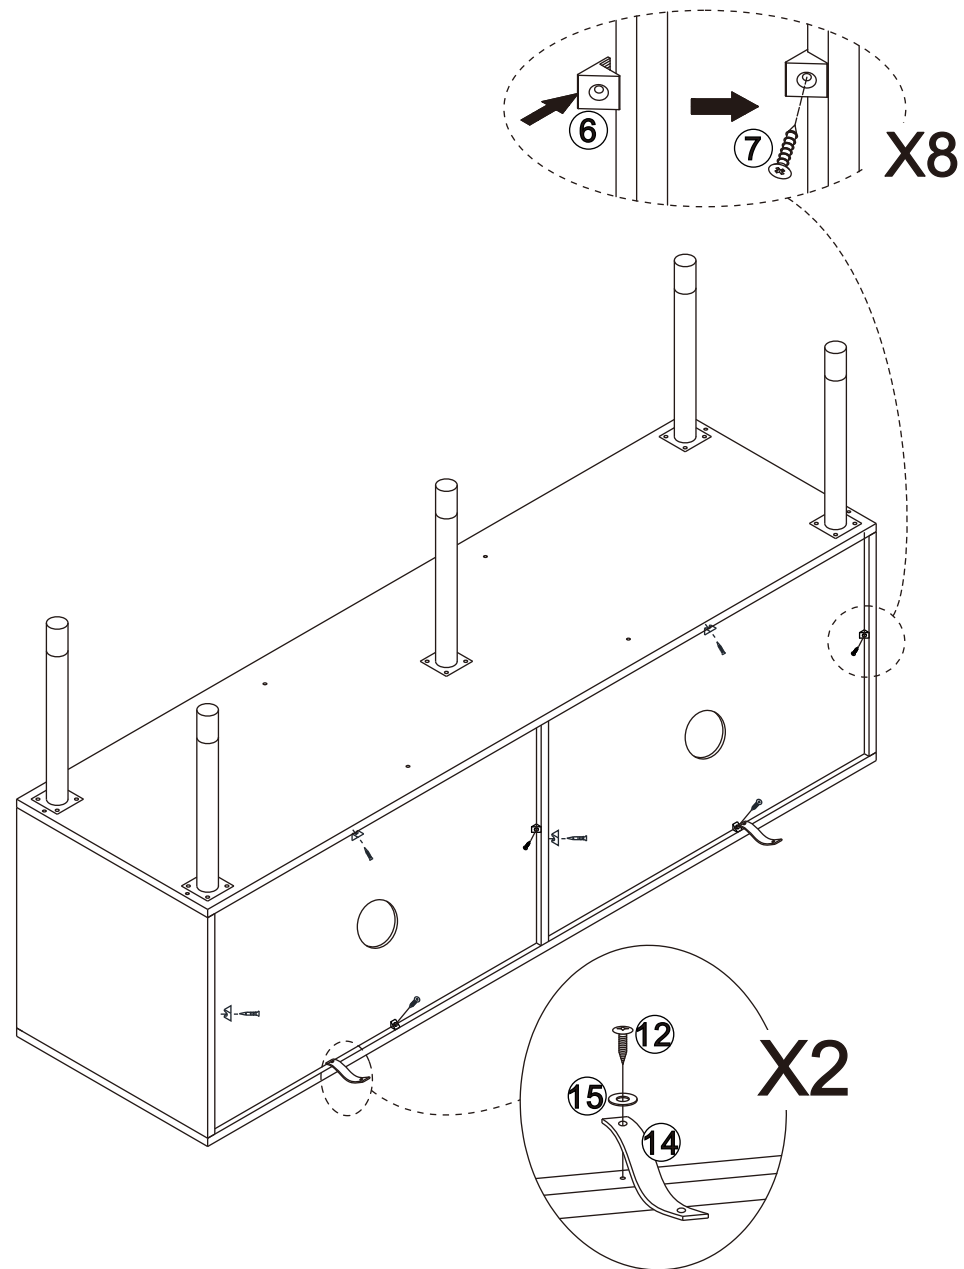


**STEP6:**Insert HW⑥ in the gap behind part④, use HW⑦ to install HW⑥.  
Use HW⑫,⑮ to install one end of HW⑭ on part③.

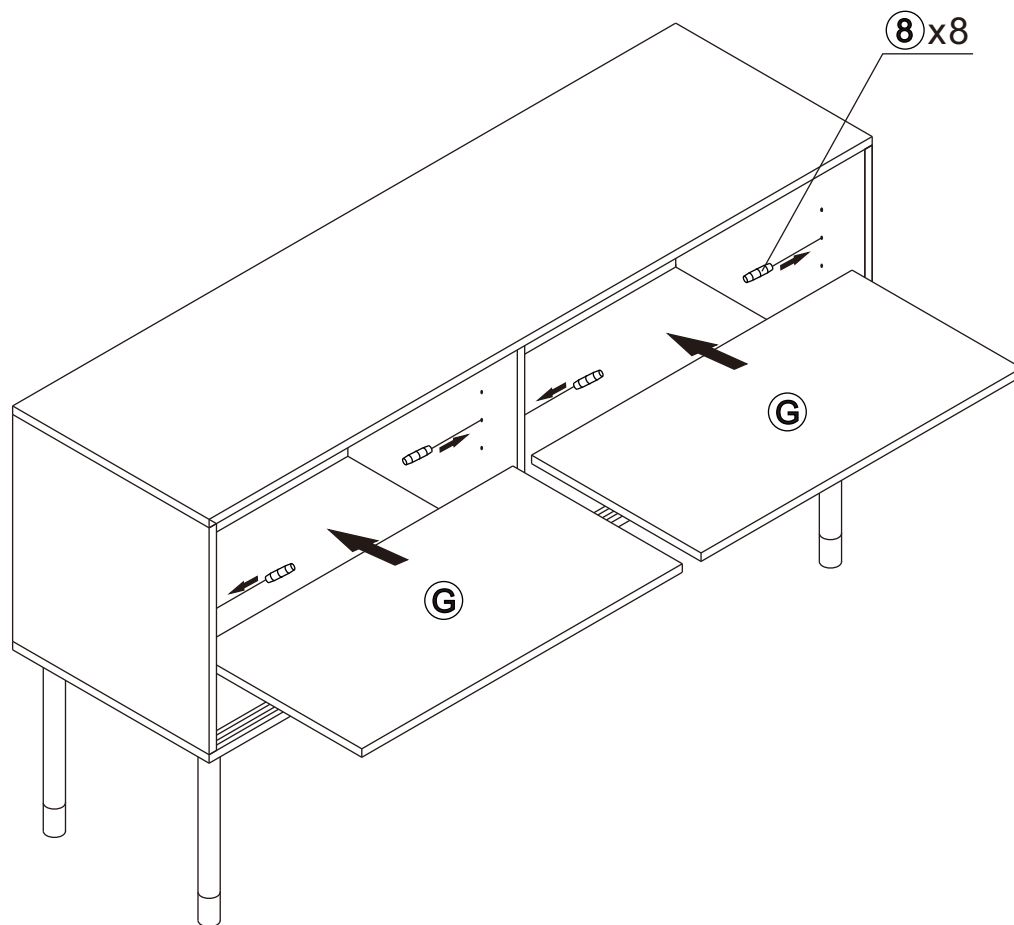


**STEP7:** Install HW(8) on part(C),(D),(E).  
Put part(G) on HW(8).

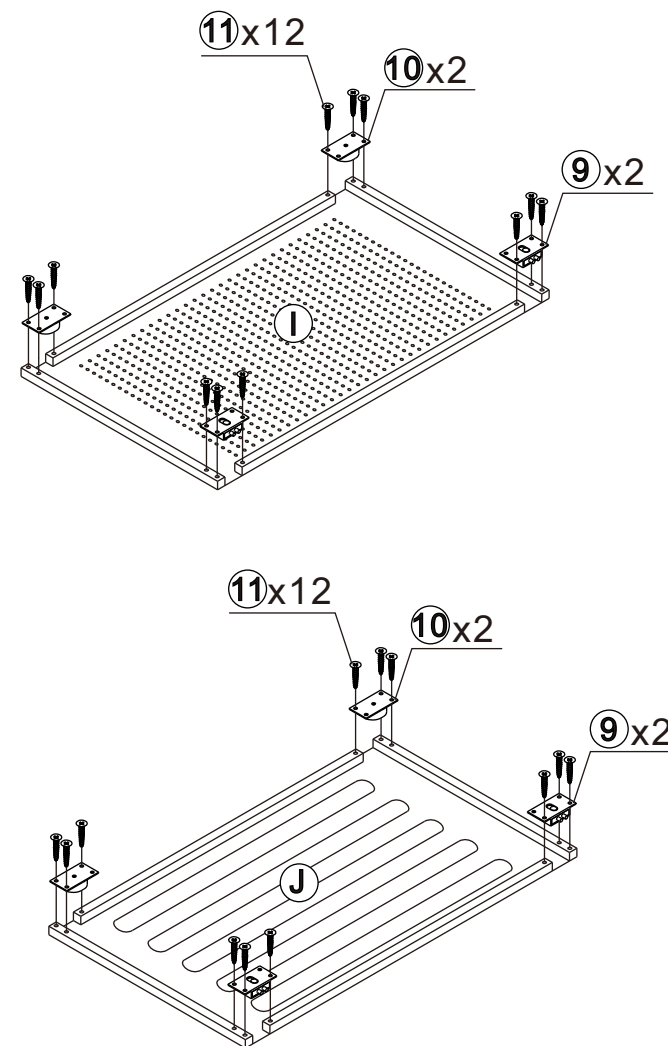


**STEP8:** Use HW(11) to install HW(9),(10) on part(I),(J).

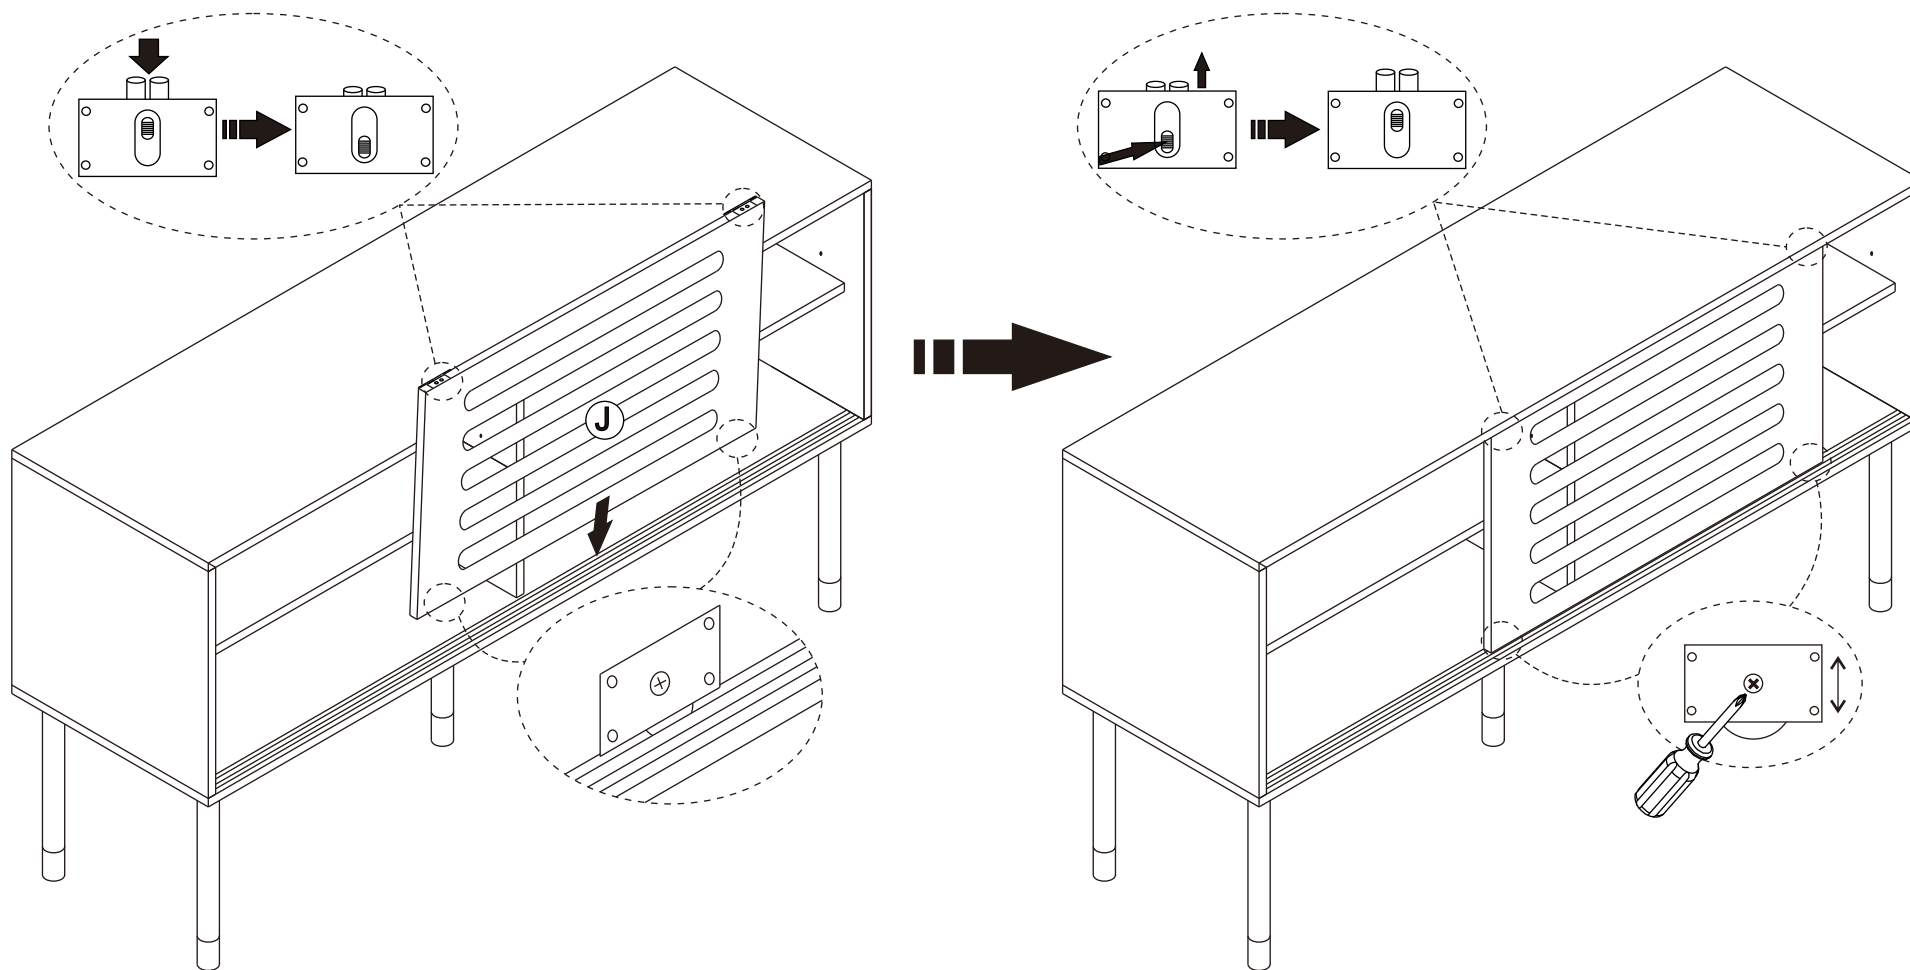


**STEP9:** Push down the middle button of HW⑨, install part J between part A and B,  
Push up the middle button of HW⑨, use screwdriver to fasten the screw at the middle of part ⑩.

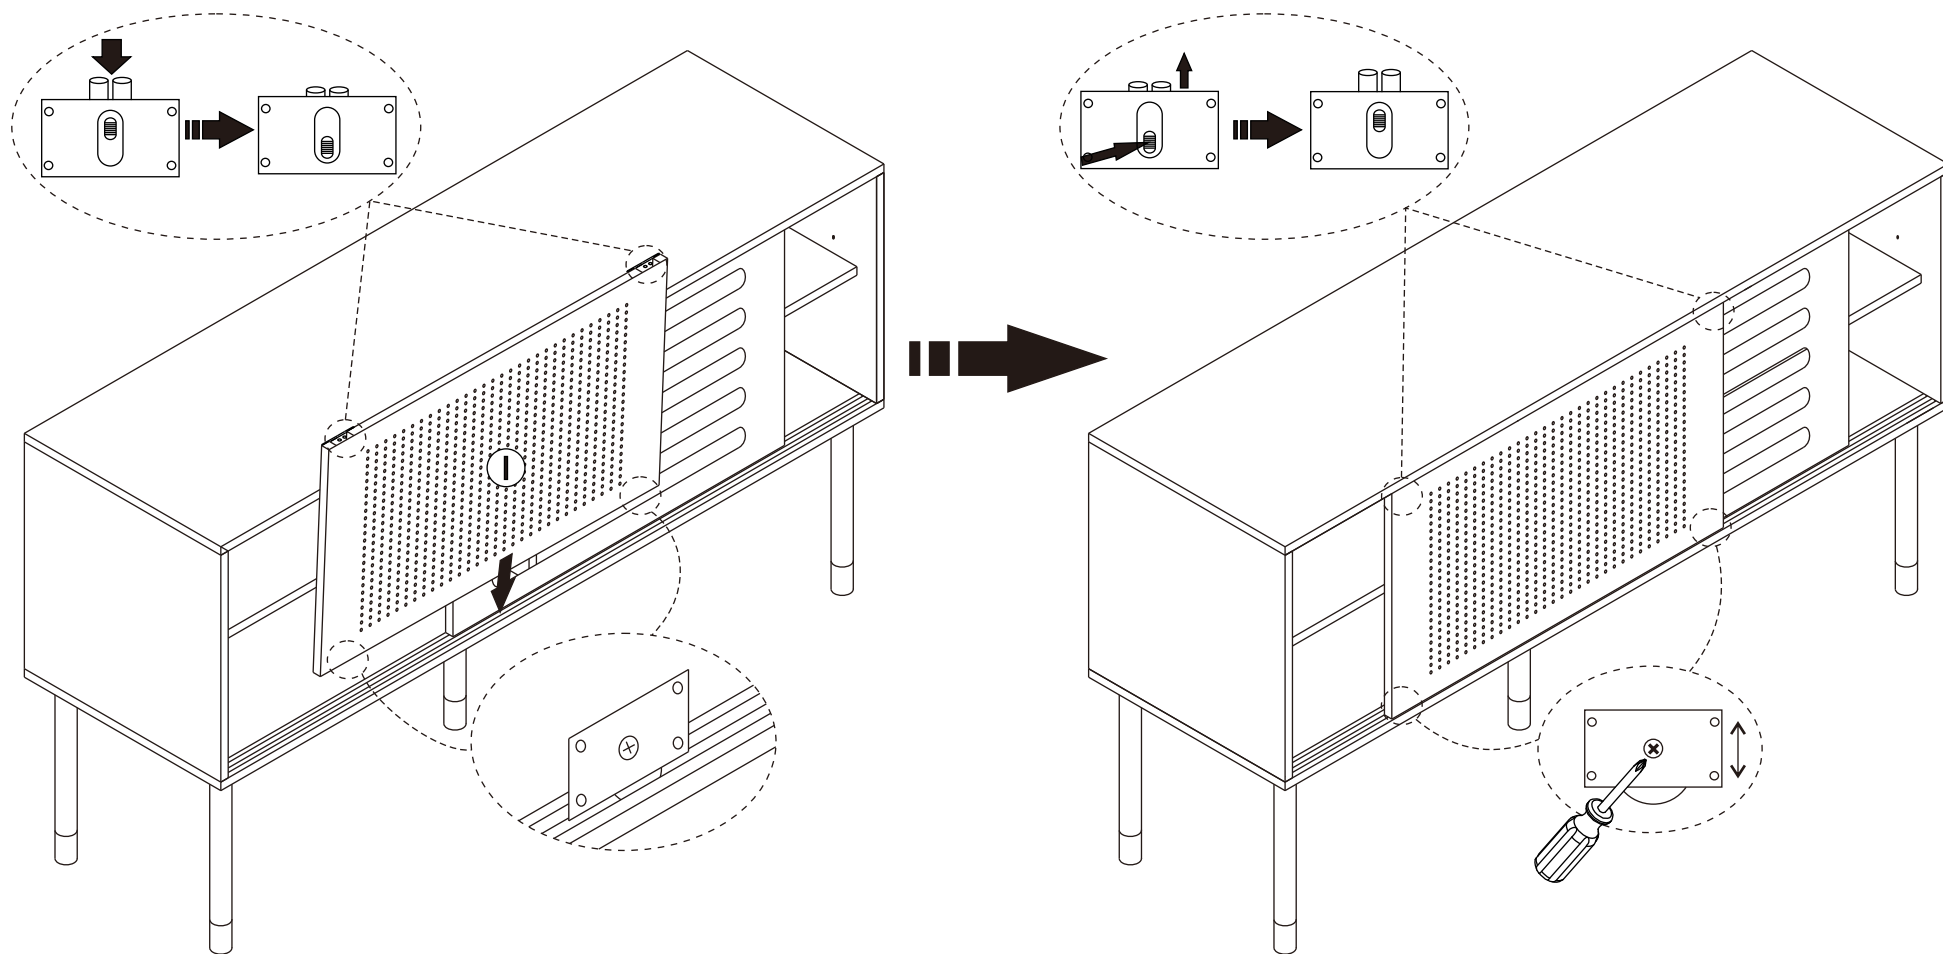

**STEP10:** Push down the middle button of HW⑨, install part① between part① and ②,  
Push up the middle button of HW⑨, use screwdriver to fasten the screw at the middle of part⑩.

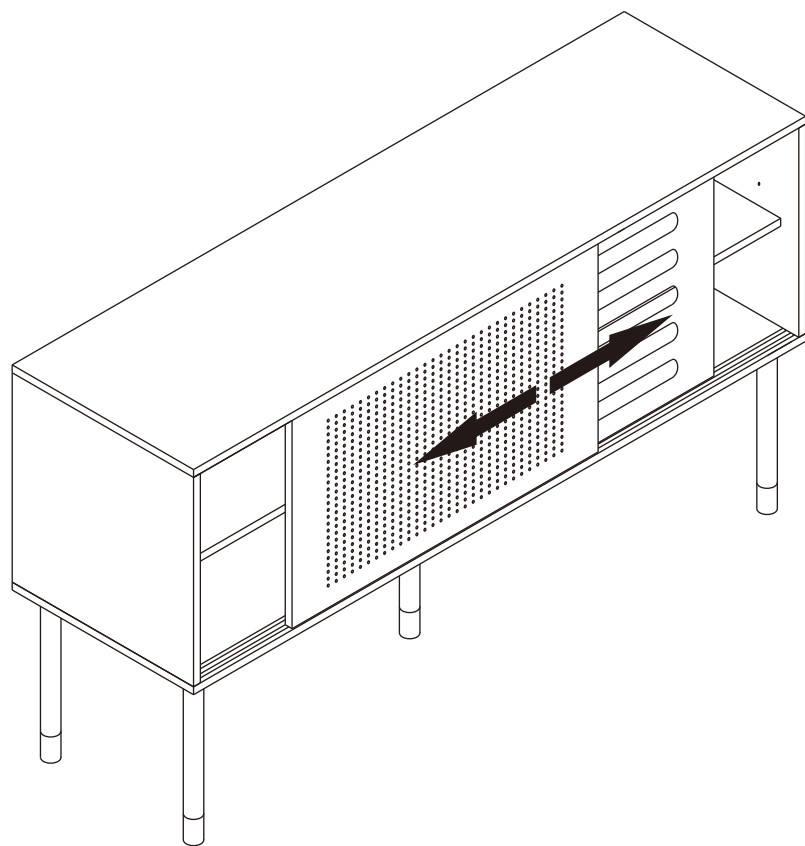

**STEP11:**Test the sliding function of part ①, ④.

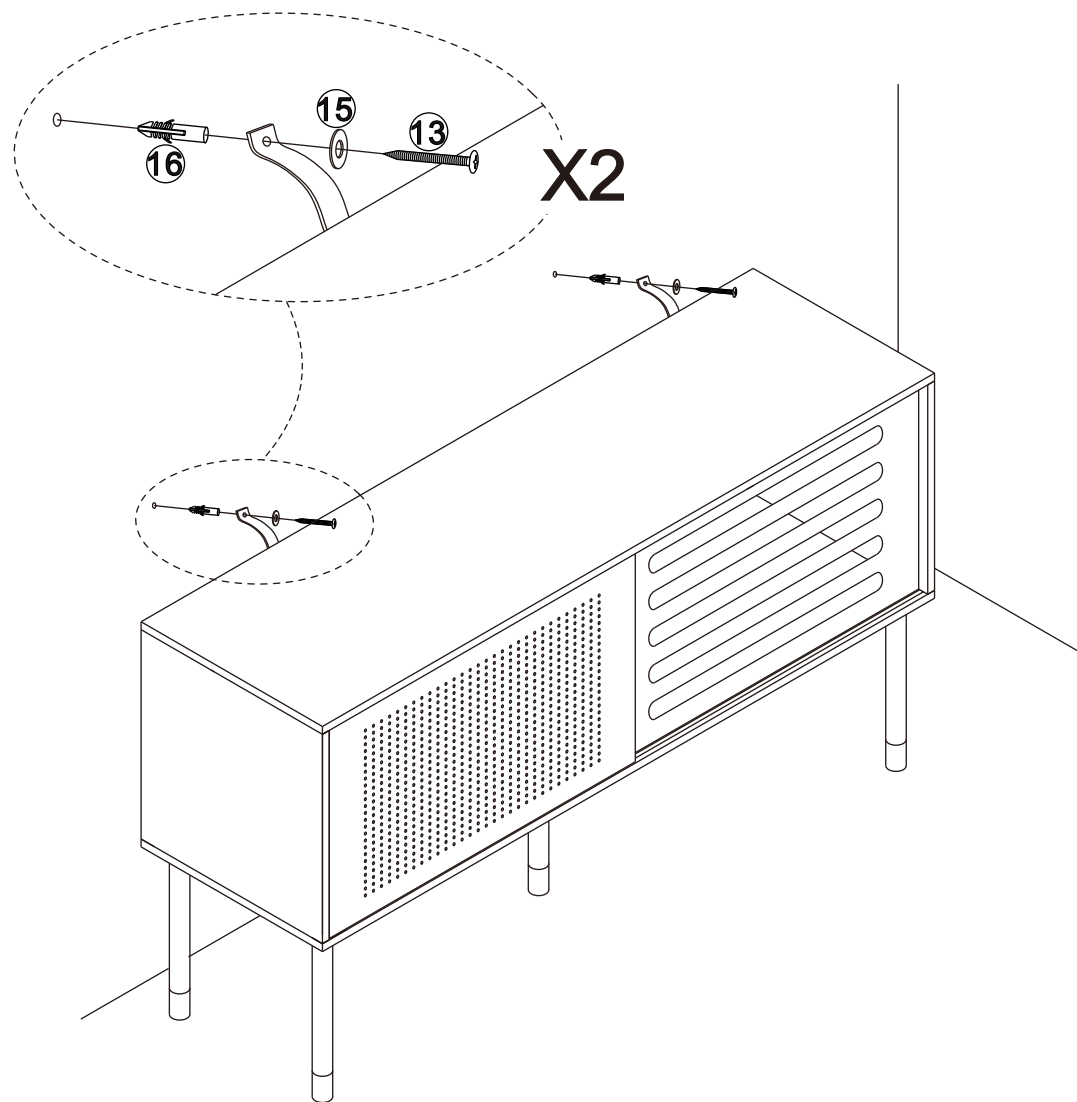

**STEP12:**Drill a hole on wall, insert HW ①⑥ in the hole,  
Use HW ①③, ①⑤ to install the another end of HW ①④ on wall.