

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (not included): Screwdriver

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

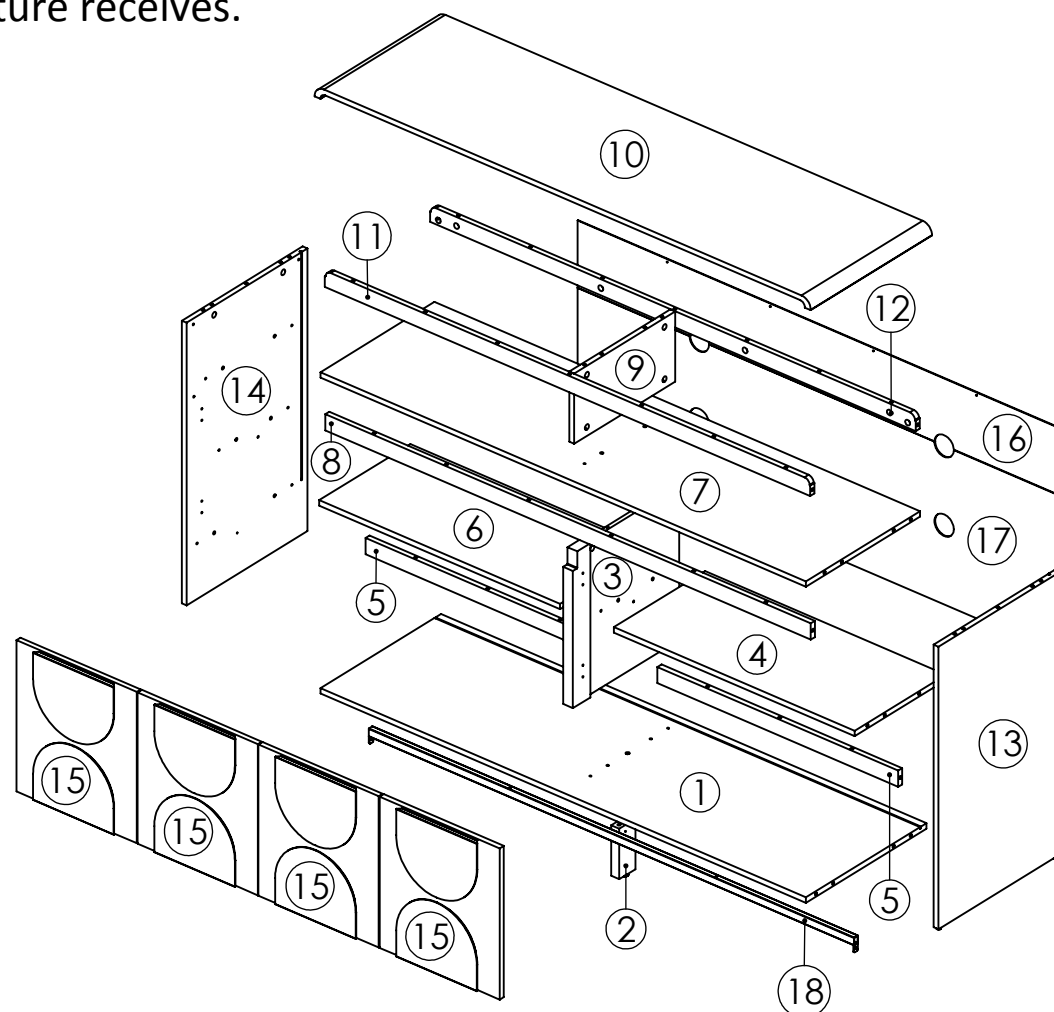

 **SAFAVIEH**
FURNITURE

Model# MED3101

Product Dimensions: W 60.67" x D 17.72" x H 32.24"

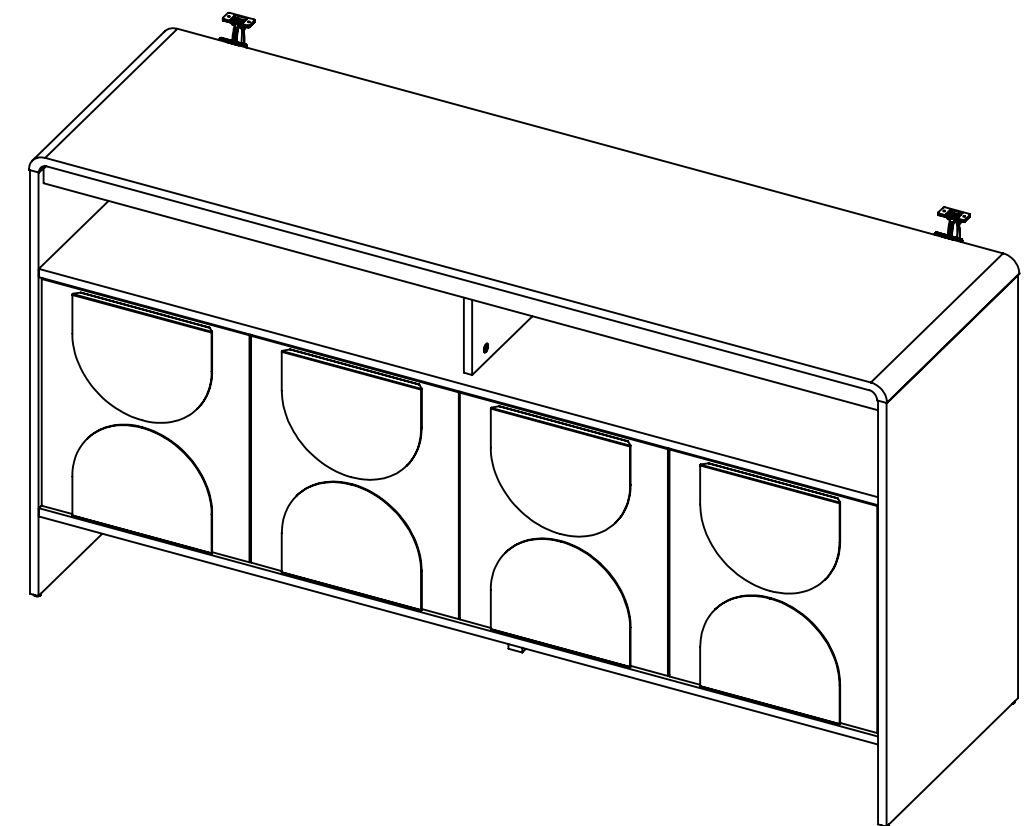

WARNING :

This product is intended for use with a
FLAT SCREEN TV ONLY










Maximum Screen Size: 65 inches

Weight Limit: 72 lbs

Shelf Load Limit: 30 lbs

Use with heavier televisions may result
in instability causing tip over resulting in
death or Serious injury.

Hardware List

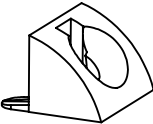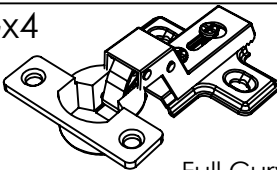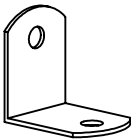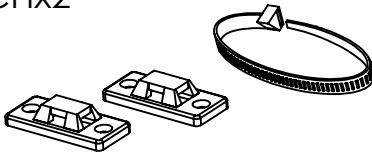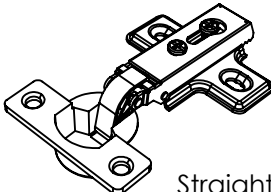Ax48  Ø6x32 MM	Bx46  Ø15x12 MM	Cx41  Ø8x32 MM	Dx3  Ø6x50 MM	Ex2  Ø7x32 MM	Fx4  Ø6x15 MM
Gx4  Ø6x12 MM	Hx11  Ø4x19 MM	Ox11 	Sx44 S (OAK) S1 (WALNUT) S2 (BLACK)  Ø20 MM	AFx4  Ø6x30 MM	AGx4  Full Curve Hinge
AJx2  Ø15x9.6 MM	ATx6  Ø6x12 MM PH	AVx2  Plate L	CBx32  Ø5x12 MM	CHx2 	Clx4  Straight Hinge
CPx1  List "H" 1506MM					


Part List & HW

Piece	Description	Qty	Carton Call
1	Bottom Panel	1	1 Of 2
2	Leg	1	2 Of 2
3	Center Panel - Lower	1	2 Of 2
4	Right Fixed Shelf	1	2 Of 2
5	Fixed Shelf Support	2	2 Of 2
6	Left Fixed Shelf	1	2 Of 2
7	Panel Fixed Shelf	1	1 Of 2
8	Plinth Support Fixed	1	1 Of 2
9	Center Panel - Upper	1	2 Of 2
10	Top Panel	1	1 Of 2
11	Front Top Frame	1	1 Of 2
12	Back Top Frame	1	1 Of 2
13	Right Side Panel	1	2 Of 2
14	Left Side Panel	1	2 Of 2
15	Door Panel	4	2 Of 2
16	Upper Back Panel	1	1 Of 2
17	Lower Back Panel	1	1 Of 2
18	Metal Support	1	1 Of 2


Piece	Description	Qty	Carton Call
A	Cambolt	44	2 Of 2
B	Camlock Ø15x12 mm	42	2 Of 2
C	Wooden Dowel Ø8	43	2 Of 2
D	Screw M 6 x 50 mm	3	2 Of 2
E	Screw M 7 x 32 mm	2	2 Of 2
F	Screw M 6 x 15 mm	4	2 Of 2
G	Screw M 6 x 12 mm	6	2 Of 2
H	Screw M 4 x 19 mm	11	2 Of 2
O	Plastic Stopper	11	2 Of 2
S	Cover Cap Sticker	44	2 Of 2
AF	Wooden Dowel Ø6	4	2 Of 2
AG	Full Curve Hinge	4	2 Of 2
AJ	Camlock Ø15x10 mm	2	2 Of 2
AT	Screw M 6 x 12 mm PH	4	2 Of 2
AV	Plate L	2	2 Of 2
CB	Screw M 5 x 12 mm	32	2 Of 2
CH	Anti-tip	2	2 Of 2
CI	Straight Hinge	4	2 Of 2
CP	List "H"	1	1 Of 2

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 90 minutes.

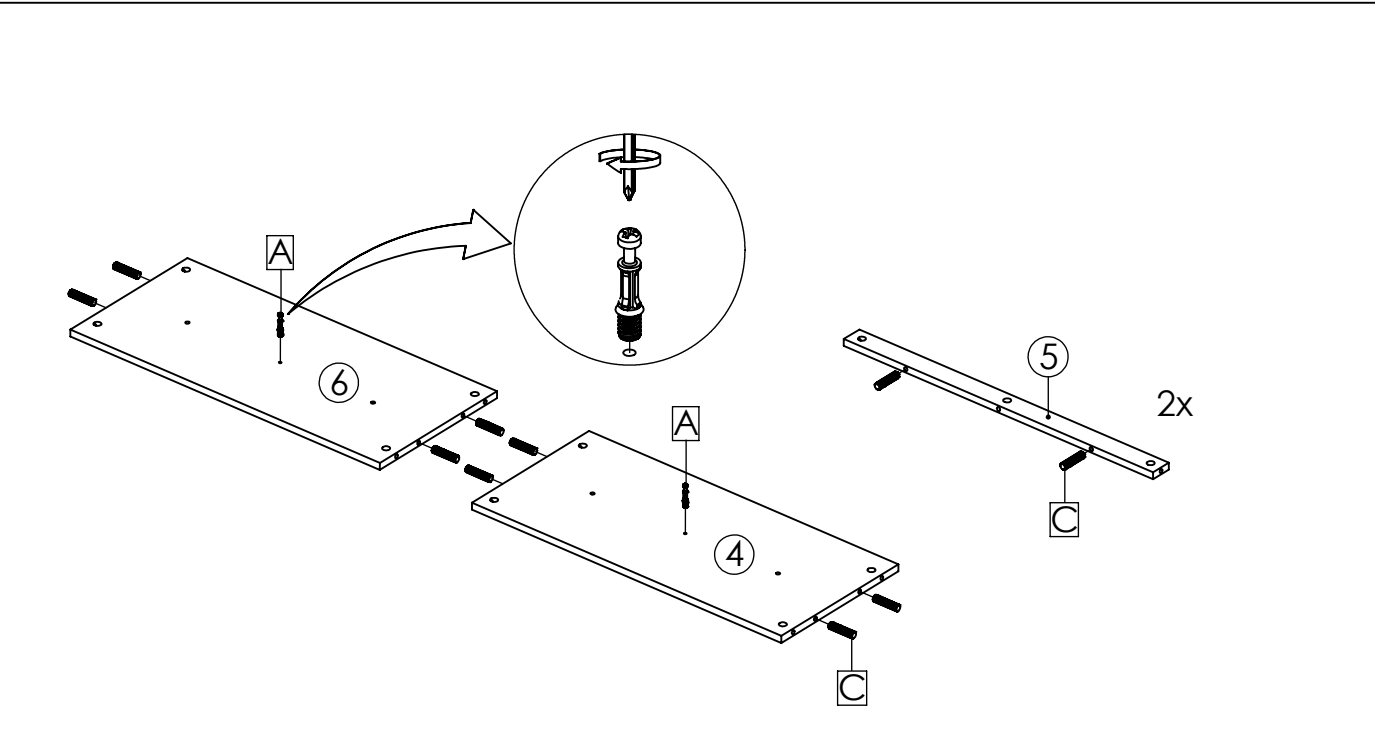


STEP1:Insert Wooden Dowel (C) into Right Fixed Shelf (4), Fixed shelf Support (5) and Left Fixed Shelf (6). Insert Cambolt (A) Into Right Fixed Shelf (4) and Left Fixed Shelf (6).

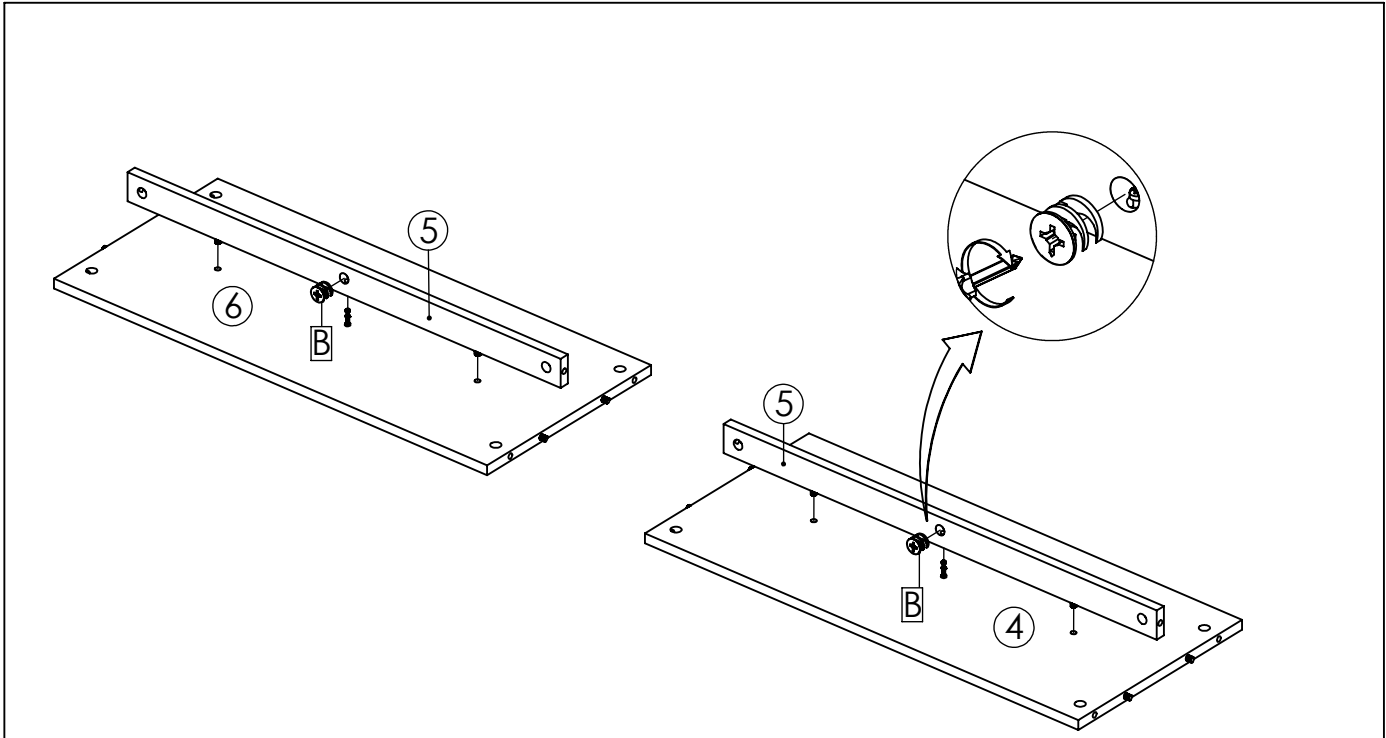


STEP2: Attach Fixed Shelf Support (5) Into Right Fixed Shelf (4) and left Fixed Shelf (6), Secure with Camlock (B) tighten it using screwdriver.

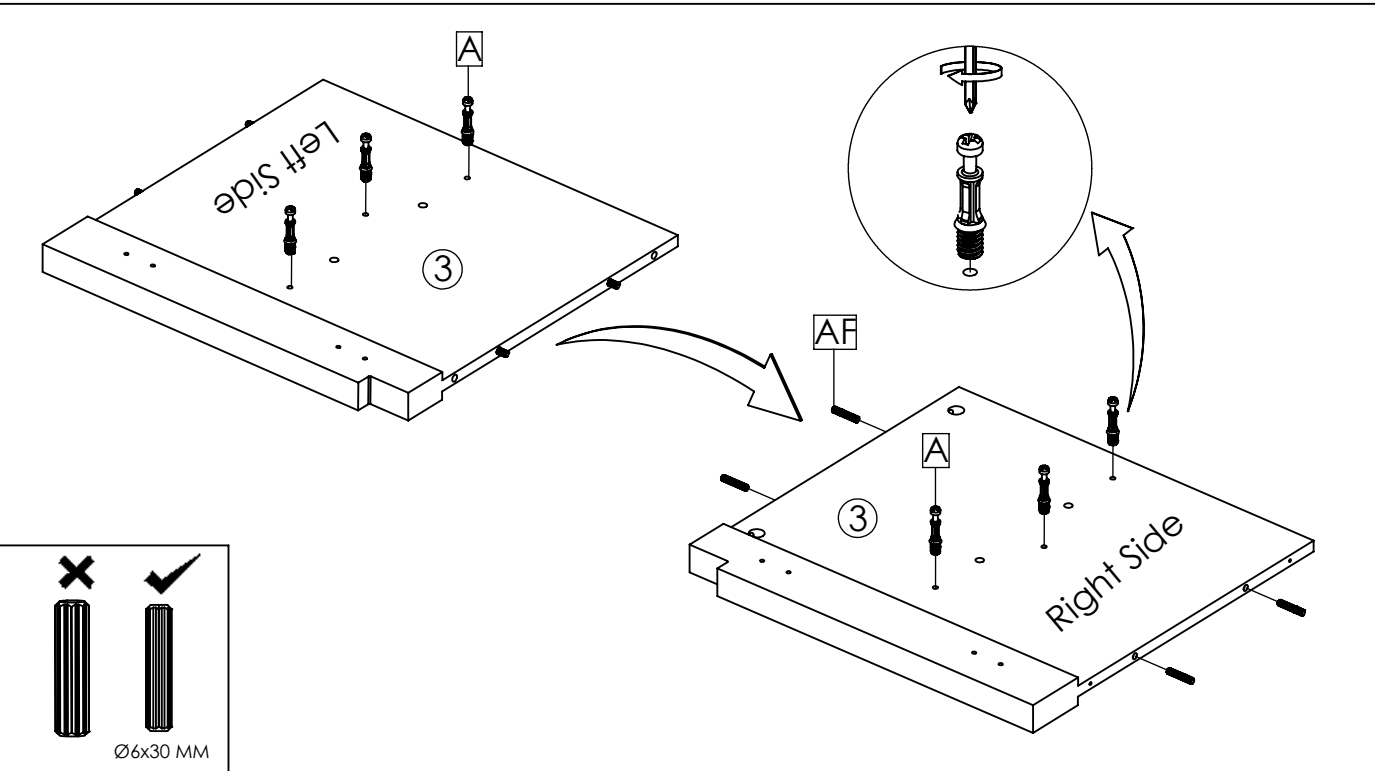


STEP3: Insert Cambolt (A) Into Center Panel - Lower (3). Insert Wooden Dowel (AF) Into Center Panel - Lower (3).

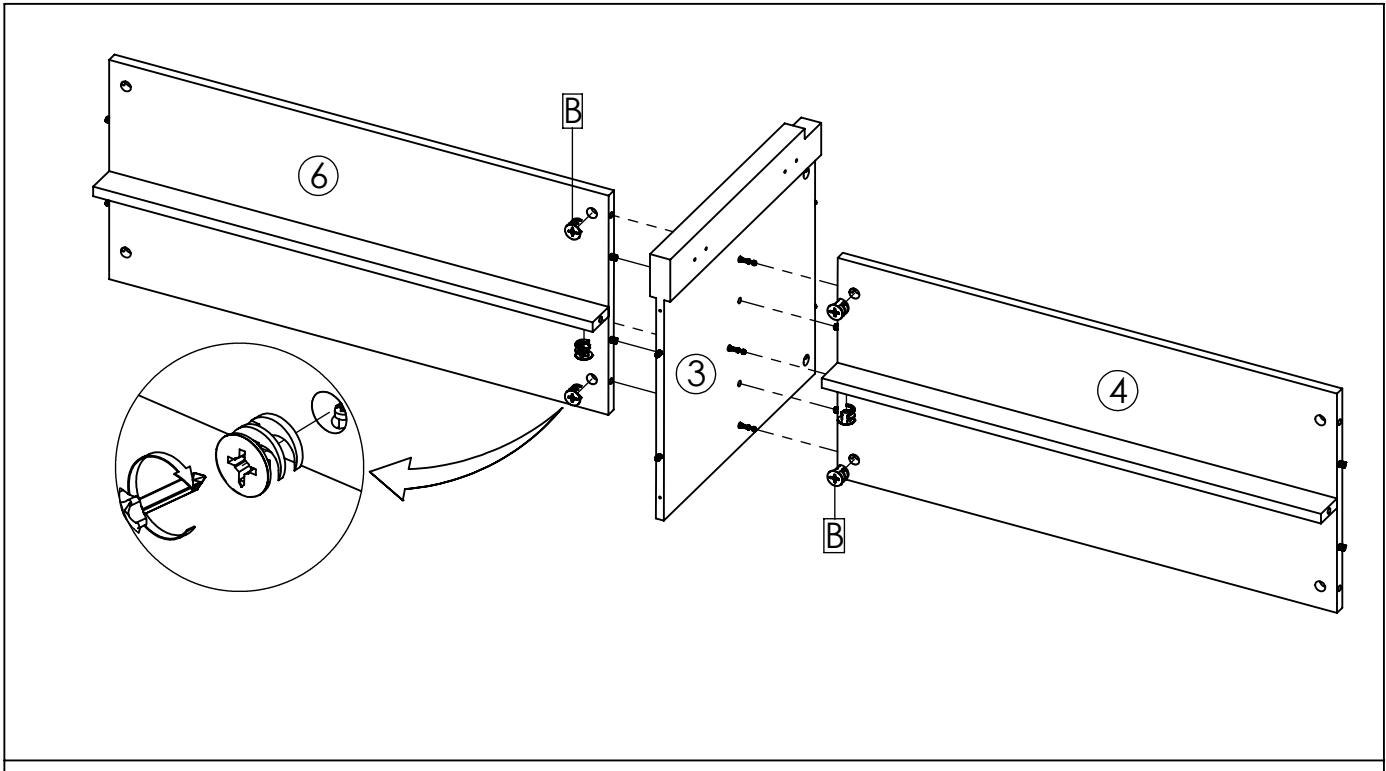


STEP4: Attach Right Fixed Shelf (4) and left Fixed Shelf (6), Into Center Panel - Lower (3). Secure with Camlock (B) tighten it using screwdriver.

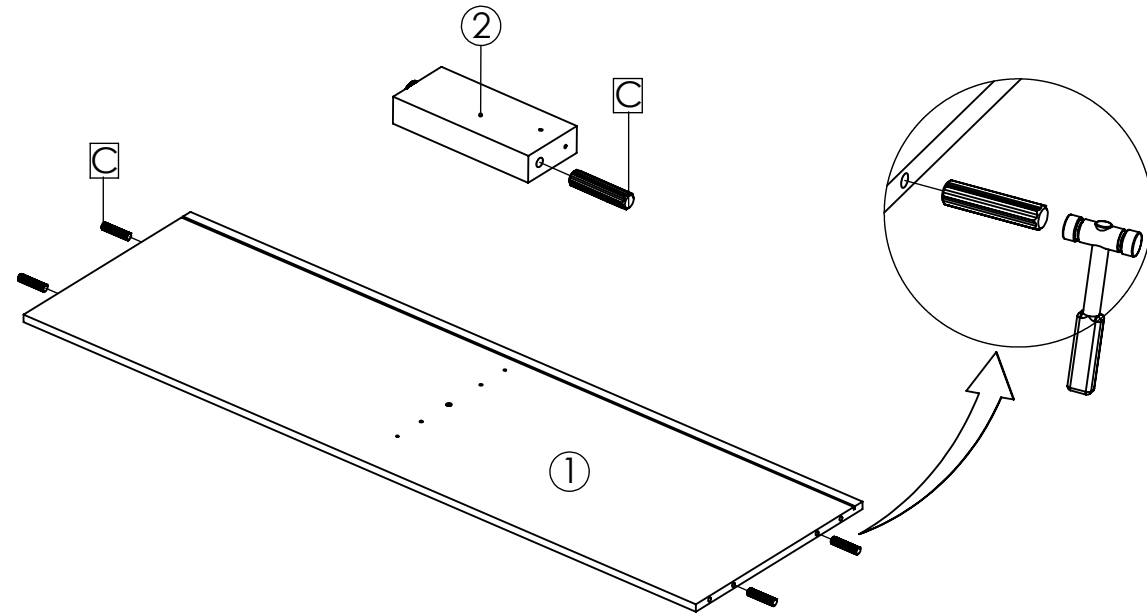


STEP5: Insert Wooden Dowel (C) into Bottom Panel (1) and Leg (2).

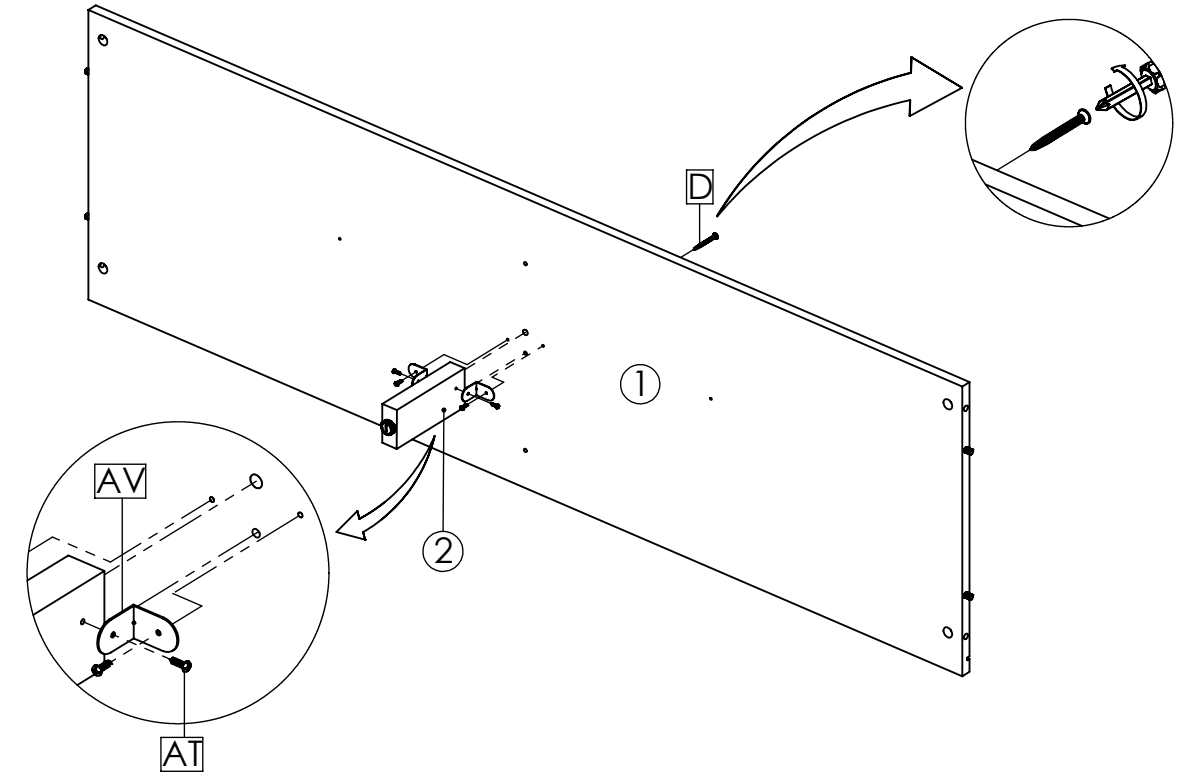


STEP6: Attach leg (2) into Bottom Panel (1) secure with screw M6x50mm (D), Continue with securing part of the Plate L (AV) into position as the above image, using screw M6x12mm PH (AT).

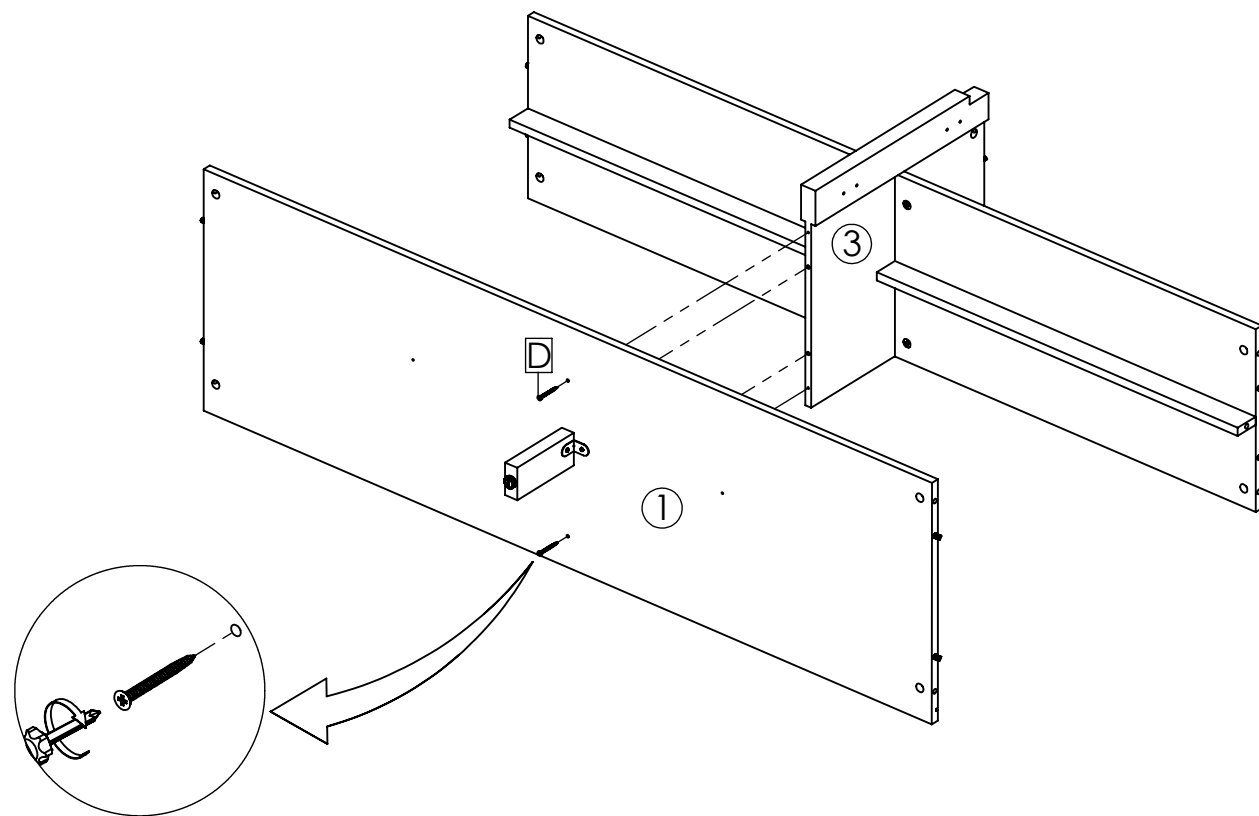


STEP7: Attach Bottom Panel (1), Into Center Panel - Lower (3). Secure with Screw M6x50mm (D).

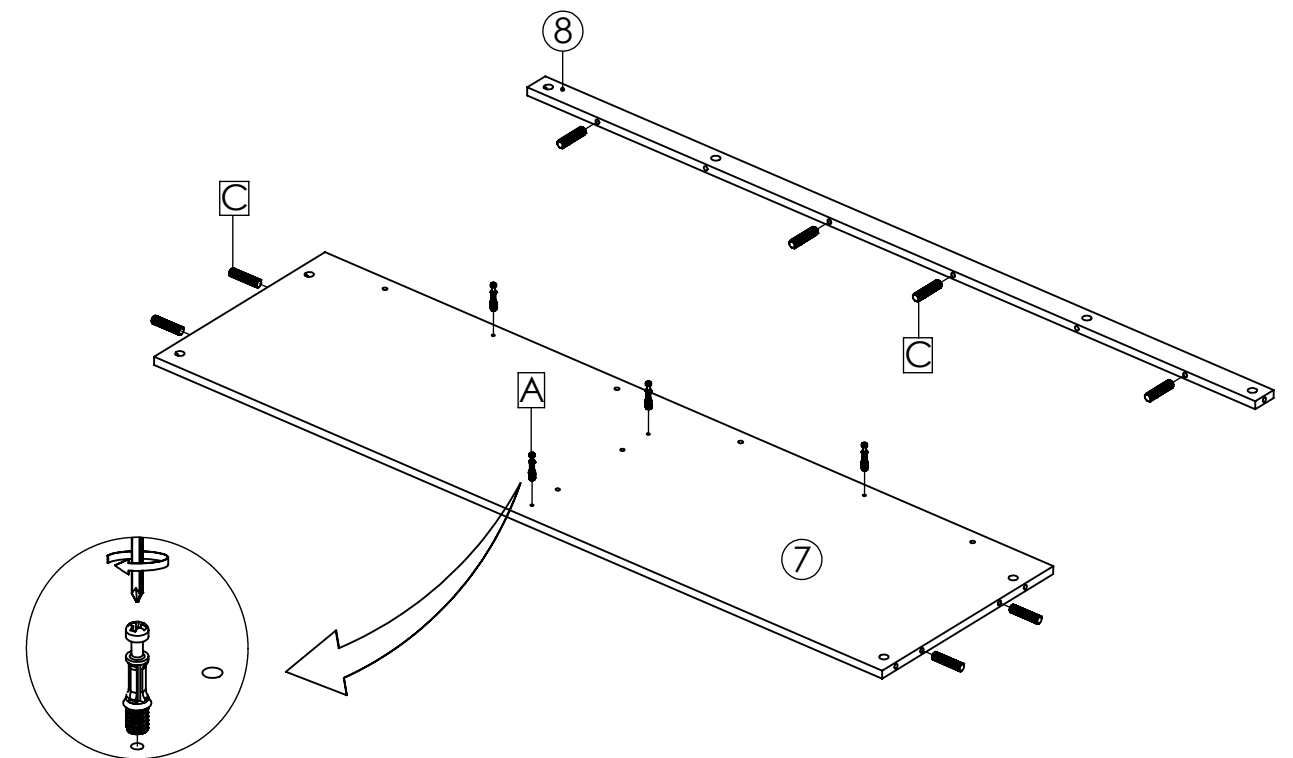


STEP8: Insert Cambolt (A) Into Panel Fixed Shelf (7). Insert Wooden Dowel (C) into Panel Fixed Shelf (7) and Plinth Support Fixed (8).

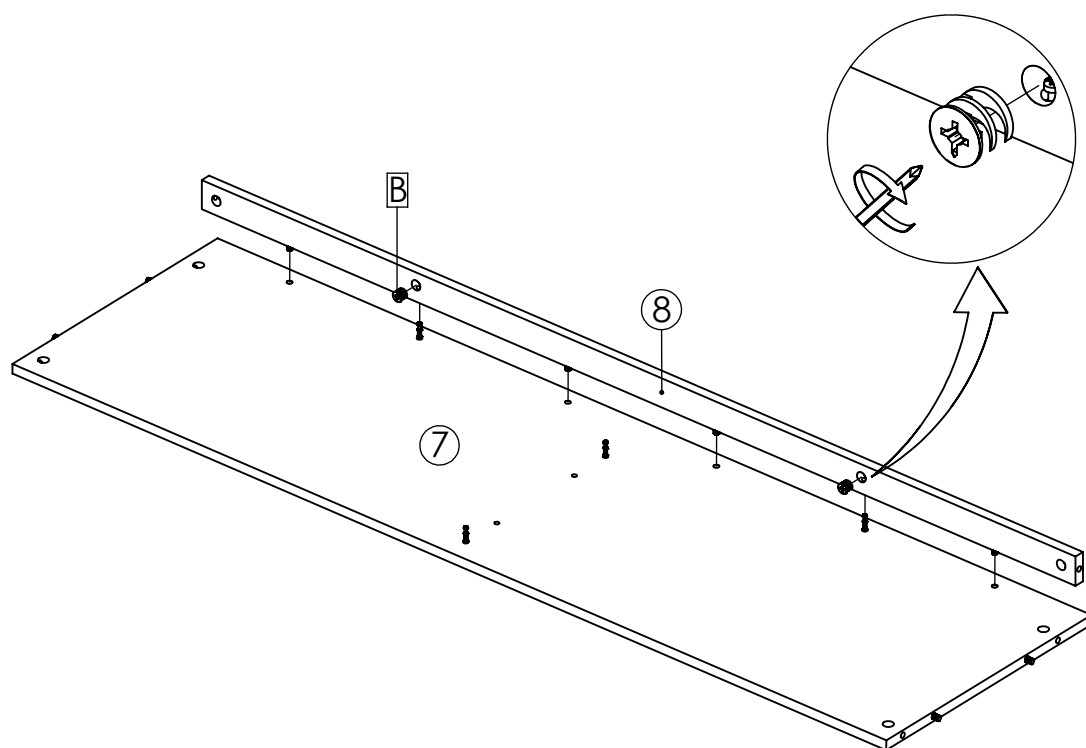


STEP9: Attach Plinth Support Fixed (8) Into Panel Fixed Shelf (7) Secure with Camlock (B) tighten it using screwdriver.

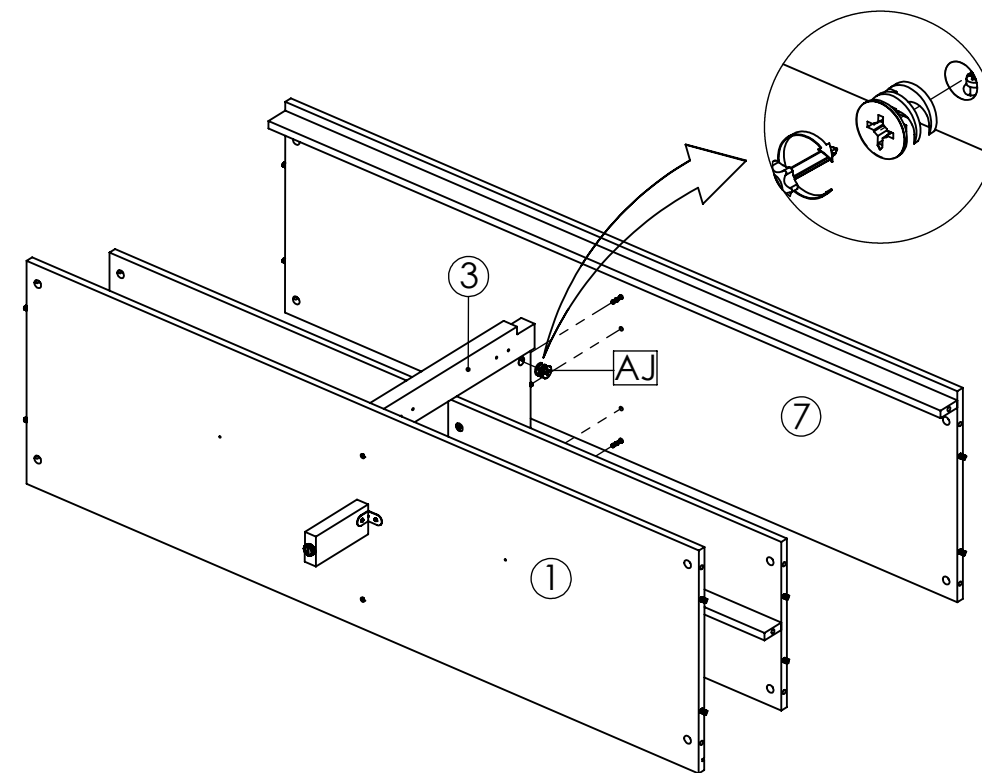


STEP10: Insert Panel Fixed Shelf (7) Into Center Panel - Lower (3), Secure with Camlock (AJ) tighten it using screwdriver.

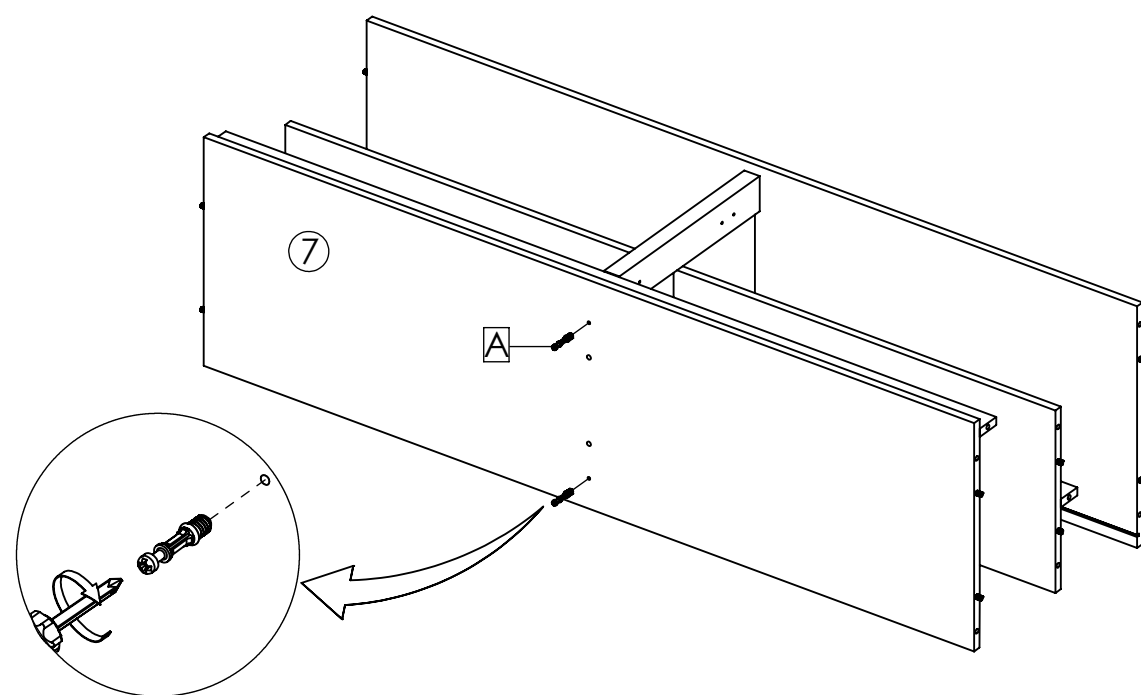


STEP11: Insert Cambolt (A) Into Panel Fixed Shelf (7).

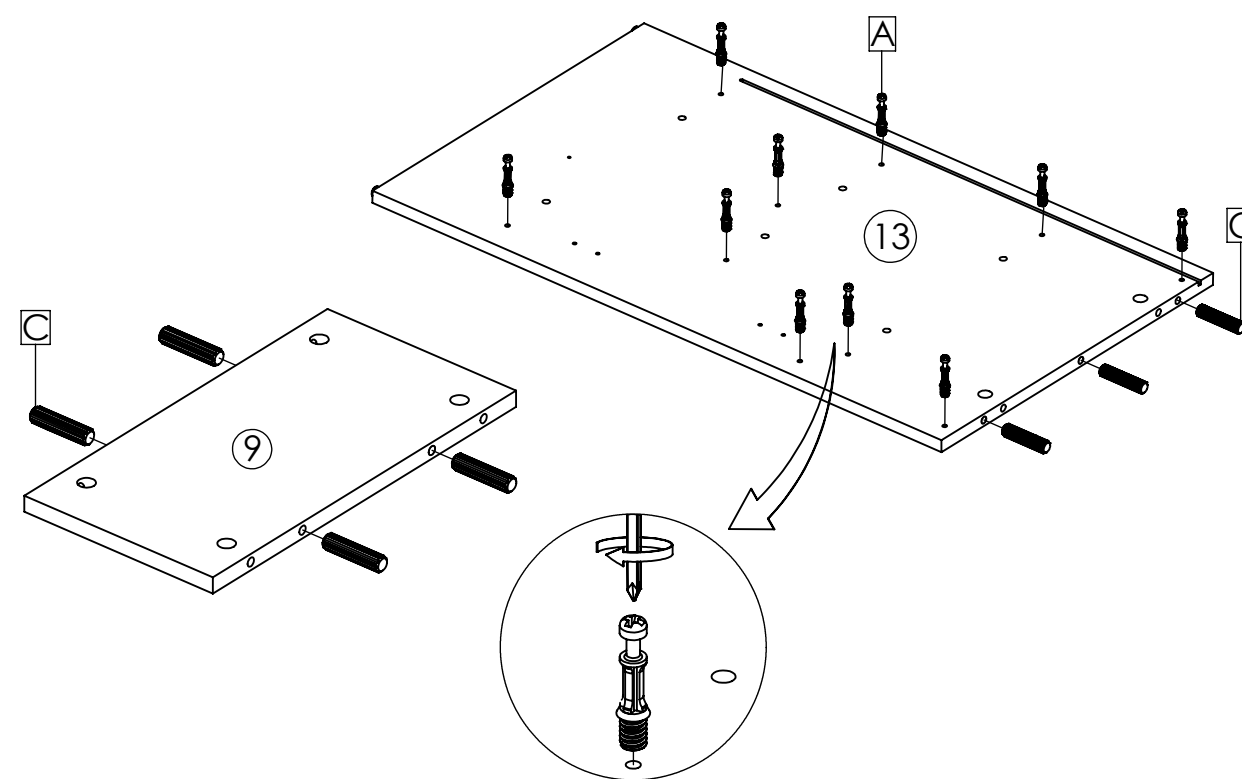


STEP12: Insert Wooden Dowel (C) Into Center Panel Upper (9), and Right Side Panel (13). Insert Cambolt (A) Into Right Side Panel (13).

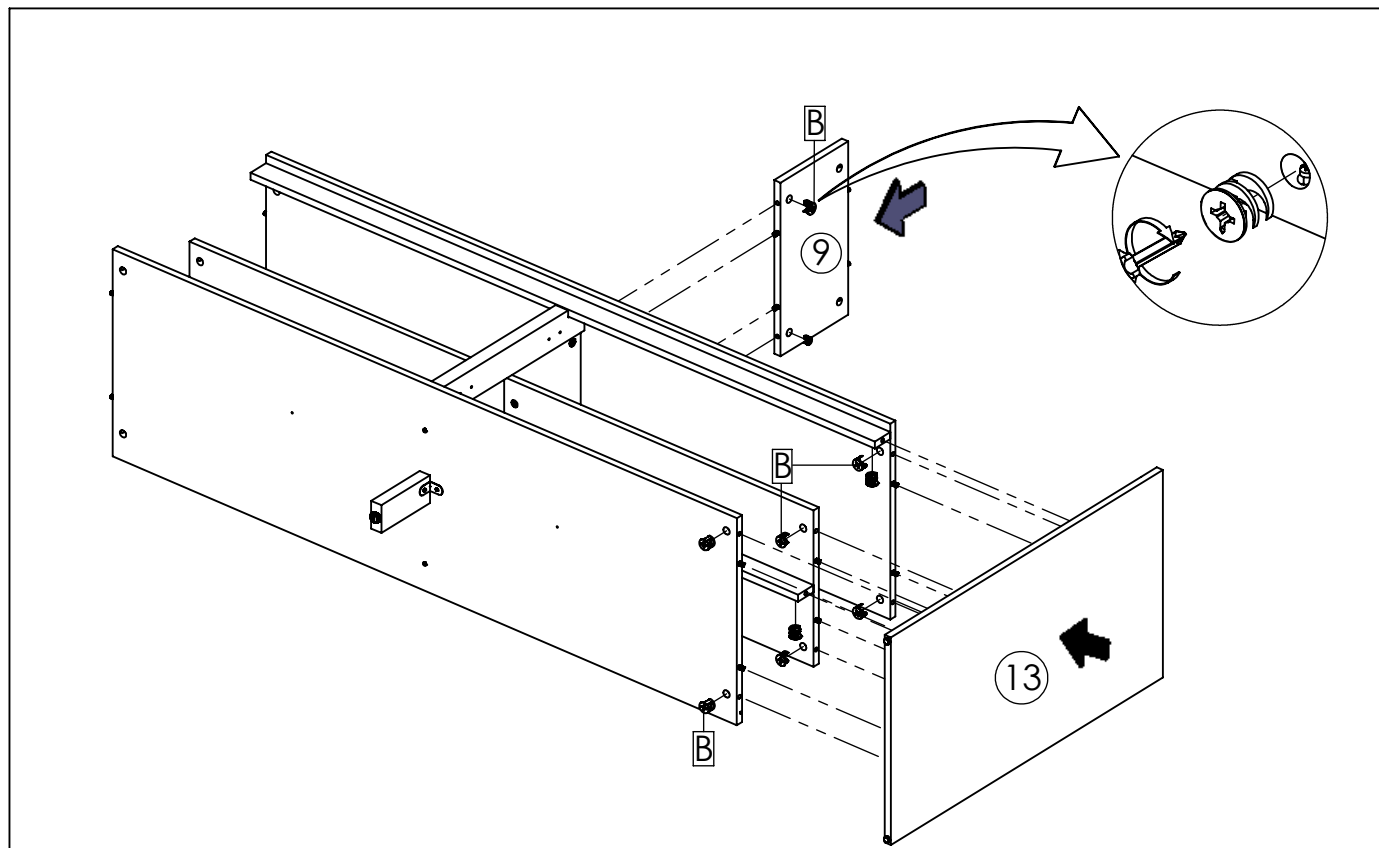


STEP13: Insert Right Side Panel (13) Secure with Camlock (B) tighten it using screwdriver. Insert Center Panel - Upper (9) Into Panel Fixed Shelf (7), Secure with Camlock (B) tighten it using screwdriver.

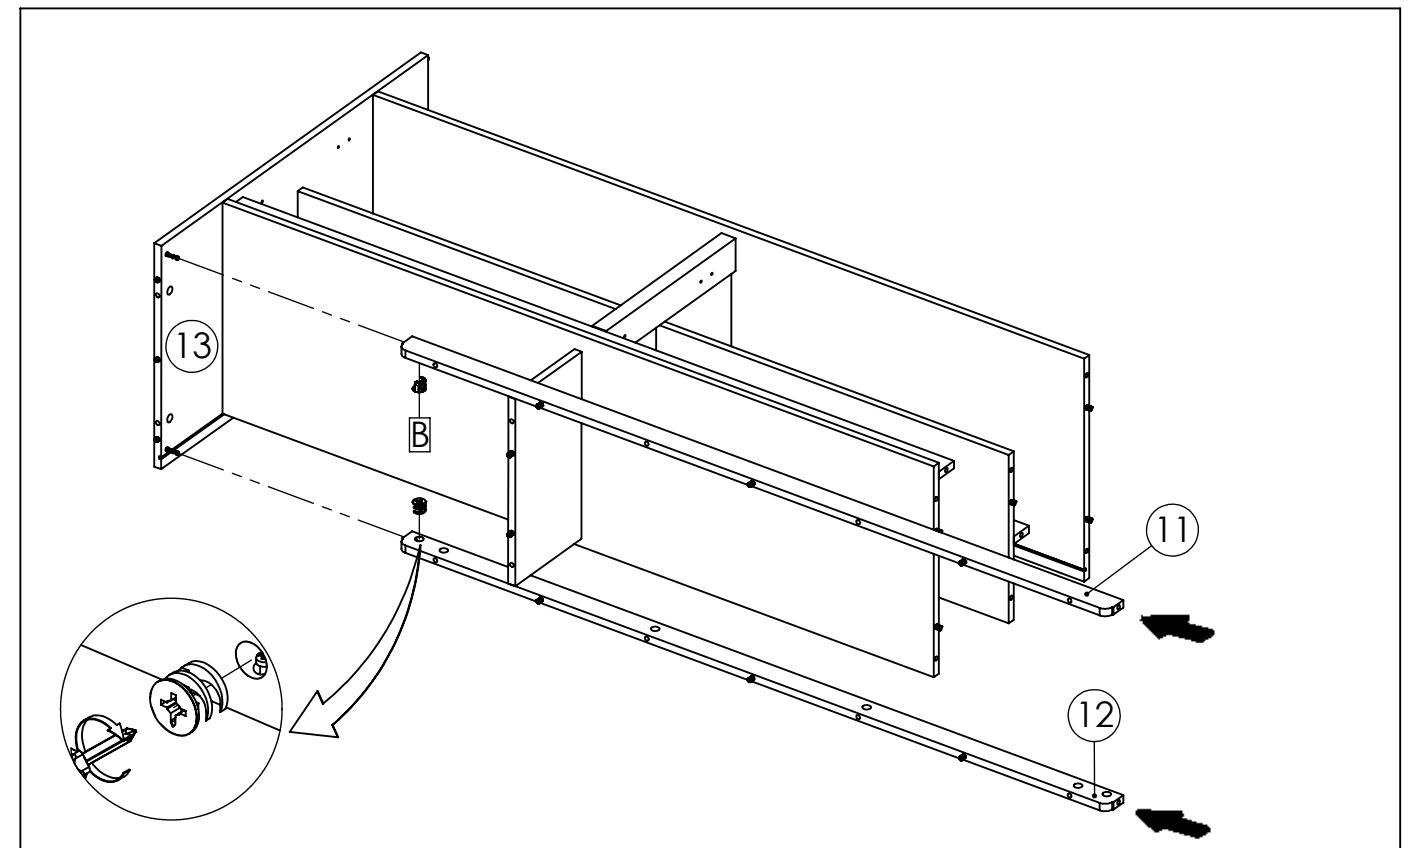


STEP14: Insert Front Top Frame (11), Back Top Frame (12) Into Right Side Panel (13) Secure with Camlock (B) tighten it using screwdriver.

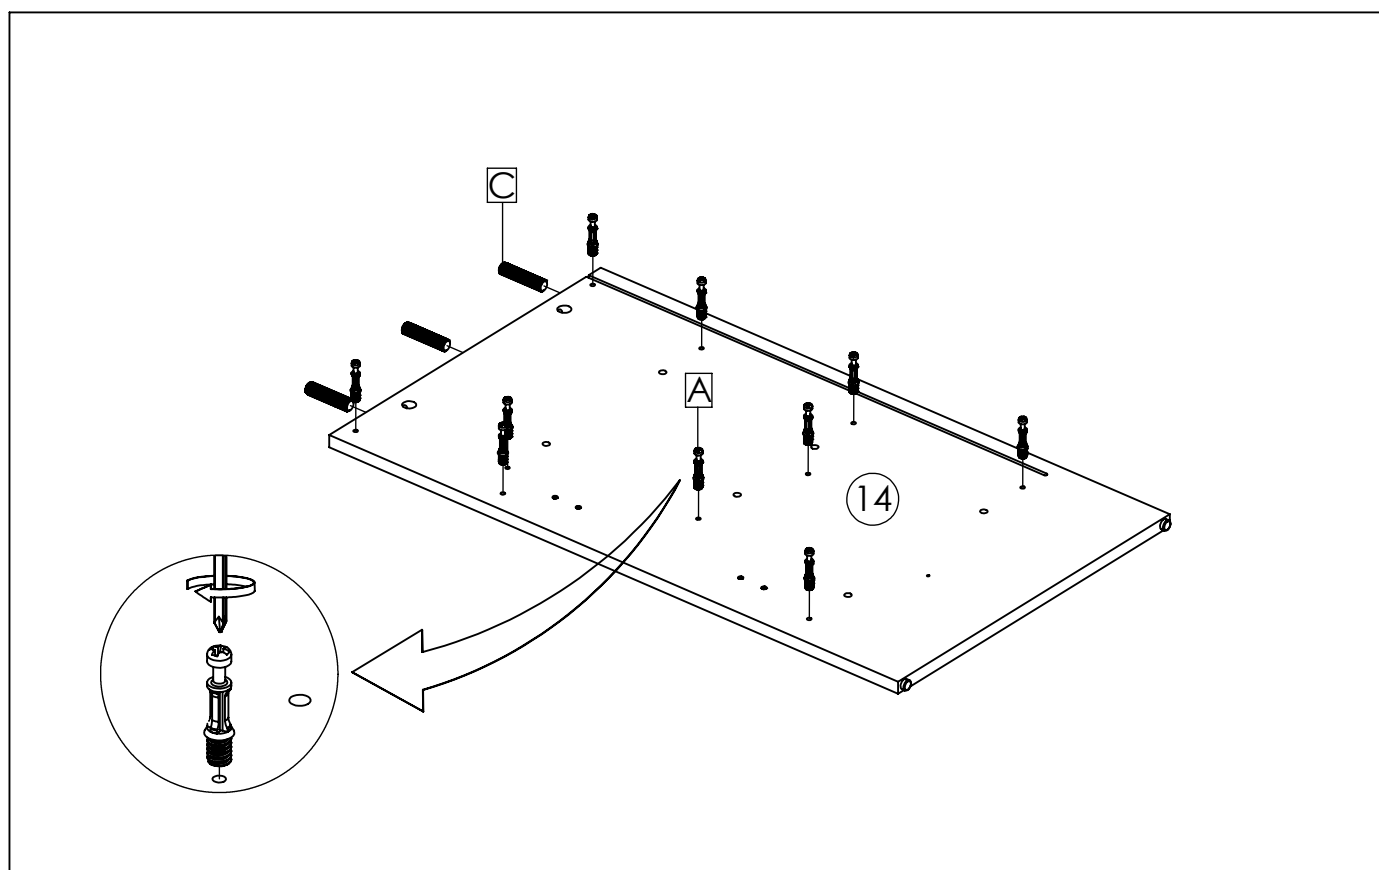


STEP15: Insert Cambolt (A) and Wooden Dowel (C) Into Left Side Panel (14).

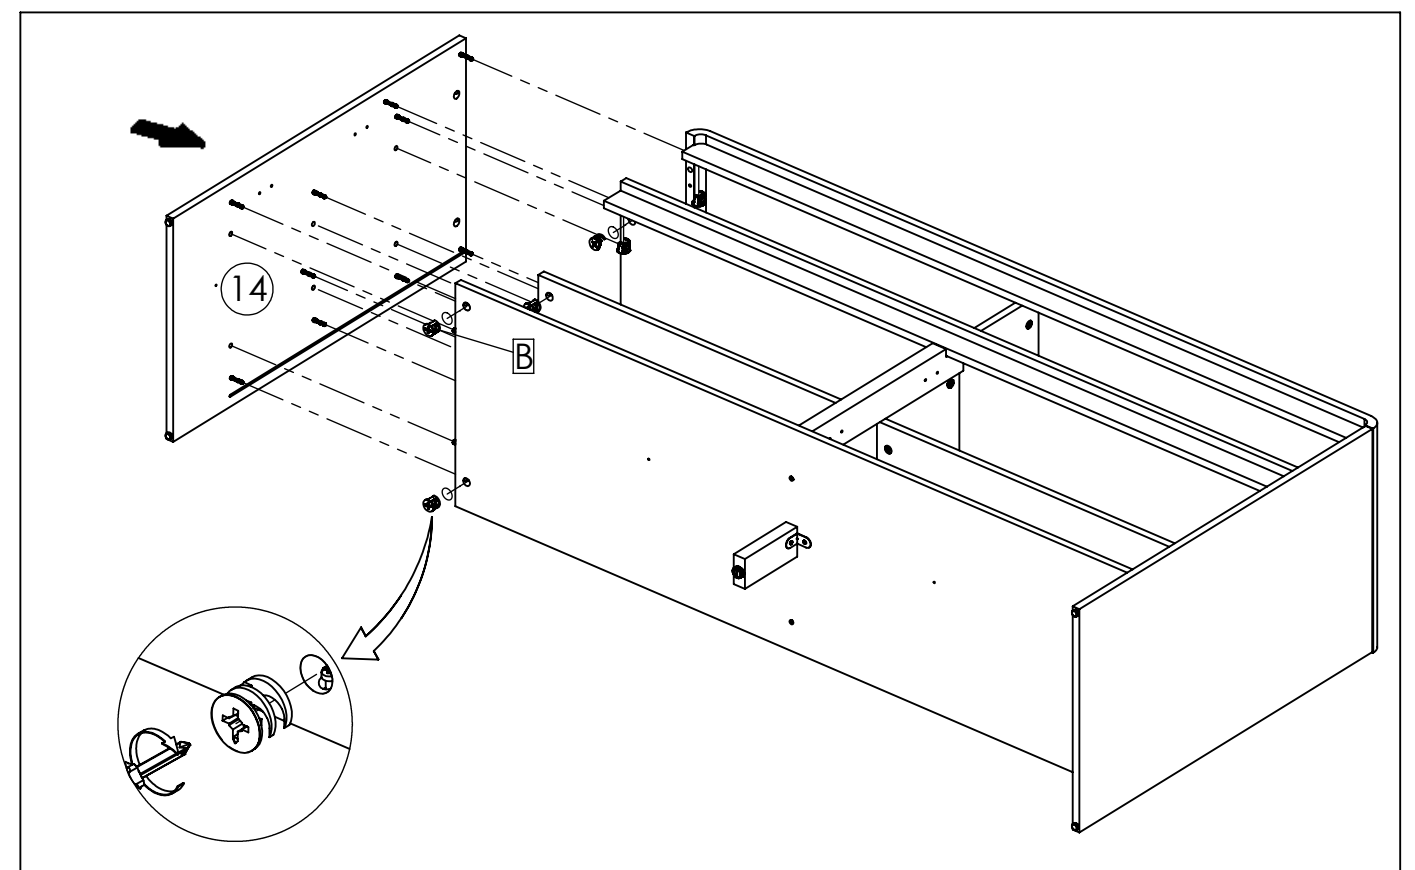


STEP16: Insert Left Side Panel (14) Secure with Camlock (B) tighten it using screwdriver.

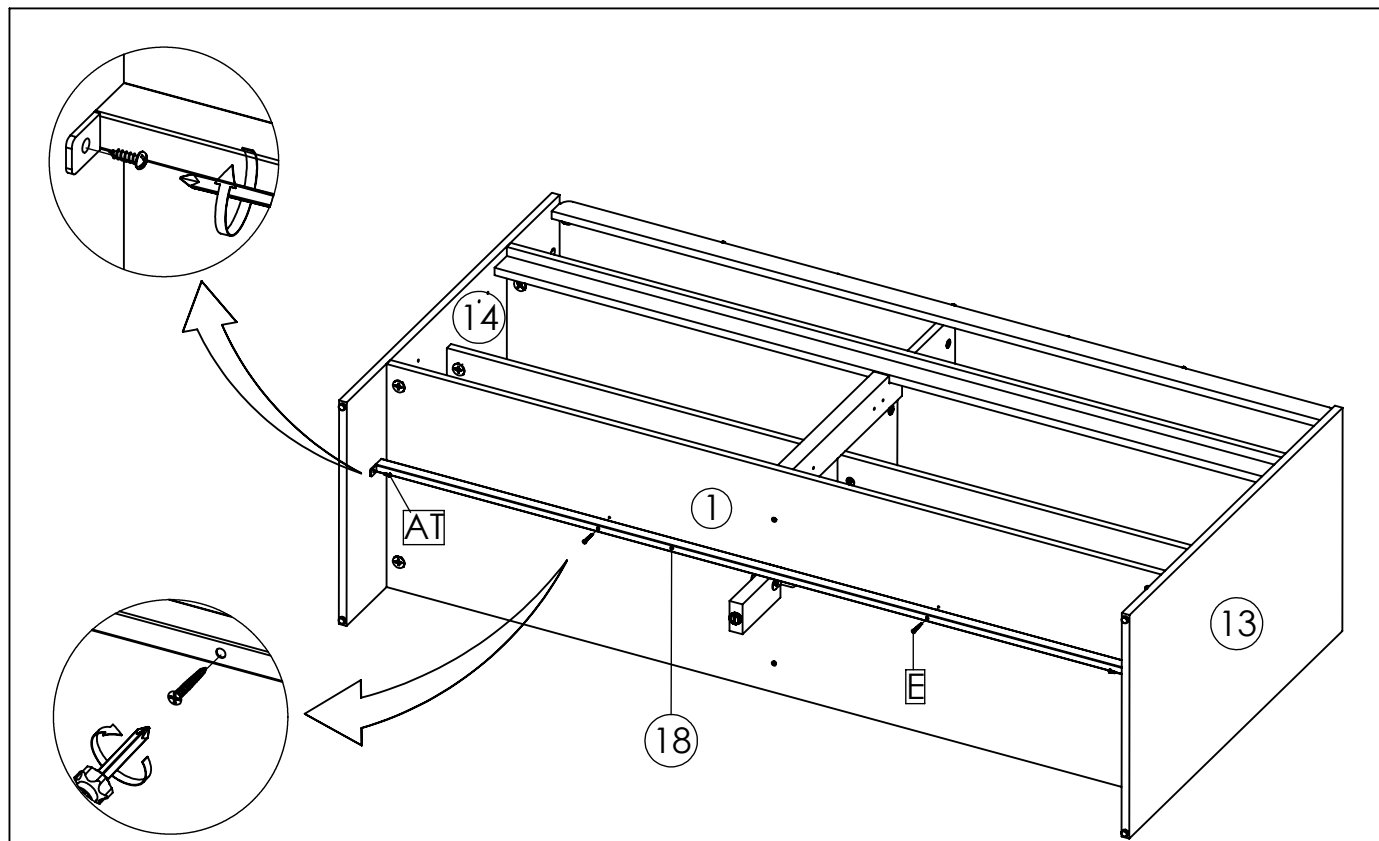


STEP17: Attach Metal Support (18) Into Bottom Panel (1), Secure with screw M7x32mm (E), and Secure with screw M6x12mm PH (AT) Into Right Side Panel (13) and Left Side Panel (14).

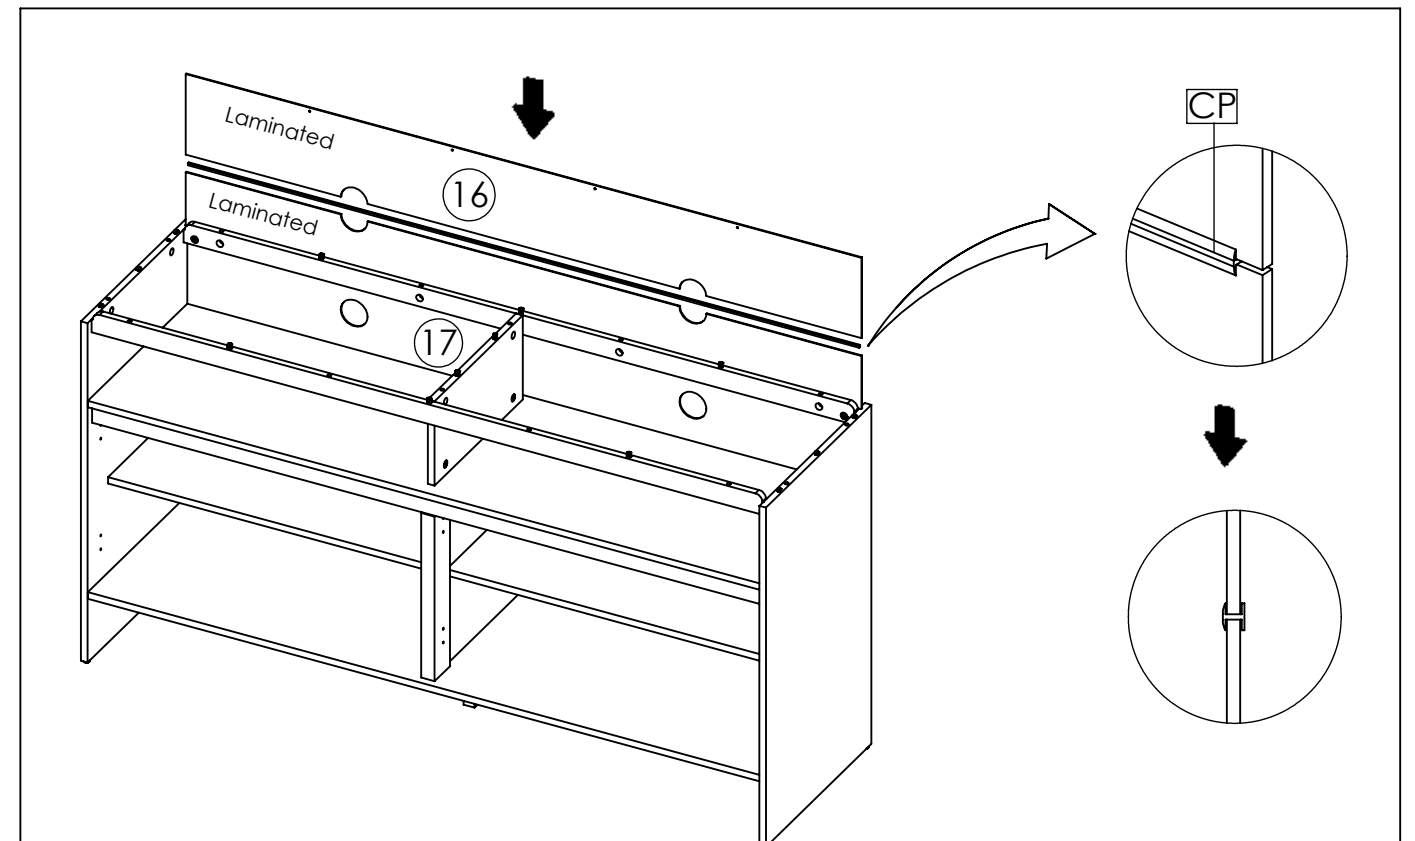





STEP18: Insert Back Panel (16,17) and List "H" (CP)


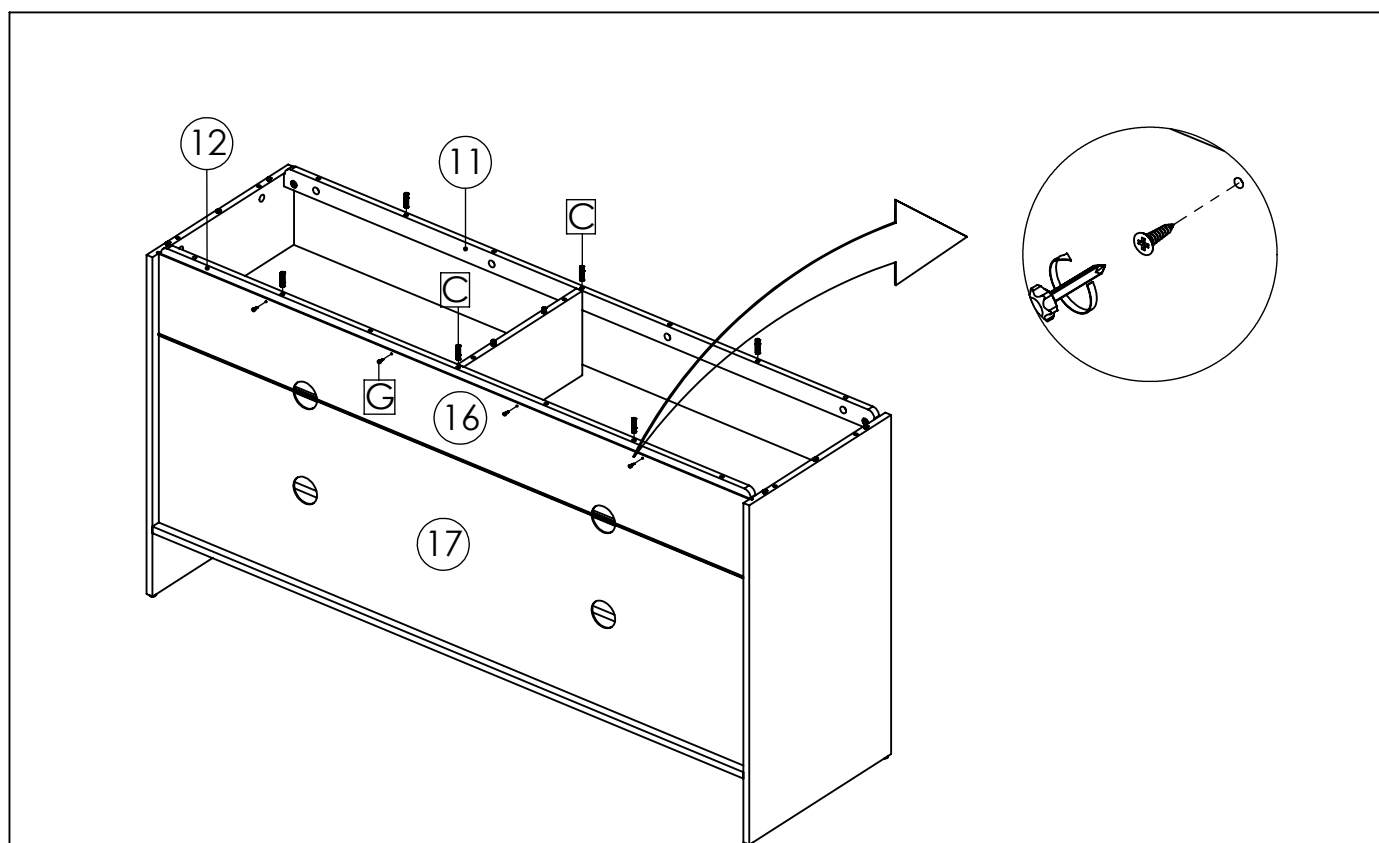


STEP19: Insert Back Panel Secure with screw M6x12mm (G). Insert Wooden Dowel (C) Into Front Top Frame(11), and Back Top Frame (12)

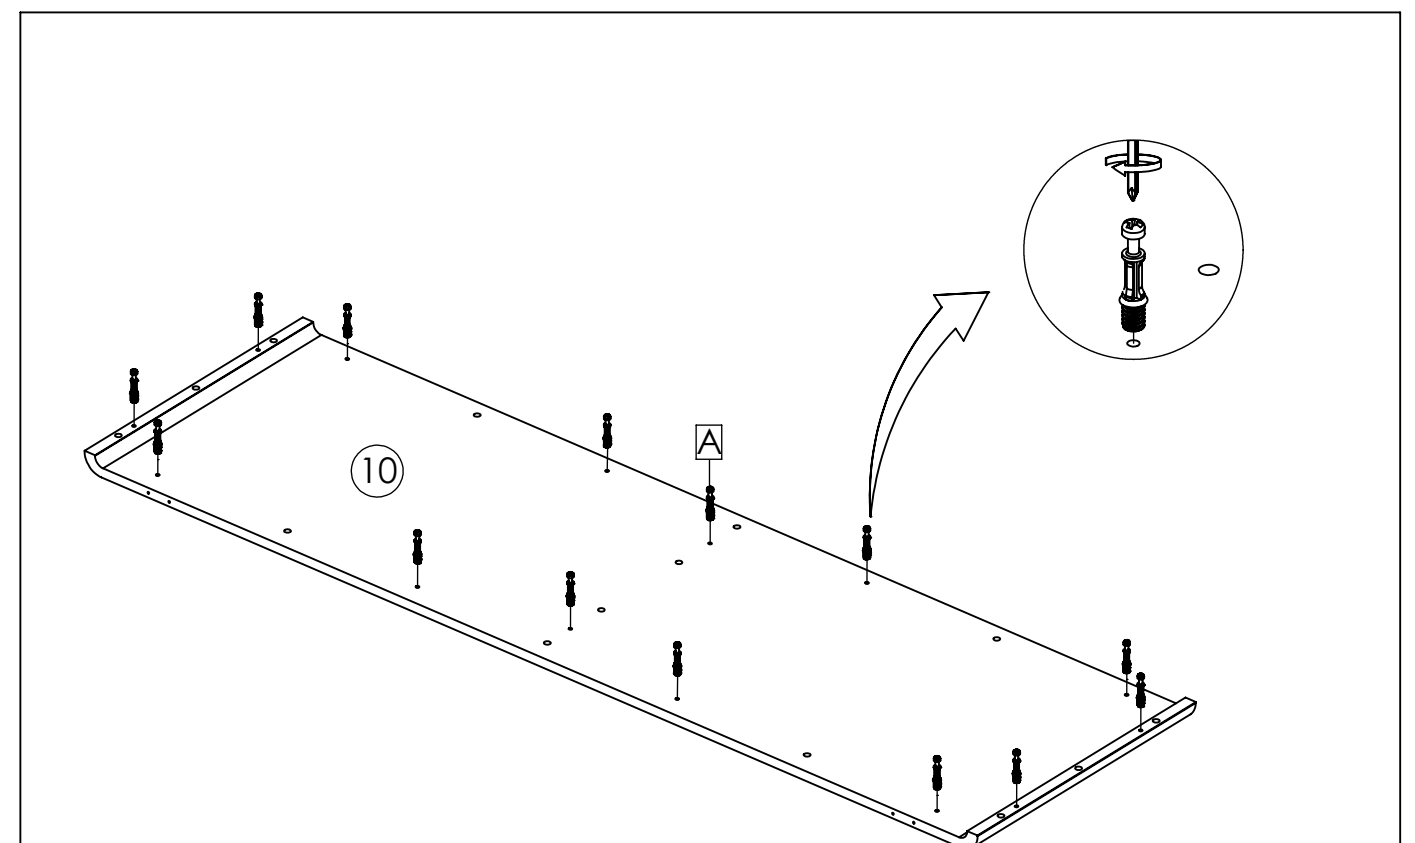

STEP20: Insert Cambolt (A) Into Top Panel (10).

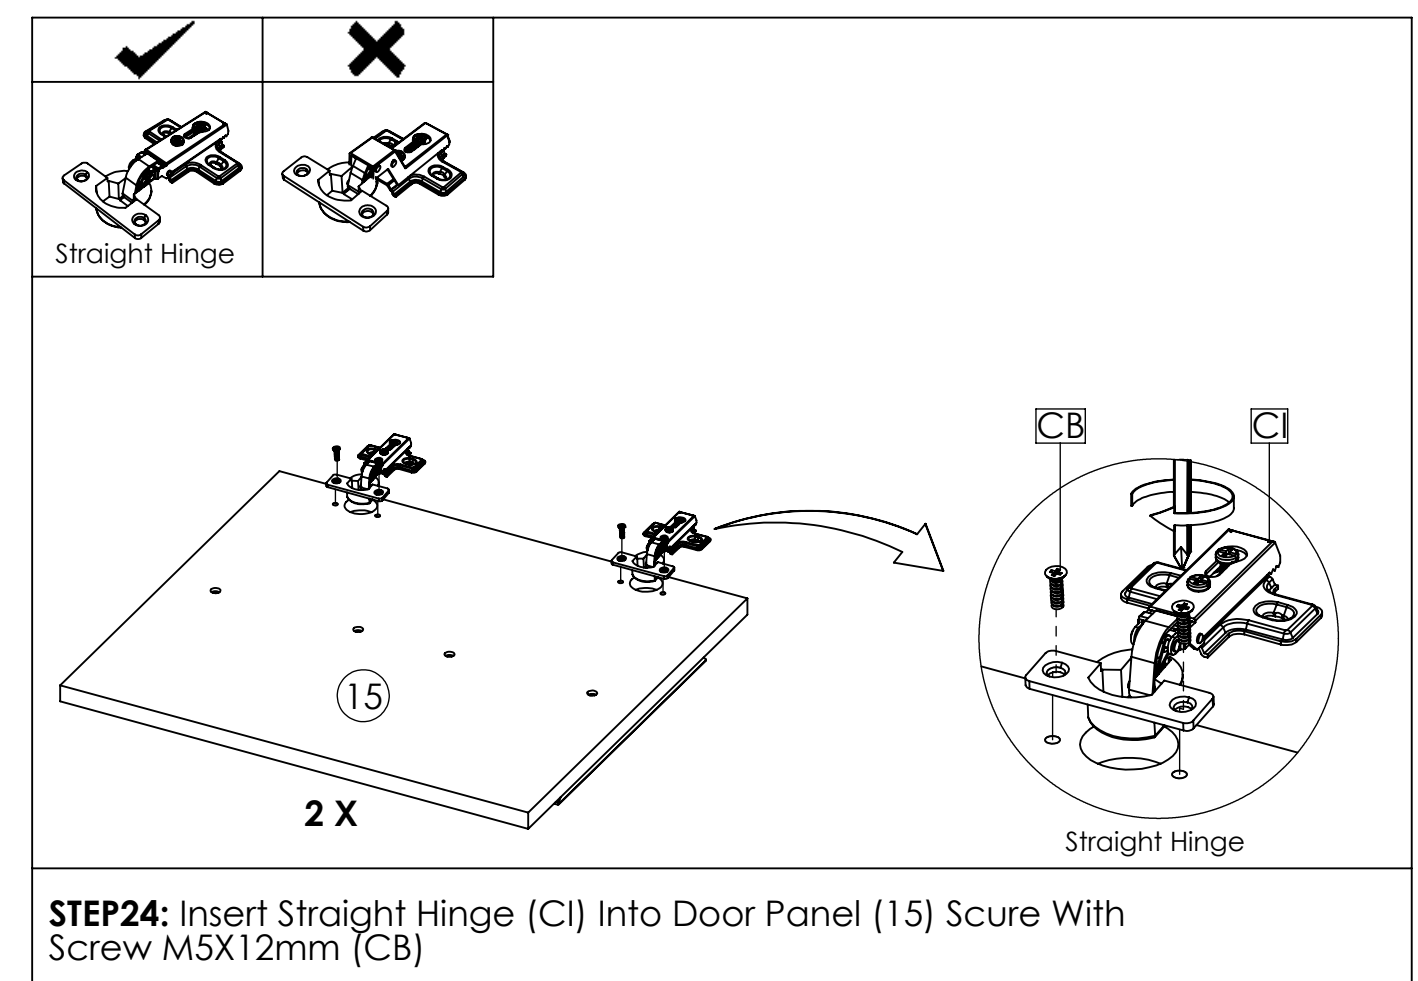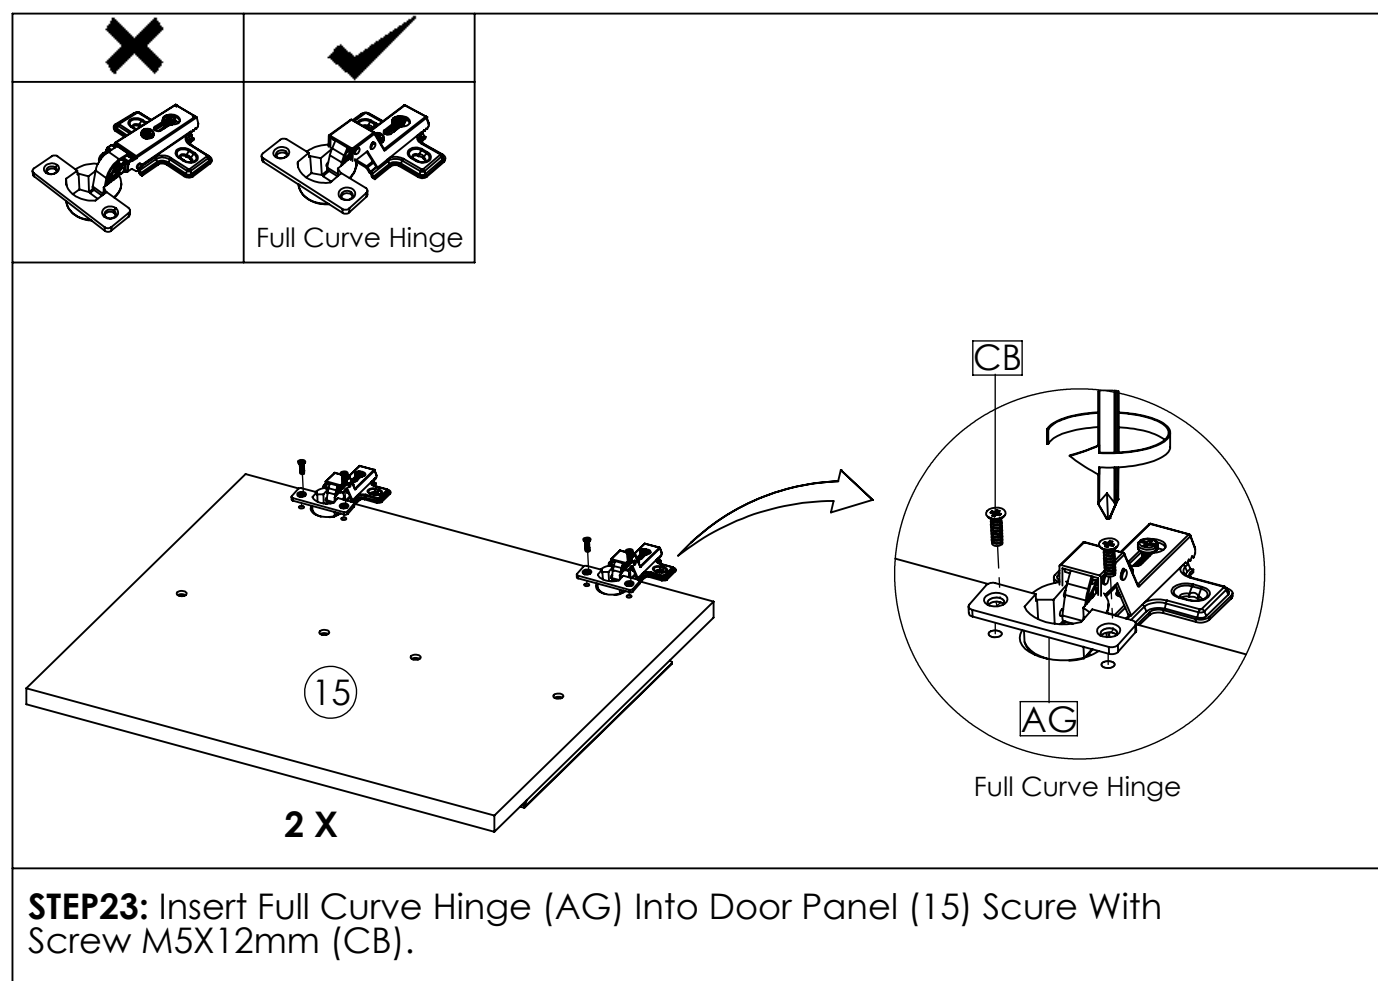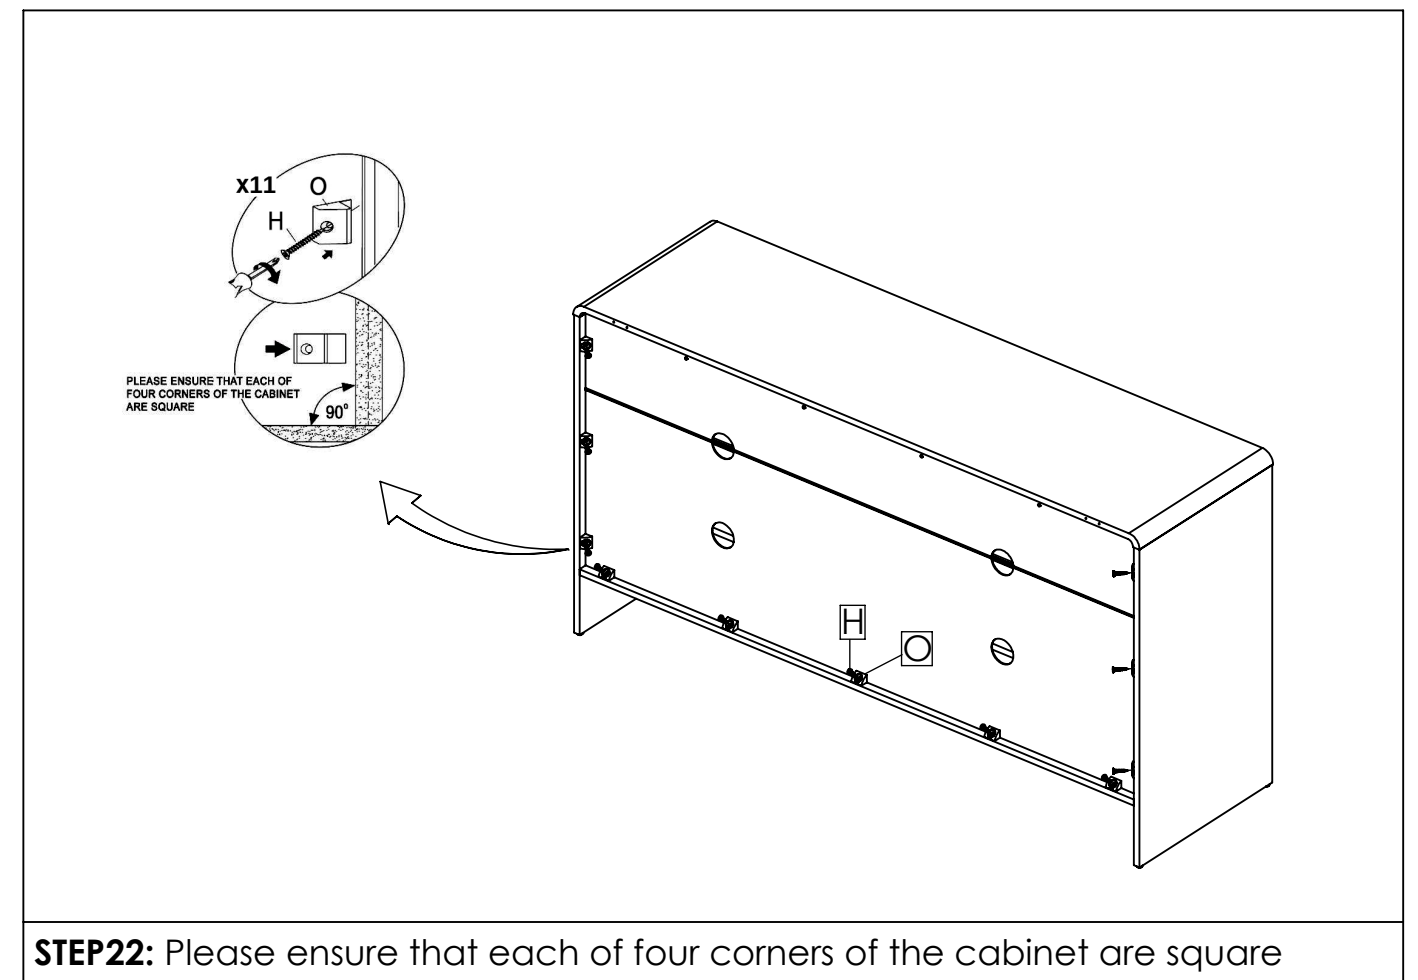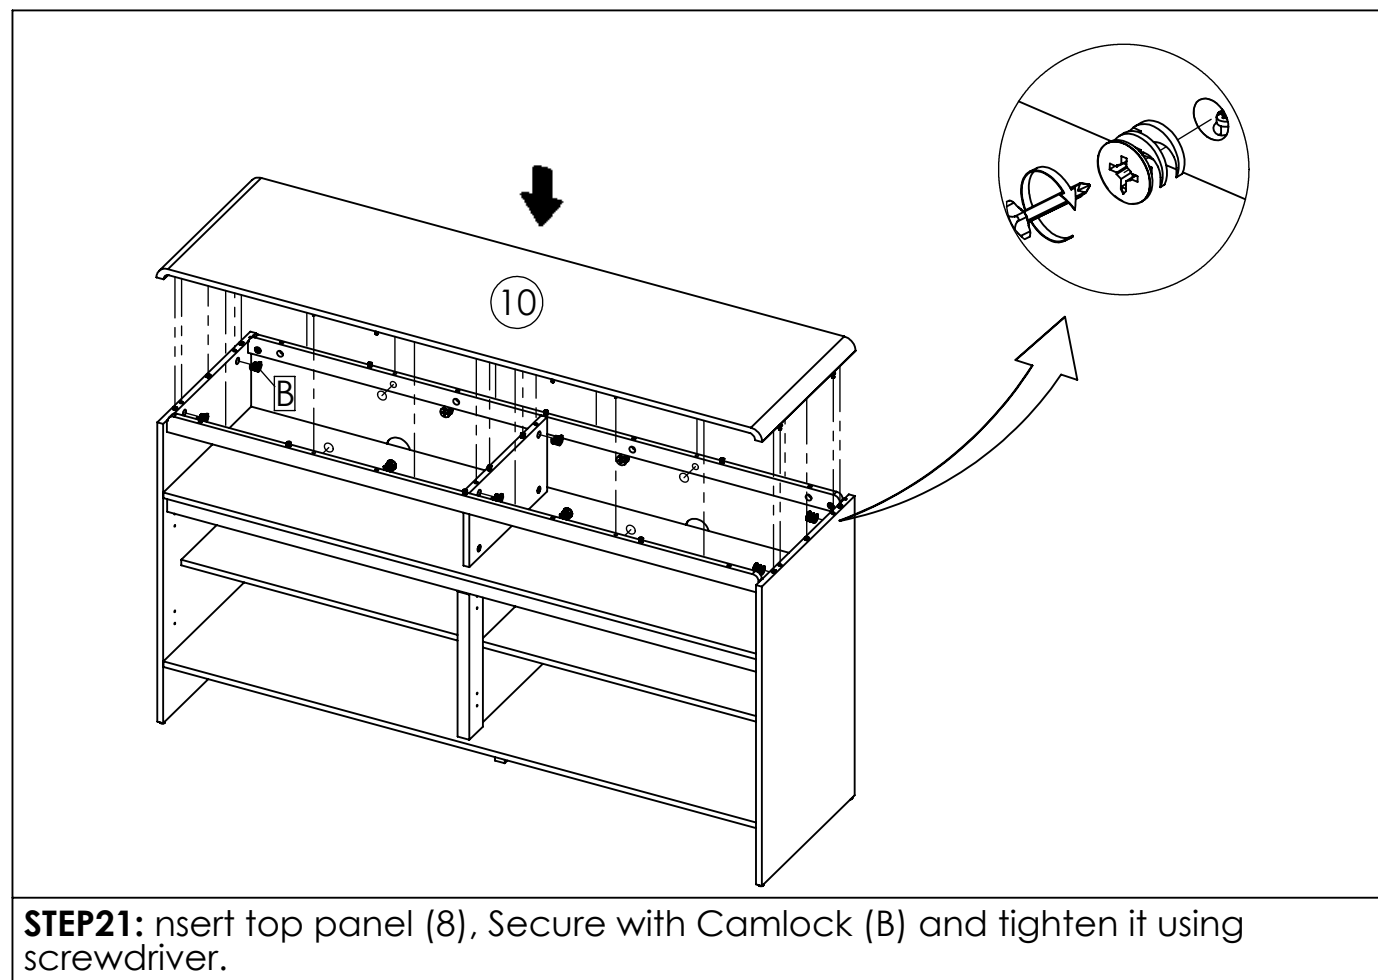

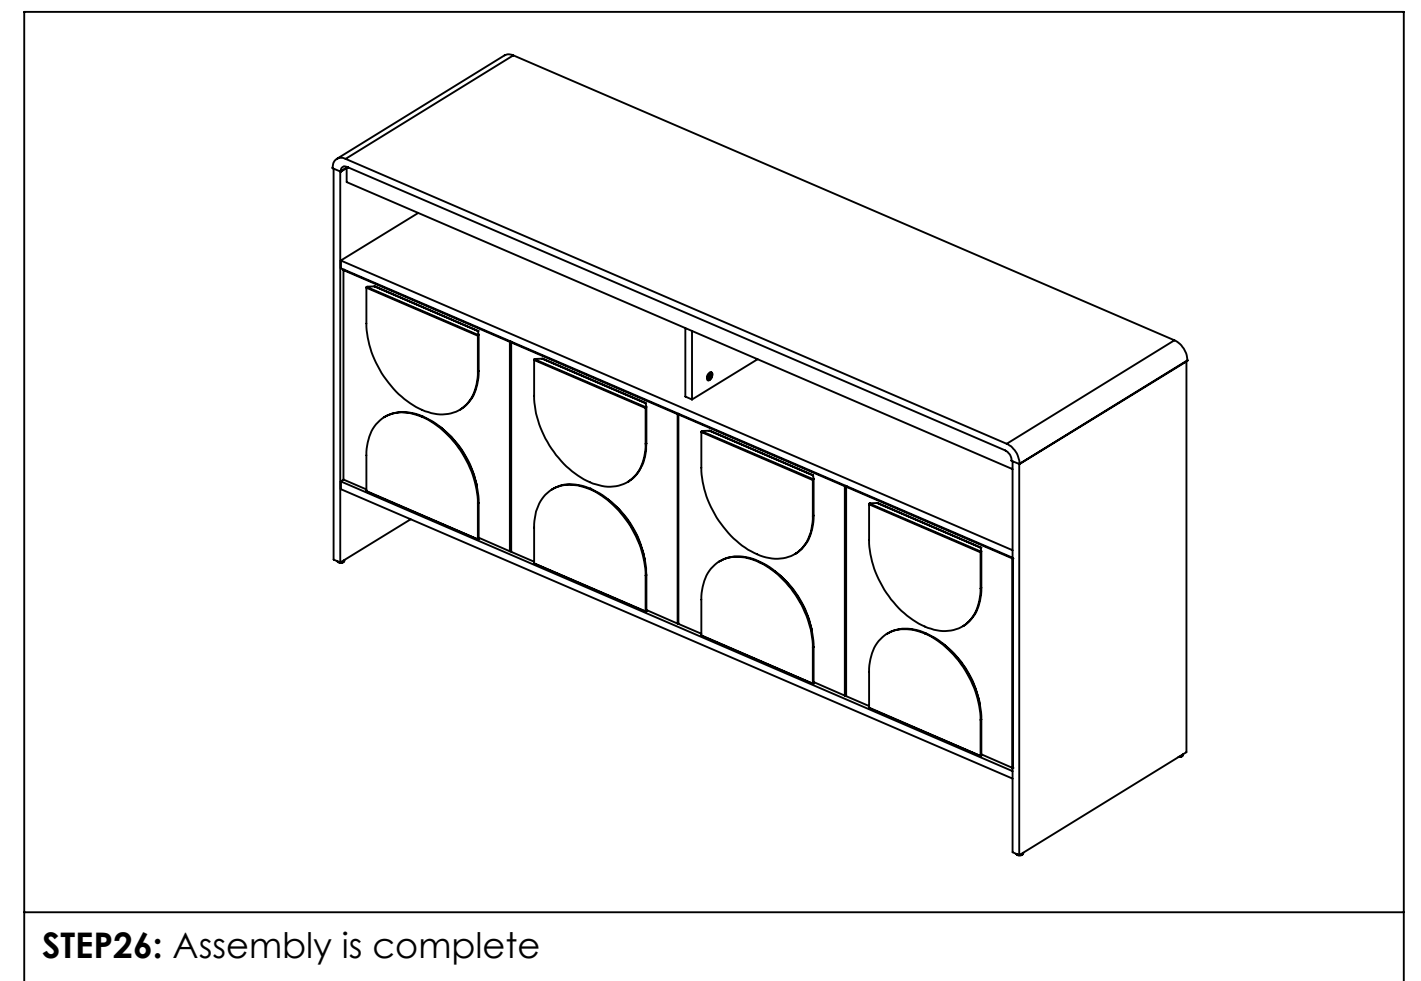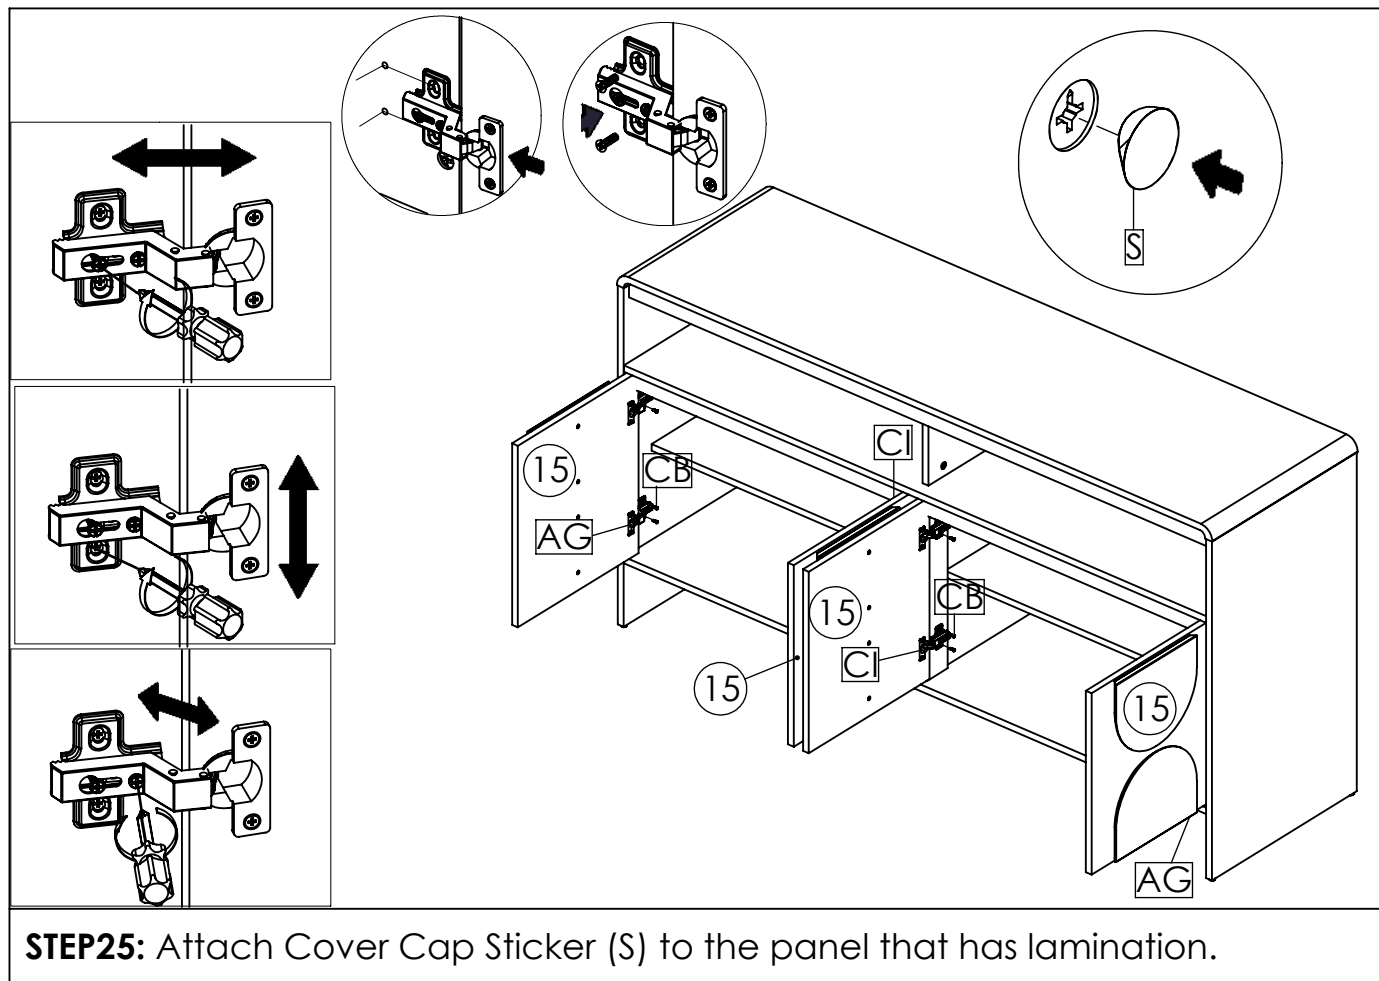

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.
The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.
Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

