

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (Not included): Screwdriver

CARE AND MAINTENANCE


Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

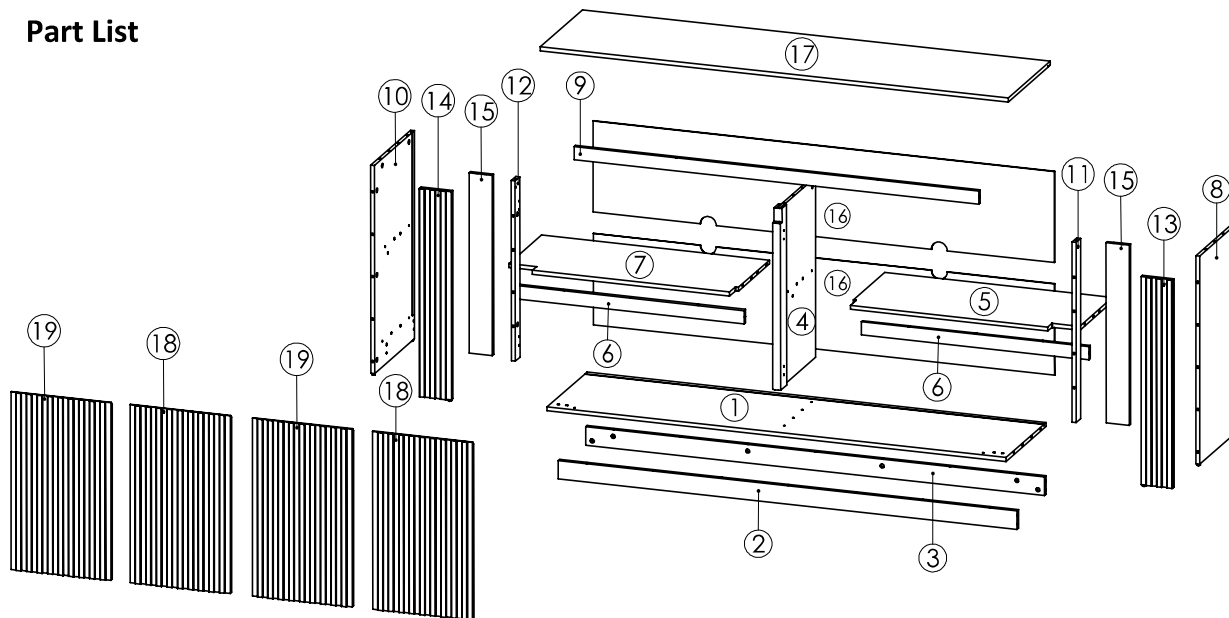

Model# MED3102

Product Dimensions: W 70.12" x 17.72" x H 31.69"

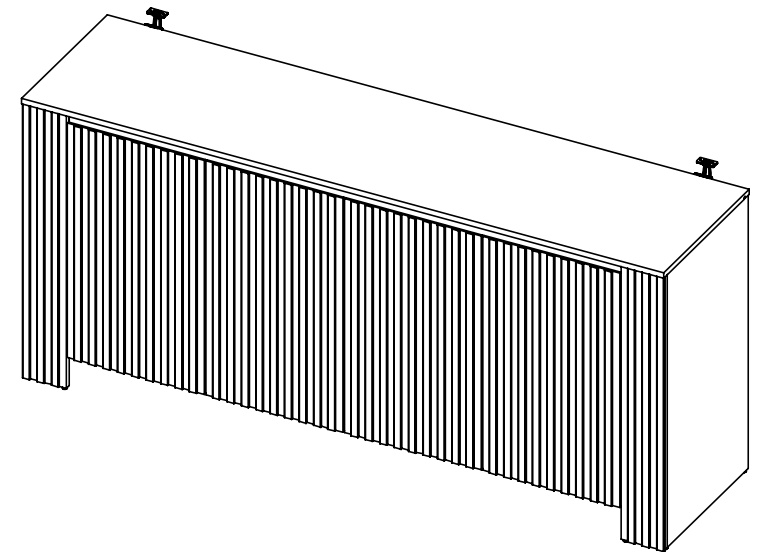

WARNING

TOTAL WEIGHT CAPACITY: 110 LBS








Top Weight Capacity: 80 lbs


Shelf Load Capacity : 30 lbs

Warning: Do not stand on sideboard

Warning: Do not over torque bolt

Hardware List

HW1x46  Ø6x32 mm	HW2x44  Ø15x12 mm	HW3x53  Ø8x32 mm	HW4x4  Ø6x50 mm	HW5x4  Ø6x12 mm	HW6x14  Ø4x19 mm
HW7x4  Ø26x83 mm Full Curve	HW8x2  Ø29x29 mm	HW9x14  10x14 mm	HW10x16  Ø20 mm OAK	HW11x4  Ø6x30 mm	HW12x2  Ø15x9,6 mm
HW13x32  Ø5x12 mm	HW14x4  Ø26x83 mm Straight Hinge	HW15x2  42x19 mm	HW16x1  list "H" 1746 mm		

Anti-tip Restrain Pack	
HW17x4  Ø6x15 mm	HW18x2SET  300 mm
HW19x4  Ø8x35 PLUG	HW20x4  Ø10x50 mm

Part List & HW

Piece	Description	Qty	Carton Call
1	Bottom Panel	1	1 of 2
2	Front Bottom Support	1	1 of 2
3	Rear Bottom Support	1	1 of 2
4	Center Panel	1	2 of 2
5	Right Fixed shelf	1	1 of 2
6	Shelf Support	2	1 of 2
7	Left Fixed shelf	1	1 of 2
8	Right Side Panel	1	2 of 2
9	Top Support	1	1 of 2
10	Left Side Panel	1	2 of 2
11	Right Hinge Panel	1	2 of 2
12	Left Hinge Panel	1	2 of 2
13	Right Pillar	1	2 of 2
14	Left Pillar	1	2 of 2
15	Pillar Support	2	2 of 2
16	Back Panel	2	1 of 2
17	Top Panel	1	1 of 2
18	Right Door	2	2 of 2
19	Left Door	2	2 of 2


Piece	Description	Qty	Carton Call
HW1	Cambolt Ø6x32 mm	46	2 of 2
HW2	Camlock Big Ø15x12 mm	44	2 of 2
HW3	Wooden Dowel Big Ø8x32 mm	53	2 of 2
HW4	Screw M 6 x 50 mm	4	2 of 2
HW5	Screw M 6 x 12 mm	4	2 of 2
HW6	Screw M 4 x 19 mm	14	2 of 2
HW7	Full Curve Hinge Ø26x83 mm	4	2 of 2
HW8	Adjuster Ø29x29 mm	2	2 of 2
HW9	Plastic Stopper 10x14mm	14	2 of 2
HW10	Cover Cap Sticker Ø20 mm	16	2 of 2
HW11	Wooden Dowel Small Ø6x30 mm	2	2 of 2
HW12	Camlock Small Ø15x9,6 mm	2	2 of 2
HW13	Screw M 5 x 12 mm	32	2 of 2
HW14	Straight Hinge Ø26x83 mm	4	2 of 2
HW15	Plastic "U" 42x19mm	2	2 of 2
HW16	List "H" 1746mm	1	1 of 2
HW17	Screw M 6 x 15 mm	4	2 of 2
HW18	Anti -tip 300 mm	2	2 of 2
HW19	Ø8x35 PLU G	4	2 of 2
HW20	Screw M 10 x 50 mm	4	2 of 2

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 90 minutes.

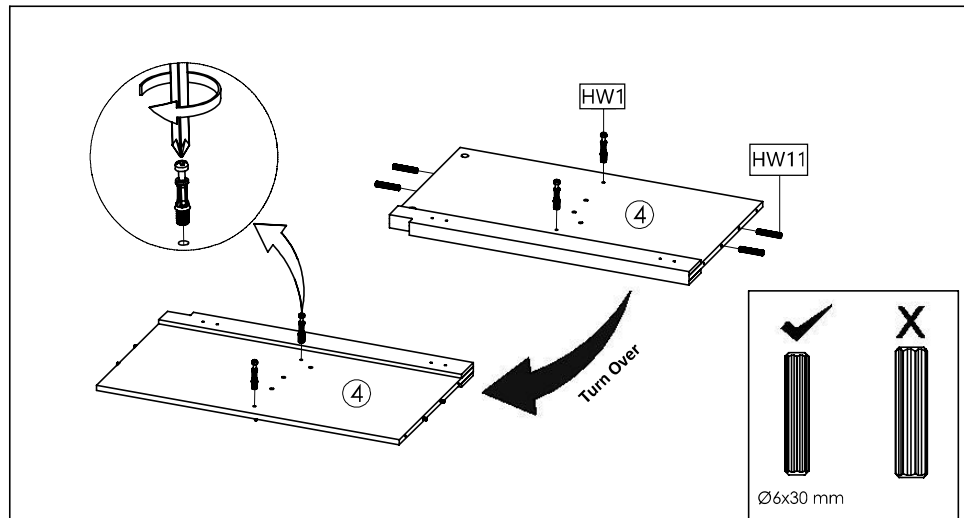


STEP1: Insert Cambolt (HW1) into center panel (4)
Insert Wooden Dowel Small (HW11) into center Panel (4).

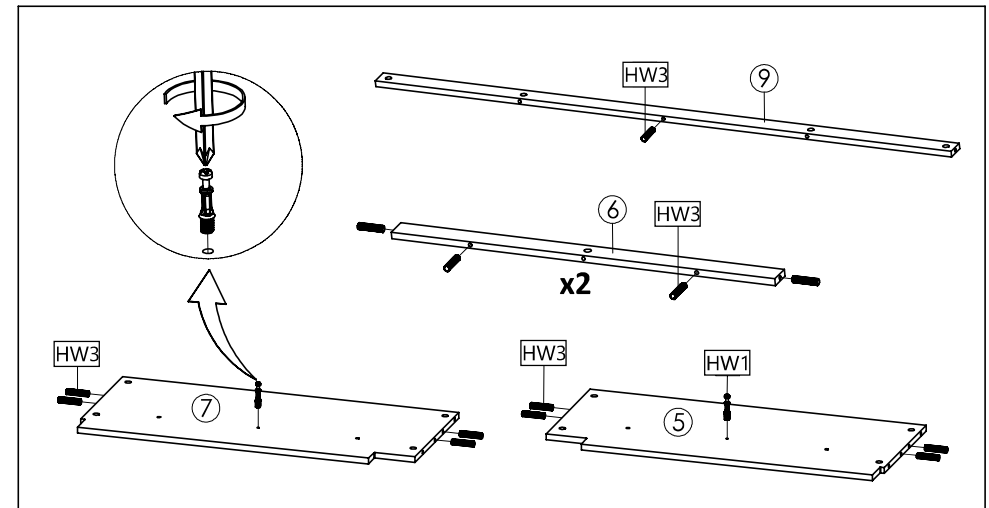


STEP2: Insert Cambolt (HW1) into right fixed shelf (5) And left fixed shelf (7)
Insert Wooden Dowel Big (HW3) into right center panel (5), left fixed shelf (7),
Shelf Support (6) And top support (9)

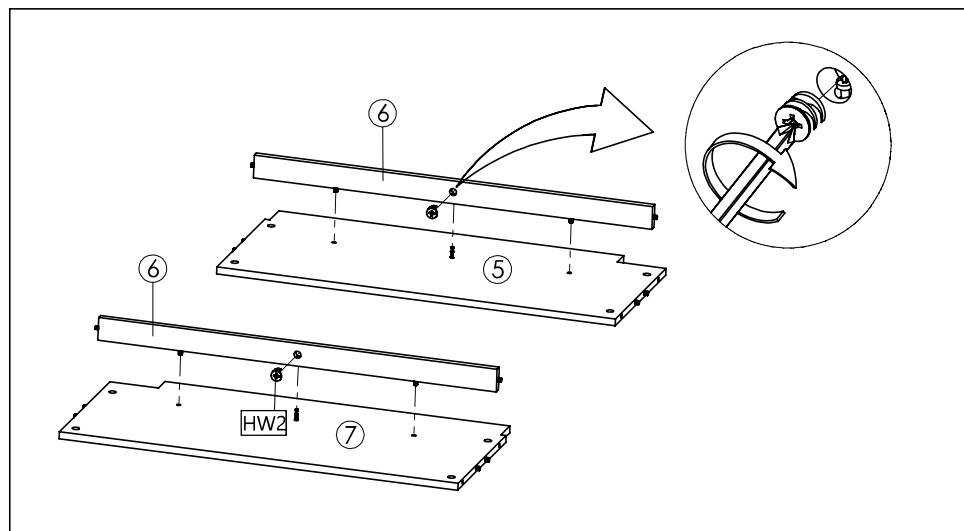


STEP3: Attach Shelf Support (6), into Right fixed shelf (5), Left fixed shelf (7)
Secure with Camlock big (HW2) and tighten it using screwdriver.

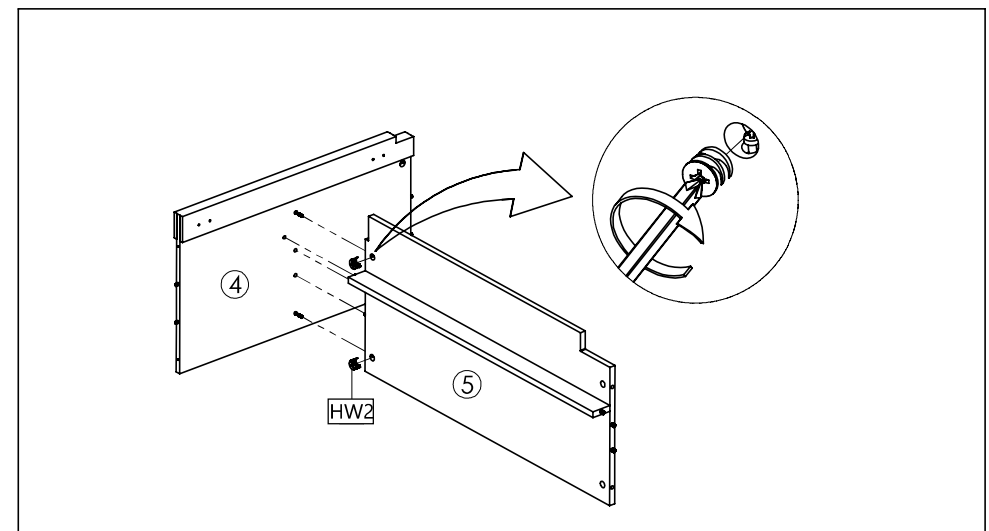


STEP4: Attach right fixed shelf (5), into center panel (4)
Secure with Camlock big (HW2) and tighten it using screwdriver.

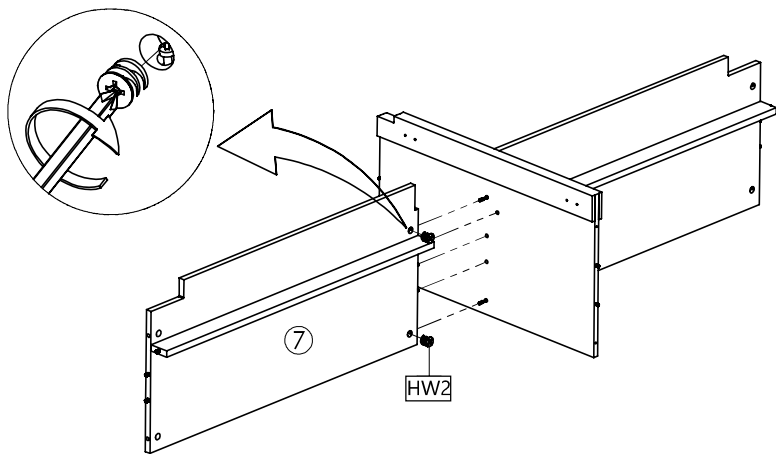


STEP5: Insert Left fixed shelf (7) Secure with Camlock big (HW2) and tighten it using screwdriver.

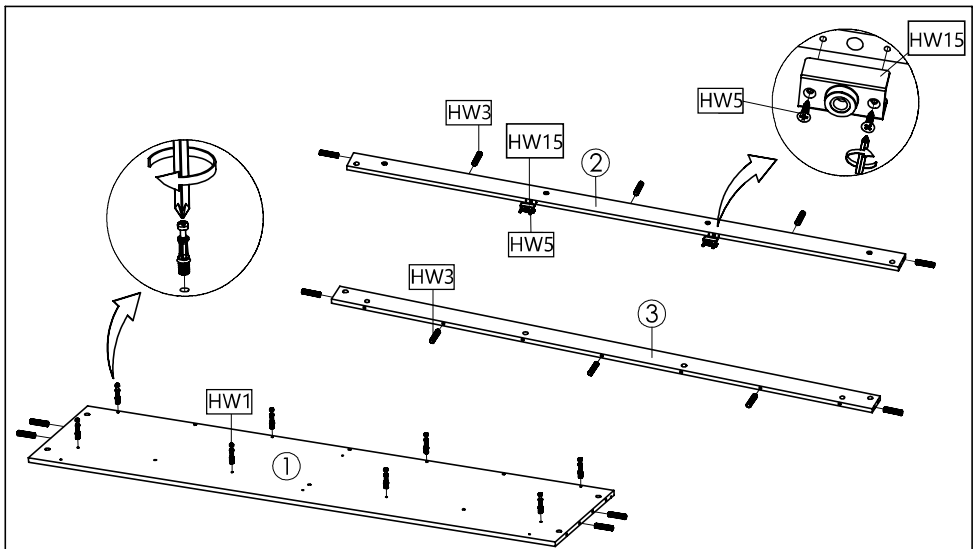


STEP6: Insert Cambolt (HW1) into bottom panel (1). Insert Wooden Dowel Big (HW3) into bottom panel (1), front bottom support (2) and rear bottom support (3). Continue by attaching , plastik "U" (HW15) to position as picture above, using M6x12mm screw (HW5)

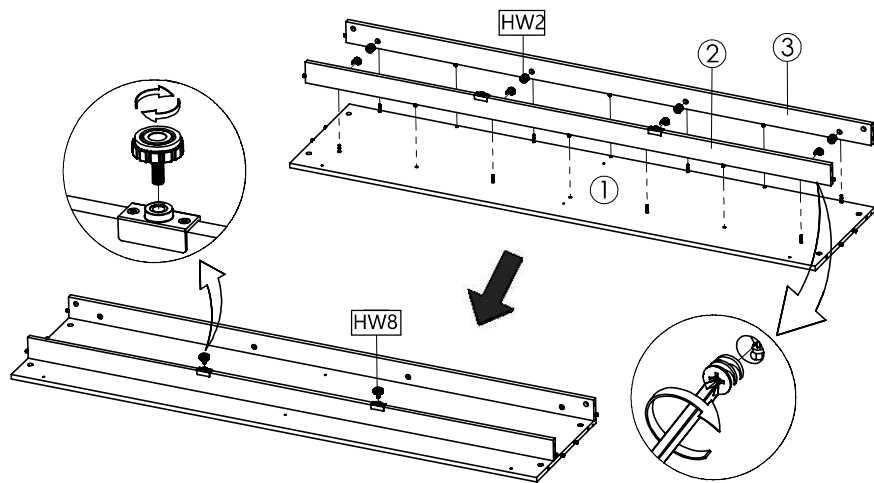


STEP7: Attach front Bottom support (2), and rear bottom support (3). into bottom panel (1). Secure with Camlock big (HW2) and tighten it using screwdriver. Continue by attaching , adjuster (HW8) to position as image above, rotate and adjust

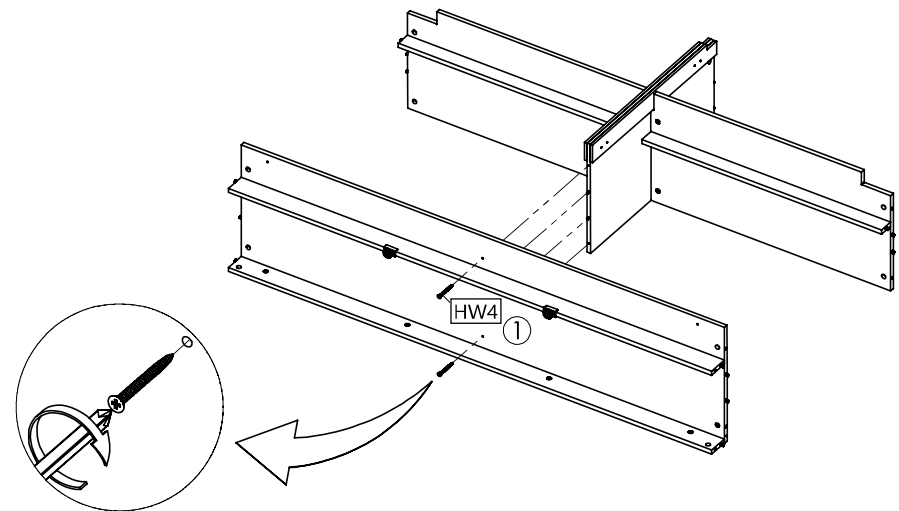


STEP8: Insert Bottom panel (1) Secure with Screw M6x50mm (HW4). and tighten it using screwdriver.

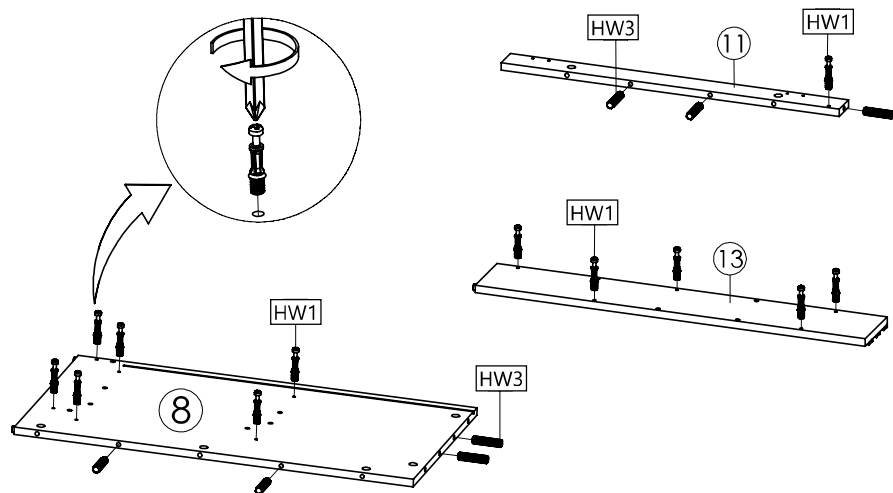


STEP9: Insert Cambolt (HW1) into right side panel (8), right pillar (13) and right hinge panel (11). Insert Wooden Dowel Big (HW3) into right side panel (8) and right hinge panel (11)

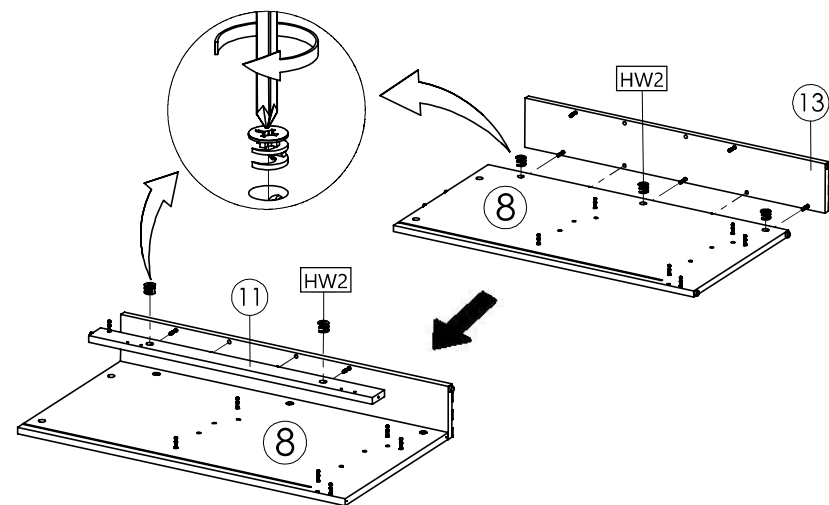


STEP10: Attach Right pillar (13) into Right side panel (8), Secure with Camlock big (HW2) and tighten it using screwdriver. Continue by attaching right hinge panel (11) into Right pillar (13)

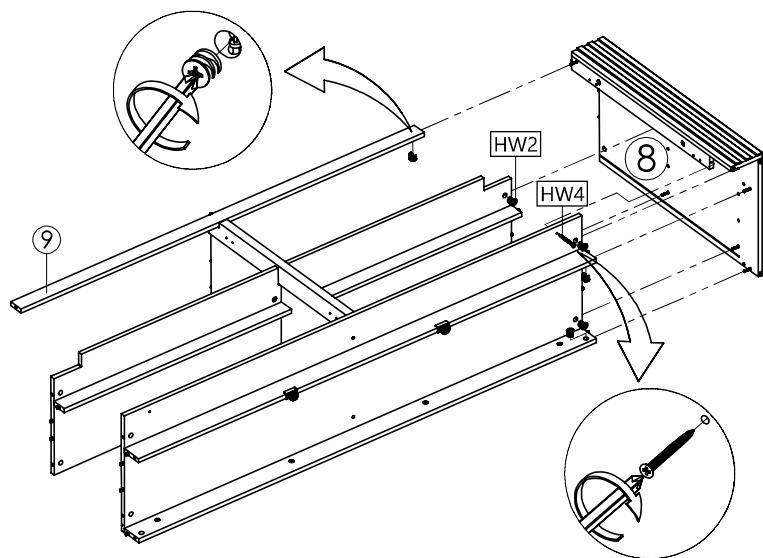


STEP11: Insert Right side panel (8) And Top support (9) Secure with Camlock big (HW2),Screw M6x50mm (HW4) and tighten it using screwdriver.

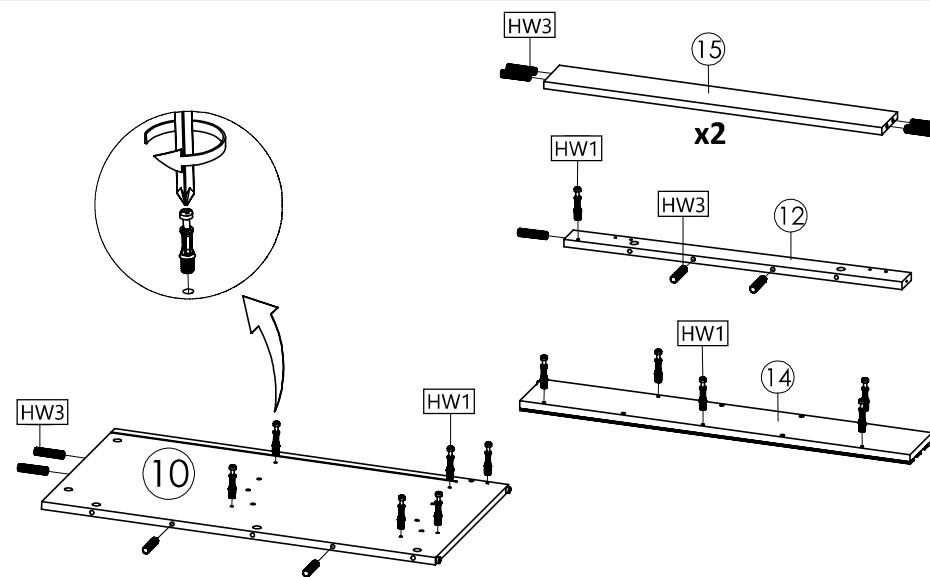


STEP12: Insert Cambolt (HW1) into left side panel (10), left pillar (14) and left hinge panel (12). Insert Wooden Dowel Big (HW3) into left side panel (10), left hinge panel (12) And pillar support (15)

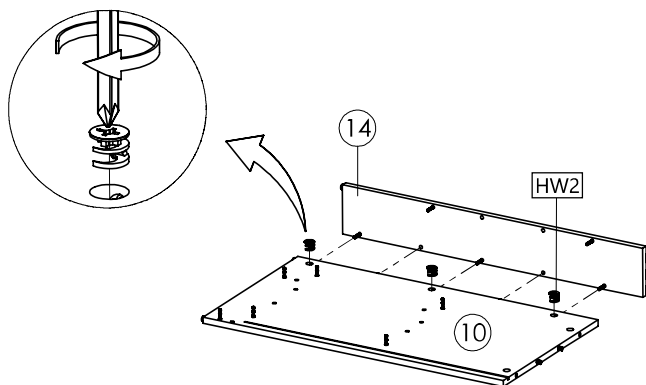


STEP13: Attach Left pillar (14) into left side panel (10)
Secure with Camlock big (HW2) and tighten it using screwdriver.

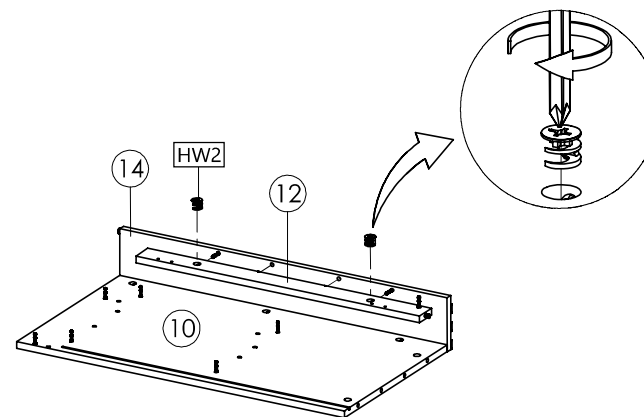


STEP14: Attach left hinge panel (12) into Left pillar (14),
Secure with Camlock big (HW2) and tighten it using screwdriver.

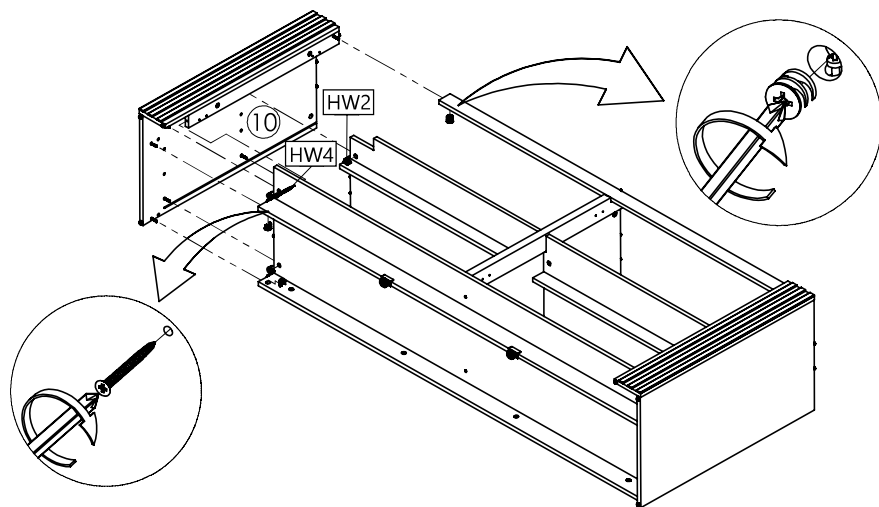


STEP15: Insert Left side panel (8) Secure with Camlock big (HW2),
Screw M6x50mm (HW4) and tighten it using screwdriver.

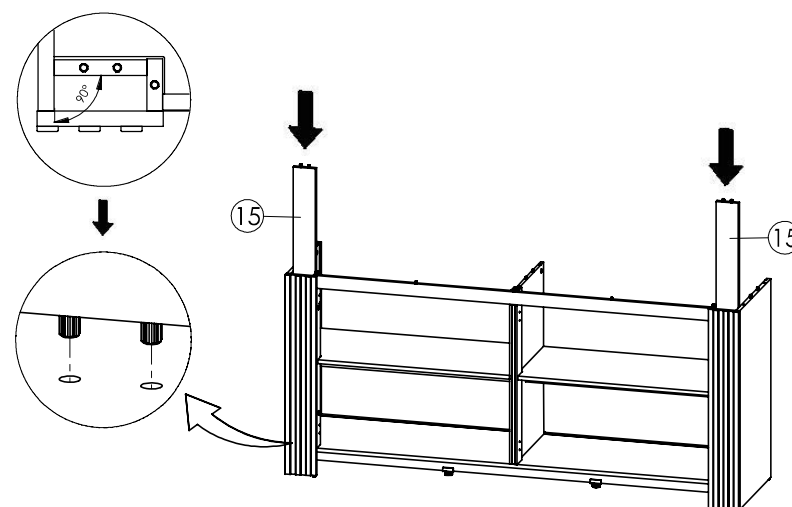


STEP16: insert pillar support (15) into position as shown picture

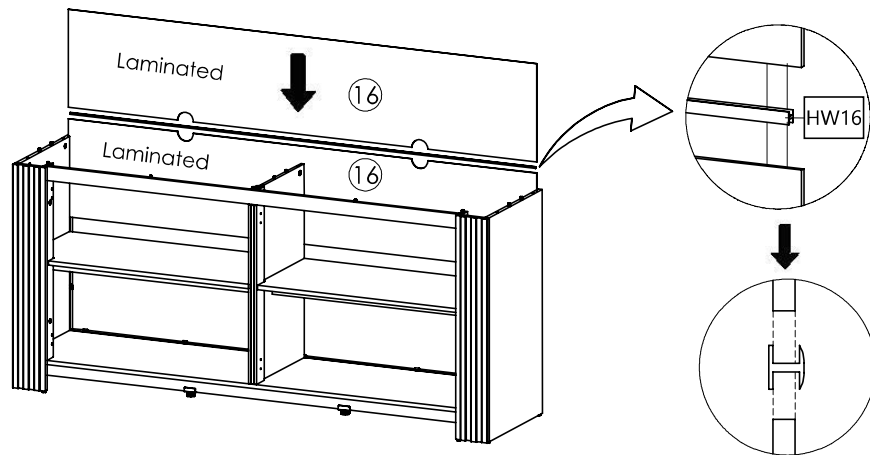


STEP17: Insert Back panel 2x (16), And List "H" (HW16)

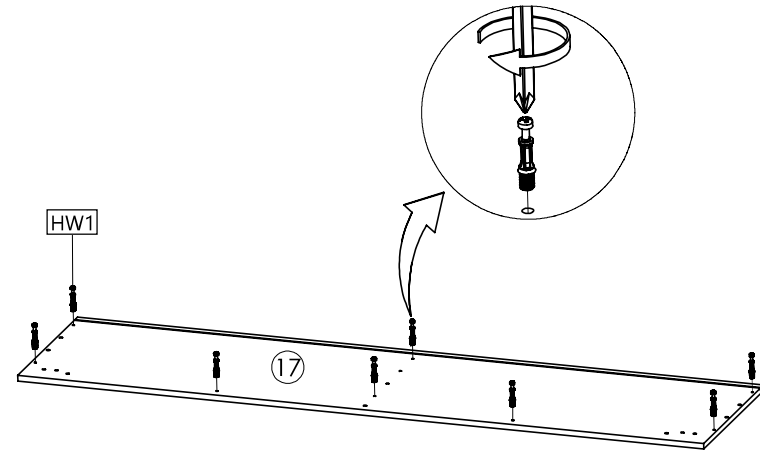


STEP18: Insert Cambolt (HW1) into top panel (17)

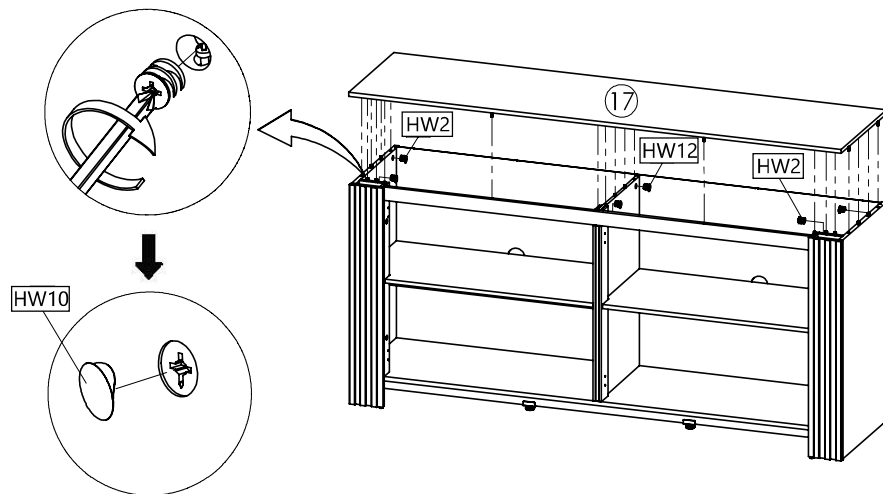


STEP19: Insert Top panel (17) Secure with Camlock big (HW2), Camlock small (HW12) and tighten it using screwdriver.
Continue to attach the cover cap sticker (HW10) to the panel that has lamination

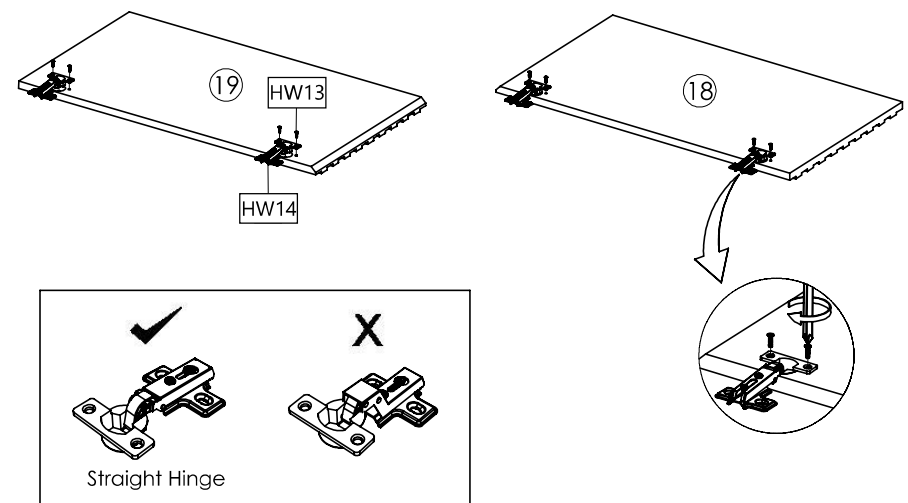


STEP20: Attach straight hinge (HW14) into Right door (18) And left door (19) using M5x12mm screw (HW13) and tighten it using screwdriver.

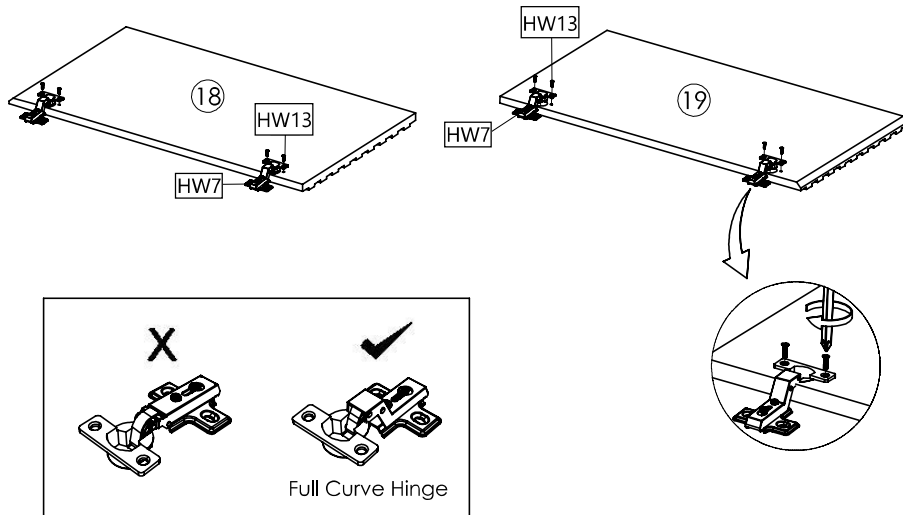


STEP21: Attach full curve hinge (HW7) into Right door (18) And left door (19) using M5x12mm screw (HW13) and tighten it using screwdriver.

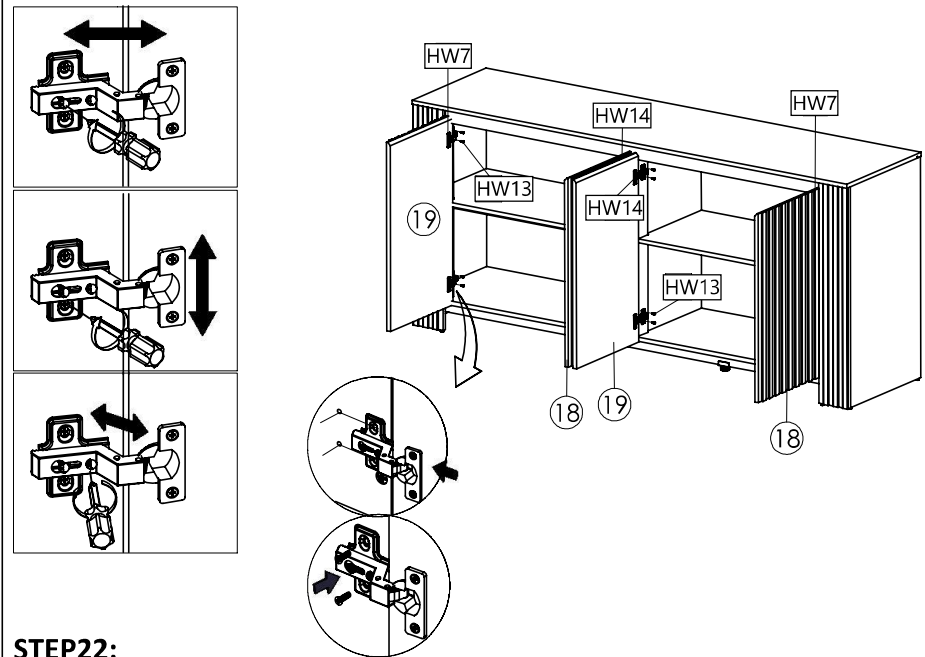

STEP22:

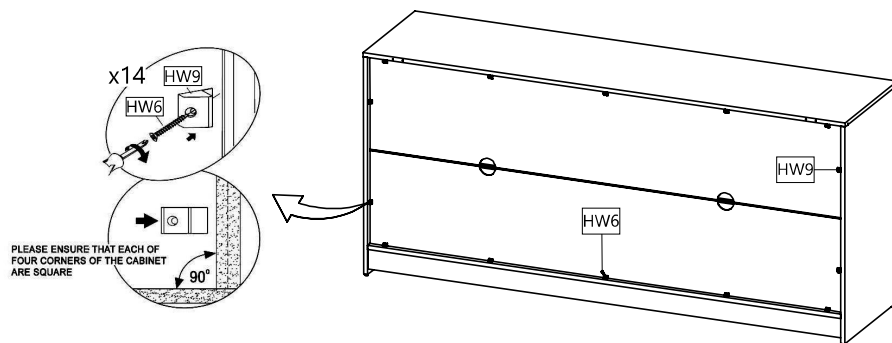

STEP23: Attach the plastic stopper (HW9) to the back panel Secure with screw M4x19 mm (HW6) and tighten it using screwdriver.

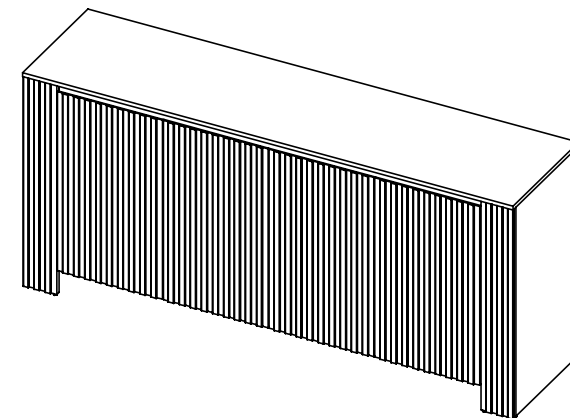






STEP24: Assembly is complete

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (CE) and screws (E) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

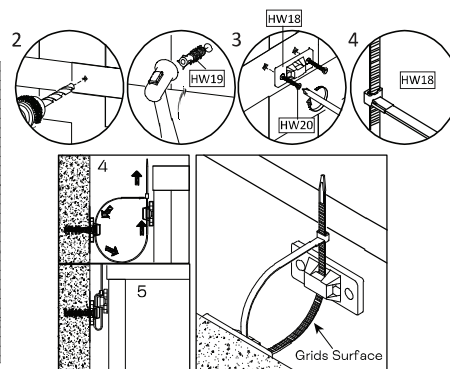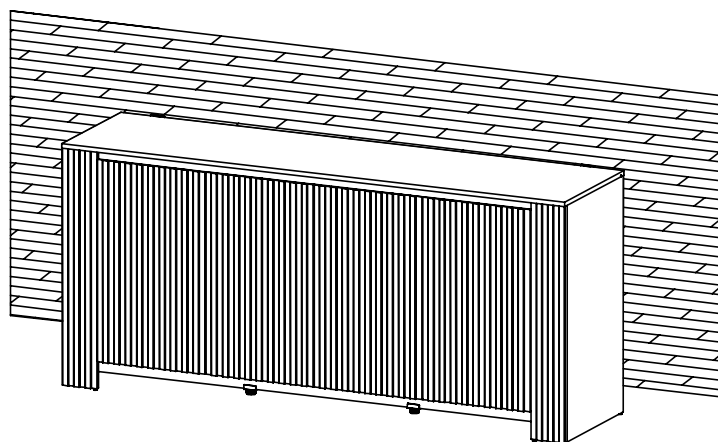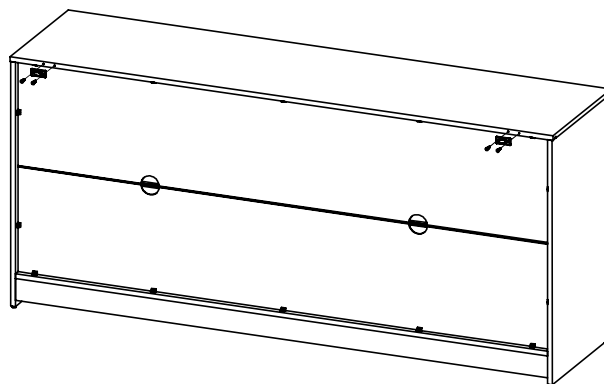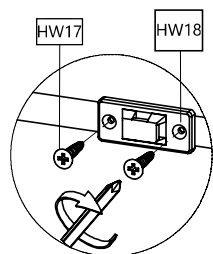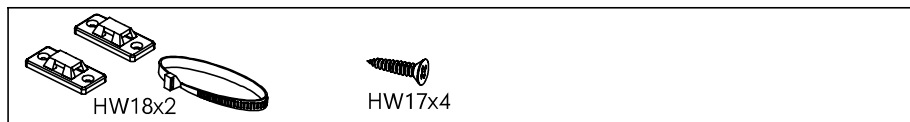




ANTI-TIP RESTRAINT INSTALLATION


! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

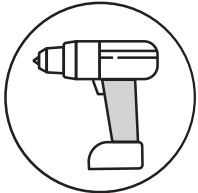


REQUIRED TOOL
8MM / 5/16" DRILL BIT

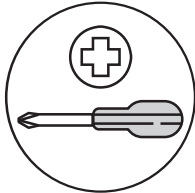

REQUIRED TOOL




Hardware (HW19/HW20) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

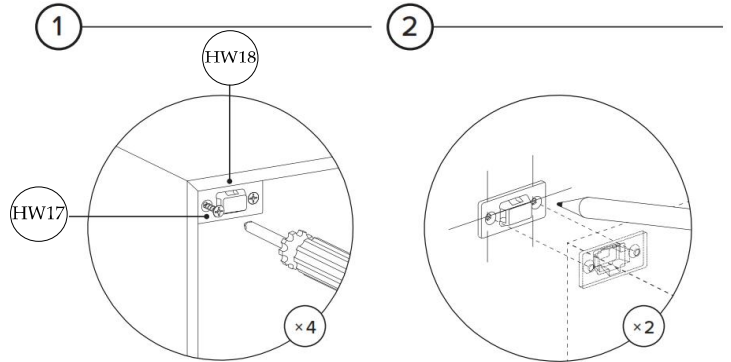


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

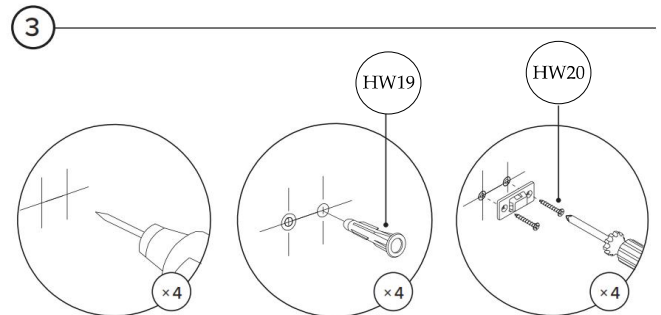

Drill holes in wall using 8mm / 5/16" drill bit.

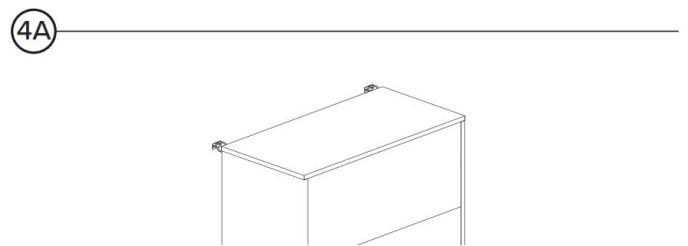

Align brackets on unit with brackets on wall.

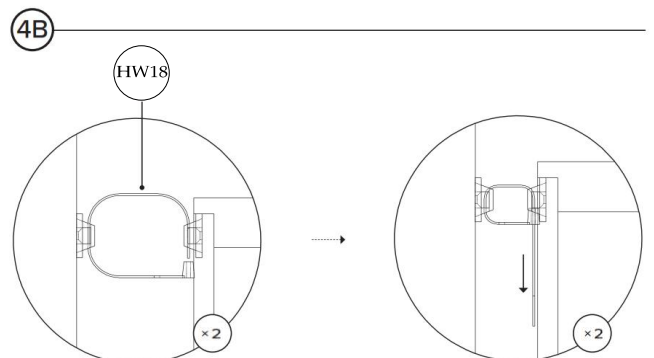

Pull strap down until it snap-locks.

ANTI-TIP RESTRAINT PACK

ID	DESCRIPTION	QTY
HW18	BRACKET 	4
HW17	M6 × 15MM SCREW 	4
HW19	M8 × 35MM PLUG 	4
HW20	M10 × 50MM SCREW 	4
HW18	STRAP 	2