

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (Not Included): Screwdriver

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

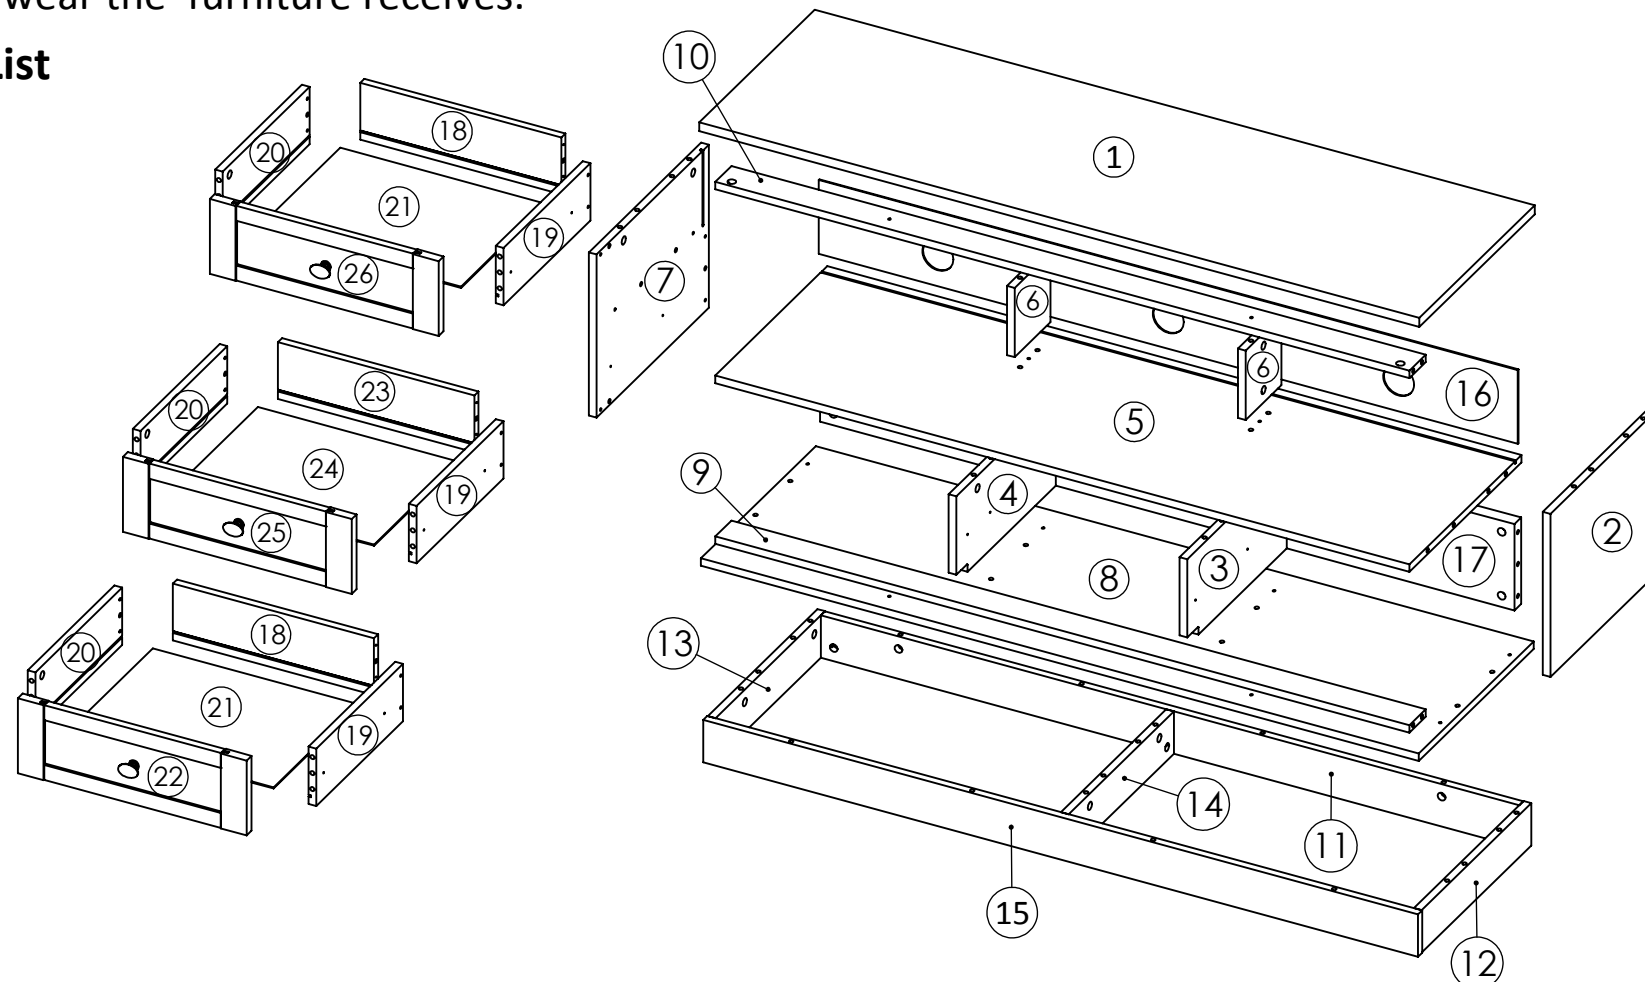

 **SAFAVIEH**
FURNITURE

Model#MED3123

Product Dimensions: W 55.11" x D 16.73" x H 17.71"

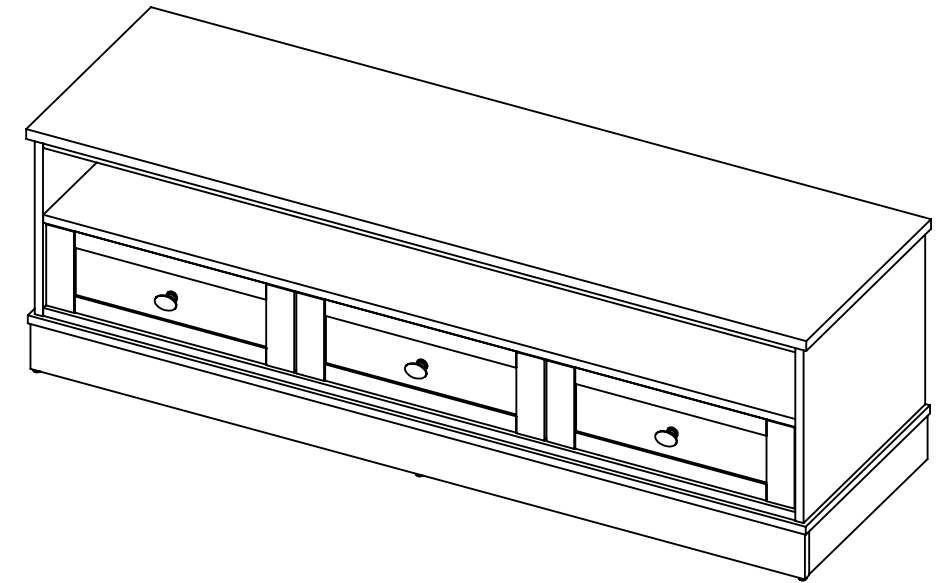

WARNING








This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 55 inches
Top Weight Limit: 60 lbs
Shelf Load Limit: 18 lbs
Drawer Load Limit: 6 lbs
Use with heavier televisions may result in
instability causing tip over resulting in death
or Serious injury.



WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on to the child

Hardware List

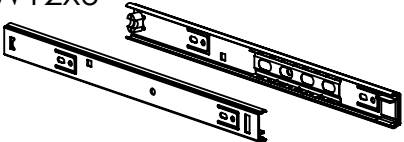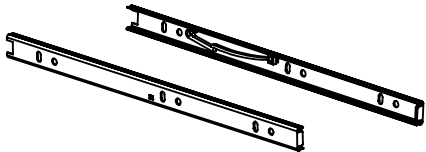HW1x52  Ø6x32MM	HW2x52  Ø15x12MM	HW3x62  Ø8x32MM	HW4x8  Ø6x50MM	HW5x12  Ø7x32MM	HW6x4  Ø6x25MM
HW7x24  Ø6x12MM PH	HW8x8  Ø4x19MM	HW9x3  Ø9x10MM	HW10x3 	HW11x8 	HW12x6 
HW13x6 	HW14x32  Ø20MM				


Part List & HW

Piece	Description	Qty	Carton Call
1	Top Panel	1	1 of 1
2	Right Side Panel	1	1 of 1
3	Center Panel Lower - Right	1	1 of 1
4	Center Panel Lower - Left	1	1 of 1
5	Panel Fixed Shelf	1	1 of 1
6	Center Panel - Upper	2	1 of 1
7	Left Side Panel	1	1 of 1
8	Bottom Panel	1	1 of 1
9	Lower Apron	1	1 of 1
10	Upper Apron	1	1 of 1
11	Plint - Rear	1	1 of 1
12	Plint - Right	1	1 of 1
13	Plint - Left	1	1 of 1
14	Plint - Center	1	1 of 1
15	Plint - Front	1	1 of 1
16	Back Panel - Upper	1	1 of 1
17	Back Panel - Lower	1	1 of 1
18	Drawer Back - Large	2	1 of 1
19	Right Side Drawer	3	1 of 1
20	Left Side Drawer	3	1 of 1
21	Drawer Base - Large	2	1 of 1
22	Front Drawer - Right	1	1 of 1
23	Drawer Back - Small	1	1 of 1
24	Drawer Base - Small	1	1 of 1
25	Front Drawer - Center	1	1 of 1
26	Front Drawer - Left	1	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt	52	1 of 1
HW2	Camlock Ø15x12 mm	52	1 of 1
HW3	Wooden Dowel Ø8	62	1 of 1
HW4	Screw M6 x 50 mm	8	1 of 1
HW5	Screw M7 x 32 mm	12	1 of 1
HW6	Screw M6 x 25 mm	4	1 of 1
HW7	Screw M6 x 12 mm PH	24	1 of 1
HW8	Screw M x 19 mm	8	1 of 1
HW9	Screw Panhead 9 x 10 mm	3	1 of 1
HW10	Handle Drawer	3	1 of 1
HW11	Plastic Stopper	8	1 of 1
HW12	Metal Runner 1	6	1 of 1
HW13	Metal Runner 2	6	1 of 1
HW14	Cover Cap Sticker	32	1 of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

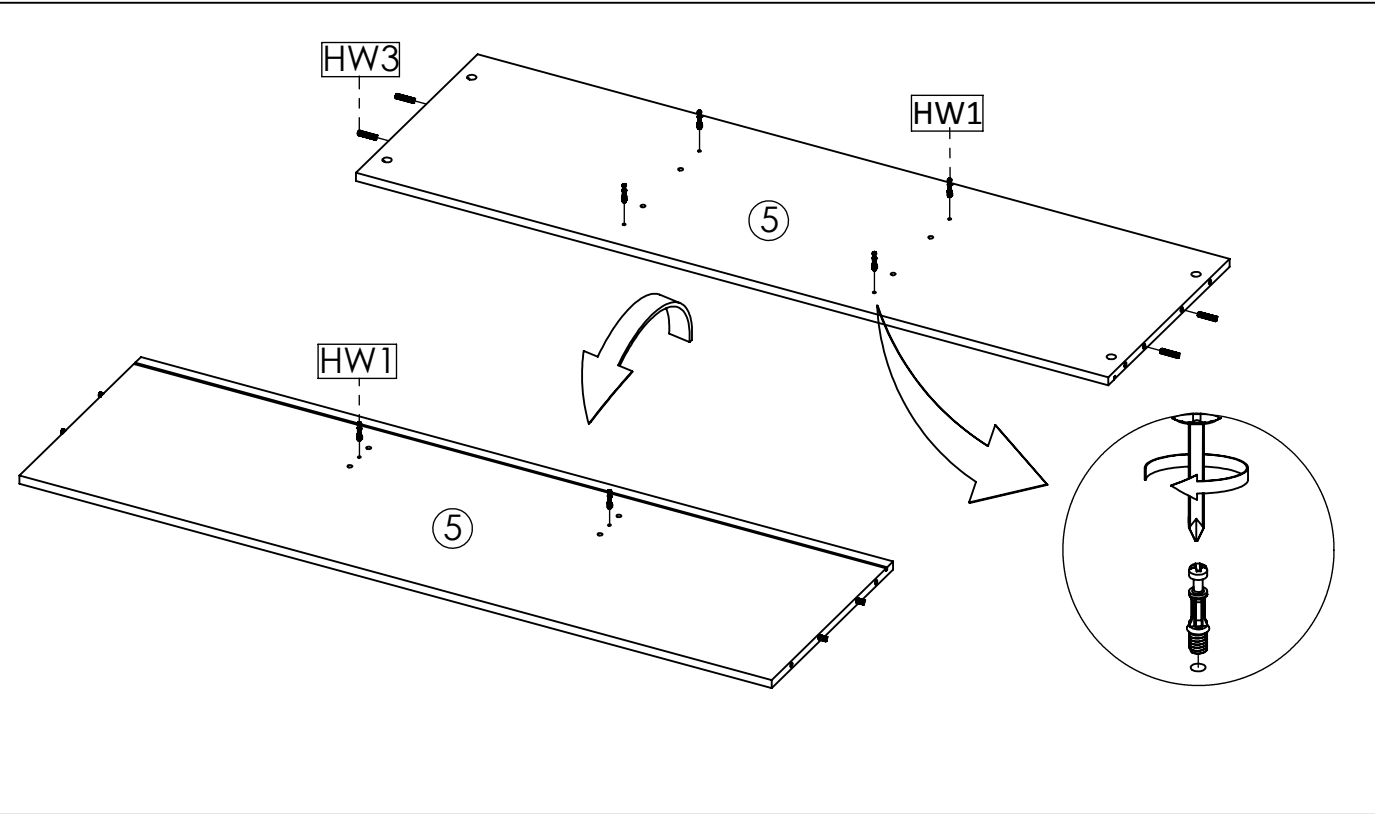


STEP1: Insert Cambolt (HW1) And Wooden Dowel (HW3) Into Panel Fixed Shelf (5)

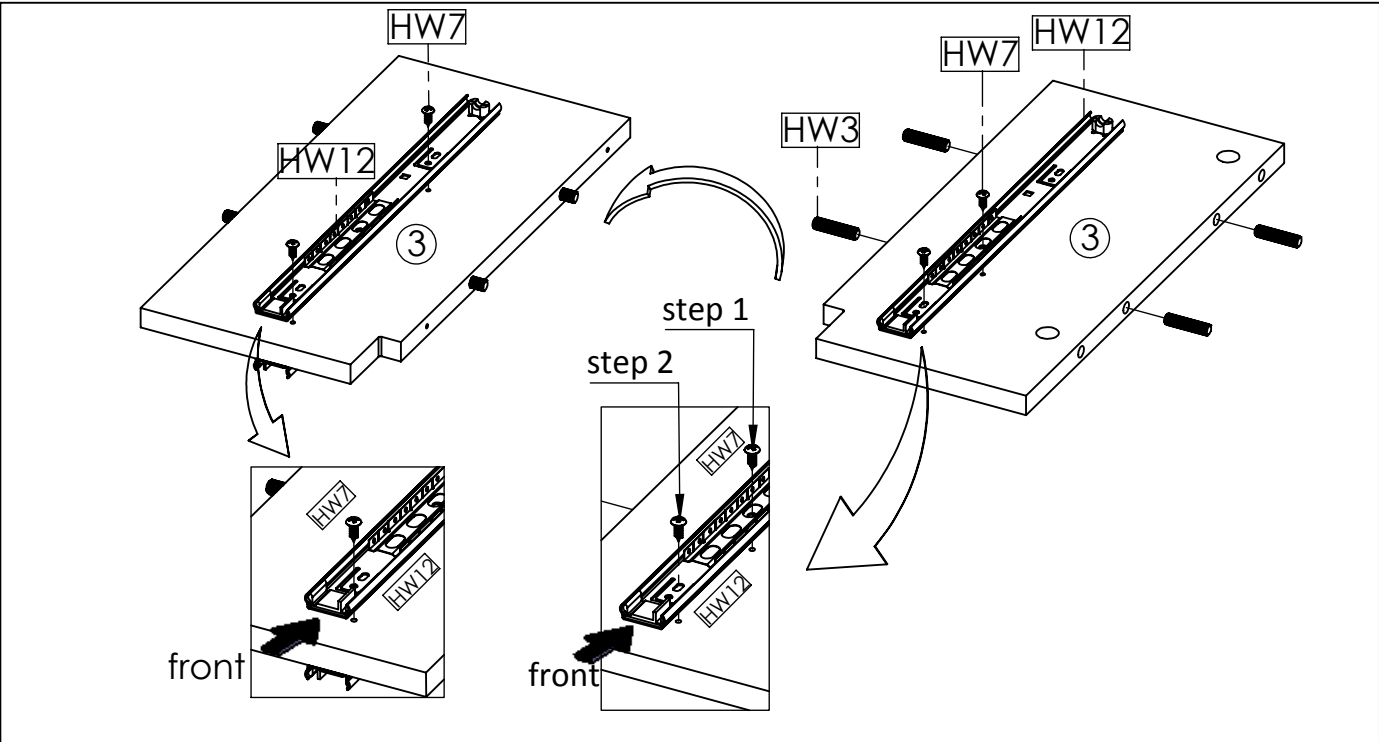





STEP2: Insert Wooden Dowel (HW3) Into Center Panel Lower - Right (3), Continue With Securing Part Of The Metal Runner 1 (HW12) Into Position As The Above Image, Using Screw M6 x 12 mm PH (HW7) And Tighten It Using Screwdriver.




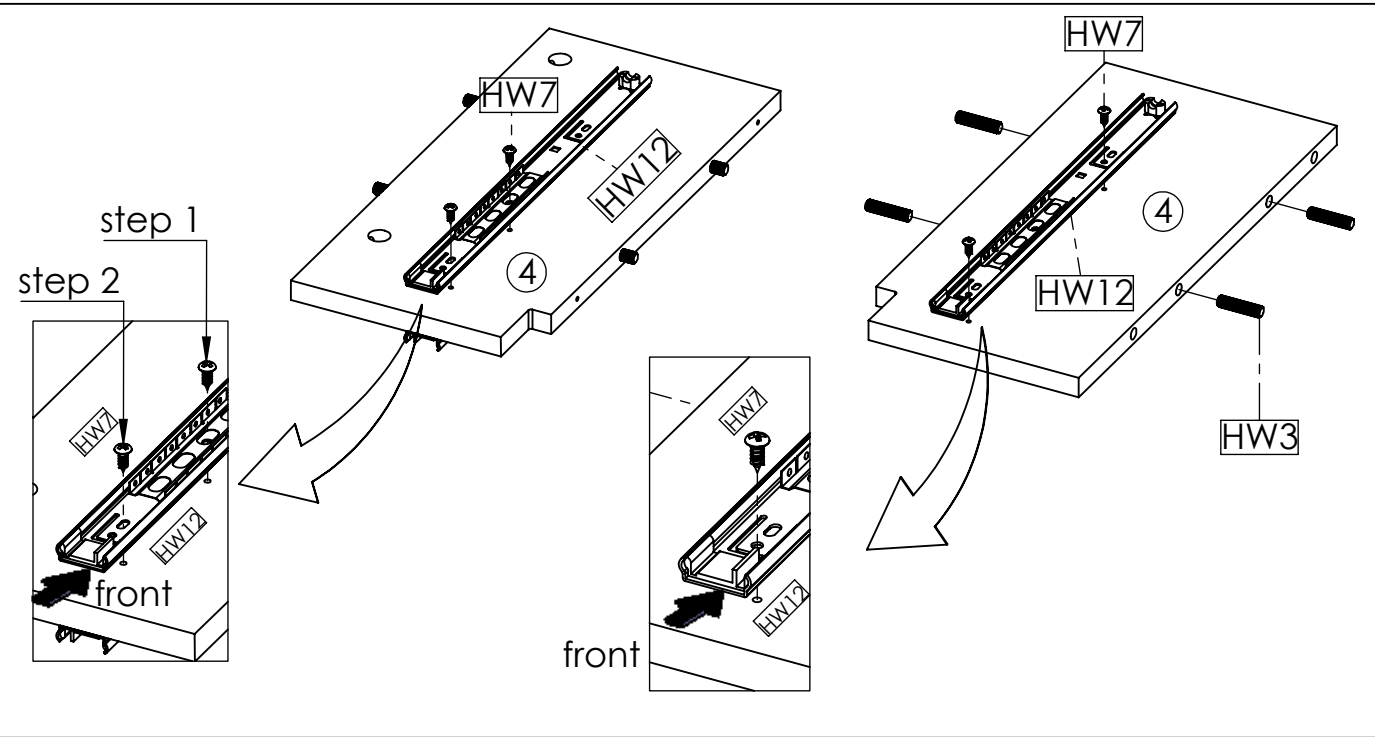






STEP3: Insert Wooden Dowel (HW3) Into Center Panel Lower - Left (4), Continue With Securing Part Of The Metal Runner 1 (HW12) Into Position As The Above Image, Using Screw M6 x 12 mm PH (HW7) And Tighten It Using Screwdriver.

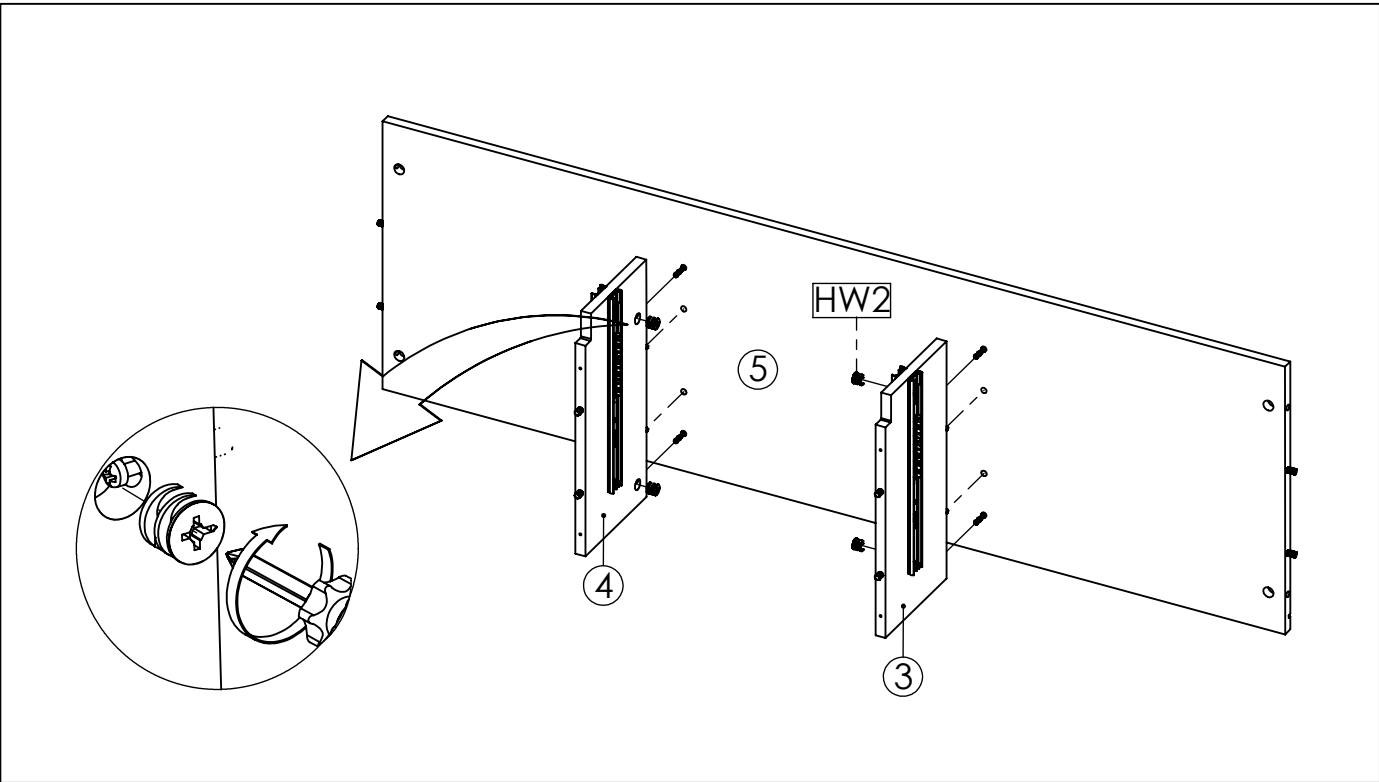


STEP4: Insert Center Panel Lower - Right (3) And Center Panel Lower - Left (4) Into Panel Fixed Shelf (5), Secure with Camlock (HW2) Tighten It Using Screwdriver.

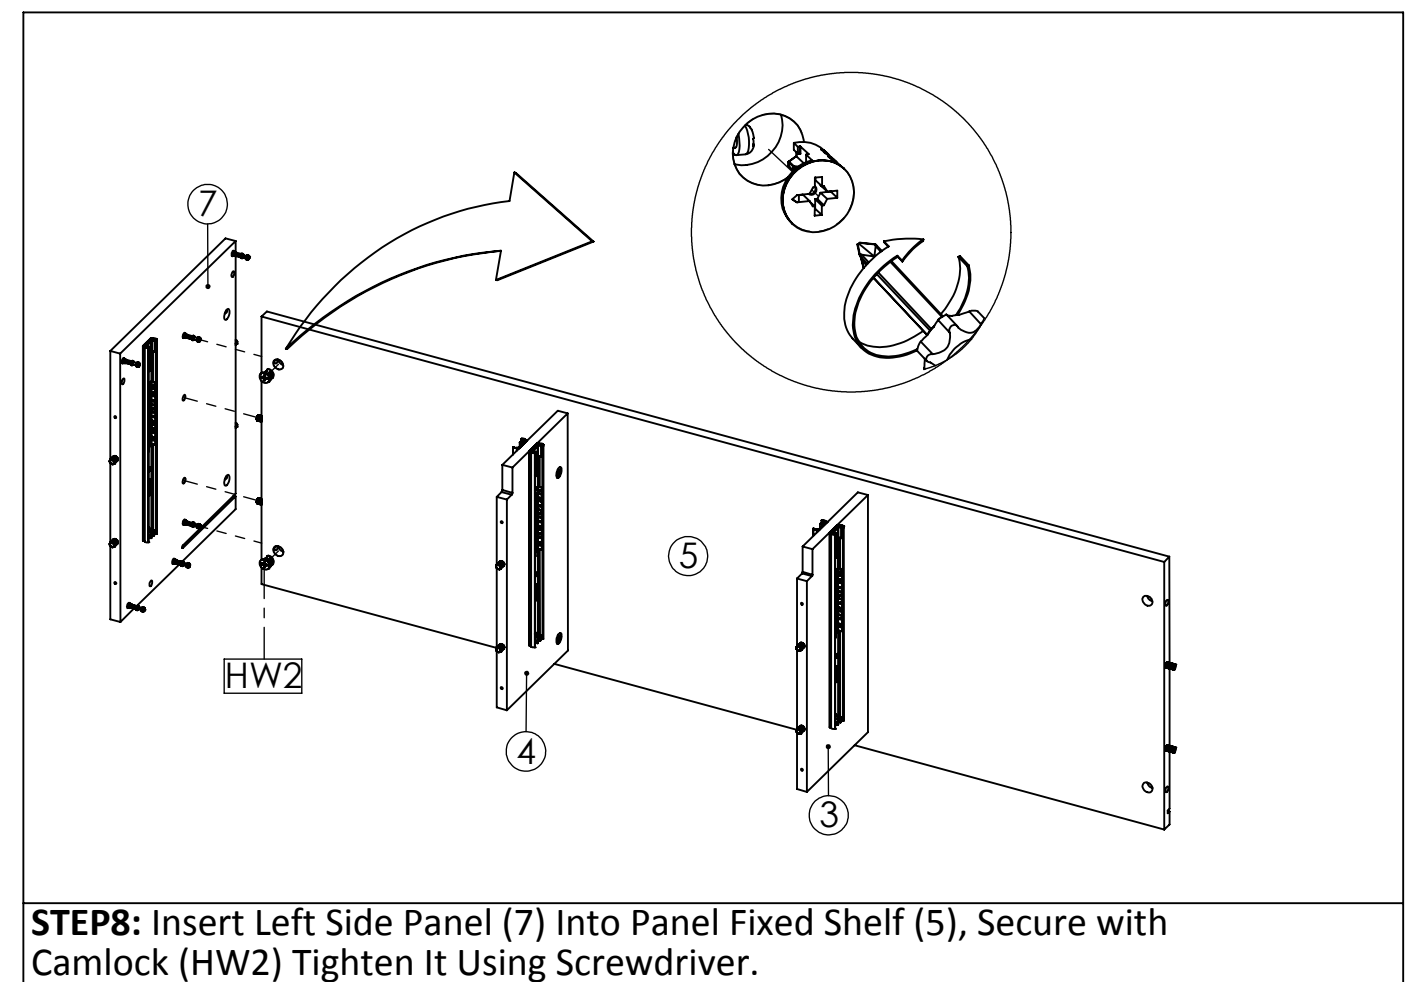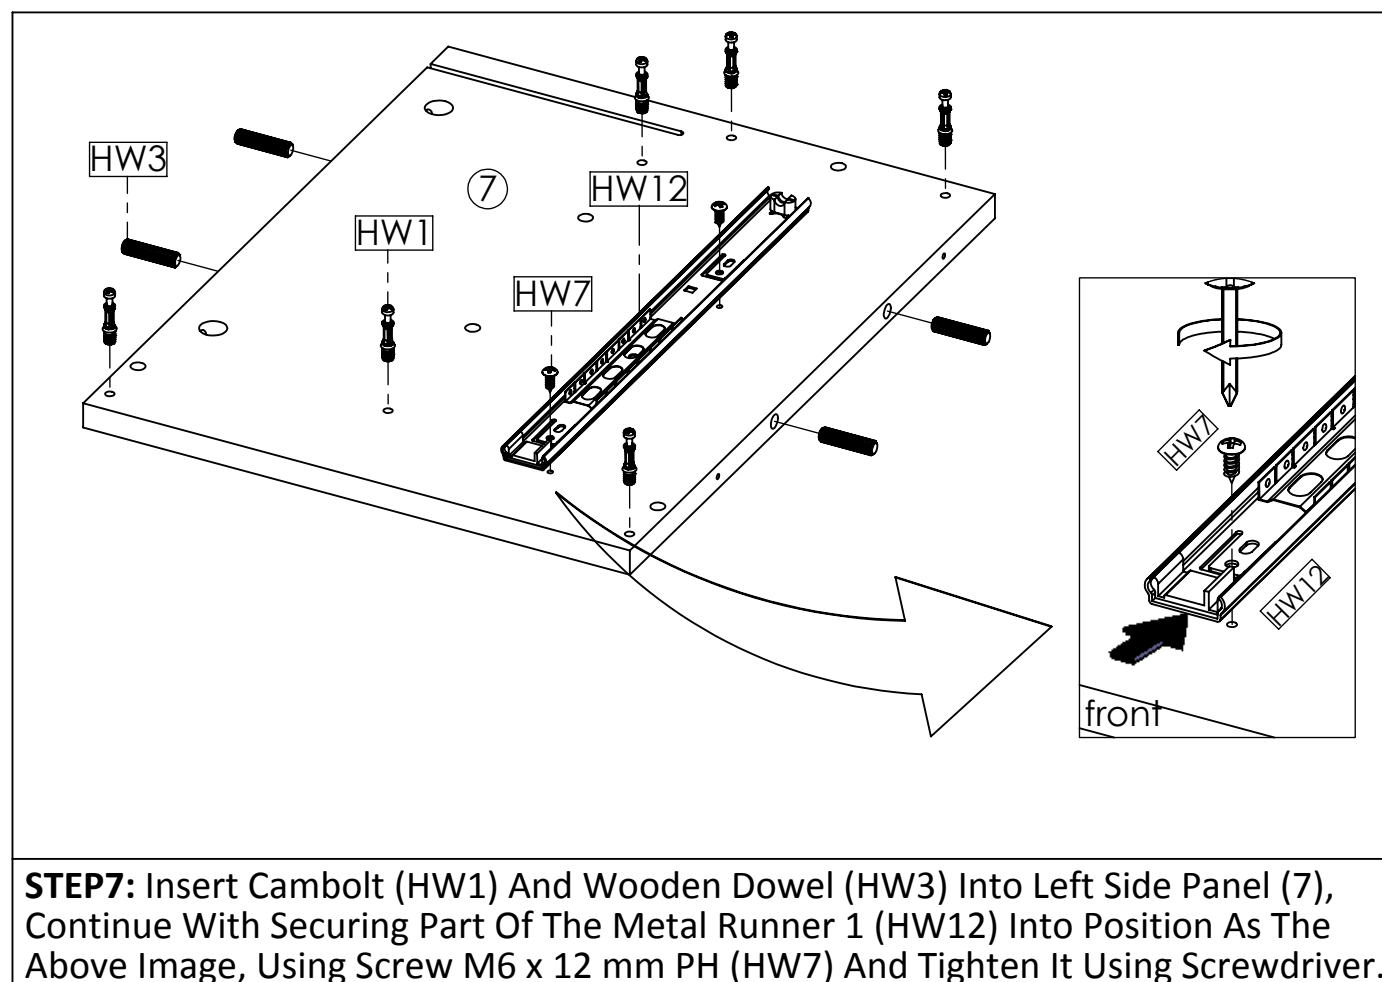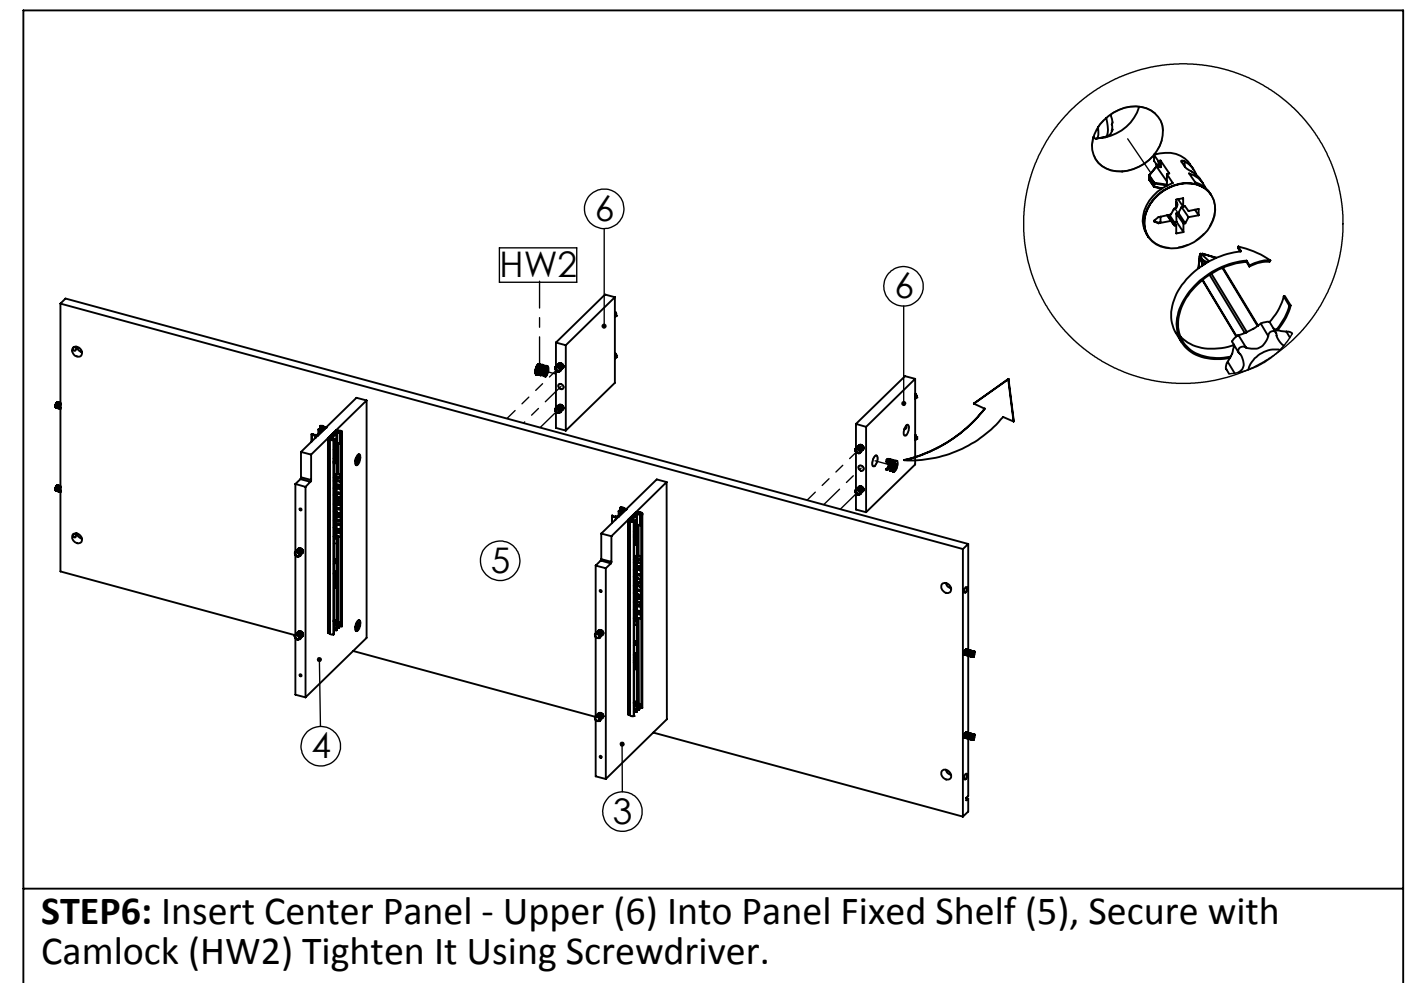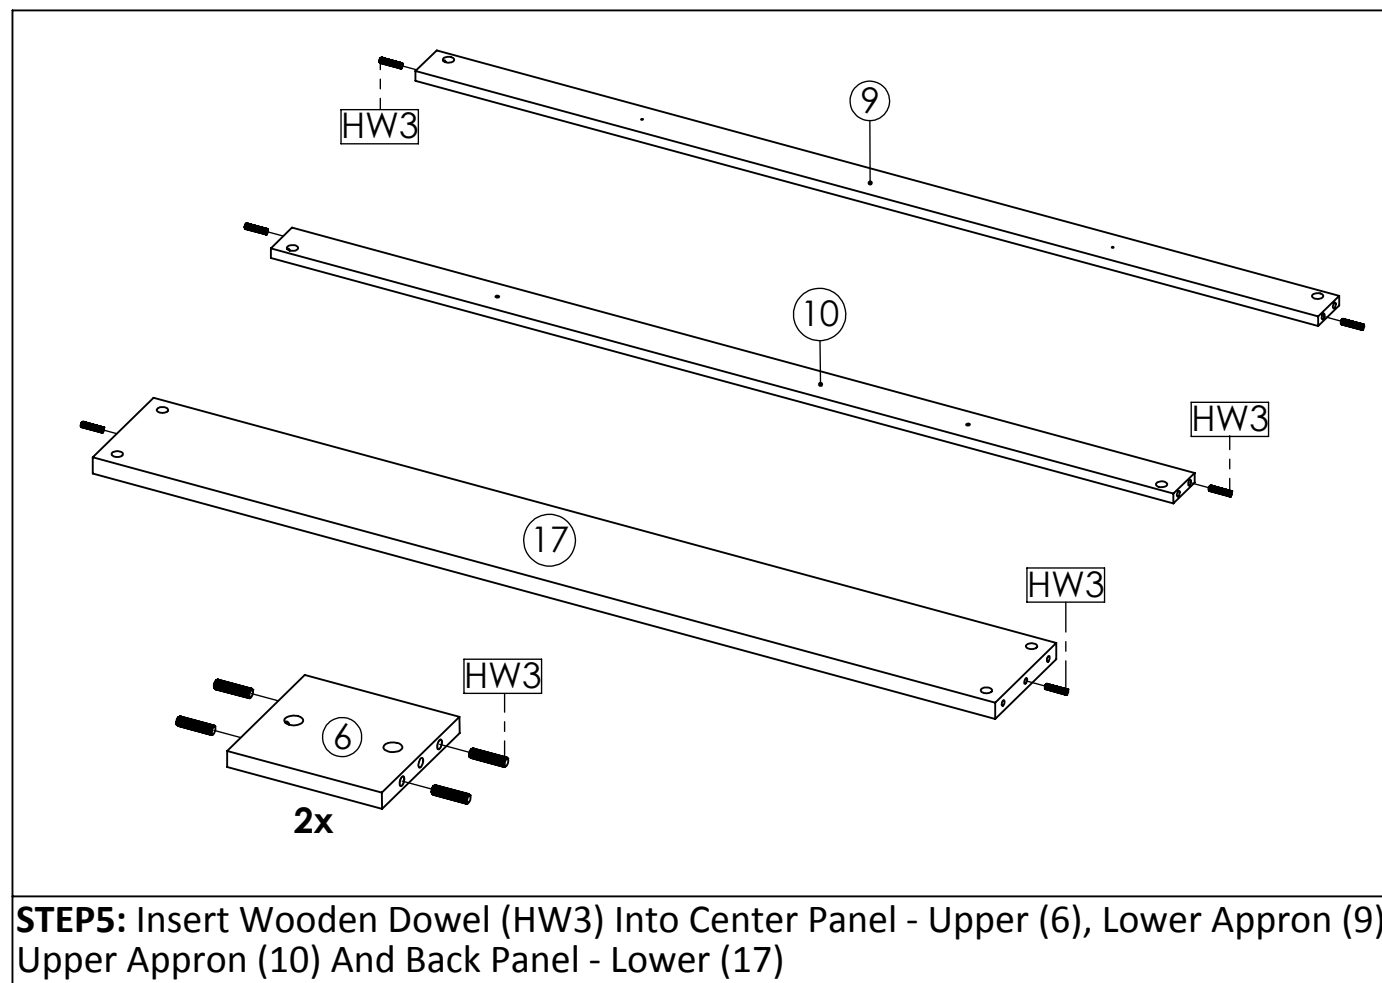


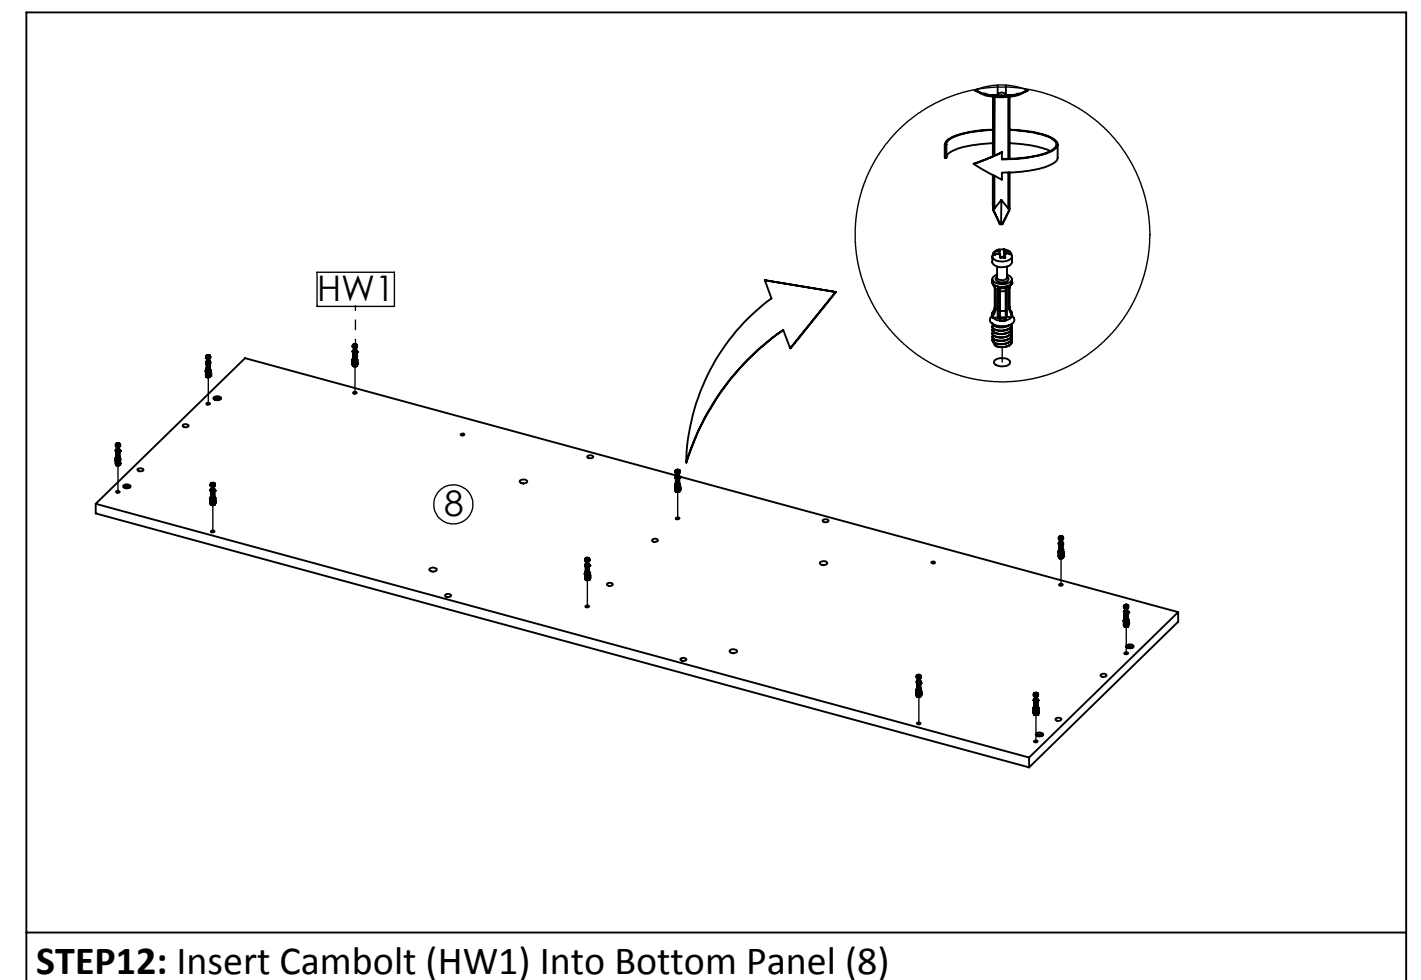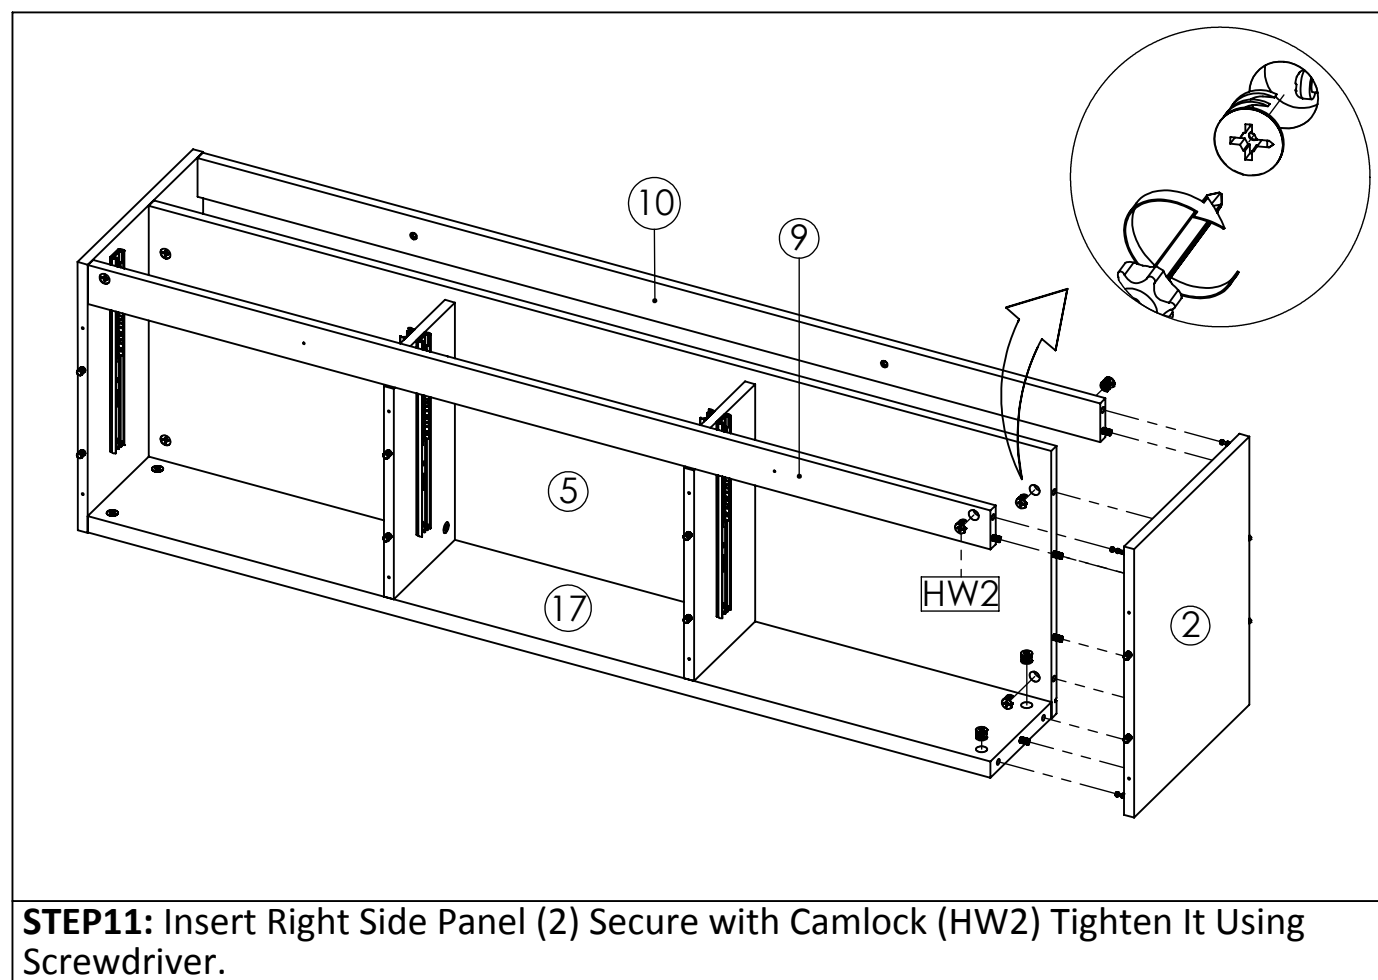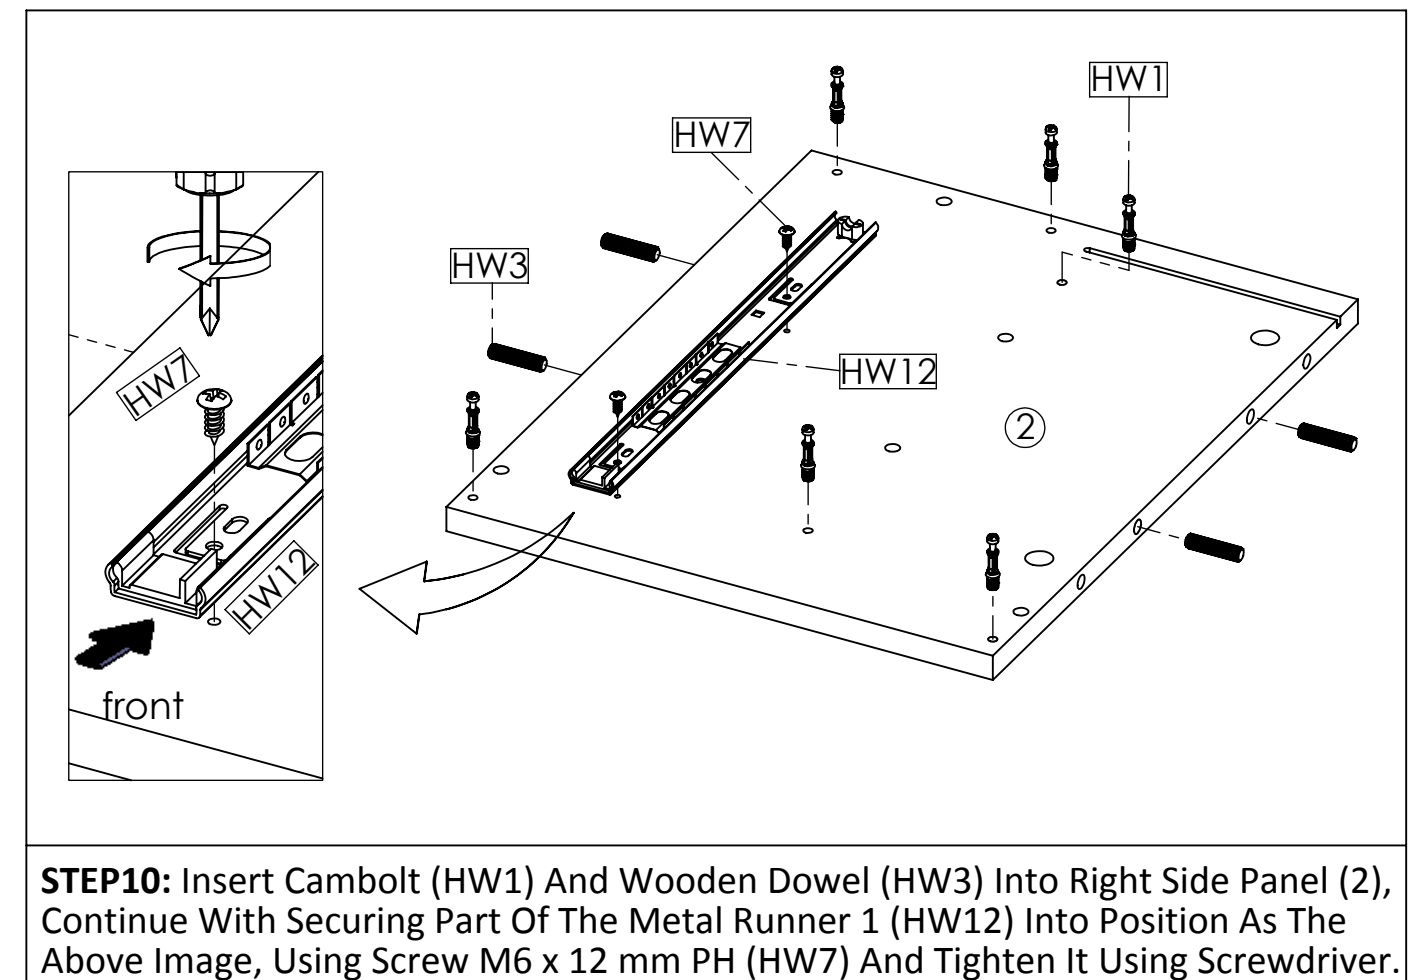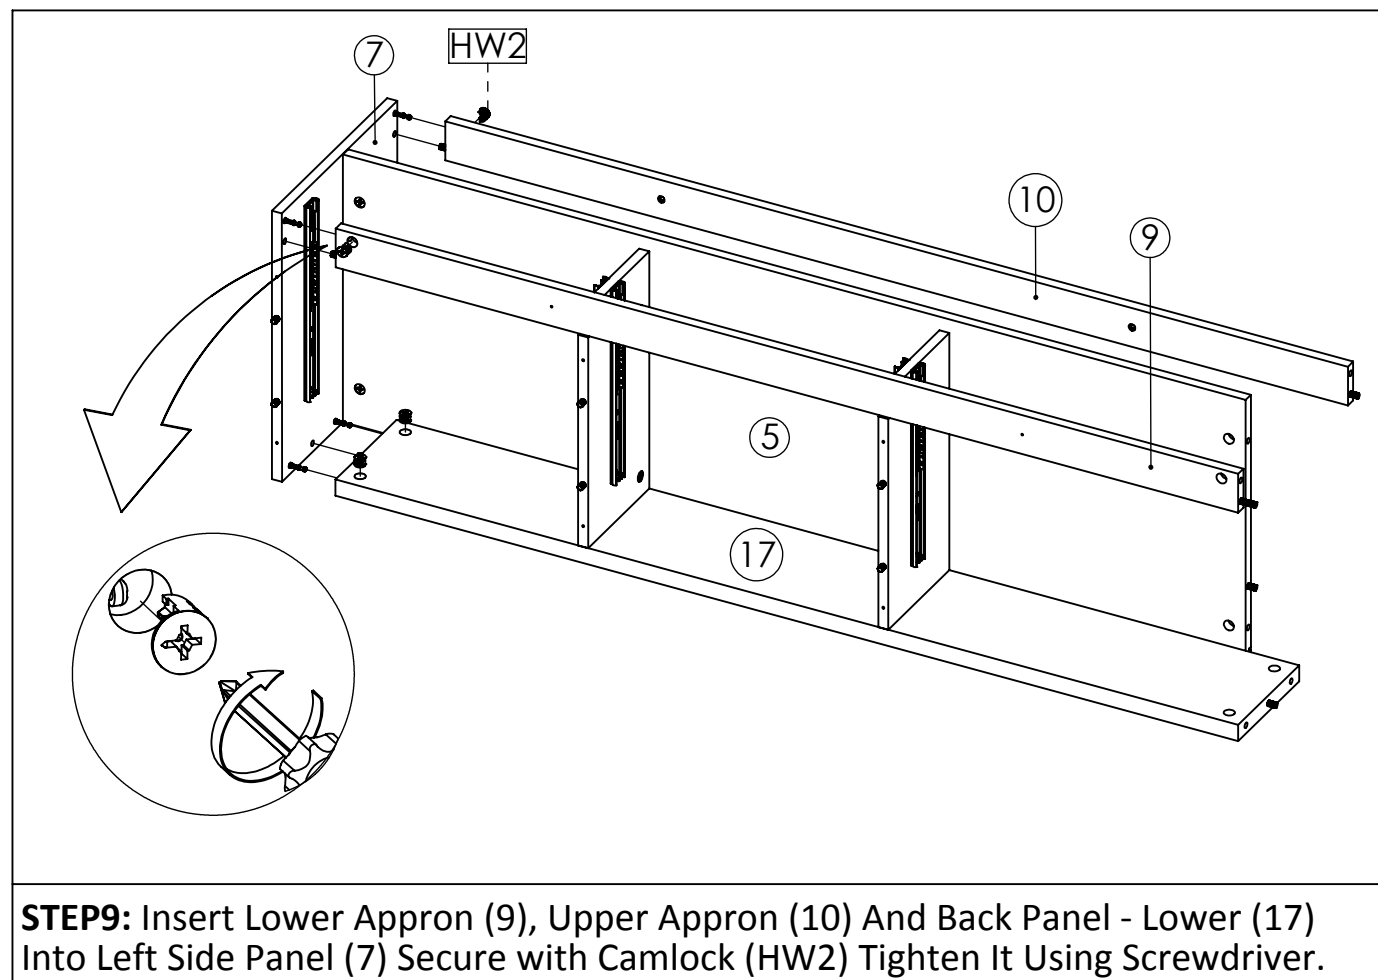

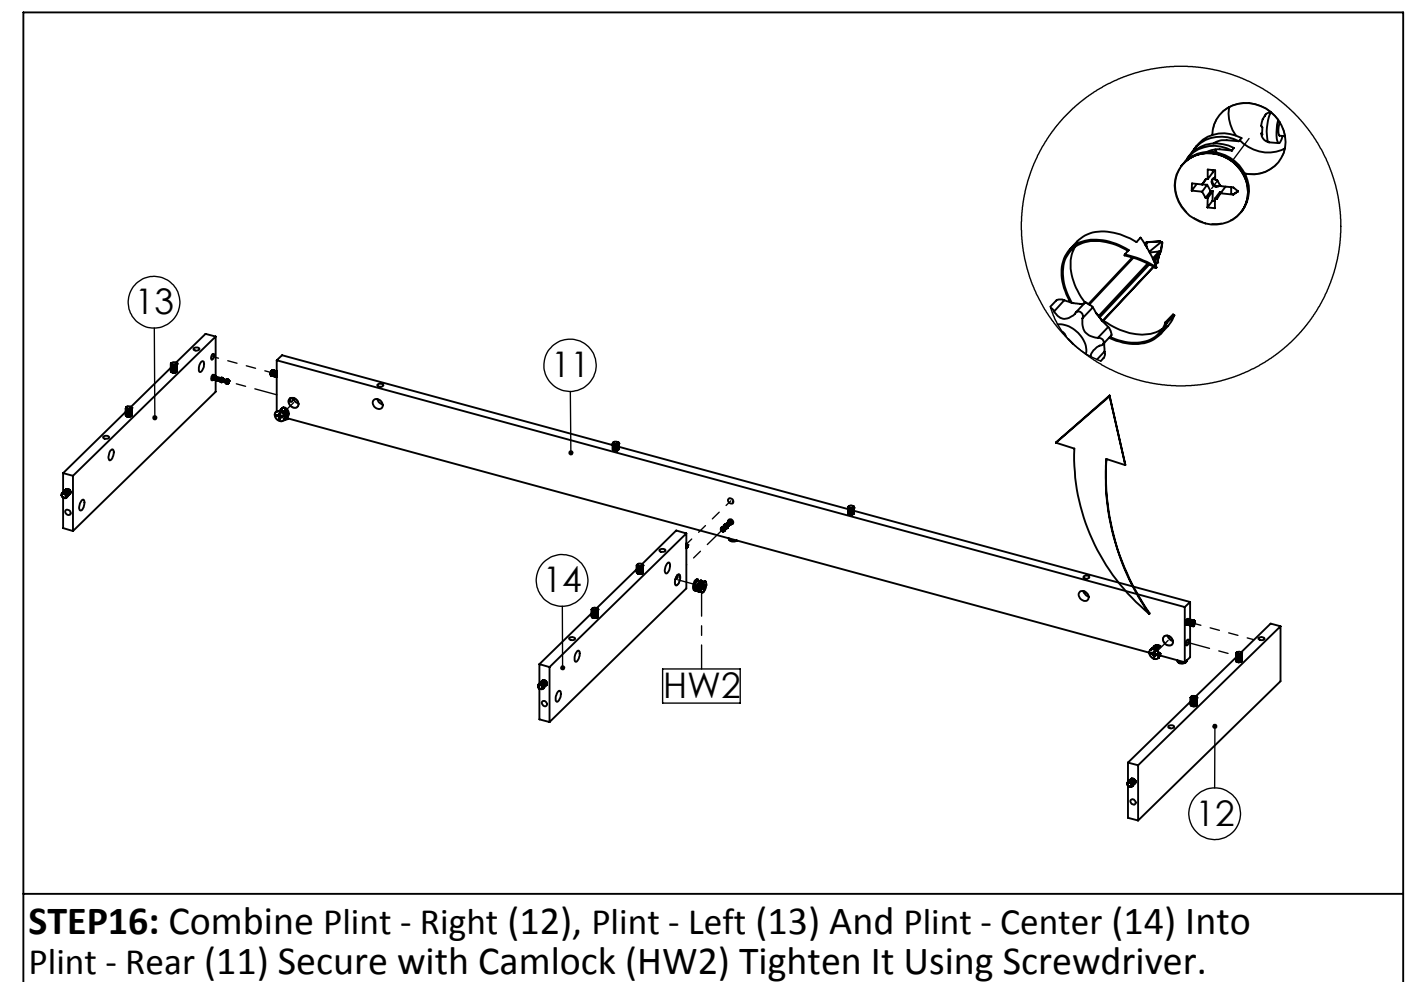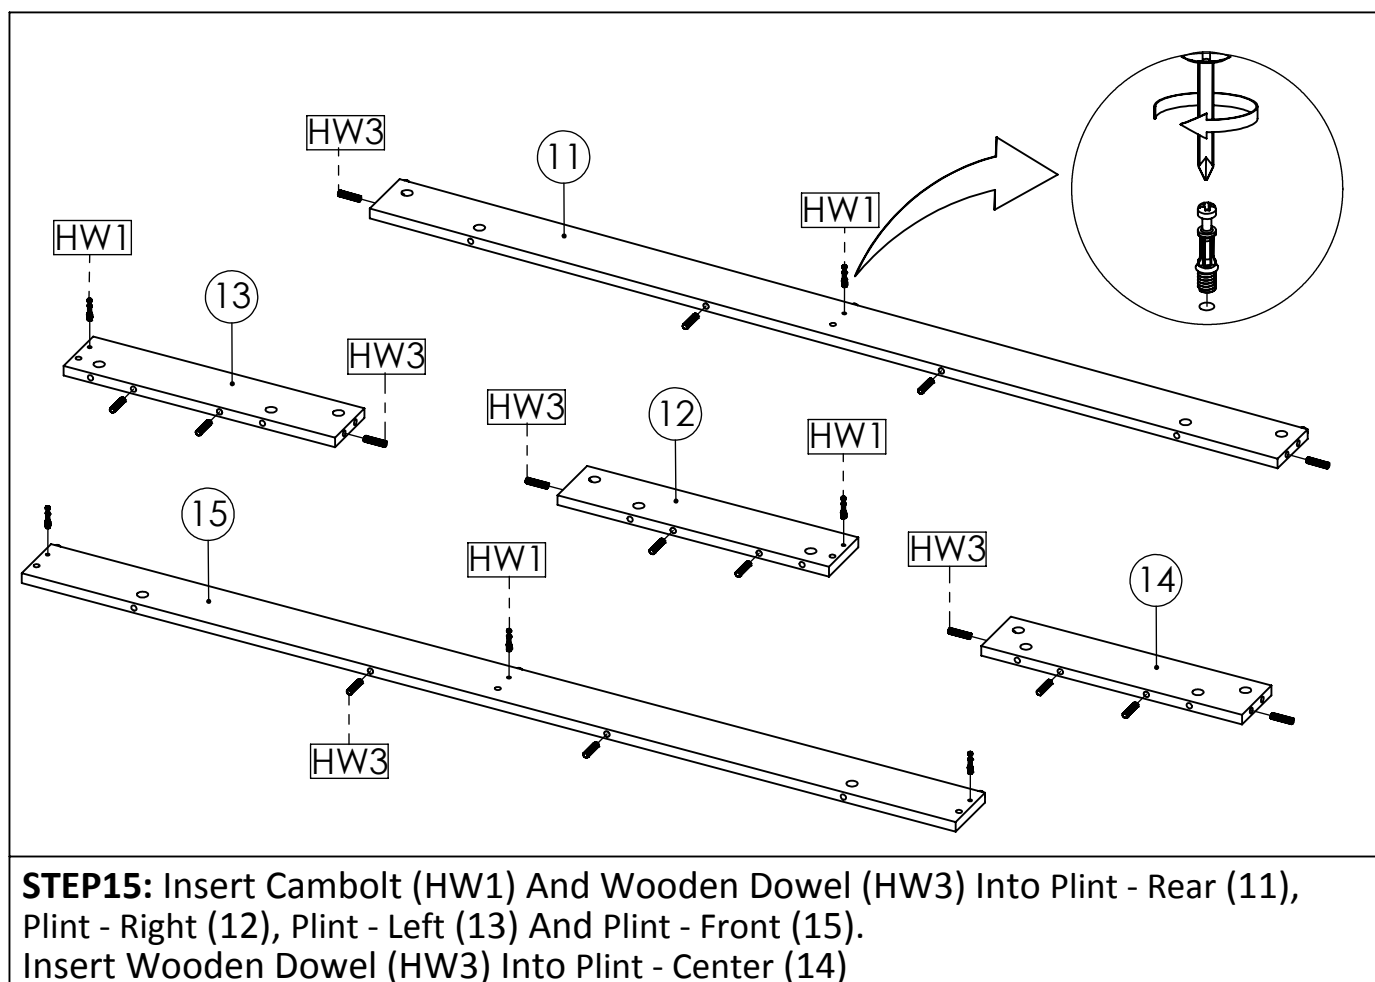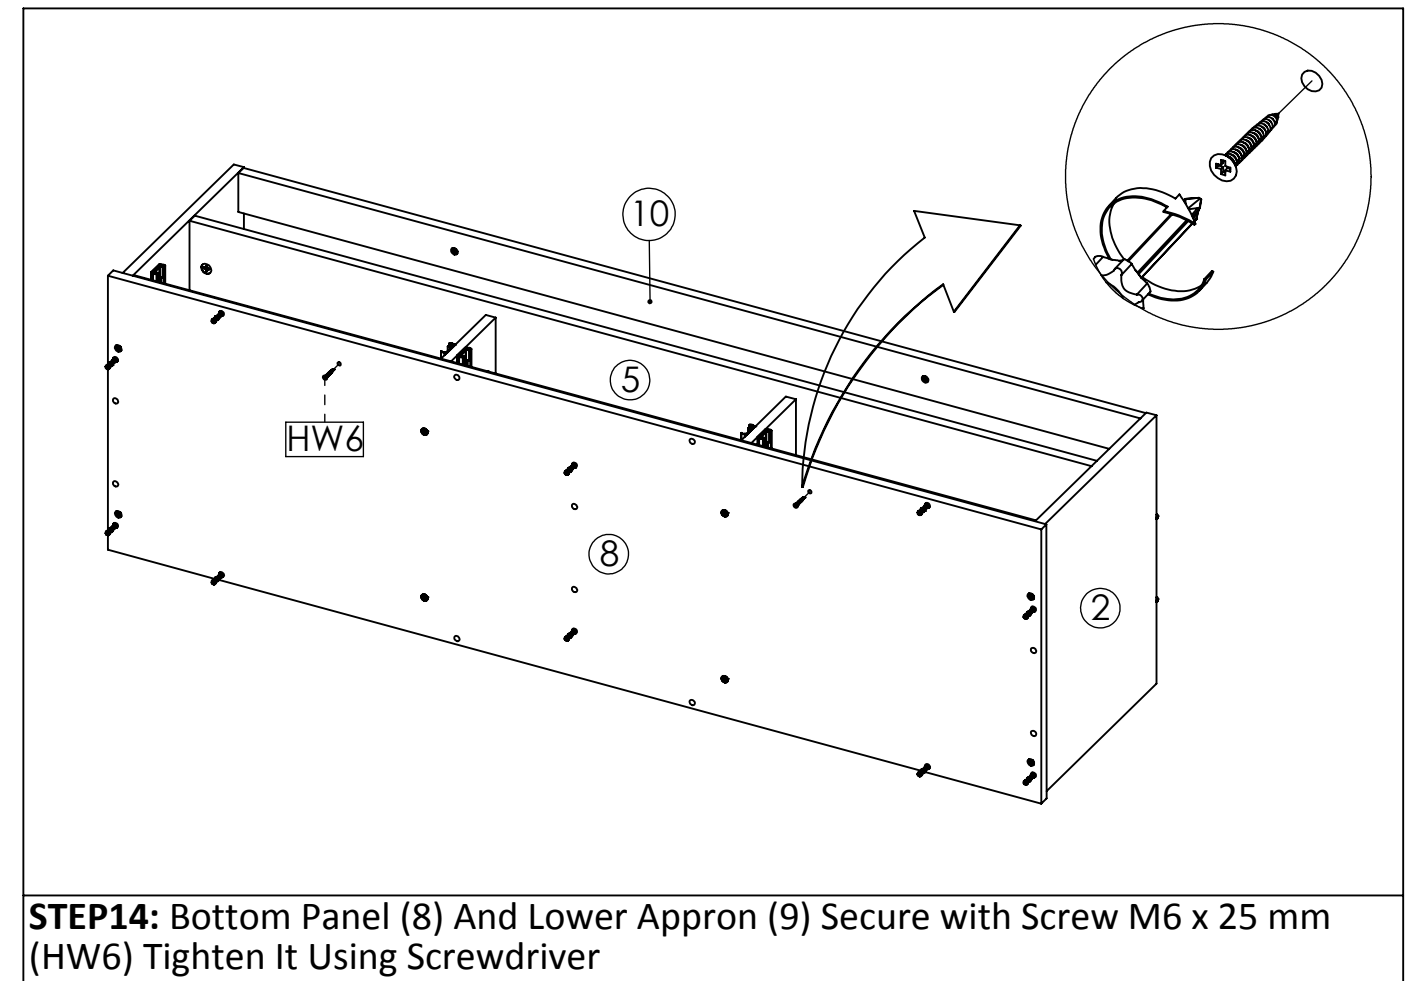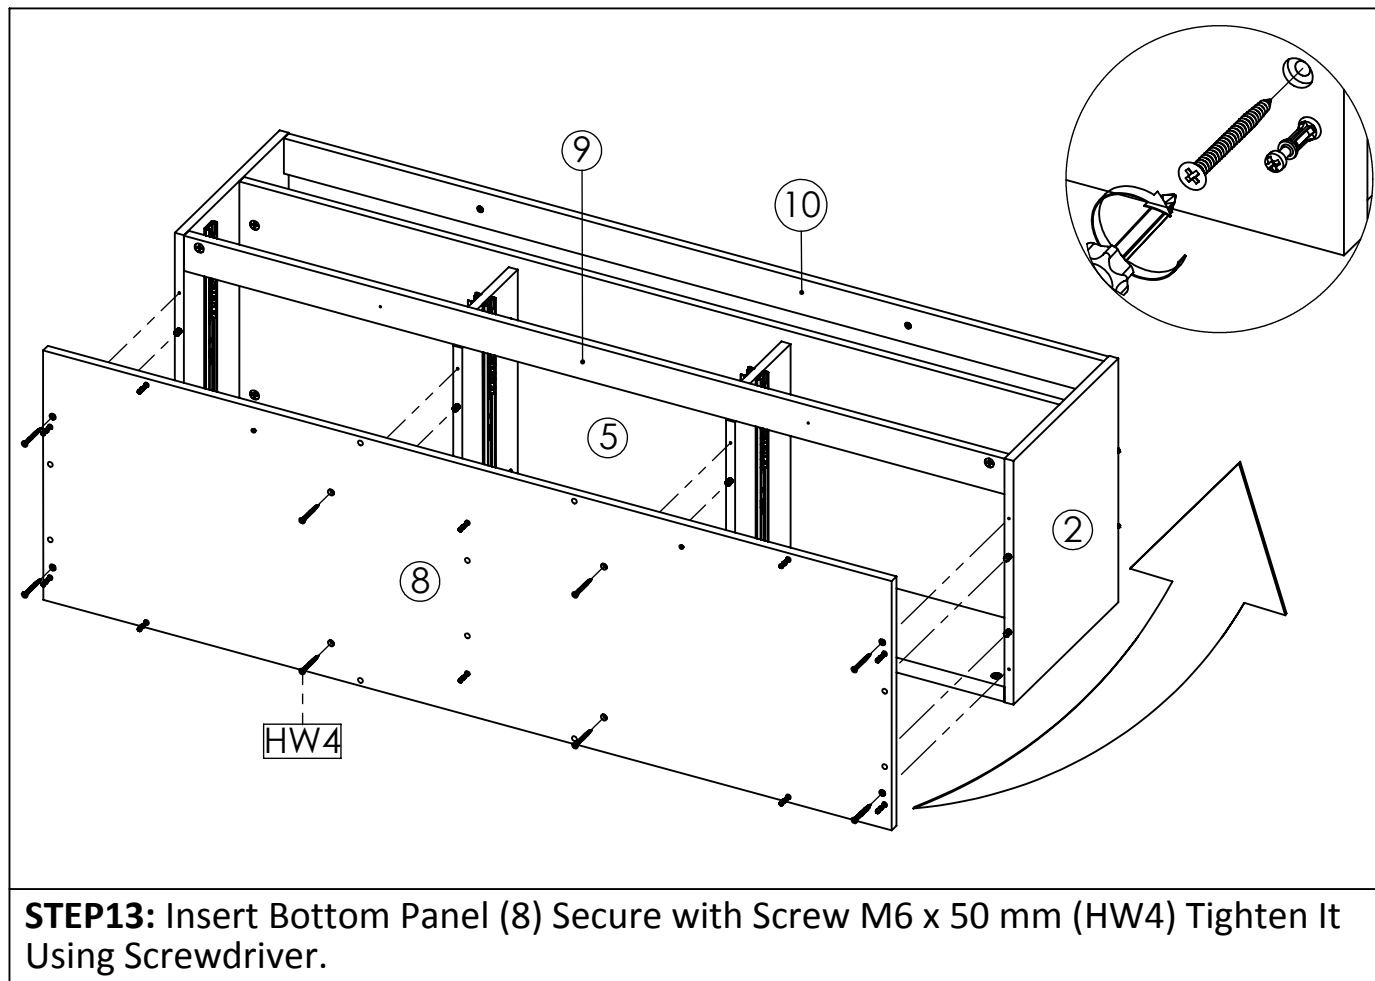


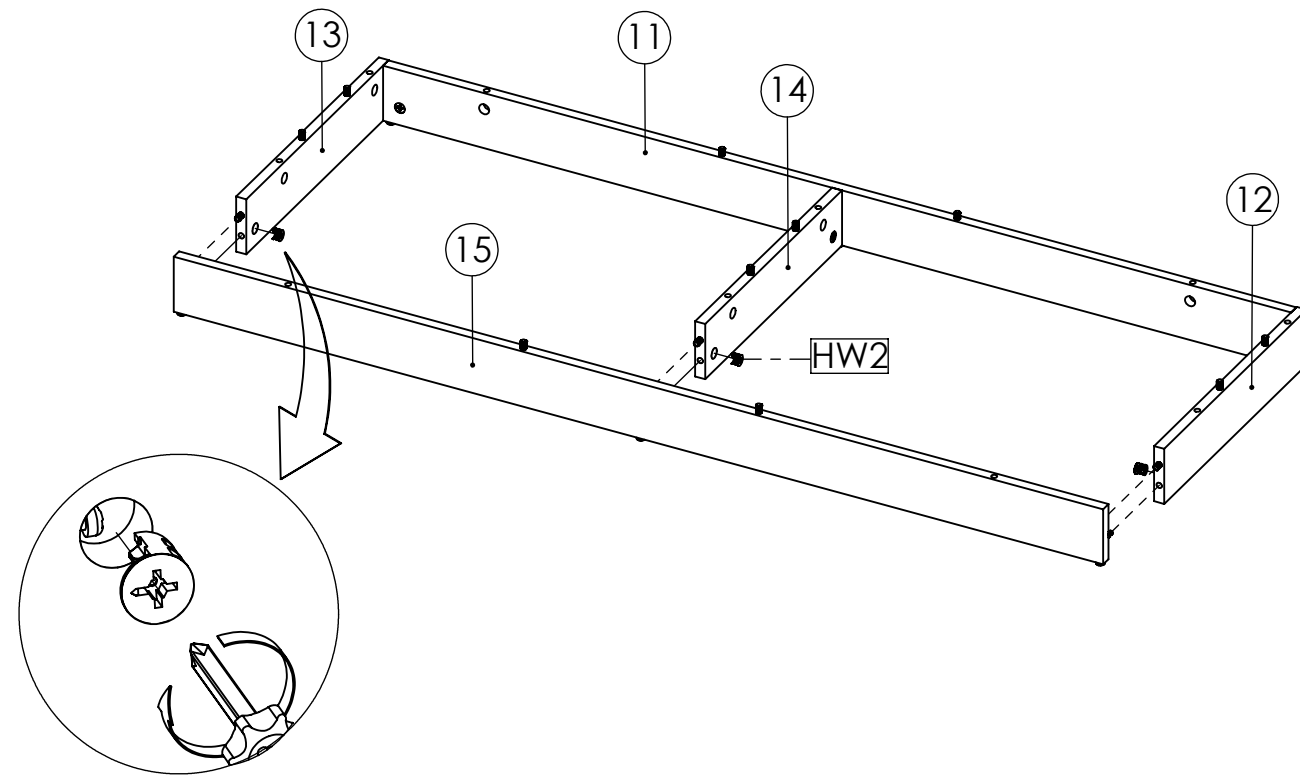


STEP17: Insert Plint - Front (15), Secure with Camlock (HW2) Tighten It Using Screwdriver.

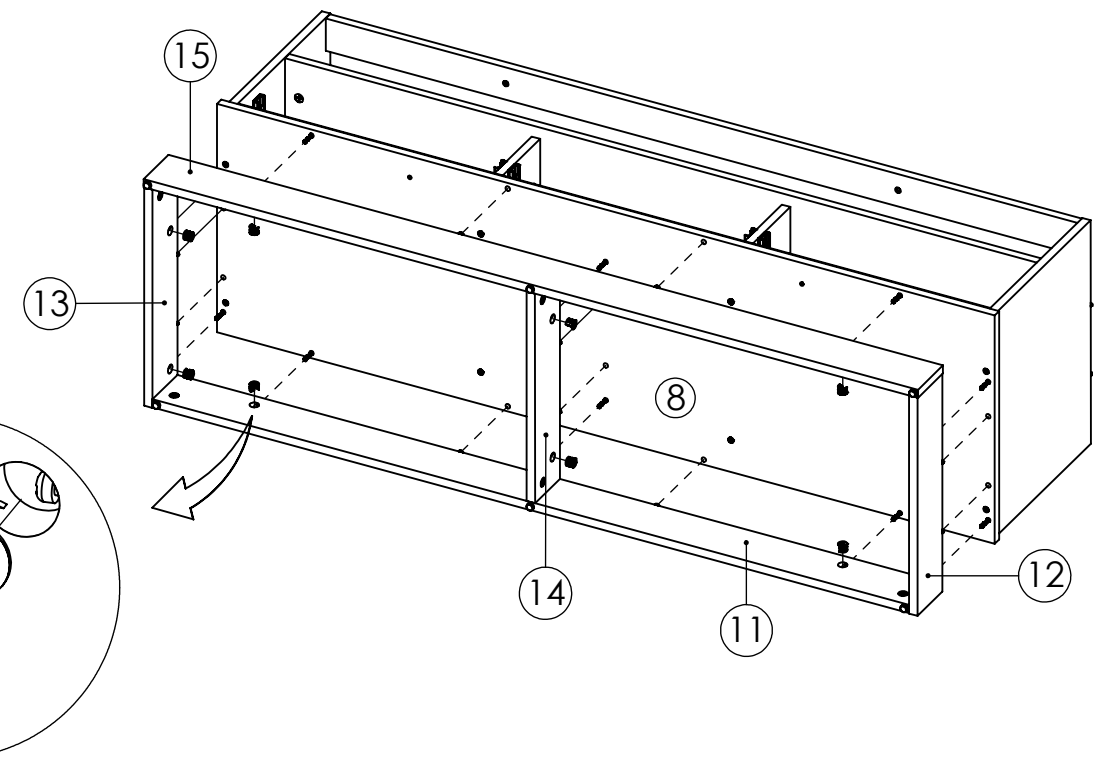


STEP18: Insert All Plint Into Bottom Panel (8) Secure with Camlock (HW2) Tighten It Using Screwdriver.

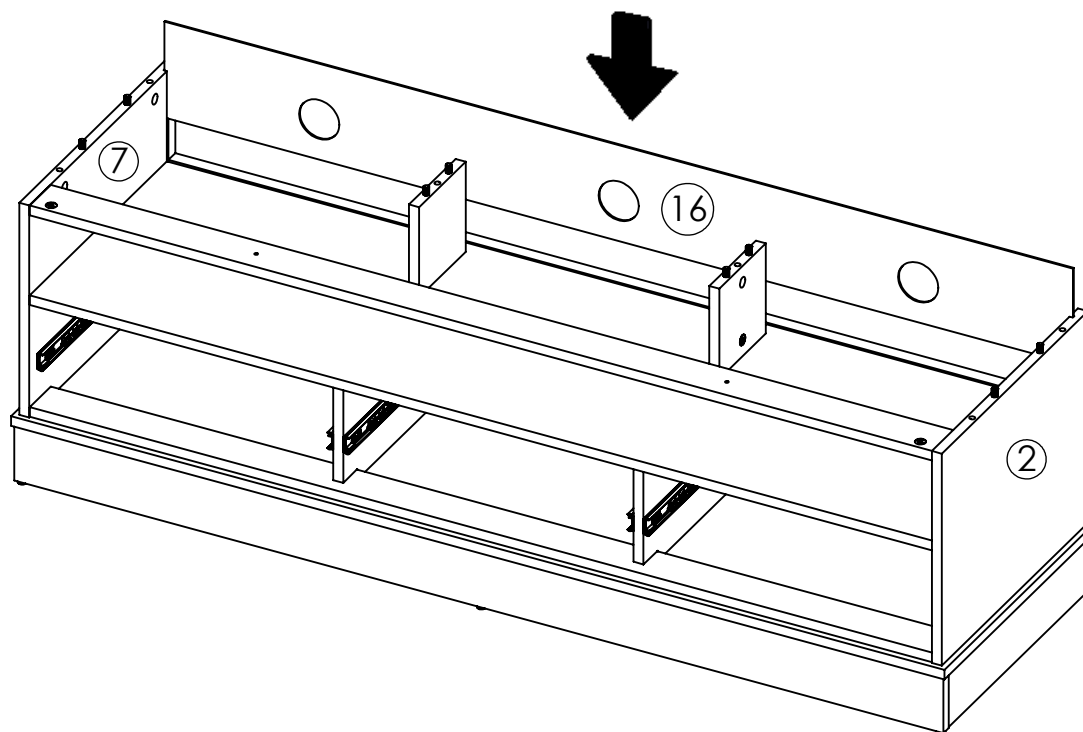


STEP19: Insert Back Panel - Upper (16)

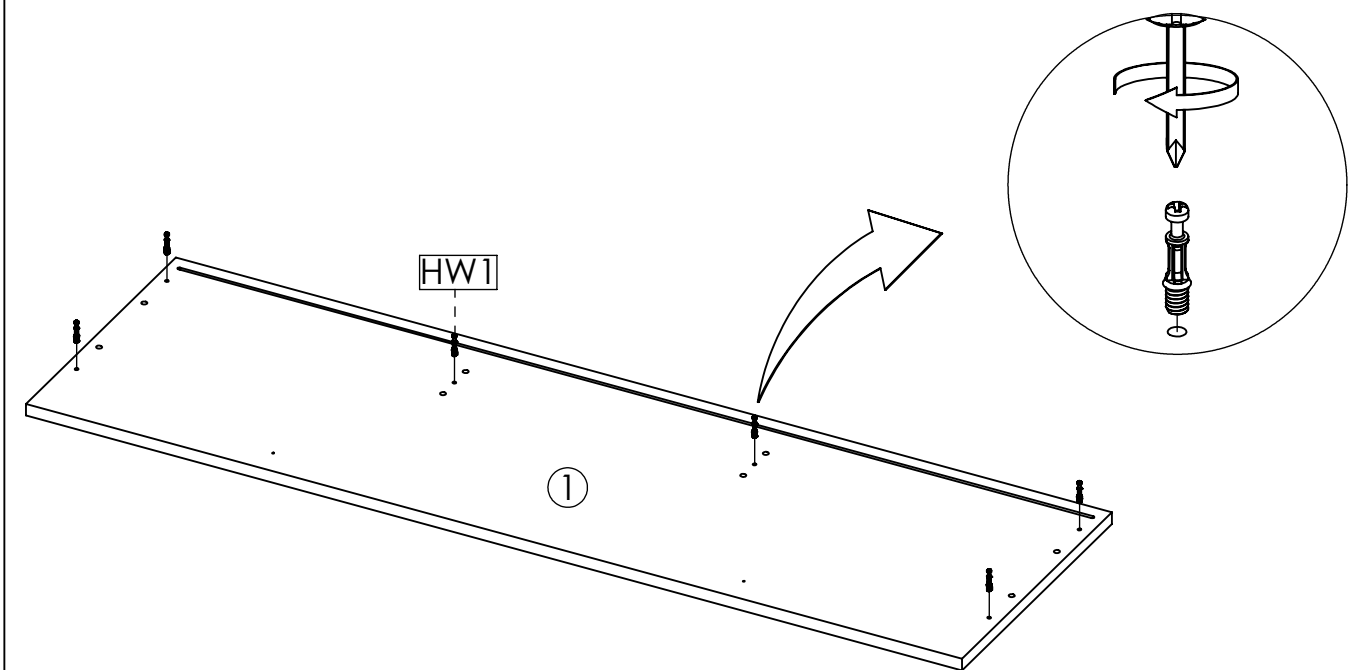


STEP20: Insert Cambolt (HW1) Into Top Panel (1)

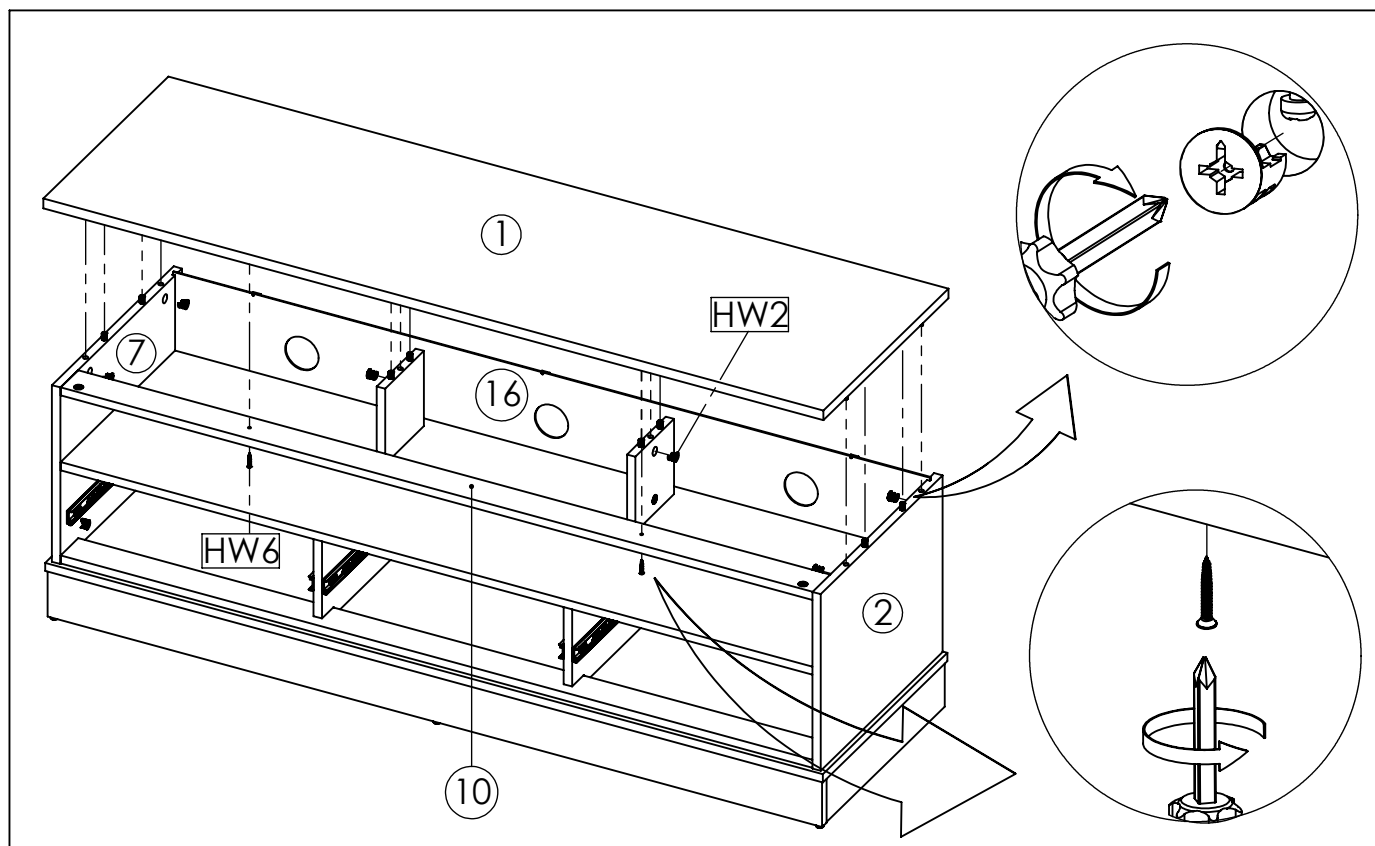


STEP21: Insert Top Panel (1) Secure with Camlock (HW2) Tighten It Using Screwdriver, Continue Upper Apron (10) And Top Panel (1) Secure with Screw M6 x 25 mm (HW6) Tighten It Using Screwdriver.

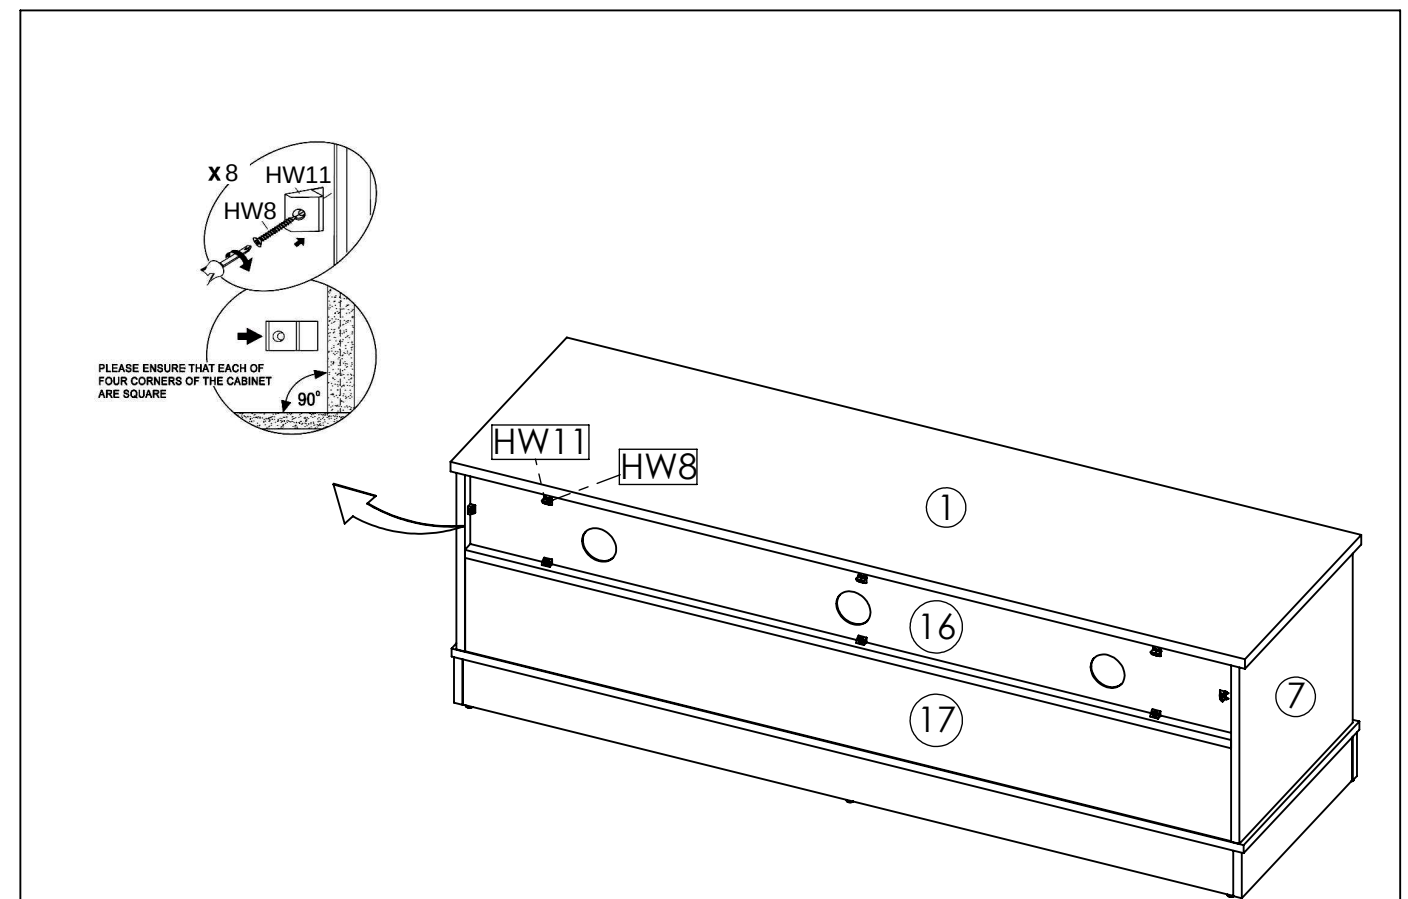


STEP22: Please ensure that each of four corners of the cabinet are square.

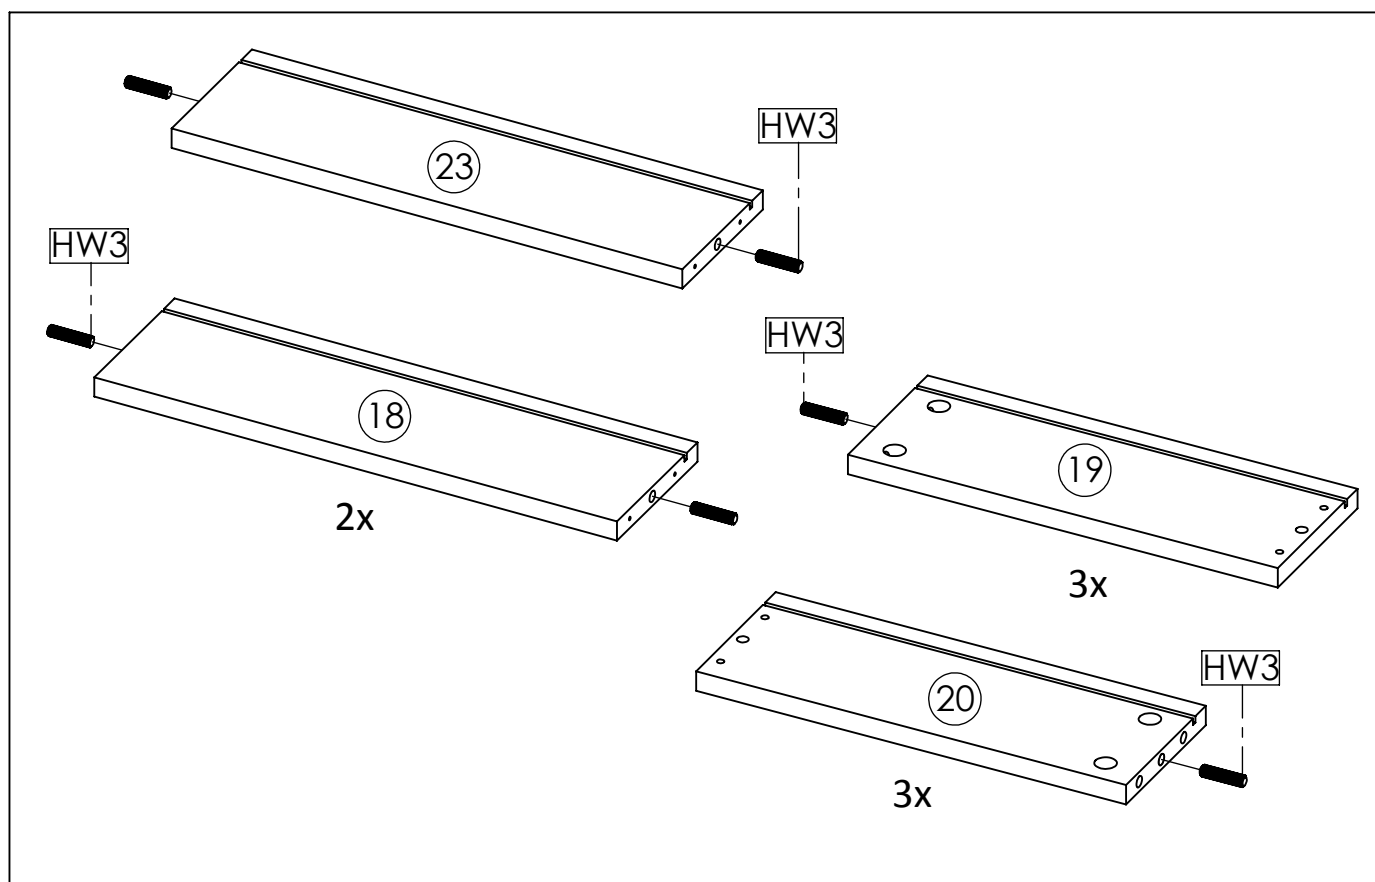


STEP23: Insert Wooden Dowel (HW3) Into Drawer Back - Large (18), Right Side Drawer (19) Left Side Drawer (20) And Drawer Back - Small (23)

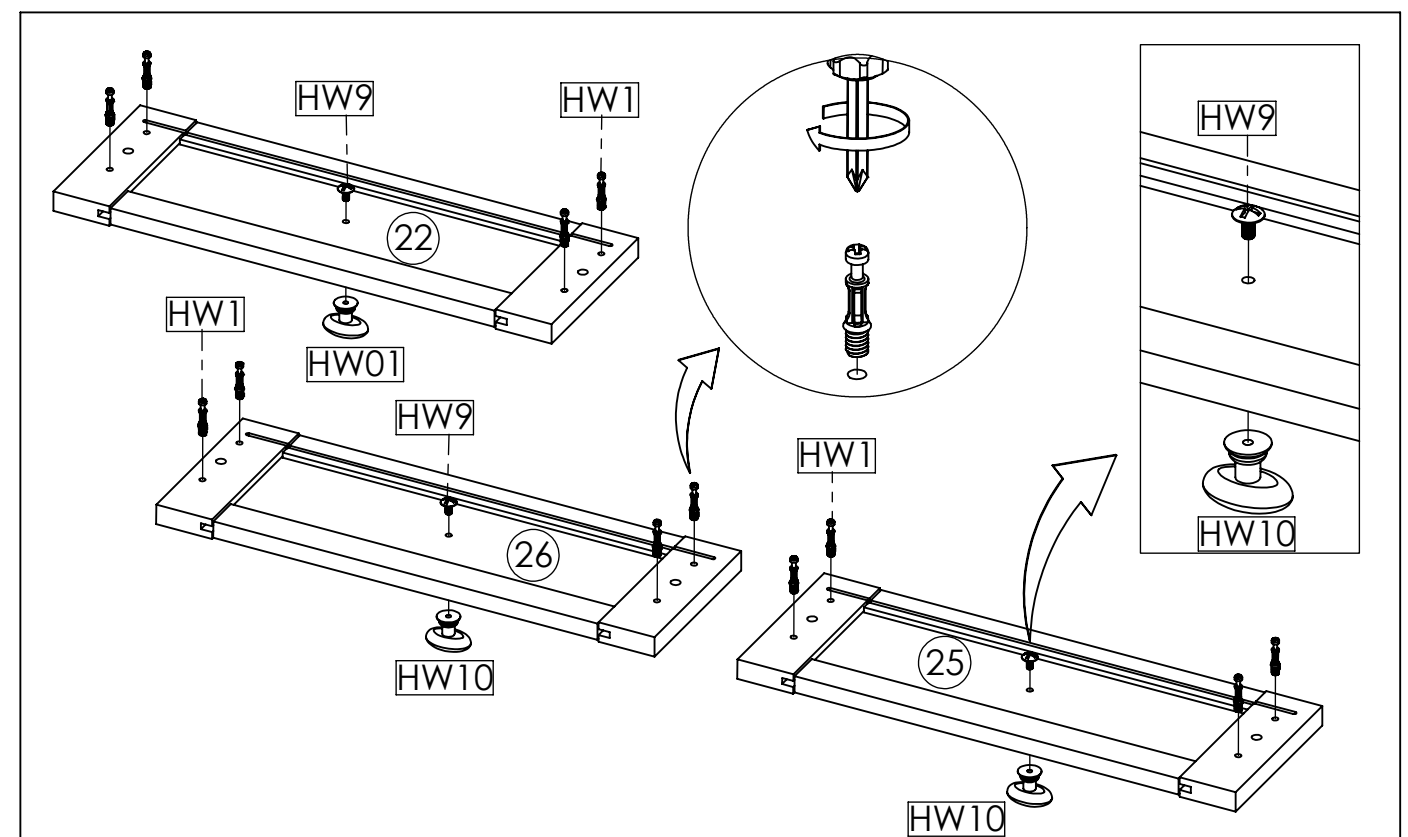


STEP24: Insert Cambolt (HW1) And Handle Drawer (HW10) Into Front Drawer - Right (22), Front Drawer - Center (25) And Front Drawer - Left (26), Secure with Screw Panhead 9 x 10 mm (HW9) Tighten It Using Screwdriver.

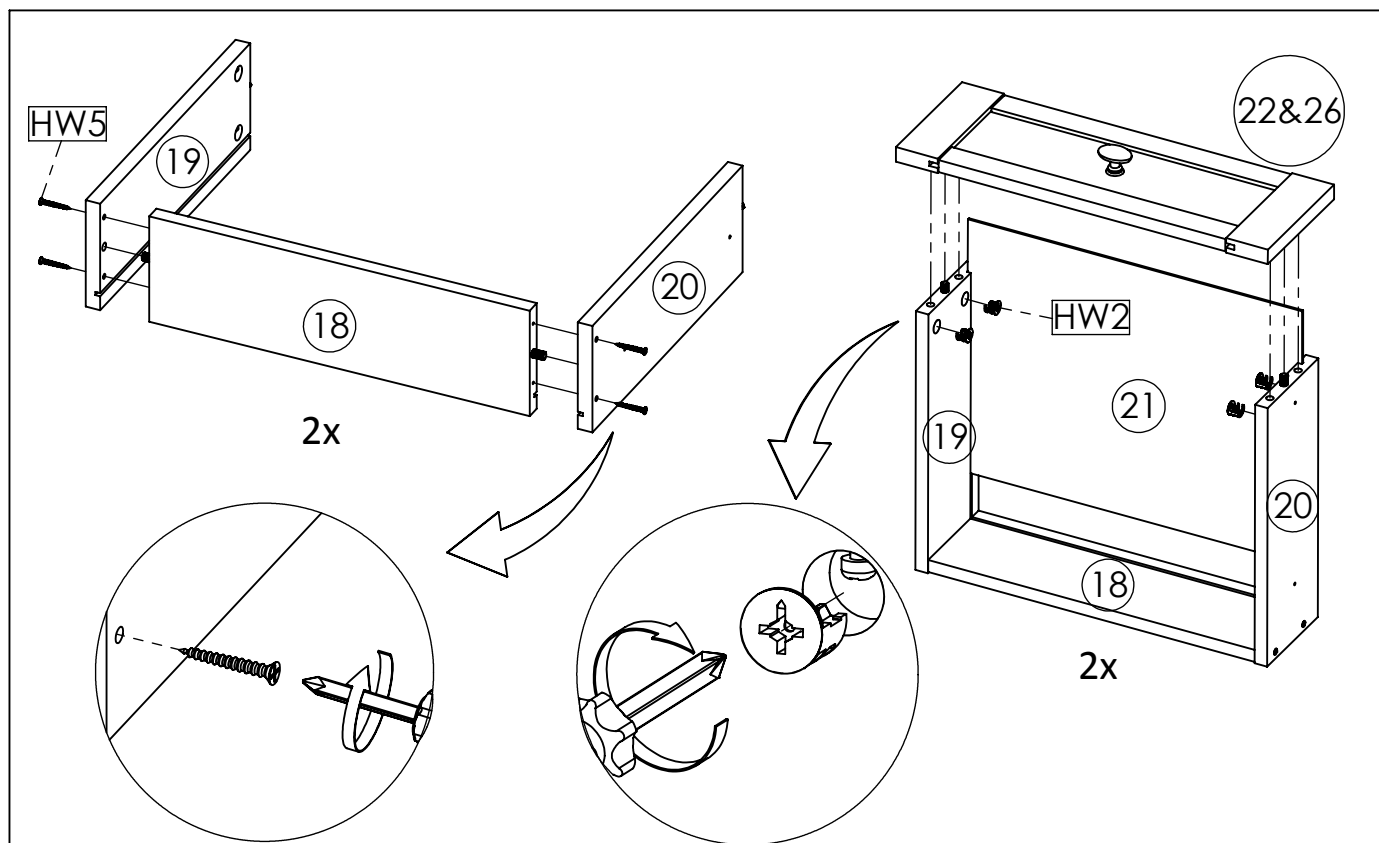


STEP25: Combine Side Drawer (19 & 20), Into Drawer Back - Large (18) Secure with Screw M7 x 32 mm (HW5), Continue Insert Drawer Base - Large (21) Then Put Front Drawer - Right (22) / Front Drawer - Left (26) Then Tighten Camlock (HW2) It Using Screwdriver.

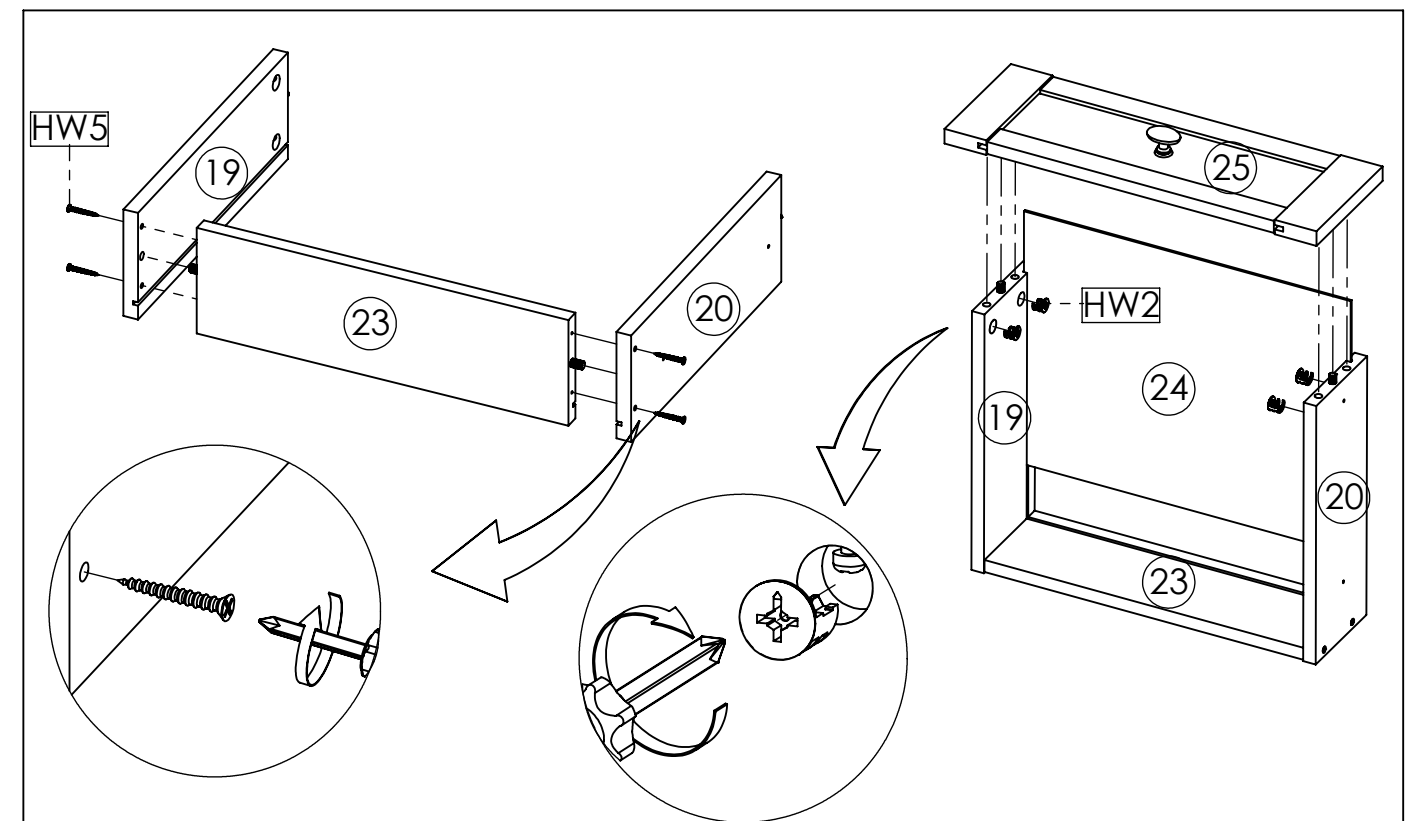


STEP26: Combine Side Drawer (19 & 20), Into Drawer Back - Small (23) Secure with Screw M7 x 32 mm (HW5), Continue Insert Drawer Base - Small (24) Then Put Front Drawer - Center (25) Then Tighten Camlock (HW2) It Using Screwdriver.

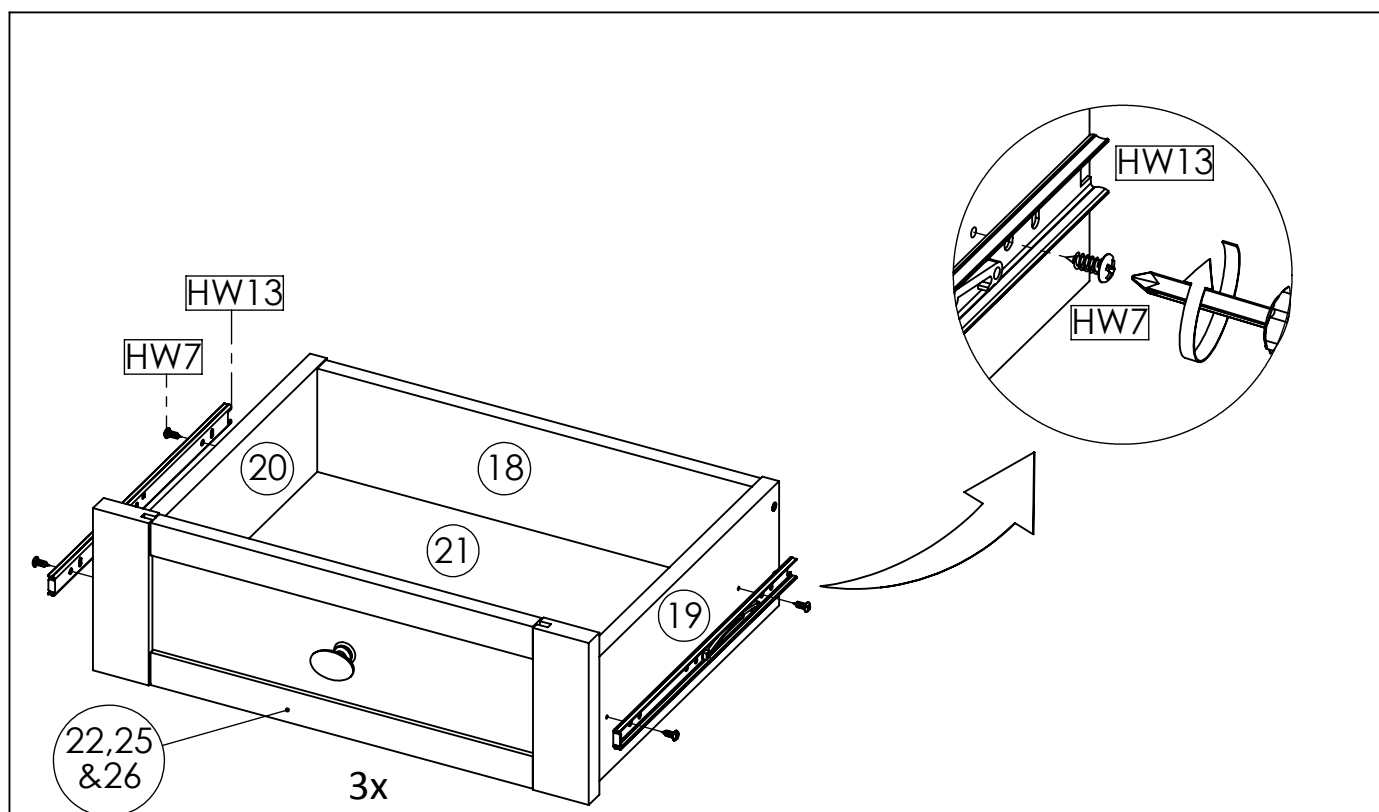

STEP27: Install The Metal Runner 2 (HW13) Into Position As Shown In Picture. Secure With Screw M6 x 12 mm PH (HW7) And Tighten It Using Screwdriver.

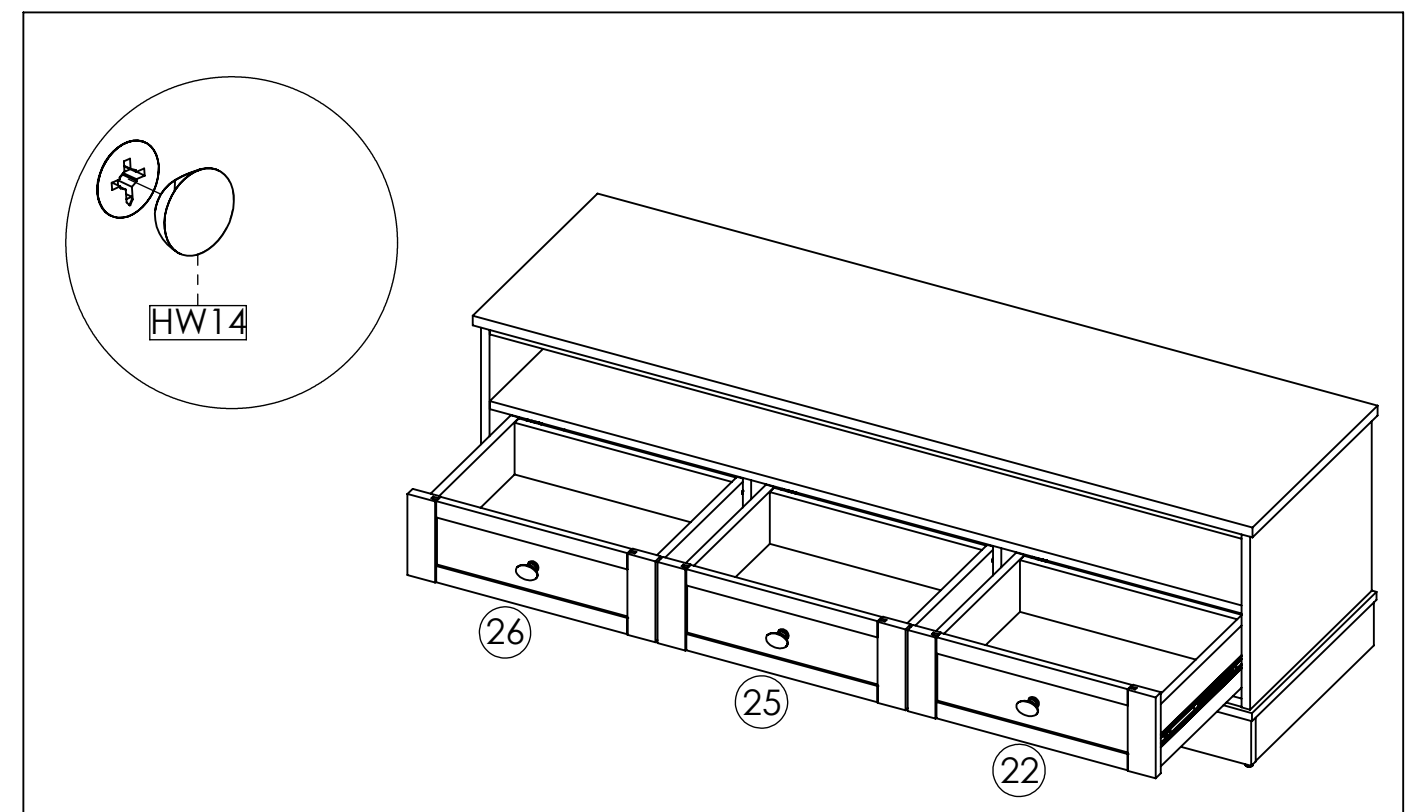

STEP28: Hold The Sides Of Drawer, Position The Wheel Of Rail At Drawer Back And The Wheel Of Rail At Side Boards, According To The Image. Slide In The Drawers One By One Into The Cabinet. Attach Cover Cap Sticker (HW14) To The Panel That Has Lamination.

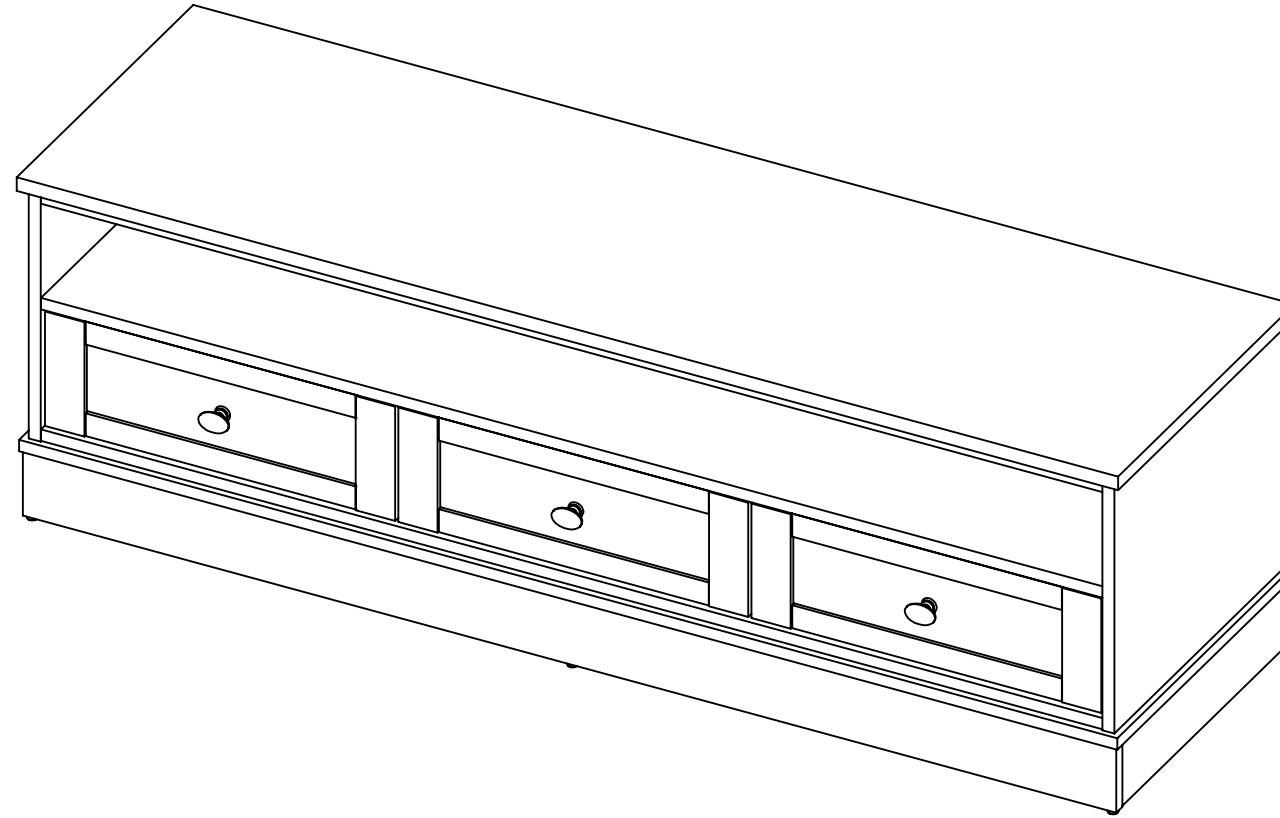

STEP27: Assembly Is Complete