NOTICE


* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

SAFAVIEH FURNITURE

ITEM ID: MED3600A
ITEM DIMENSTION: 70.87" X 15.75" X 22.44"

PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 60 minutes.
* Tools Required for Assembly (included): Allen Key, Screwdriver (Not Included)

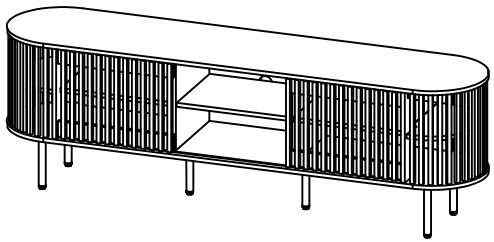

CARE AND MAINTENANCE





WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

INDOOR METAL / ALUMINUM FURNITURE: Wipe spills immediately. Maintain with regular dusting and clean with mild soap and water, dry thoroughly and do not use a brass cleaner. Adhesive felt pads should always be used / applied in order to prevent damage to the furniture or surfaces on which the furniture is placed.





⚠WARNING⚠

Weight Capacity - 222 LBS
Warning : Do not stand on Media Stand
Warning : Do not over torgue bolts

Part List


PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
A	TOP PANEL		X1	E	SHELF PANEL		X3	I	SIDE CABINET FRAME		X32
B	BOTTOM PANEL		X1	F	SHELF PANEL (L/R)		X2	J	SLIDING DOOR (L/R)		X2
C	CENTER PANEL		X2	G	BACK PANEL		X1				
D	SIDE SUPPORT		X2	H	SUPPORT CABINET FRAME		X4				

Hardware List


PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
HW1	MINIFIX CAM		X9	**HW8**	M3.5 X 16MM C.B SCREW		X24	**HW15**	WALL BRACKET		X4
HW2	MINIFIX BOLT		X9	**HW9**	M4 X 32MM C.B SCREW		X4	**HW16**	3.5 X 16MM SCREW		X2
HW3	MINIFIX CAP		X9	**HW10**	METAL SHELF SUPPORT		X22	**HW17**	4 X 35MM SCREW		X2
HW4	M8 X 30MM WOOD DOWEL		X20	**HW11**	L BRACKET		X4	**HW18**	6 X 40MM WALL PLUG		X2
HW5	M6 X 50MM CSK CAP WOOD SCREW		X9	**HW12**	SPRING DOOR SUPPORT		X68	**HW19**	CABLE TIE		X2
HW6	ALLEN KEY M4		X1	**HW13**	U 480 ROLLER	(A)  (B) 	X4				
HW7	M3 X 12MM C.B SCREW		X24	**HW14**	METAL LEG		X6				

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 60 minutes.
* Tools Required for Assembly (included): Allen Key, Screwdriver (Not Included)

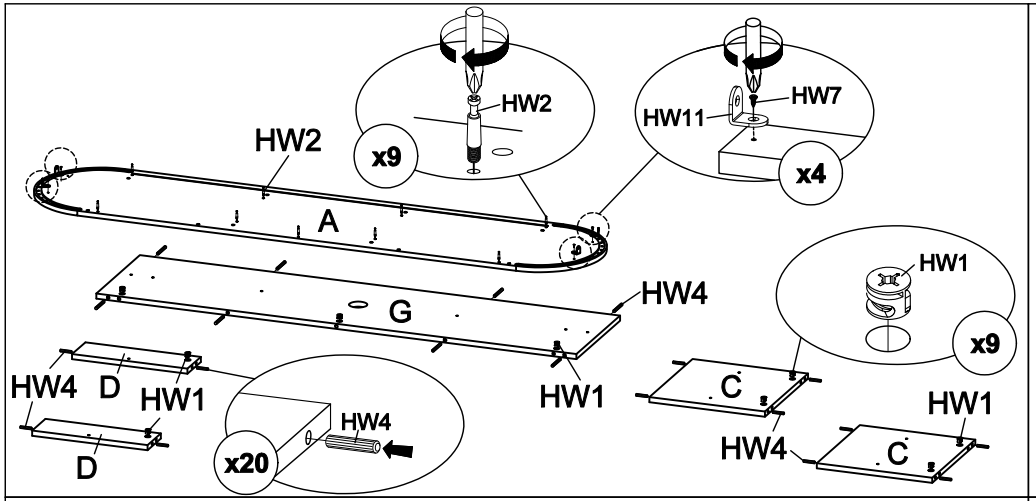


STEP 1: INSERT HARDWARE (HW1, HW4) INTO PANEL (C, D, G). INSERT HARDWARE (HW2) ONTO PANEL (A). ASSEMBLE HARDWARE (HW11) TO PANEL (A) BY USING HARDWARE (HW7).

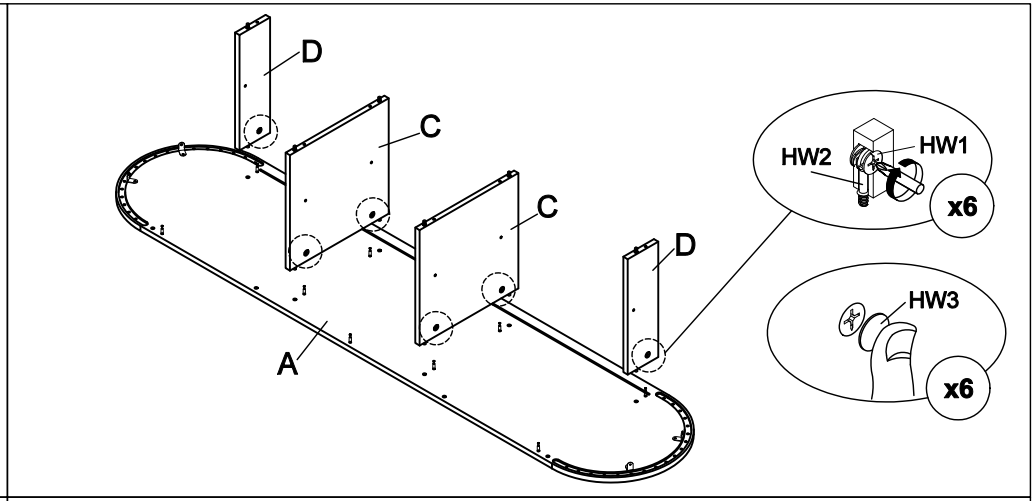


STEP 2: ATTACH PANEL (A) TO PANEL (C, D). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

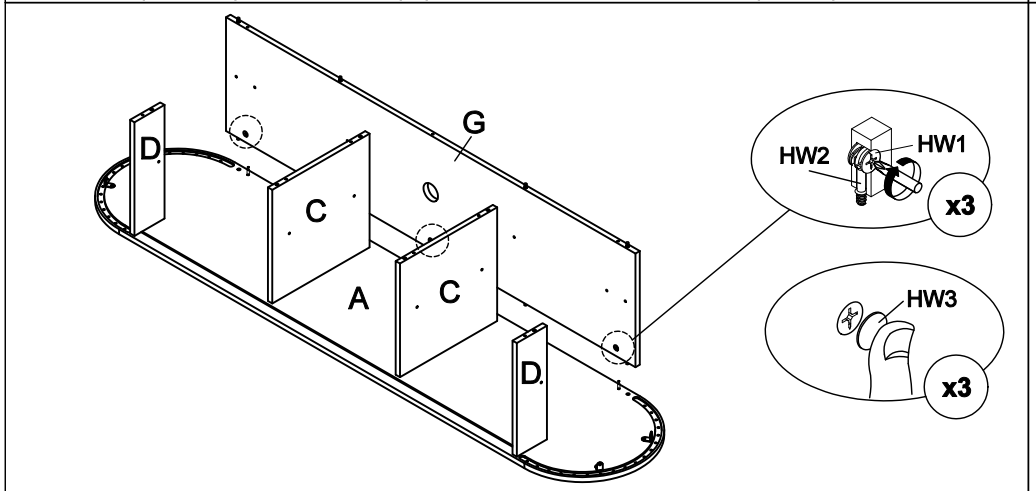


STEP 3: ATTACH PANEL (G) TO PANEL (A). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

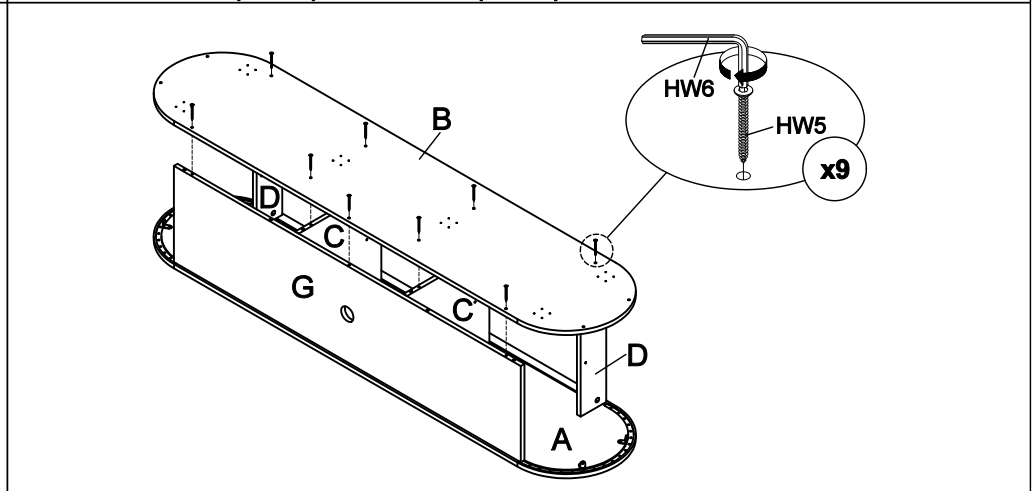


STEP 4: CONNECT PANEL (B) TO PANEL (C, D, G) BY USING HARDWARE (HW5, HW6).

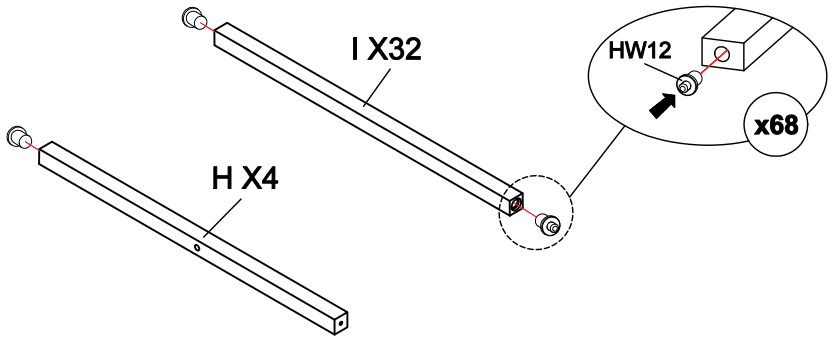


STEP 5: INSERT HARDWARE (HW12) TO PART (H, I).

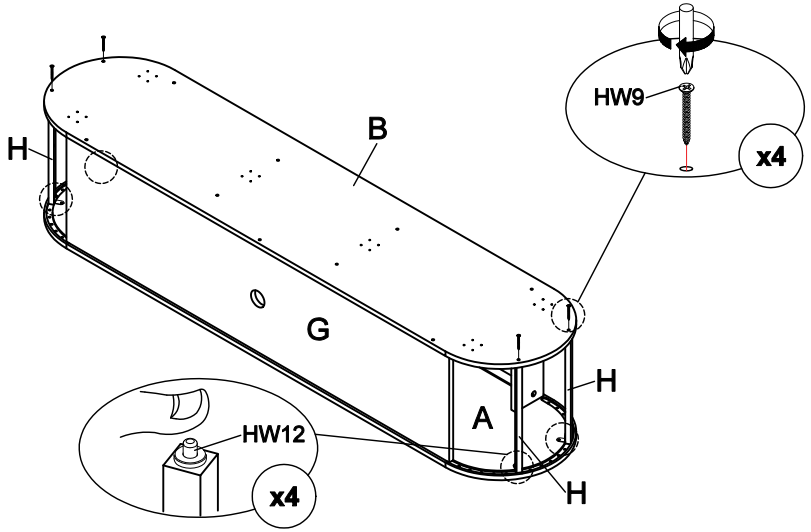


STEP 6: PRESS HARDWARE (HW12) AND INSERT TO PANEL (A, B).
ATTACH PANEL (B) WITH PART (H) BY USING HARDWARE (HW9).

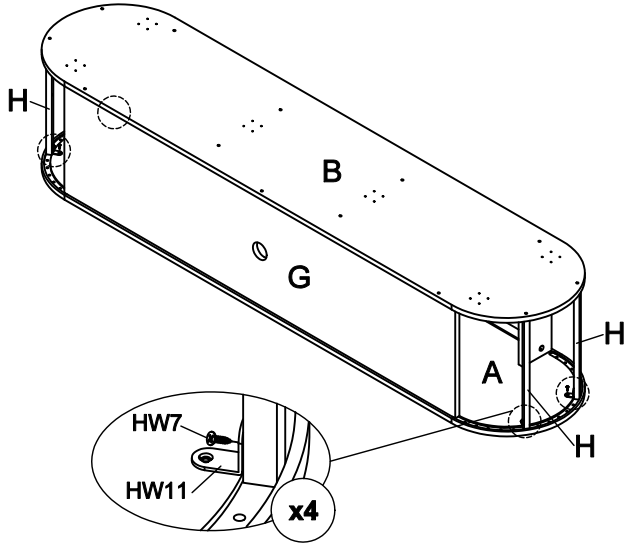


STEP 7: ATTACH HARDWARE (HW11) TO PART (H) BY USING HARDWARE (HW7).

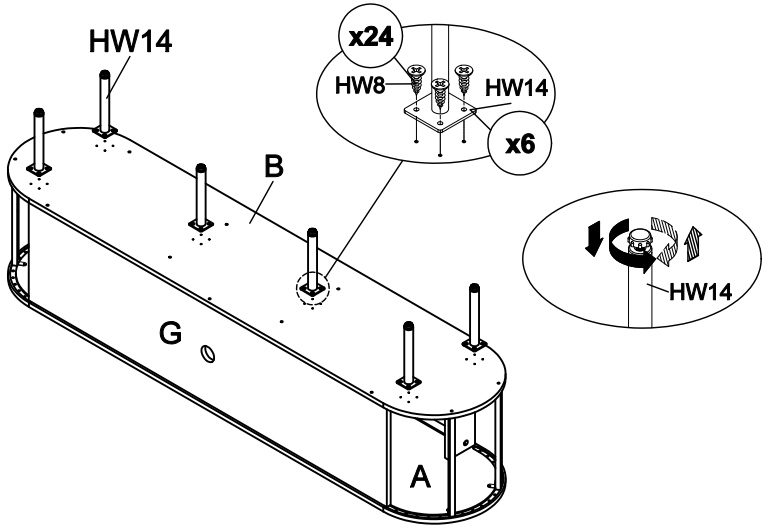


STEP 8: FIX HARDWARE (HW14) TO PANEL (B) BY USING HARDWARE (HW8).

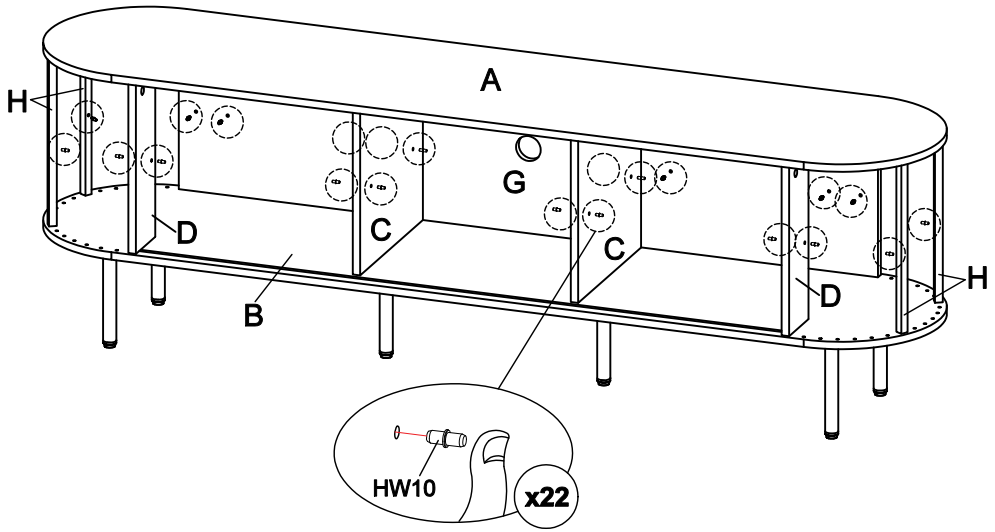


STEP 9: INSERT HARDWARE (HW10) TO PANEL (C, D, G, H).

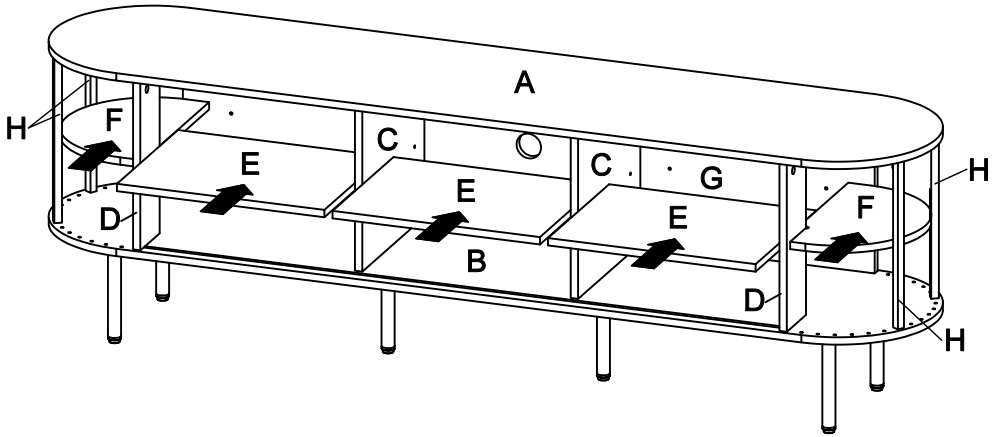


STEP 10: INSERT PANEL (E, F) TO ASSEMBLED UNIT.

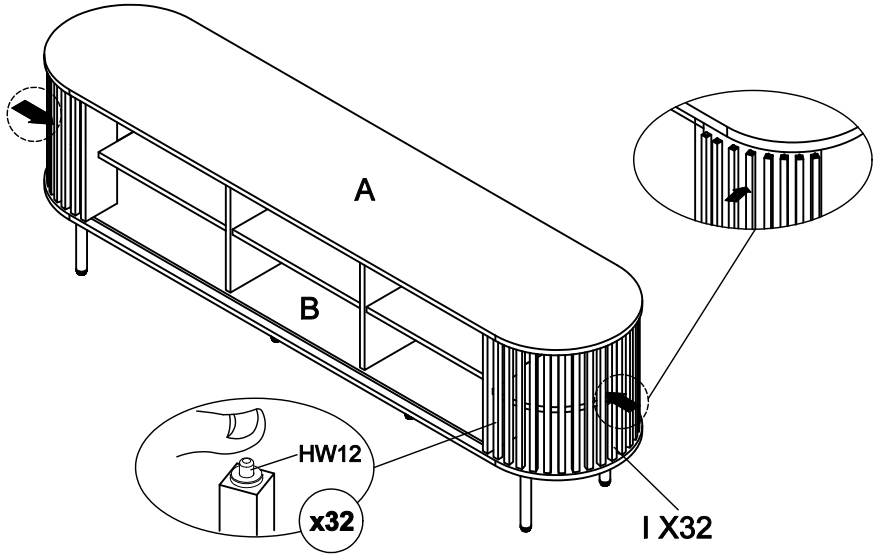


STEP 11: PRESS HARDWARE (HW12) AND INSERT PART (I) IN BETWEEN PANEL (A, B).

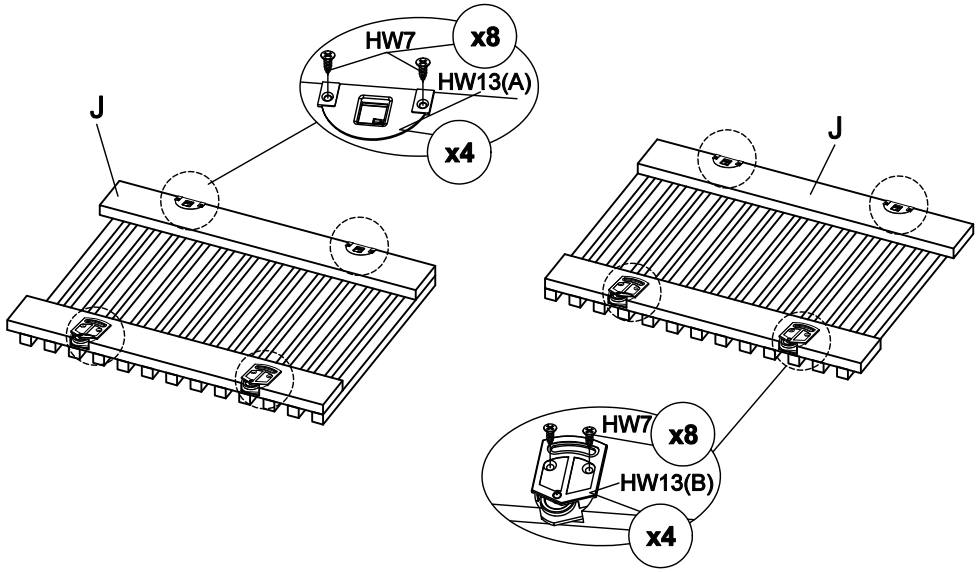


STEP 12: ATTACH HARDWARE (HW13(A), HW 13(B)) TO PART (J) BY USING HARDWARE (HW7).

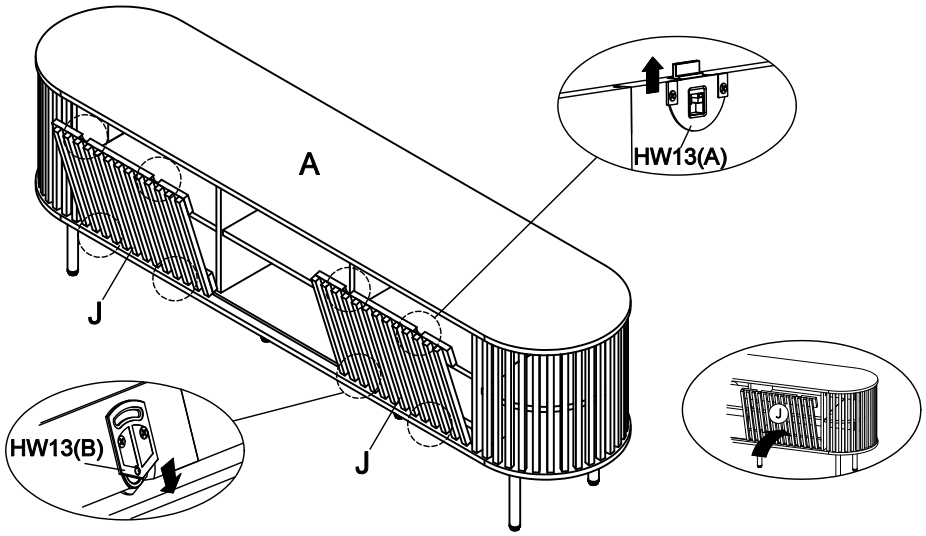


STEP 13: INSERT PART (J) TO ASSEMBLED TV UNIT.

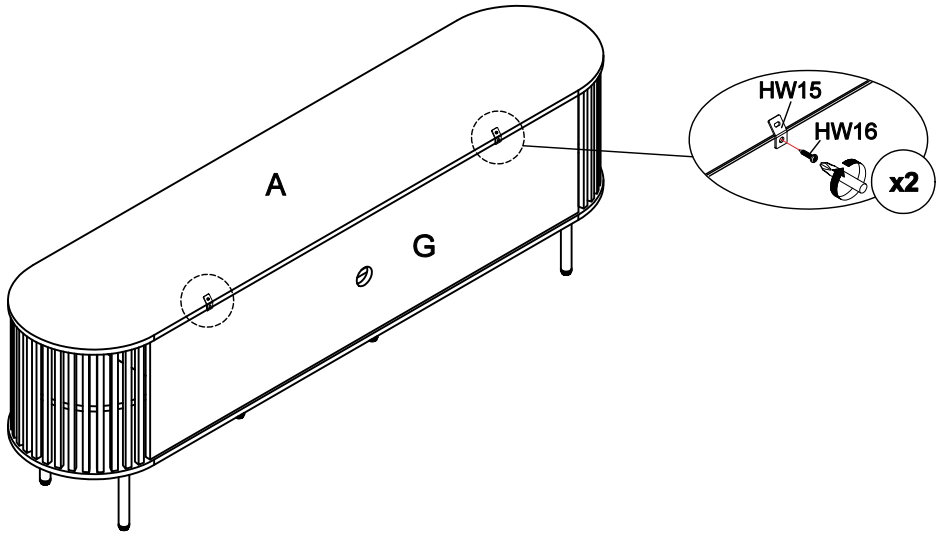


STEP 14: ASSEMBLE HARDWARE (HW15) TO PANEL (A) BY USING HARDWARE (HW16).

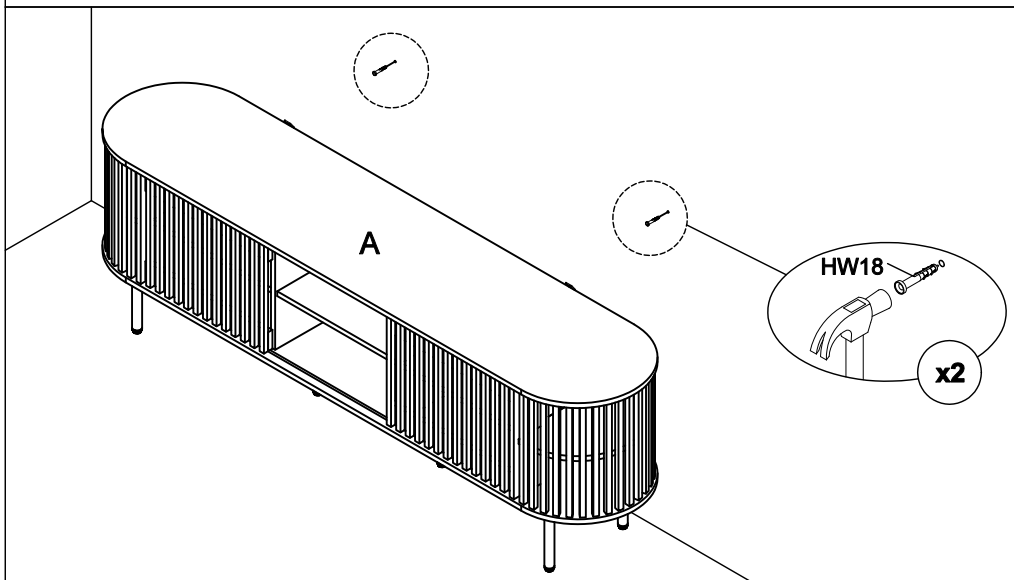

STEP 15: MARK AND USE THE POWER DRILL TO DRILL A HOLE ON THE WALL. HIT HARDWARE (HW18) INTO THE WALL.

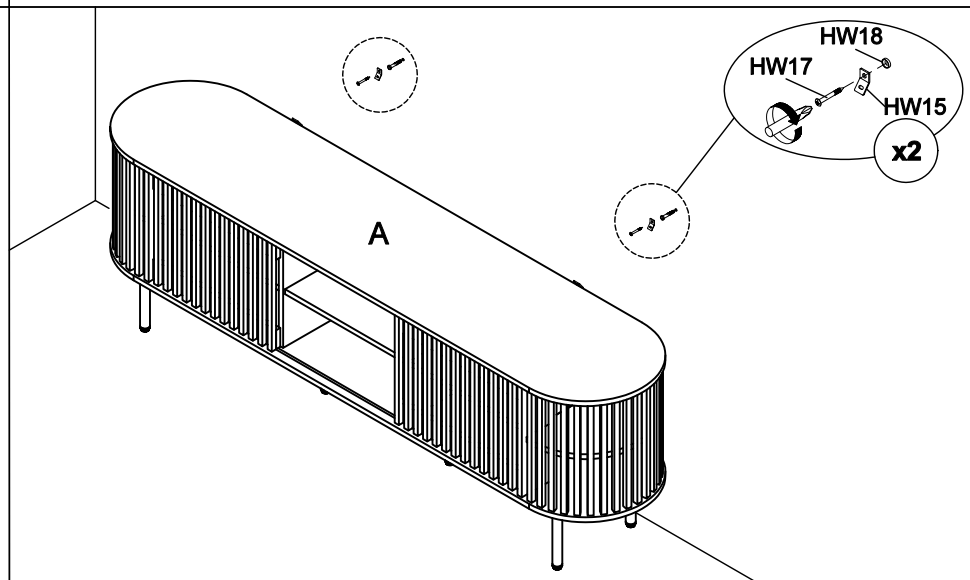

STEP 16: ASSEMBLE HARDWARE (HW15) TO (HW18) BY USING HARDWARE (HW17). IN THE ORDER SHOWN IN THE PICTURE.

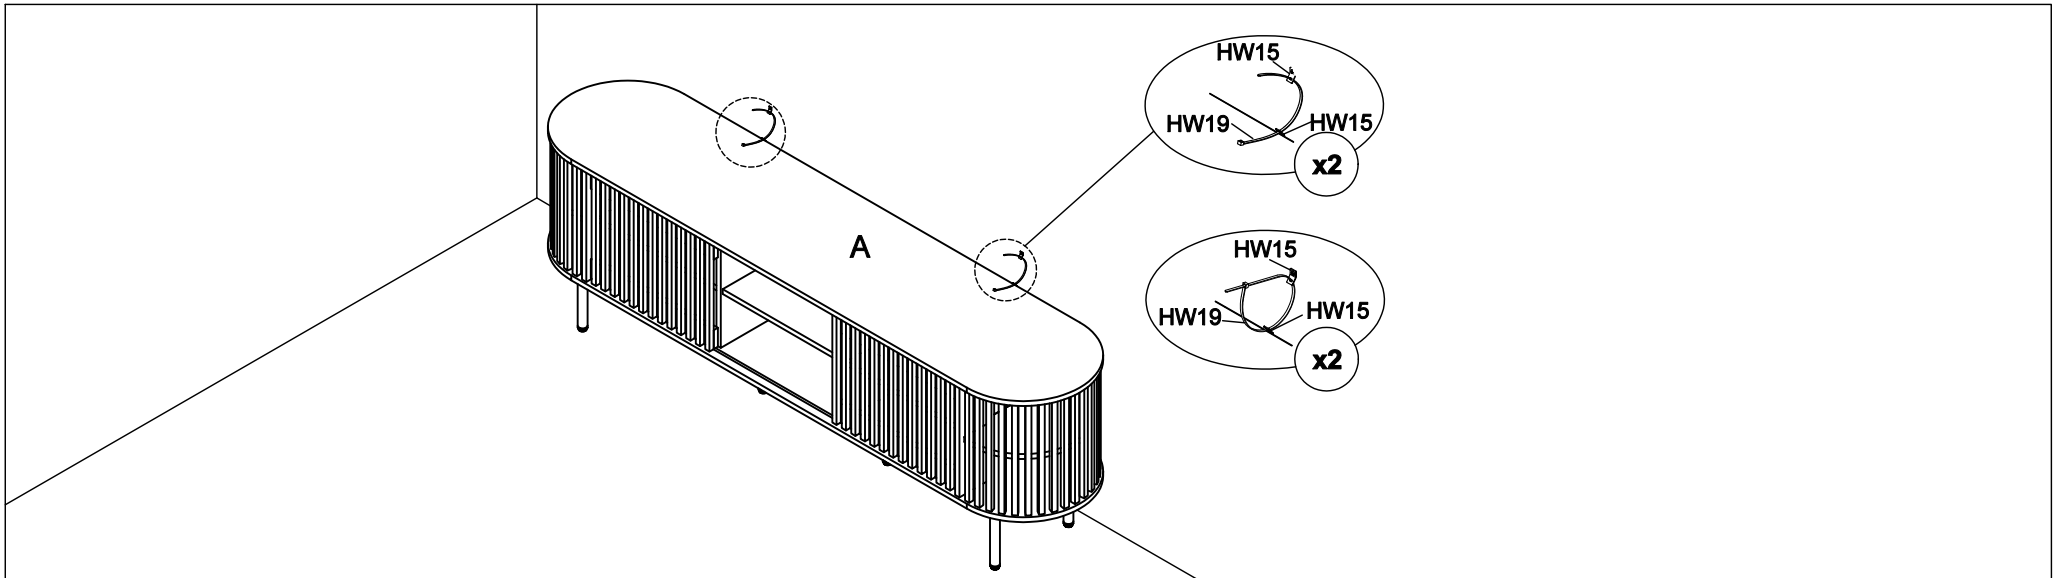

STEP 17: CONNECT BOTH OF THE HARDWARE (HW15) BY USING HARDWARE (HW19). TIGHTEN THE HARDWARE (HW19), AS SHOWN.