

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key, while Screwdriver and Hammer (Not Included).


CARE AND MAINTENANCE

WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.



ITEM ID: MED3601A

ITEM DIMENSTION: 71.50" X 15.75" X 19.21"

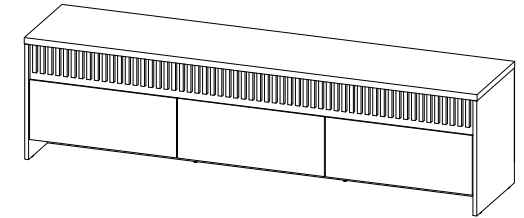







WARNING

Weight Capacity - 176 LBS





Warning : Do not stand on Media Stand

Warning : Do not over torque bolts

Part List


PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
A	TOP PANEL		X1	F	TOP SUPPORT		X1	K	DRAWER BACK		X3
B	BOTTOM PANEL		X1	G	BACK PANEL		X1	L	DRAWER SIDE		X6
C	SIDE PANEL (L)		X1	H	DRAWER FRONT (L)		X1	M	BOTTOM DRAWER		X3
D	SIDE PANEL (R)		X1	I	DRAWER FRONT (CENTER)		X1	N	CABINET LEG		X1
E	CENTER PANEL		X2	J	DRAWER FRONT (R)		X1				

Hardware List


PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
HW1	MINIFIX CAM		X27	HW7	M3.5 X 16MM C.B SCREW		X36	HW13	3.5 X 16MM SCREW		X2
HW2	MINIFIX BOLT		X27	HW8	M4 X 38MM C.B SCREW		X24	HW14	4 X 35MM SCREW		X2
HW3	MINIFIX CAP		X27	HW9	5/8 NAIL		X24	HW15	6 X 40MM WALL PLUG		X2
HW4	M8 X 30MM WOOD DOWEL		X23	HW10	5/8 PVC NAIL LEG		X6	HW16	CABLE TIE		X2
HW5	M6 X 50MM CSK CAP WOOD SCREW		X4	HW11	12" DRAWER SLIDE (L/R)	(A)  (B) 	X3				
HW6	ALLEN KEY M4		X1	HW12	WALL BRACKET		X4				

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key, while Screwdriver and Hammer (Not Included).

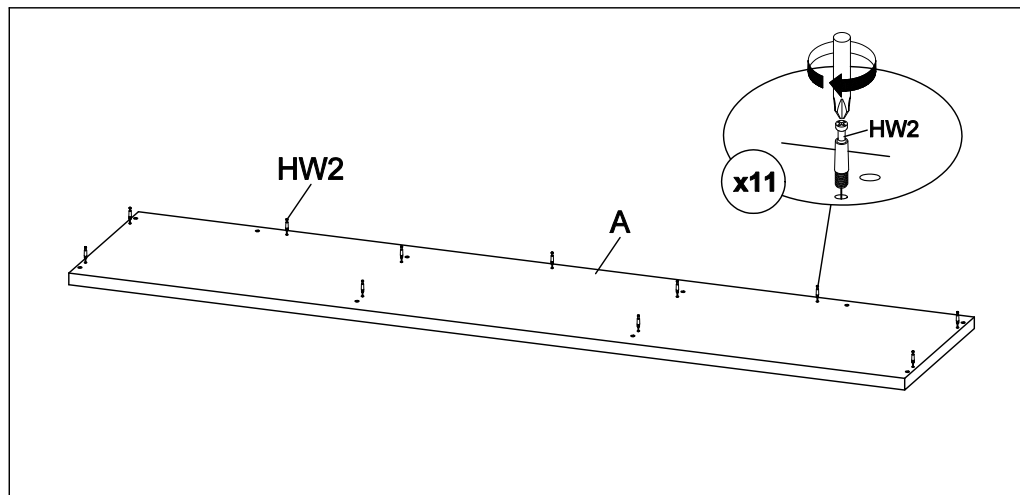


STEP 1: INSERT HARDWARE (HW2) ONTO PANEL (A).

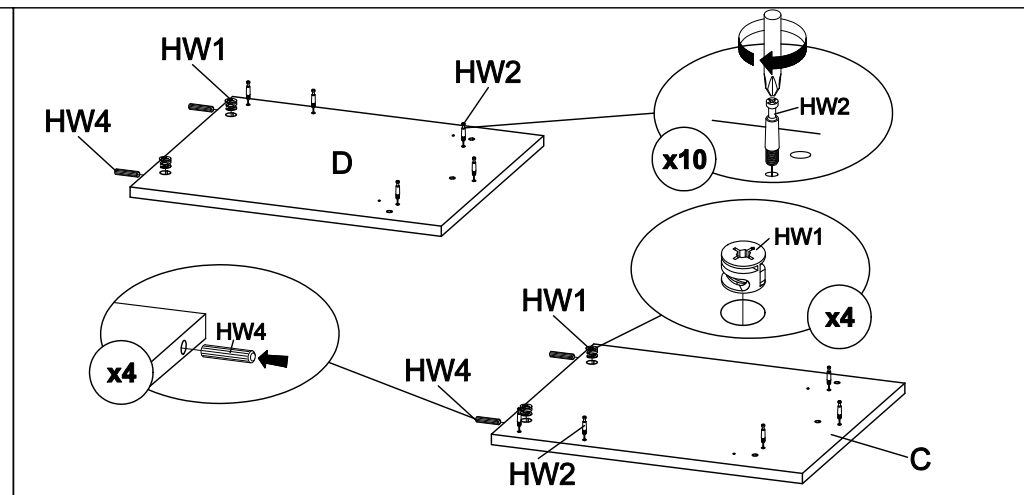


STEP 2: INSERT HARDWARE (HW1, HW4) INTO PANEL (C, D). INSERT HARDWARE (HW2) ONTO PANEL (C, D)

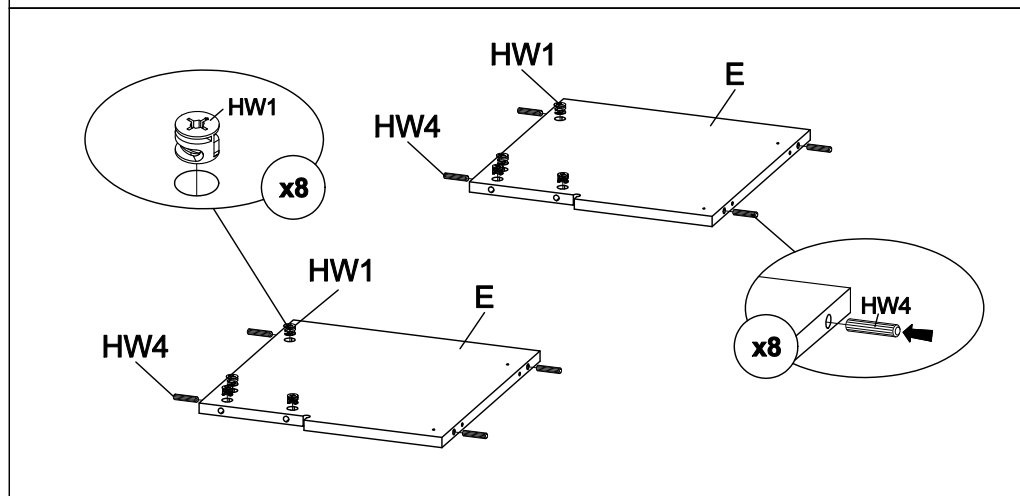


STEP 3: INSERT HARDWARE (HW1, HW4) INTO PANEL (E).

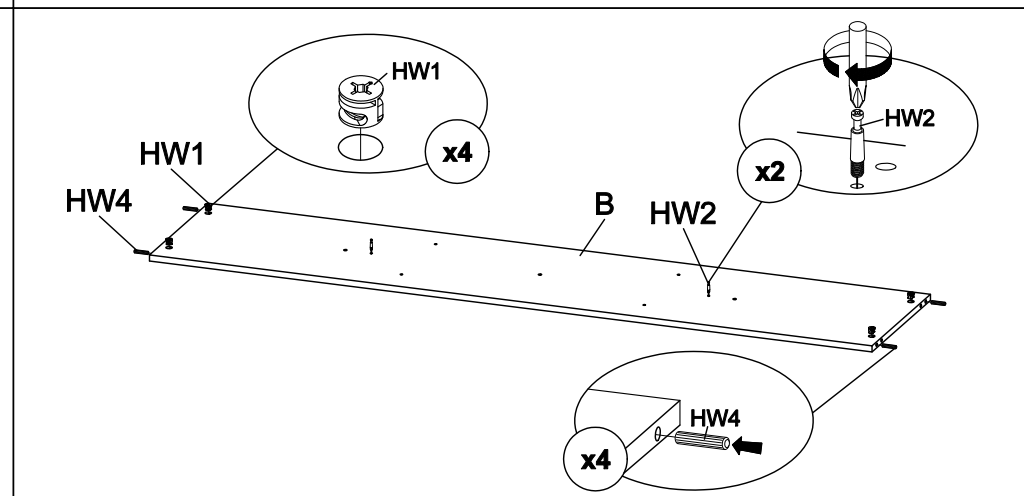


STEP 4: INSERT HARDWARE (HW1, HW4) INTO PANEL (B). INSERT HARDWARE (HW2) ONTO PANEL (B).

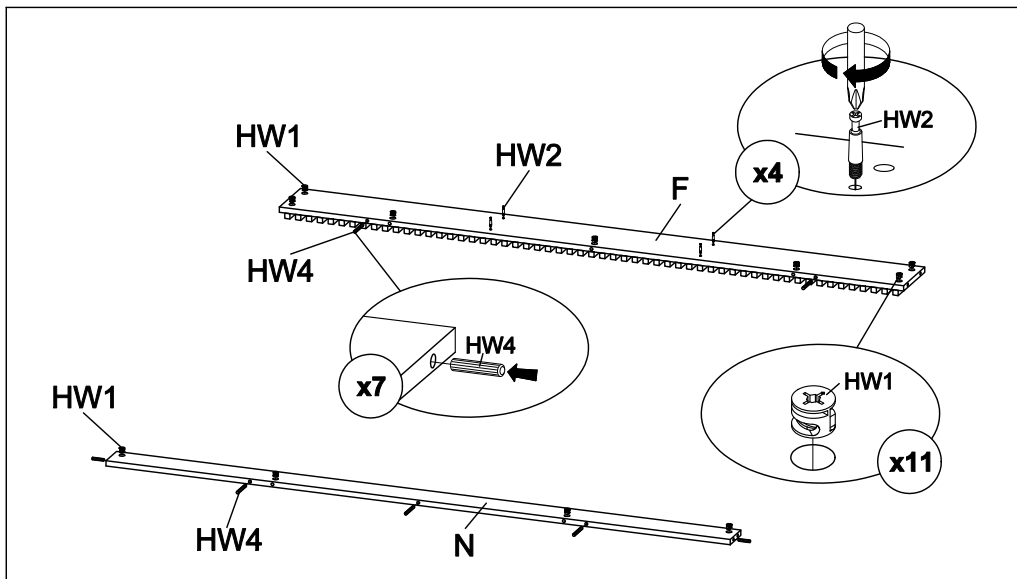


**STEP 5: INSERT HARDWARE (HW1, HW4) INTO PANEL (F, N).
INSERT HARDWARE (HW2) ONTO PANEL (F).**

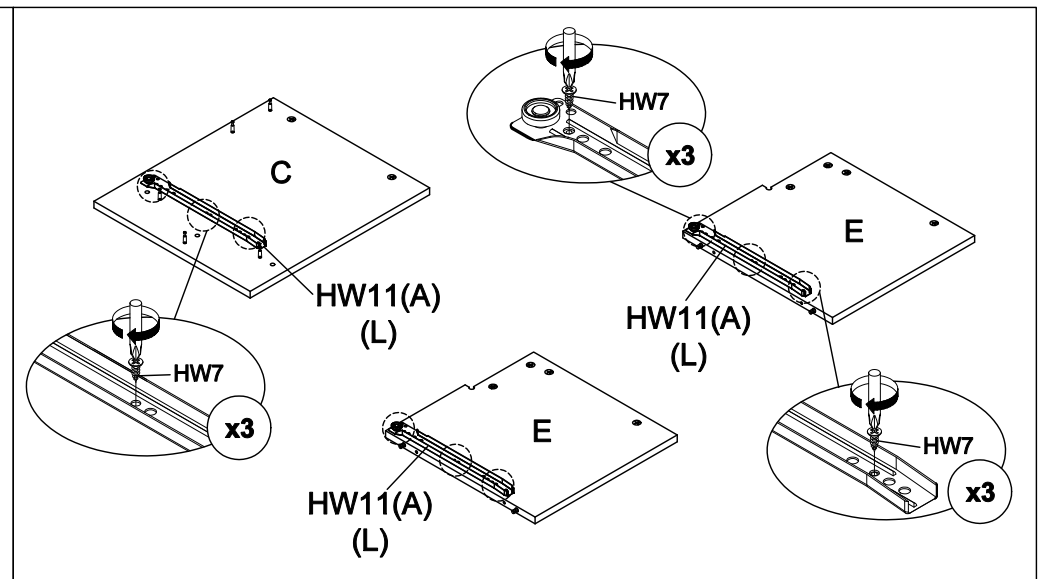


**STEP 6: ATTACH HARDWARE (HW11(A) (L)) TO PANEL (C, E) WITH
HARDWARE (HW7).**

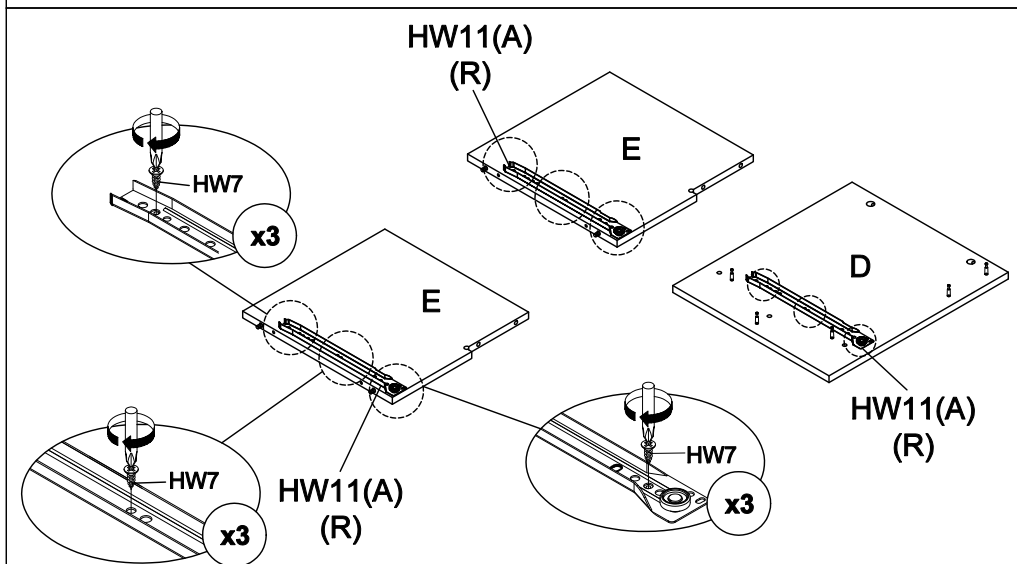


**STEP 7: ATTACH HARDWARE (HW11(A) (R)) TO PANEL (E, D) WITH
HARDWARE (HW7).**

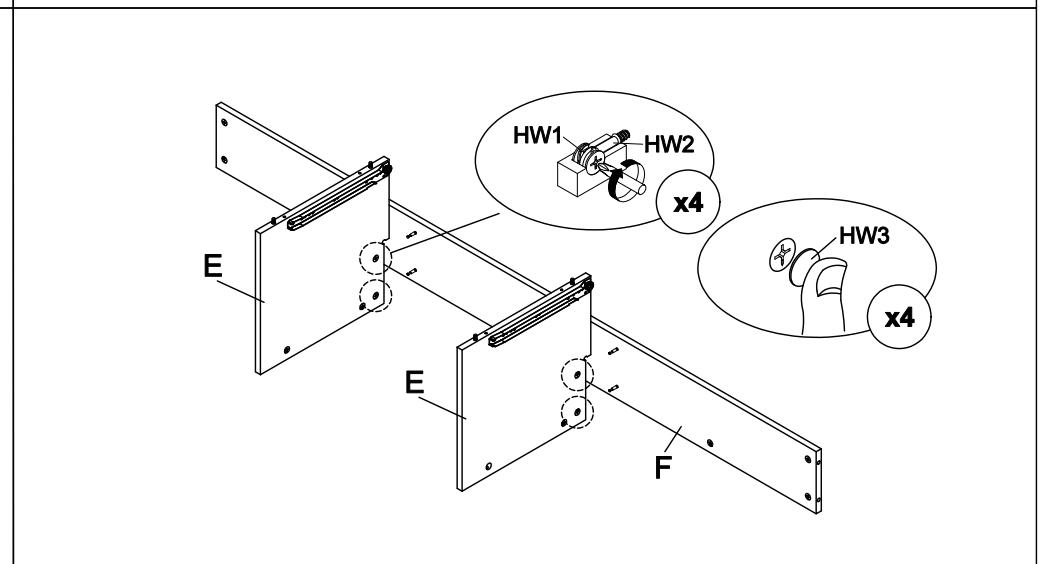


**STEP 8: ATTACH PANEL (F) TO PANEL (E). INSERT ALL HARDWARE (HW2)
INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT.
APPLY (HW3) ONTO ALL (HW1).**

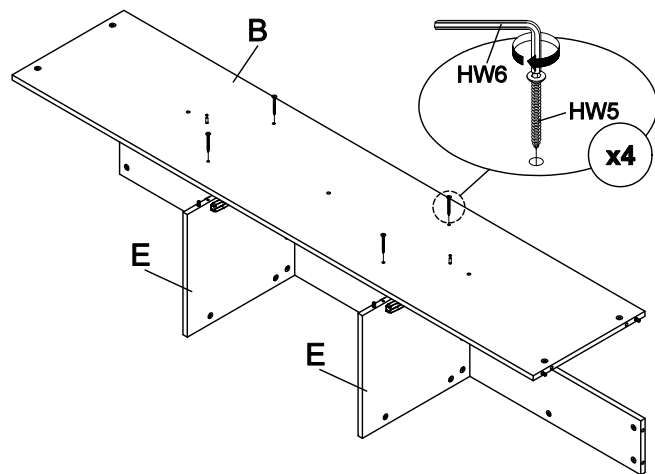


STEP 9: CONNECT PANEL (B) TO PANEL (E) BY USING HARDWARE (HW5,HW6).

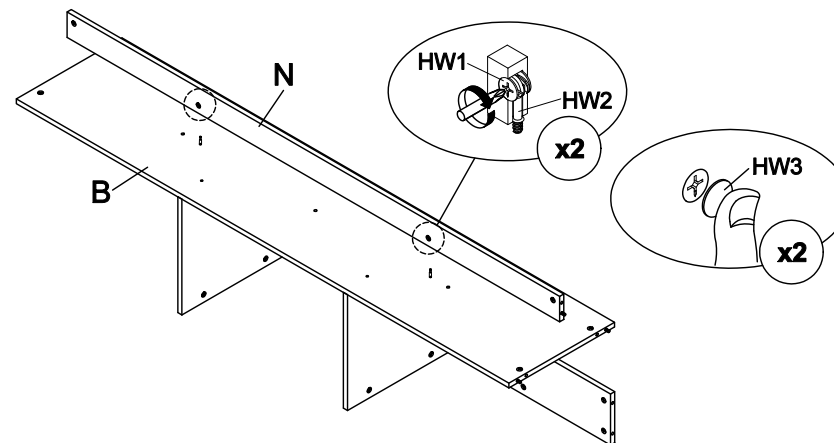


STEP 10: ATTACH PANEL (B) TO PANEL (N). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

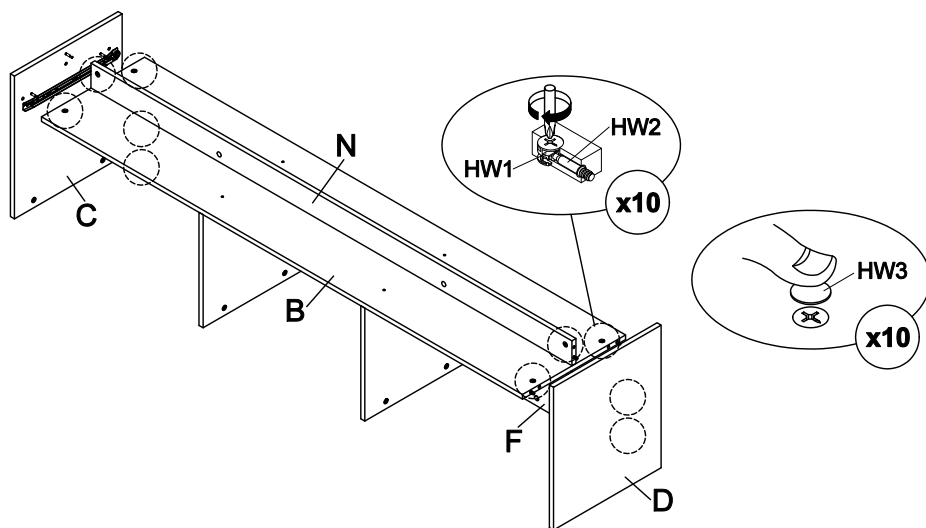


STEP 11: ATTACH PANEL (C, D) TO PANEL (B, F, N). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

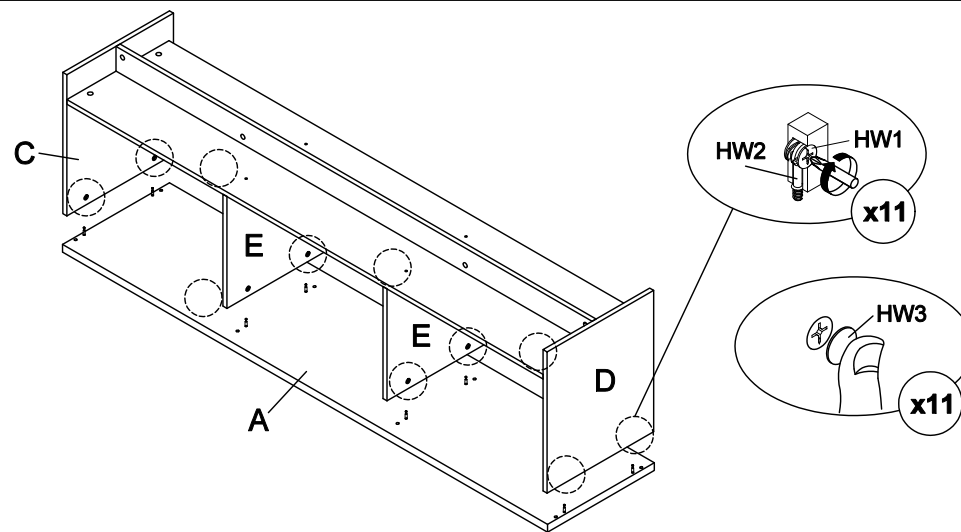


STEP 12: ATTACH PANEL (A) TO PANEL (C, D, E). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

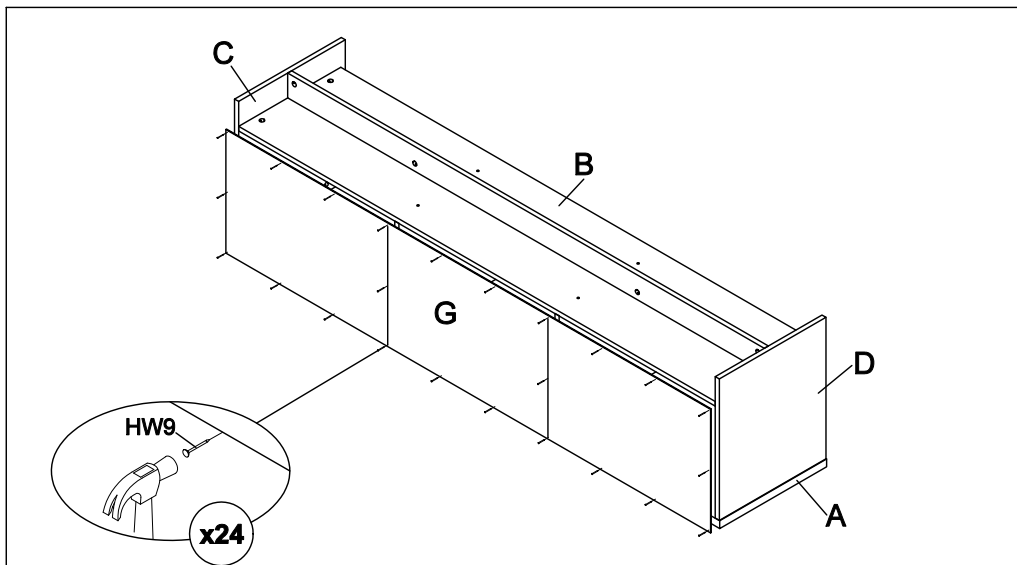


STEP 13: ATTACH PANEL (G) TO ENTIRE BODY WITH HARDWARE (HW9).

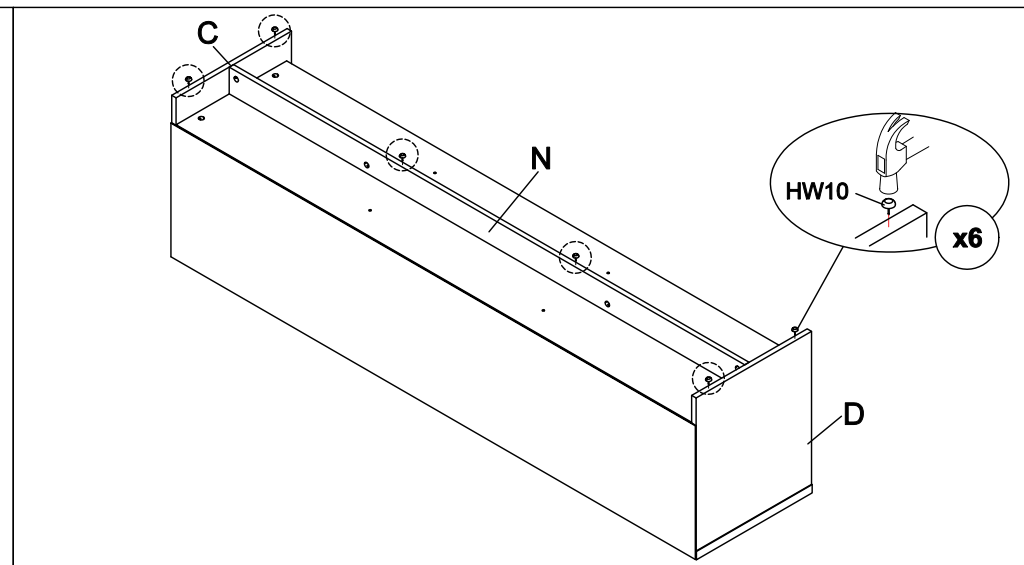


STEP 14: HIT HARDWARE (HW10) INTO BOTTOM OF PANEL (C, D, N).

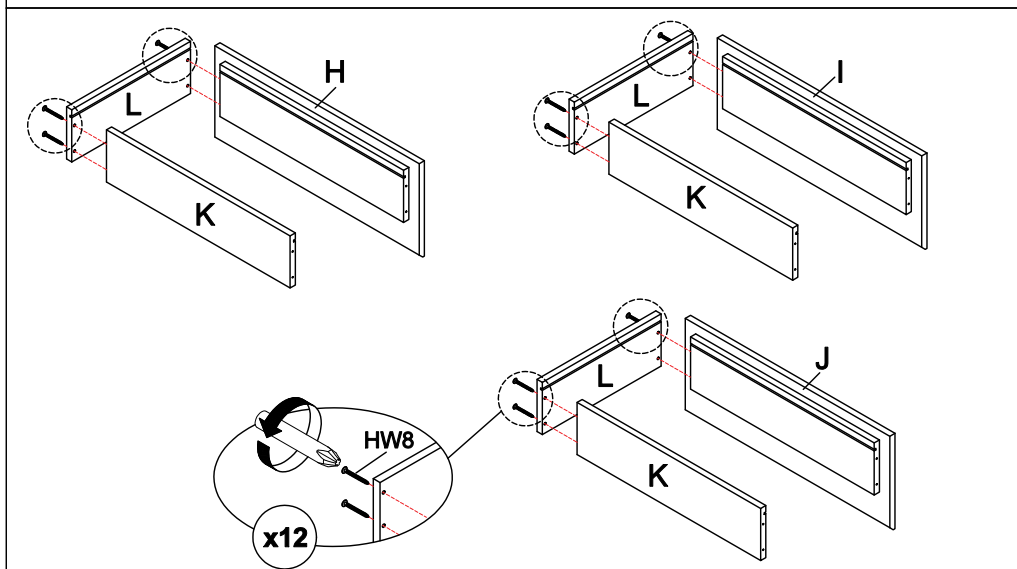


STEP 15: ASSEMBLE PANEL (L) WITH PANEL (H, I, J, K) BY USING HARDWARE (HW8).

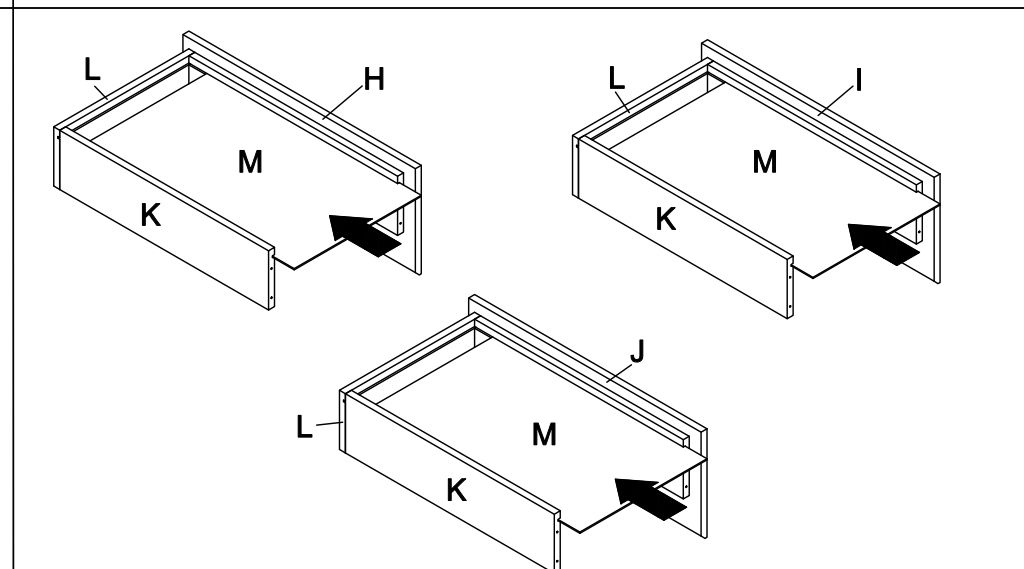


STEP 16: INSERT THE PANEL (M) ALONG THE SLOT.

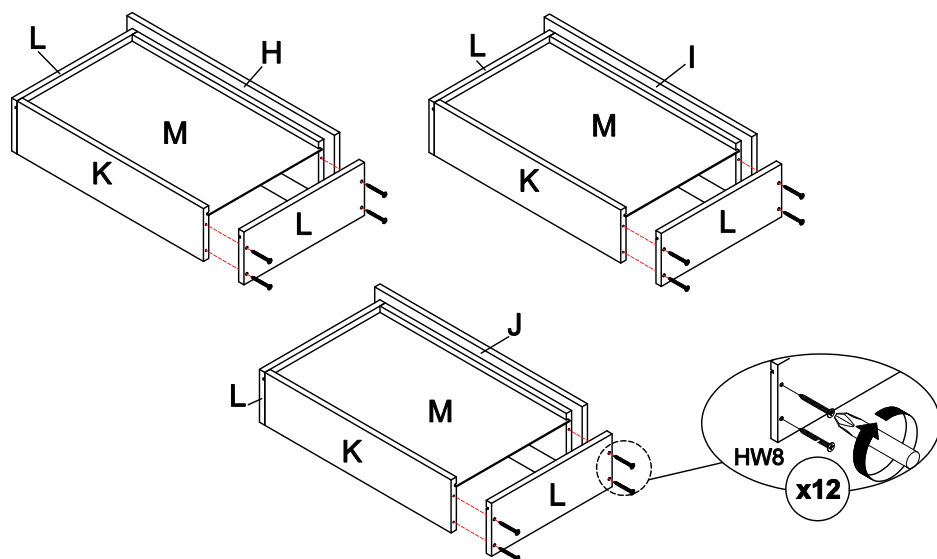


STEP 17: ASSEMBLE PANEL (L) WITH PANEL (H, I, J, K) BY USING HARDWARE (HW8).

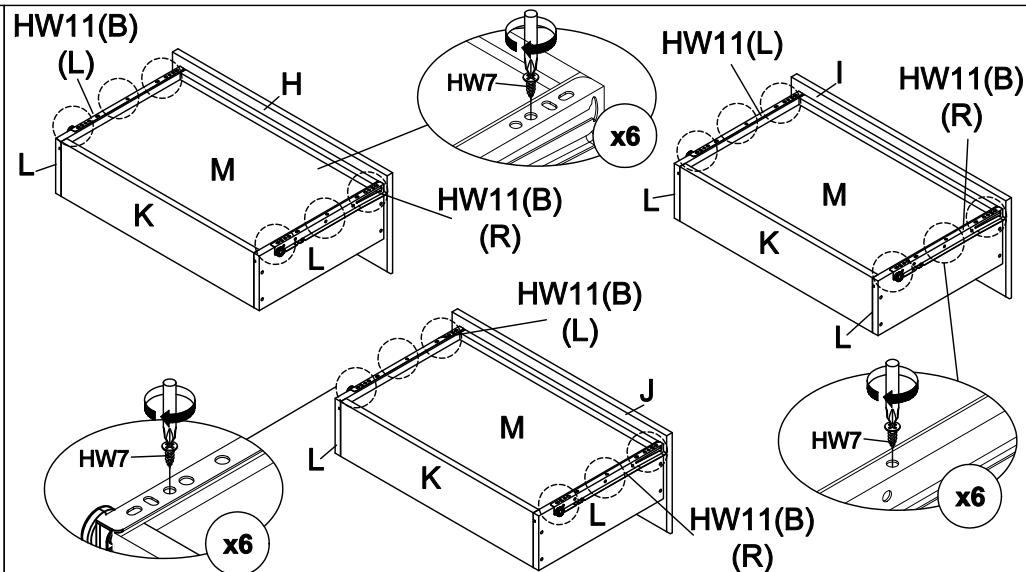


STEP 18: ASSEMBLE HARDWARE (HW11(B)(L/R)) TO PANEL (L) BY USING HARDWARE (HW7).

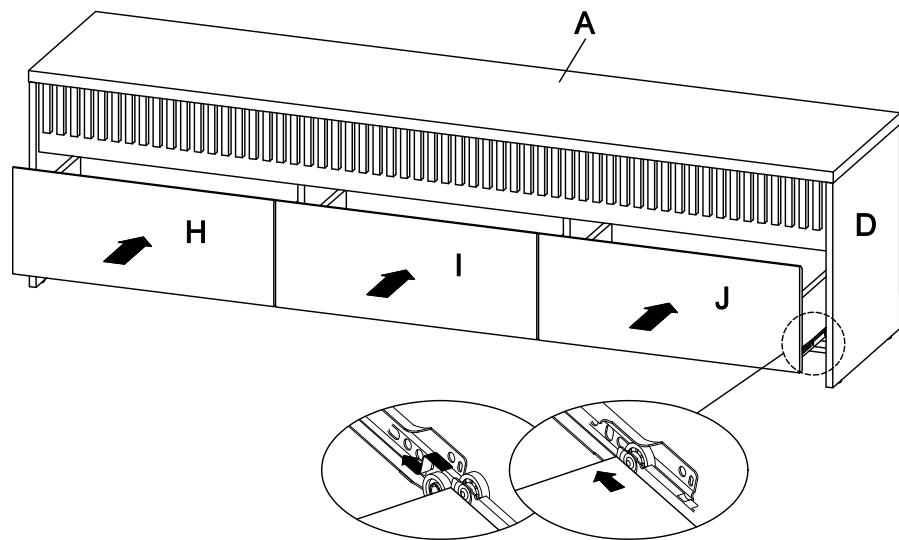


STEP 19: PUT ALL THE DRAWER (H, I, J) IN PLACE ALONG THE DRAWER SLIDES.

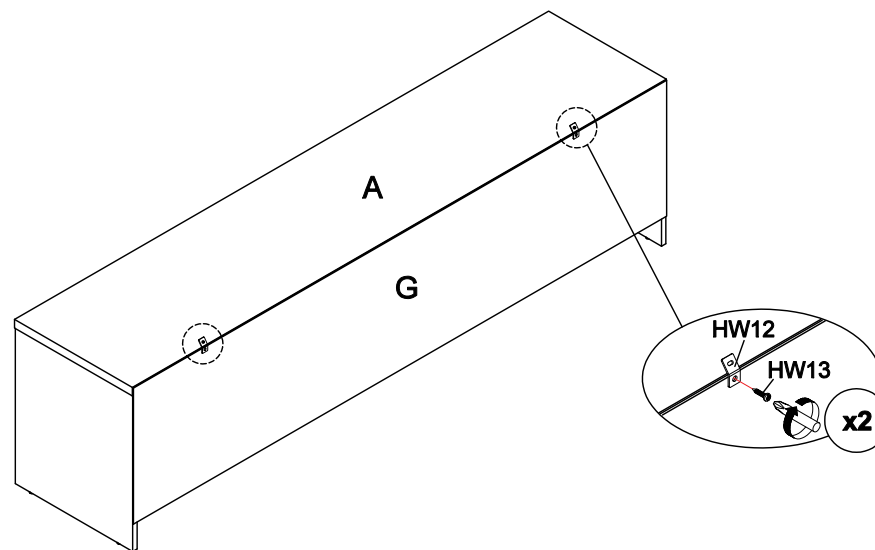


STEP 20: ASSEMBLE HARDWARE (HW12) ONTO PANEL (G) BY USING HARDWARE (HW13).

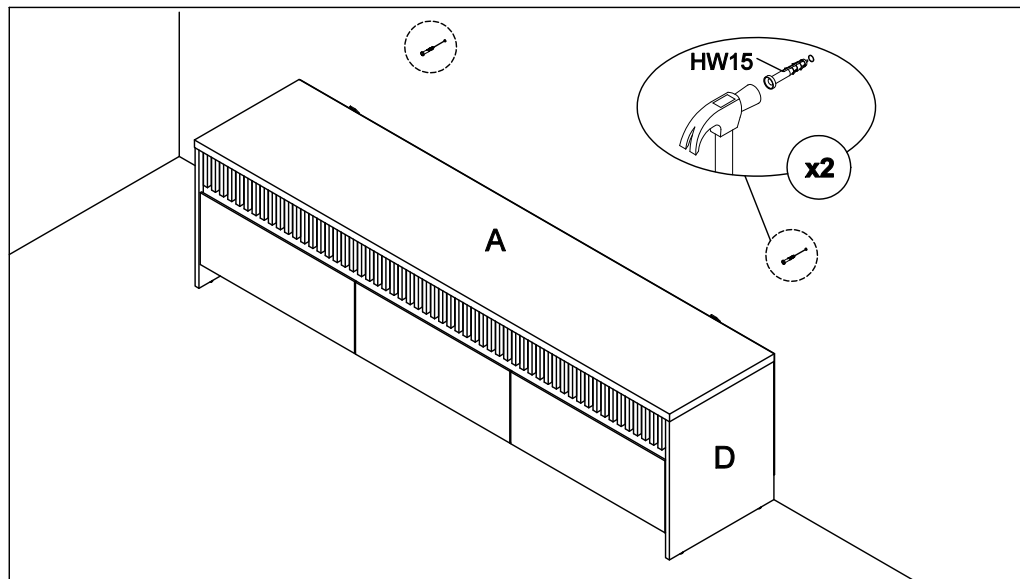

STEP 21: MARK AND USE THE POWER DRILL TO DRILL A HOLE ON THE WALL. HIT HARDWARE (HW15) INTO THE WALL.

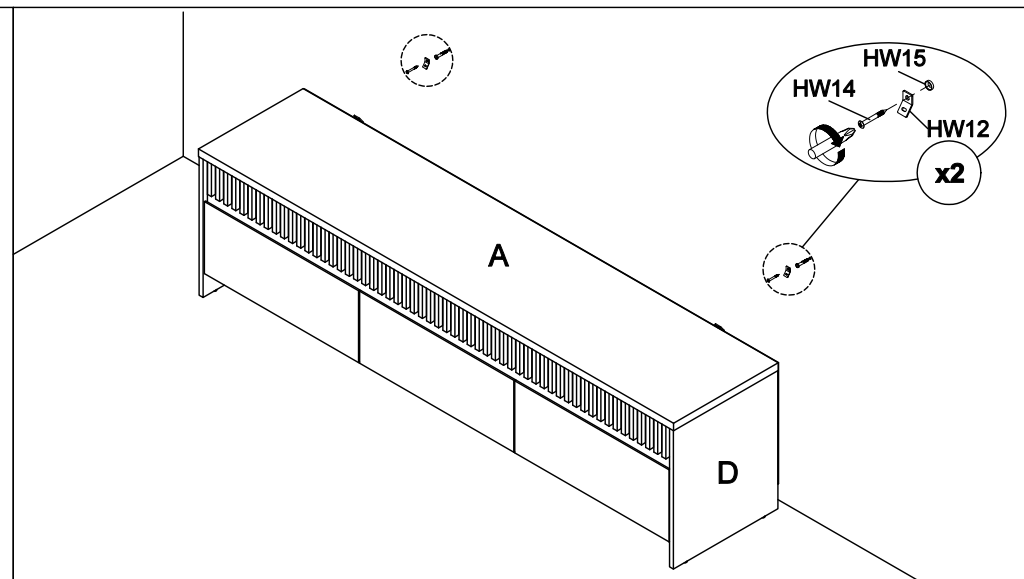

STEP 22: ASSEMBLE HARDWARE (HW12) TO (HW15) BY USING HARDWARE (HW14). IN THE ORDER SHOWN IN THE PICTURE.

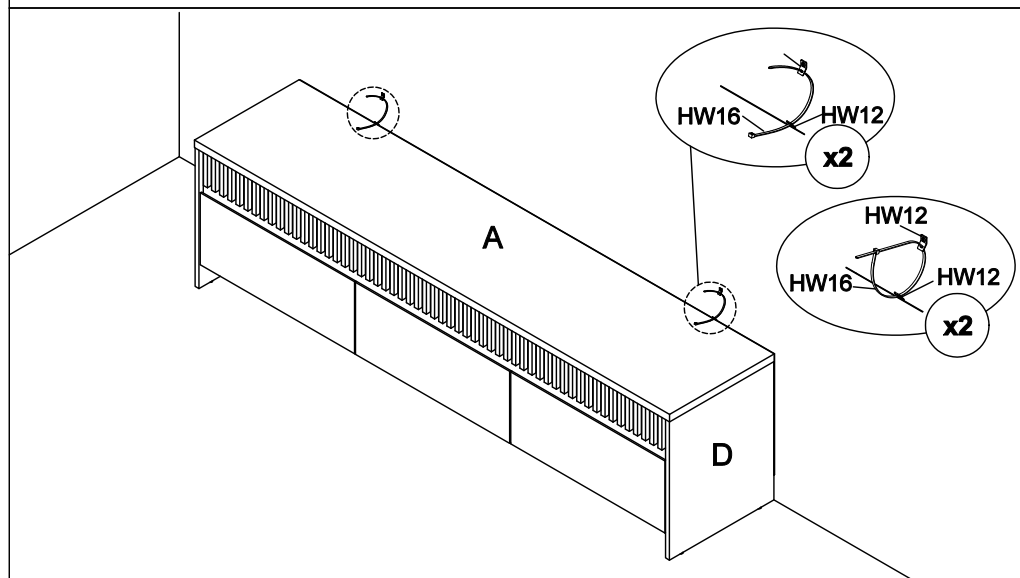

STEP 23: CONNECT BOTH OF THE HARDWARE (HW12) BY USING HARDWARE (HW16). TIGHTEN THE HARDWARE (HW16), AS SHOWN.