

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 1 hours.
- * Tools Required for Assembly (included): Allen Key, Screw Driver (Not Included)

CARE AND MAINTENANCE


WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

INDOOR METAL / ALUMINUM FURNITURE: Wipe spills immediately. Maintain with regular dusting and clean with mild soap and water, dry thoroughly and do not use a brass cleaner. Adhesive felt pads should always be used / applied in order to prevent damage to the furniture or surfaces on which the furniture is placed.



ITEM ID: MED3602A

ITEM DIMENSTION: 47.24" X 15.75" X 23.07"

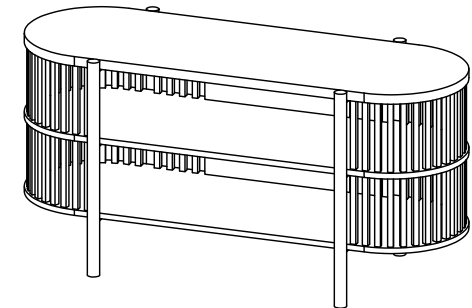


WARNING


Weight Capacity - 211 LBS

Warning : Do not stand on Media Stand

Warning : Do not over torque bolts


Part List and Hardware List

PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
A	TOP PANEL		X1	C	MIDDLE PANEL		X1	E	CABINET FRAME		X100
B	BOTTOM PANEL		X1	D	BACK PANEL		X2	F	METAL LEG		X4


HW1	MINIFIX CAM		X8	HW5	JCBC BOLT M6 X 15MM		X24	HW9	3.5 X 16MM SCREW		X2
HW2	MINIFIX BOLT		X8	HW6	ALLEN KEY M4		X1	HW10	4 X 35MM SCREW		X2
HW3	MINIFIX CAP		X8	HW7	SPRING DOOR SUPPORT		X200	HW11	6 X 40MM WALL PLUG		X2
HW4	M8 X 30MM WOOD DOWEL		X8	HW8	WALL BRACKET		X4	HW12	CABLE TIE		X2

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 1 hours.
- * Tools Required for Assembly (included): Allen Key , Screw Driver (Not Included)

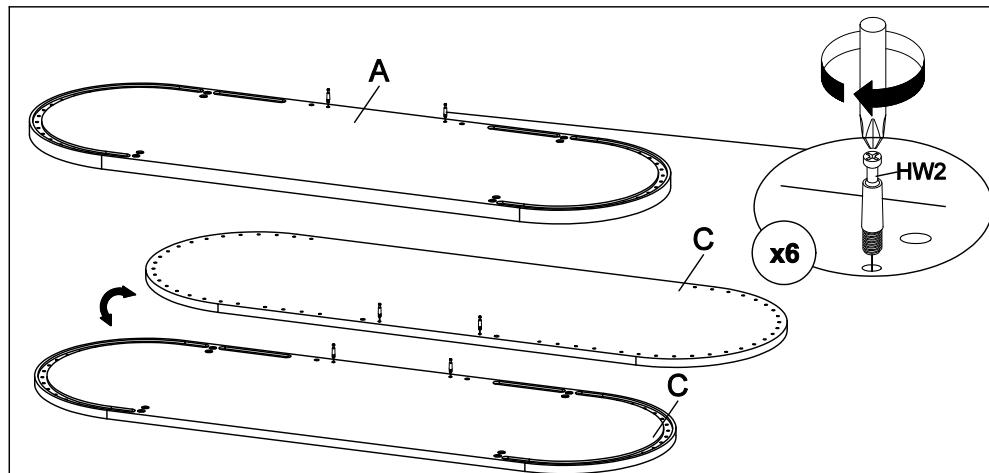


STEP 1: INSERT HARDWARE (HW2) ONTO PANEL (A, C) .

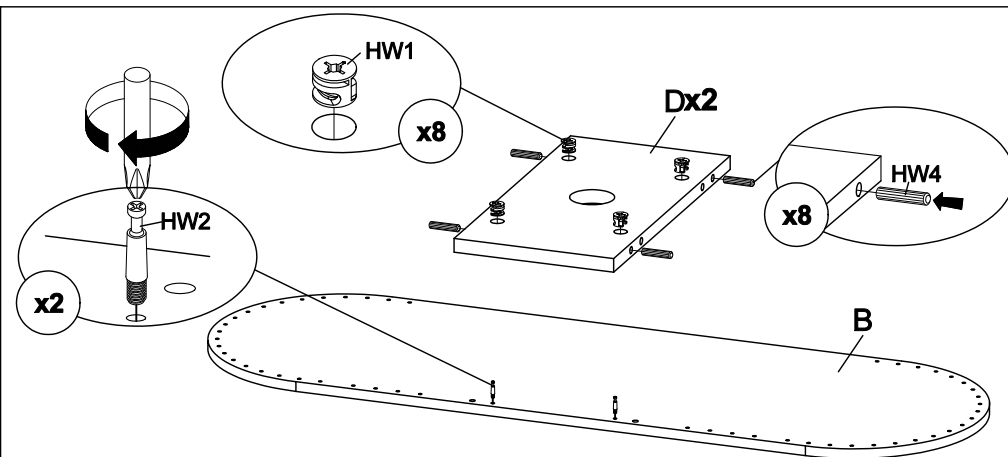


**STEP 2: INSERT HARDWARE (HW2) ONTO PANEL (B).
INSERT HARDWARE (HW1, HW4) INTO PANEL (D).**

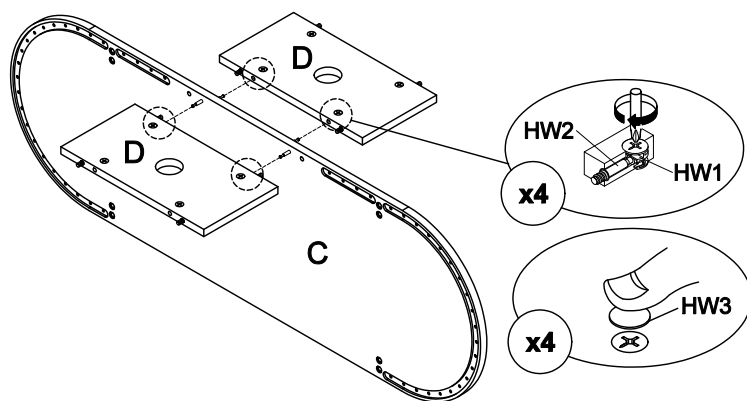


STEP 3: ATTACH PANEL (D) TO PANEL (C). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTILL TIGHT. APPLY (HW3) ONTO ALL (HW1)

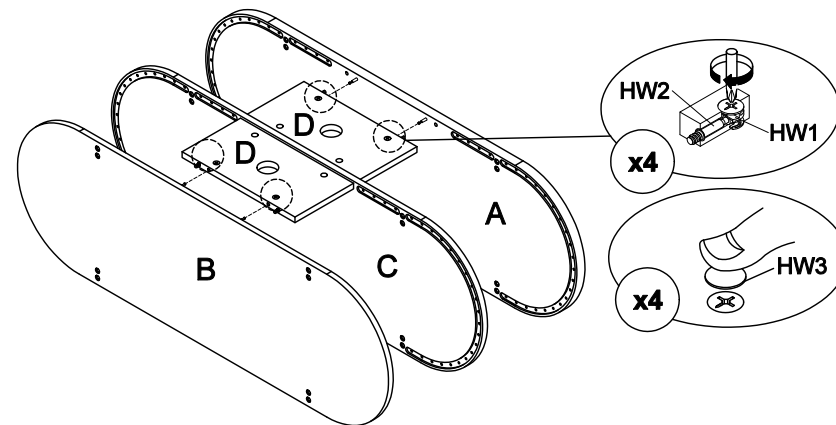


STEP 4: ATTACH PANEL (A, B) TO PANEL (D). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

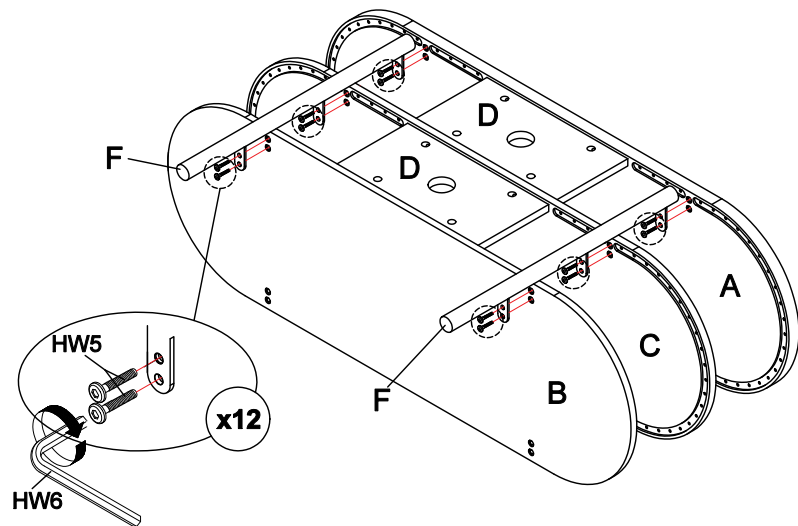


STEP 5: ATTACH PART (F) TO PANEL (A, B, C) BY USING HARDWARE (HW5), TIGHTEN WITH HARDWARE (HW6), AS SHOWN.

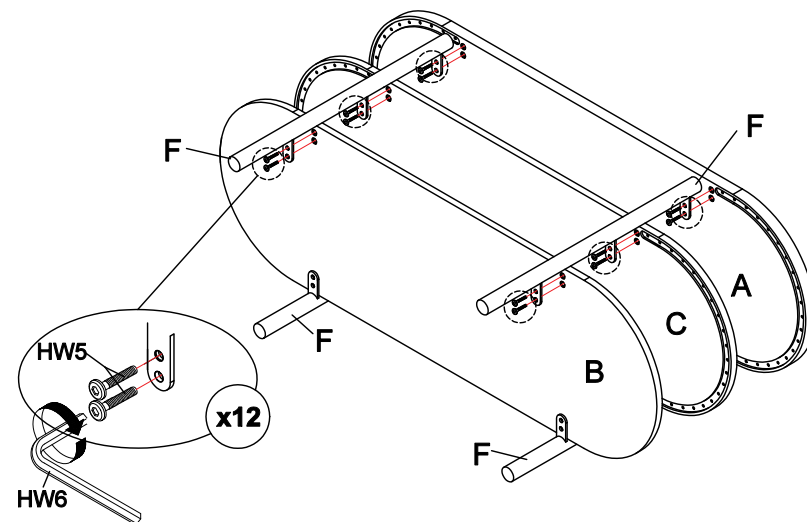


STEP 6: ATTACH PART (F) TO PANEL (A,B, C) BY USING HARDWARE (HW5), TIGHTEN WITH HARDWARE (HW6), AS SHOWN.

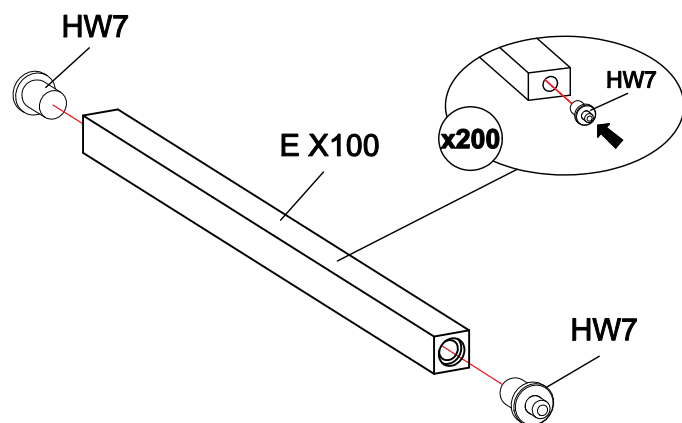


STEP 7: INSERT HARDWARE (HW7) INTO PART (E).

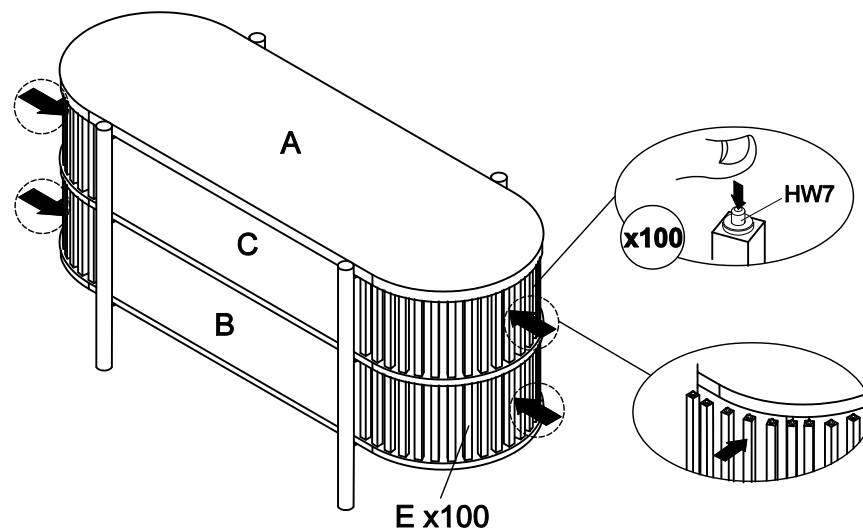


STEP 8: PRESS HARDWARE (HW7) AND INSERT PART (E) IN BETWEEN PANEL (A, C AND C, B) AS SHOWN.

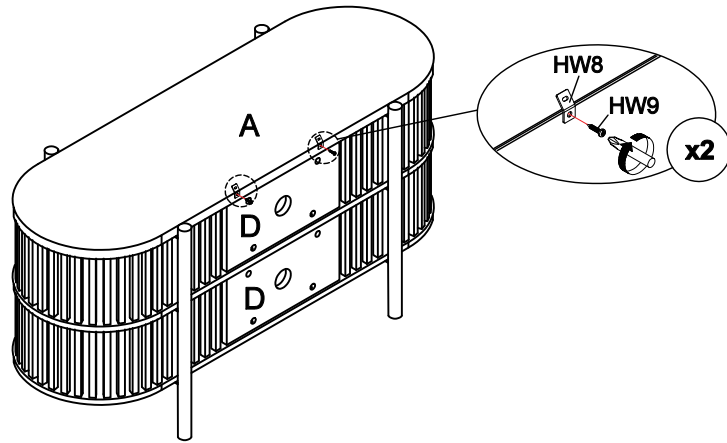


STEP 9: ASSEMBLE HARDWARE (HW8) TO PANEL (A) BY USING HARDWARE (HW9).

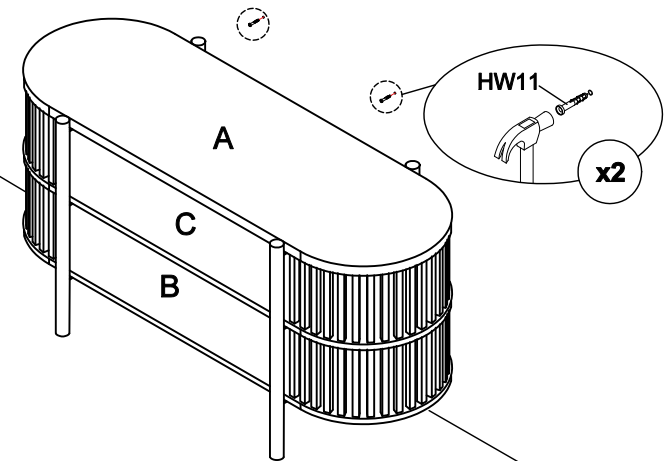

STEP 10: MARK AND USE THE POWER DRILL A HOLE ON THE WALL. HIT HARDWARE (HW11) INTO THE WALL.

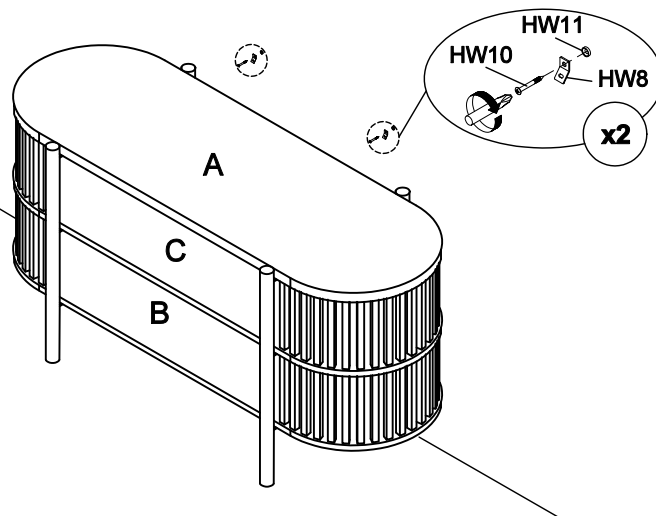

STEP 11: ASSEMBLE HARDWARE (HW8 TO HW11) BY USING HARDWARE (HW10). IN THE ORDER SHOWN IN THE Picture.

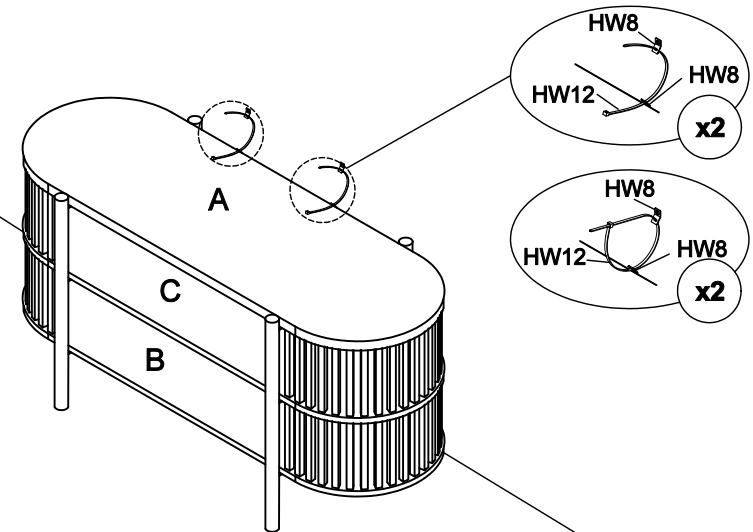

STEP 12: CONNECT BOTH OF THE HARDWARE (HW8) BY USING HARDWARE (HW12). TIGHTEN THE HARDWARE (HW12), AS SHOWN.