

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key, while Screwdriver and Hammer (Not Included).

CARE AND MAINTENANCE


WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

GLASS AND MIRROR CARE: Dust with a soft, dry cloth. Do not use abrasive cleaner. To clean mirror, spray a small amount of glass cleaner onto a lint-free cloth and wipe mirror clean.



ITEM ID: MED3603A

ITEM DIMENSTION: 70.87" X 15.75" X 21.26"

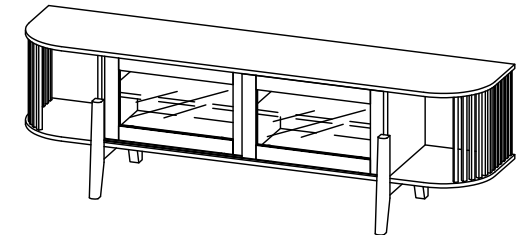








⚠WARNING⚠

Weight Capacity - 229 LBS




Warning : Do not stand on Media Stand

Warning : Do not over torque bolts

Part List

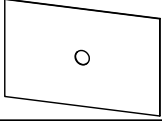
PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
A	TOP PANEL		X1	F	BACK SIDE (L)		X1	K	SUPPORT CABINET FRAME -2		X18
B	BOTTOM PANEL		X1	G	BACK SIDE (R)		X1	L	SLIDING DOOR		X2
C	SIDE PANEL (L)		X1	H	BACK PANEL		X2	M	APRON		X1
D	SIDE PANEL (R)		X1	I	SHELF PANEL		X2	N	WOODEN LEG		X2
E	CENTER PANEL		X1	J	SUPPORT CABINET FRAME -1		X4				

Hardware List


PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
HW1	MINIFIX CAM		X10	HW8	M3 X 12MM C.B SCREW		X24	HW15	SPRING DOOR SUPPORT		X42
HW2	MINIFIX BOLT		X10	HW9	M4 X 32MM C.B SCREW		X4	HW16	(S059) L BRACKET		X4
HW3	MINIFIX CAP		X10	HW10	M4 X 38MM C.B SCREW		X7	HW17	WALL BRACKET		X4
HW4	M8 X 30MM WOOD DOWEL		X24	HW11	5/8 PVC NAIL LEG		X4	HW18	3.5 X 16MM SCREW		X2
HW5	M6 X 50MM CSK CAP WOOD SCREW		X10	HW12	M6 X 50MM JCBC W		X2	HW19	4 X 35MM SCREW		X2
HW6	ALLEN KEY M4		X1	HW13	METAL SHELF SUPPORT		X8	HW20	6 X 40MM WALL PLUG		X2
HW7	U 480 ROLLER	(A)  (B) 	X4	HW14	STUB 192+TAPPING SCREW	(A)  (B) 	X8	HW21	CABLE TIE		X2

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key, while Screwdriver and Hammer (Not Included).

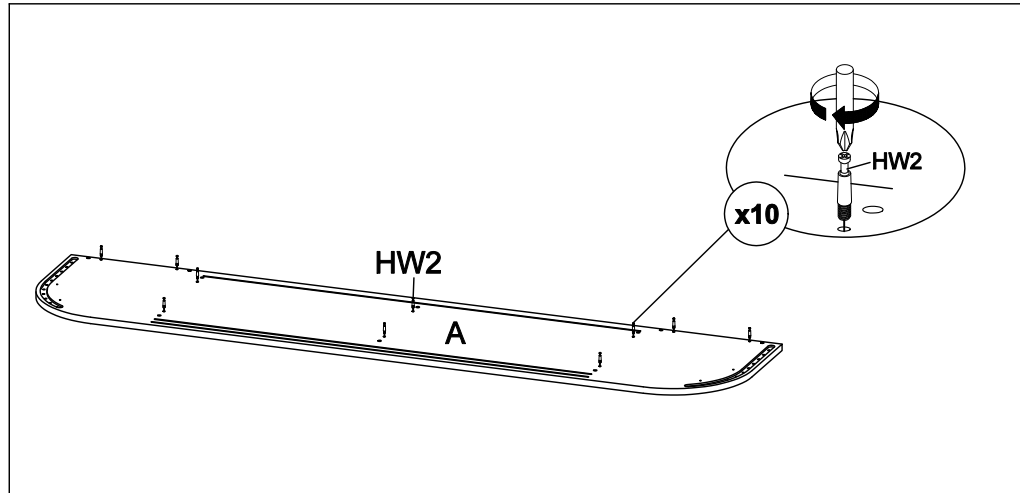


STEP 1: INSERT HARDWARE (HW2) ONTO PANEL (A).

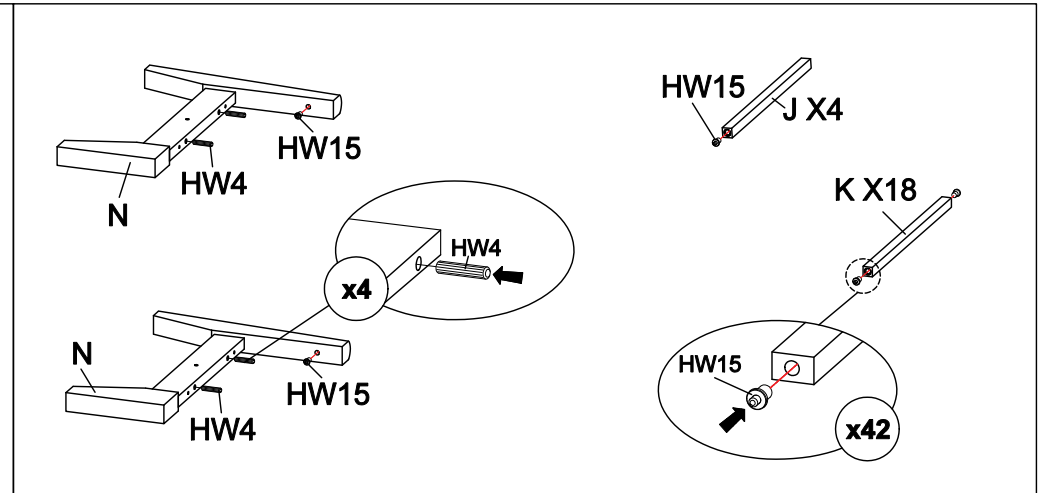


STEP 2: INSERT HARDWARE (HW4) INTO PANEL (N). INSERT HARDWARE (HW15) TO PANEL (J, K, N)

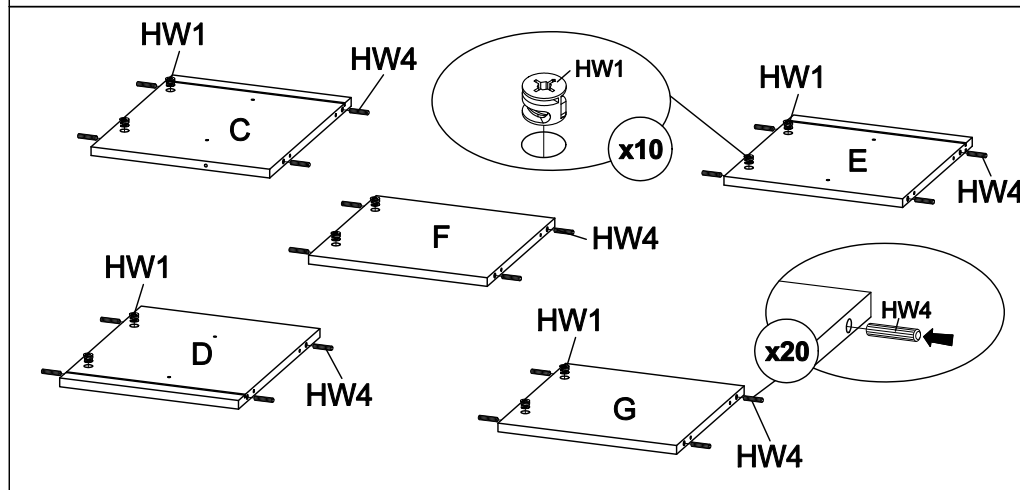


STEP 3: INSERT HARDWARE (HW1, HW4) INTO PANEL (C, D, E, F, G).

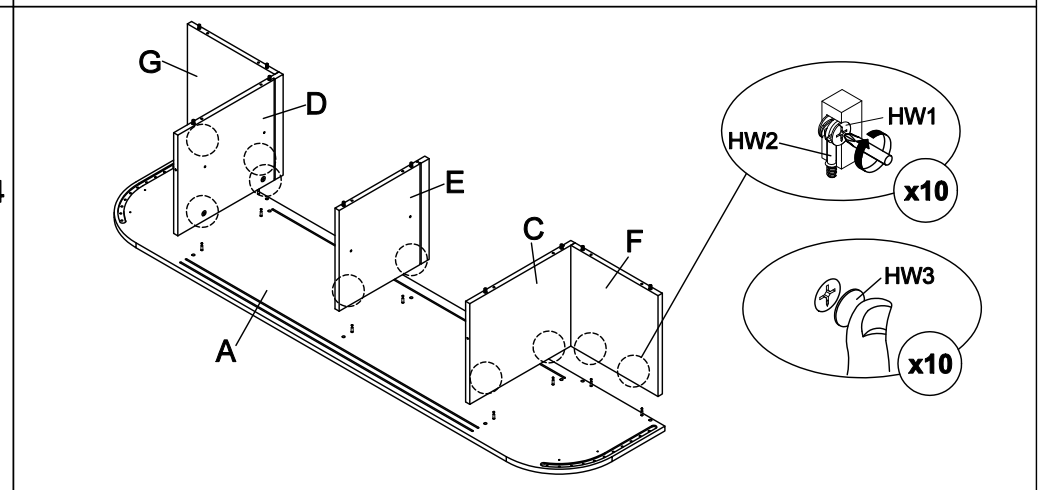


STEP 4: ATTACH PANEL (A) TO PANEL (C, D, E, F, G). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

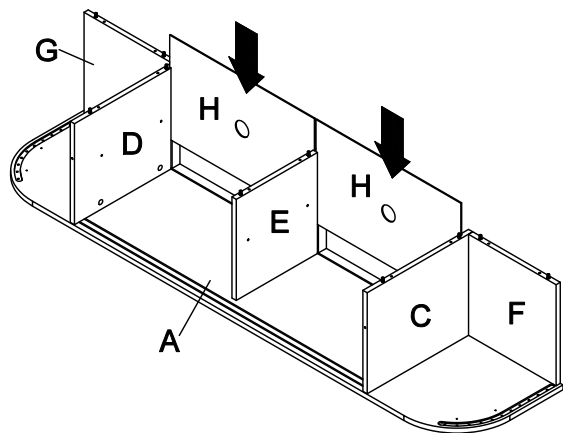


STEP 5: INSERT PANEL (H) INTO GROOVES BETWEEN PANEL (C, D, E).

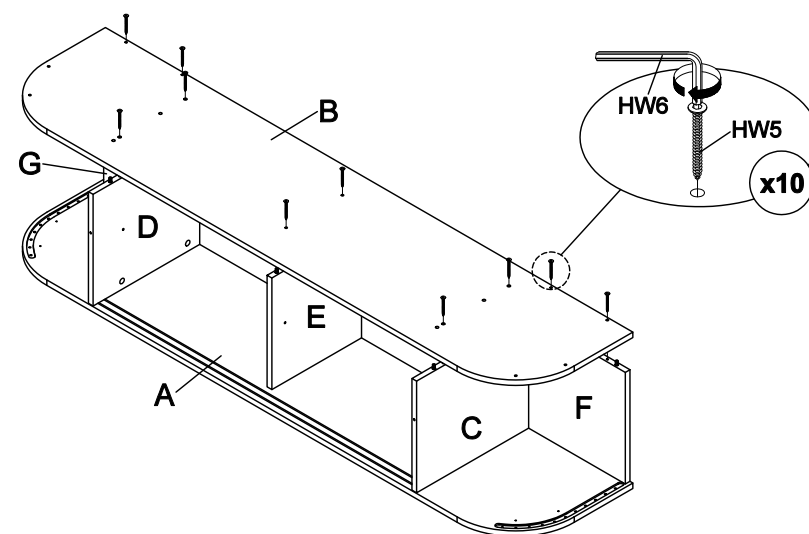


STEP 6: CONNECT PANEL (B) TO PANEL (C, D, E, F, G) BY USING HARDWARE (HW5, HW6).

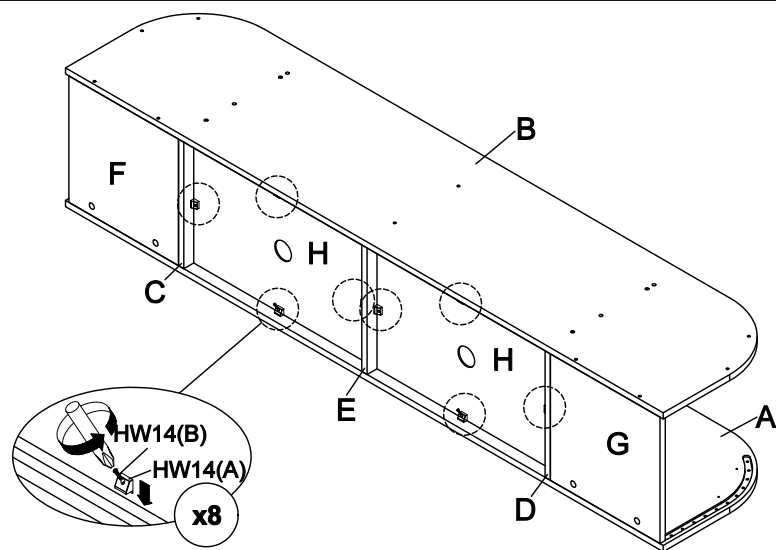


STEP 7: INSERT HARDWARE (HW14(A)) INTO SLOT AT PANEL (A, B, C, D, E). ASSEMBLE HARDWARE (HW14(A)) BY USING HARDWARE (HW14(B)).

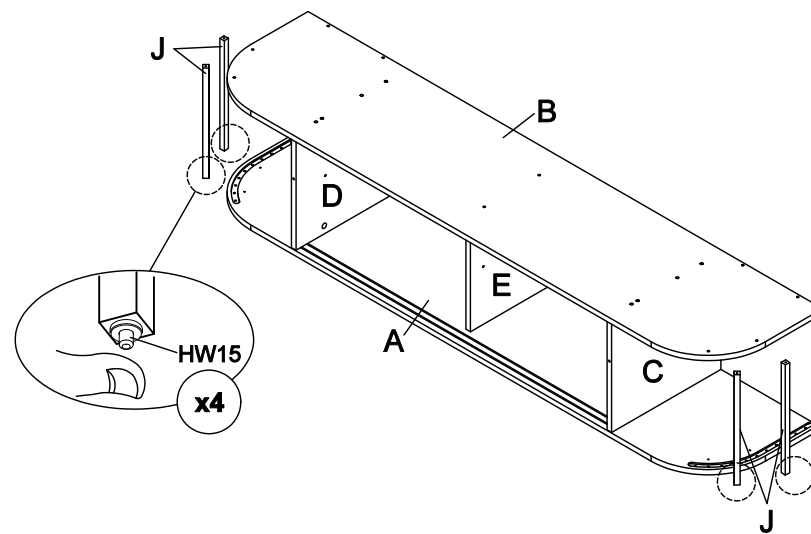


STEP 8: PRESS HARDWARE (HW15) AND INSERT TO PANEL (A, B).

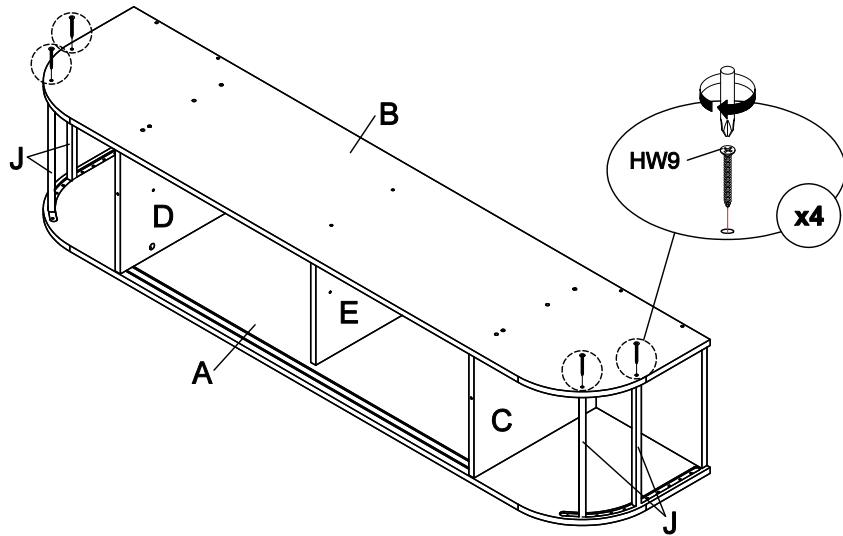


STEP 9: ATTACH PANEL (B) WITH PART (J) BY USING HARDWARE (HW9).

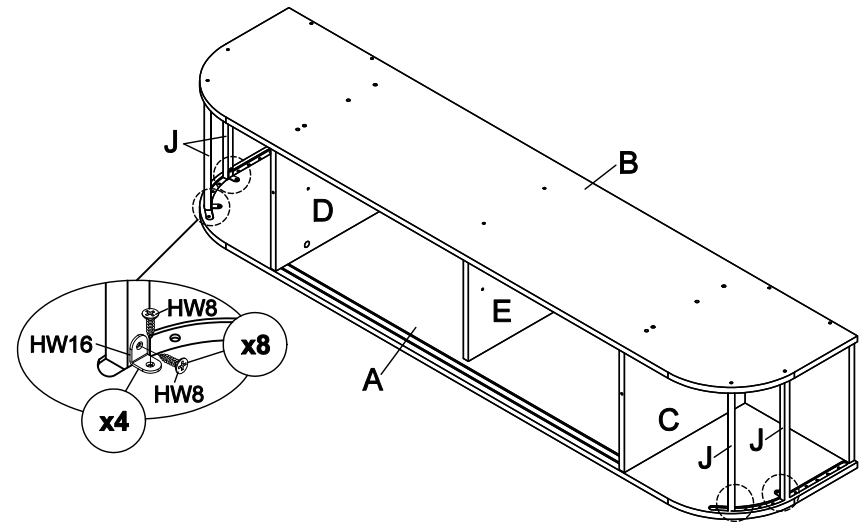


STEP 10: ATTACH HARDWARE (HW16) TO PART (J) AND PANEL (A) BY USING HARDWARE (HW8).

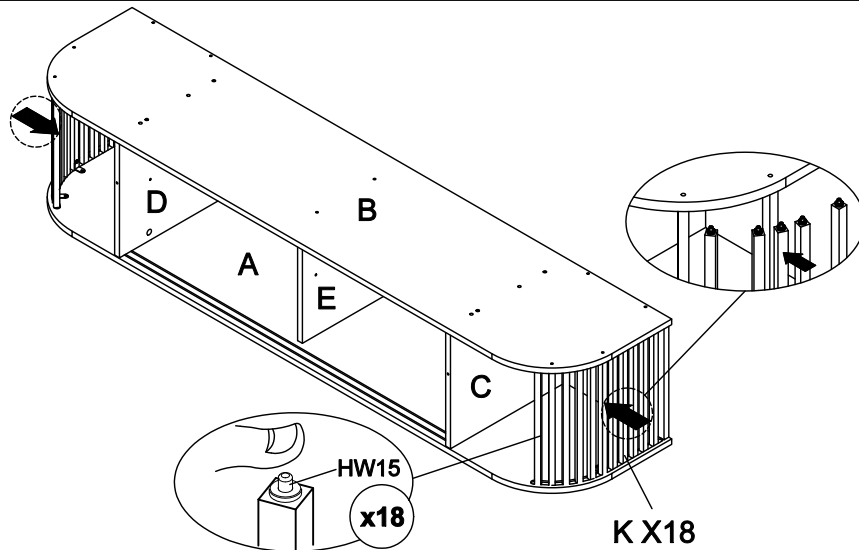


STEP 11: PRESS HARDWARE (HW15) AND INSERT IN BETWEEN PANEL (A, B).

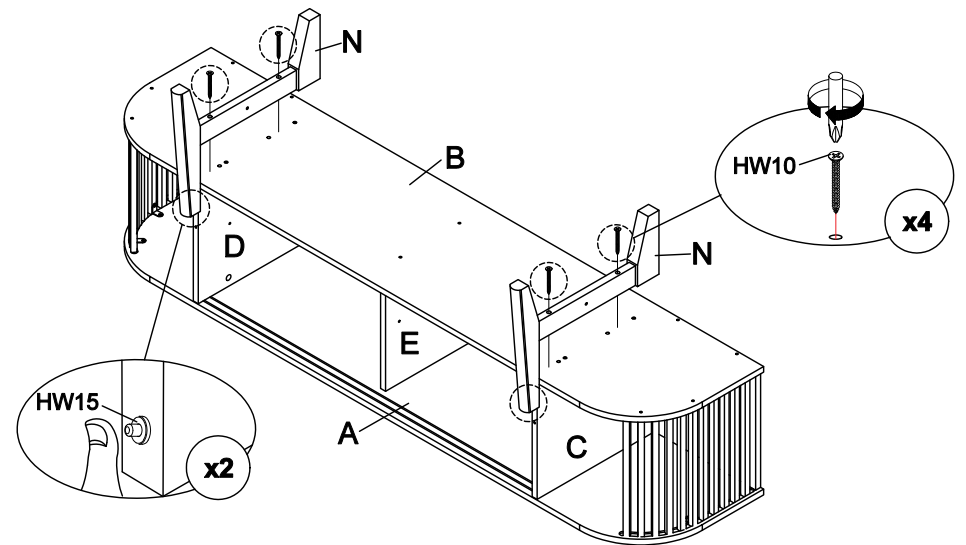


STEP 12: PRESS HARDWARE (HW15) AND INSERT IN PANEL (C, D). ATTACH WOODEN LEGS (N) TO PANEL (B) BY USING HARDWARE (HW10).

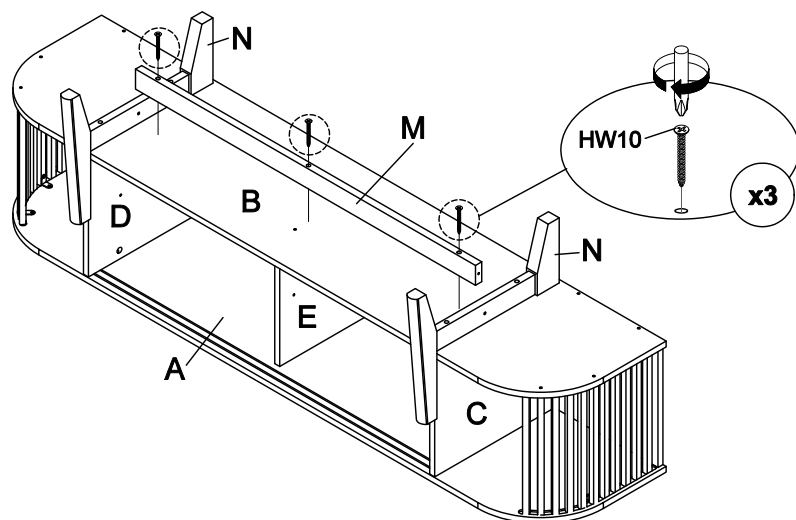


STEP 13: CONNECT APRON (M) TO PANEL (B) BY USING HARDWARE (HW10).

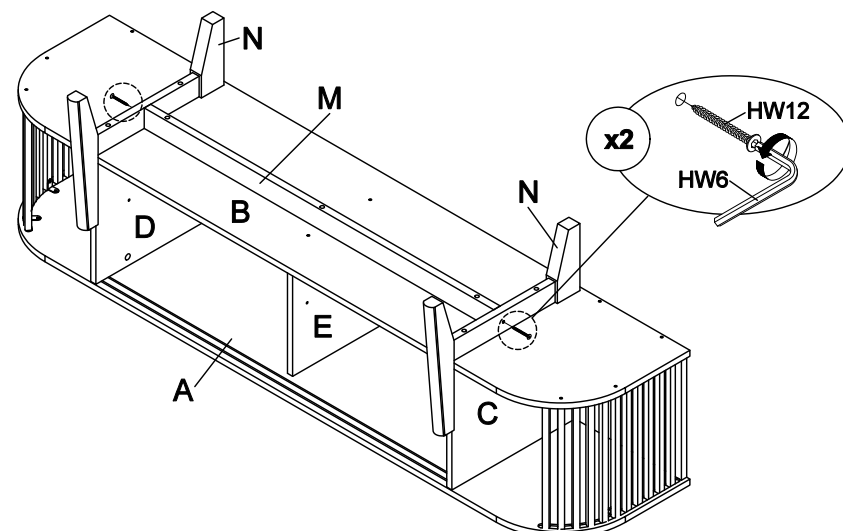


STEP 14: ATTACH WOODEN LEGS (N) TO APRON (M) BY USING HARDWARE (HW6, HW12).

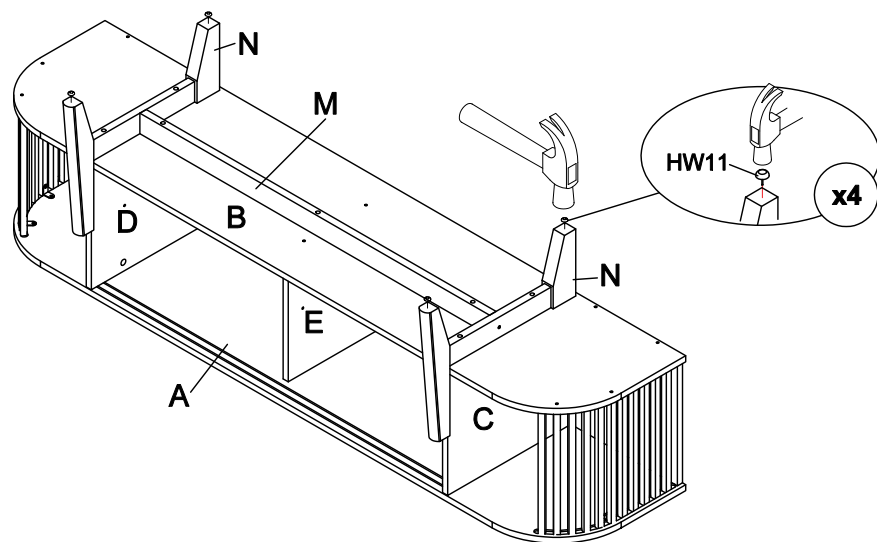


STEP 15: HIT HARDWARE (HW11) INTO BOTTOM OF WOODEN LEGS (N).

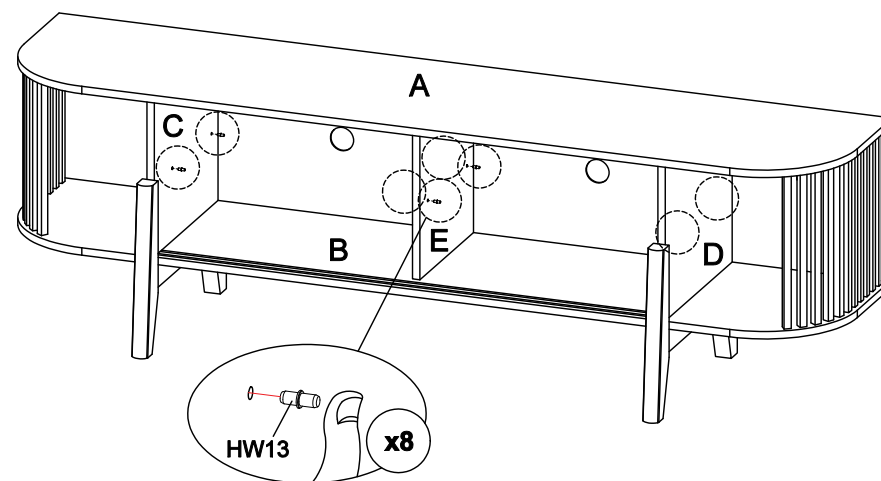


STEP 16: INSERT HARDWARE (HW13) INTO MOUNTING POSITIONS OF PANEL (C, D, E).

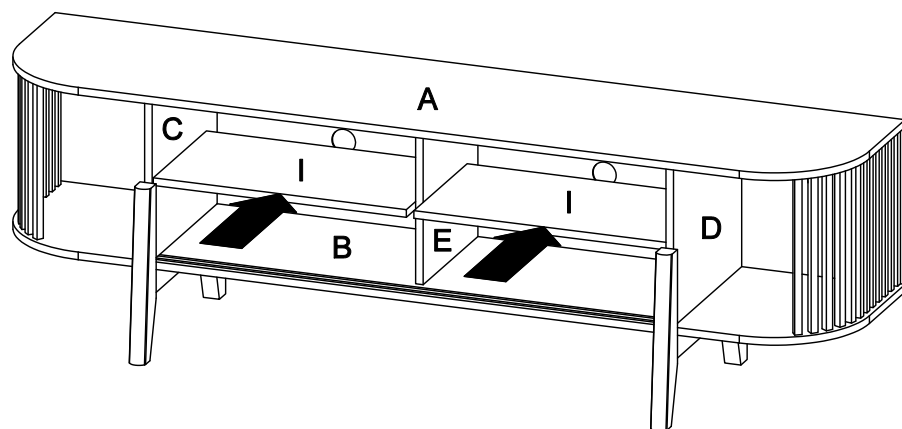


STEP 17: INSERT THE PANEL (I) IN BETWEEN PANEL (C, D, E).

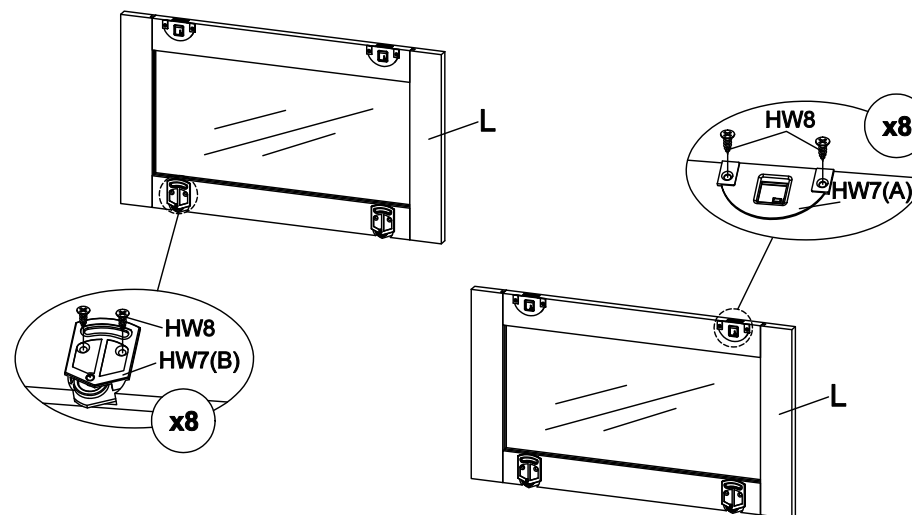


STEP 18: ATTACH HARDWARE (HW7(A/B)) TO PANEL (L) BY USING HARDWARE (HW8).

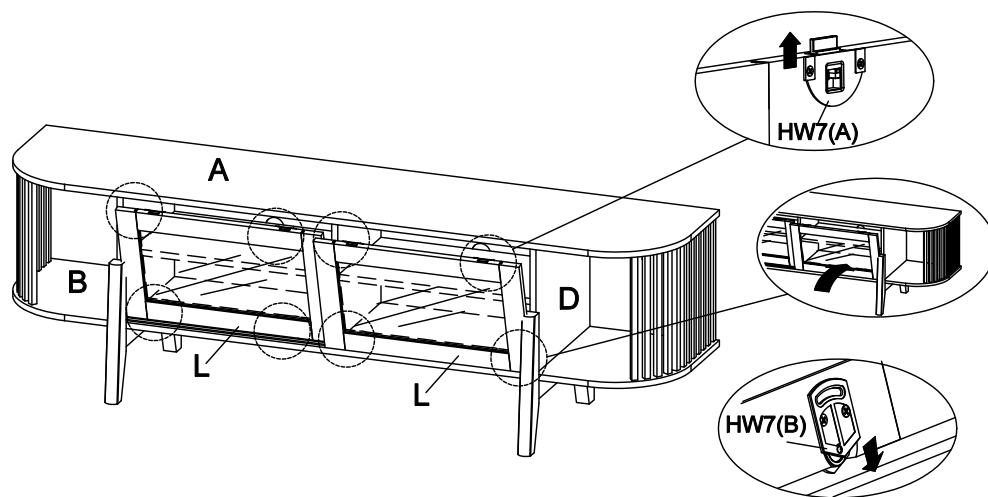


STEP 19: INSERT PANEL (L) TO ASSEMBLED TV UNIT.

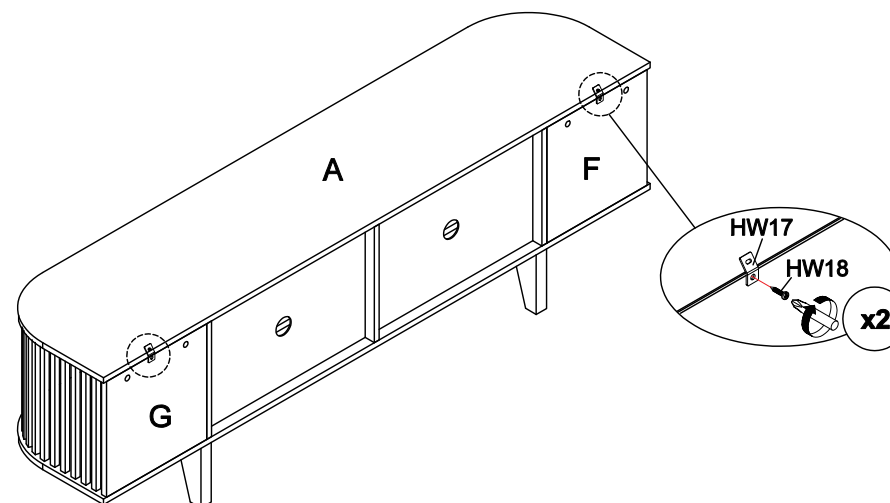


STEP 20: ASSEMBLE HARDWARE (HW17) TO PANEL (A) BY USING HARDWARE (HW18).

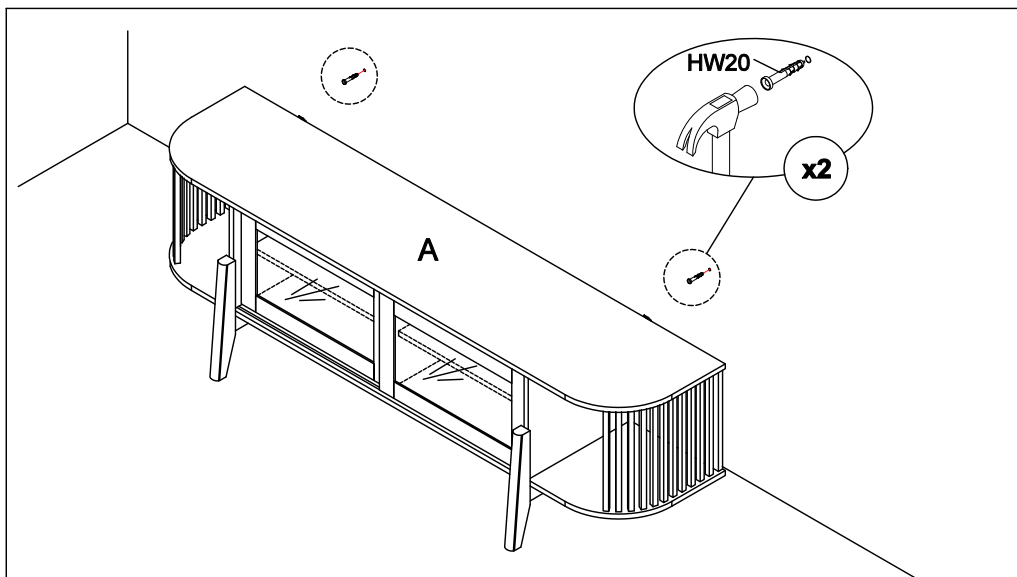

STEP 21: MARK AND USE THE POWER DRILL TO DRILL A HOLE ON THE WALL. HIT HARDWARE (HW20) INTO THE WALL.

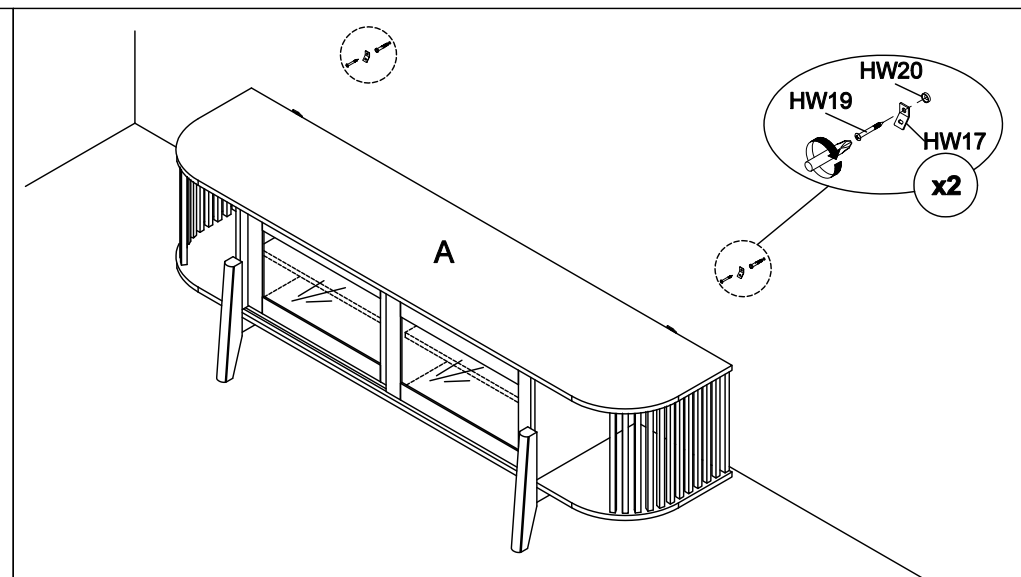

STEP 22: ASSEMBLE HARDWARE (HW17) TO (HW20) BY USING HARDWARE (HW19). IN THE ORDER SHOWN IN THE PICTURE.

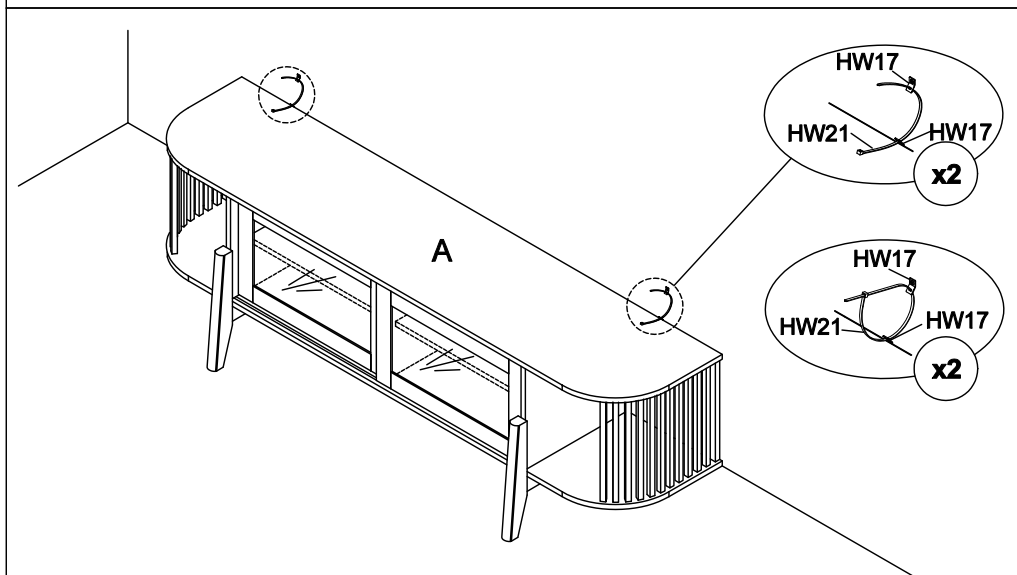

STEP 23: CONNECT BOTH OF THE HARDWARE (HW17) BY USING HARDWARE (HW21). TIGHTEN THE HARDWARE (HW21), AS SHOWN.