NOTICE

* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 60 minutes.
* Tools Required for Assembly (included): Allen Key, while Screwdriver and Hammer (Not Included).

CARE AND MAINTENANCE

WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

SAFAVIEH FURNITURE











ITEM ID: MED3605A-1/2 & -2/2
ITEM DIMENSTION: 53.46" X 18.35" X 39.21"

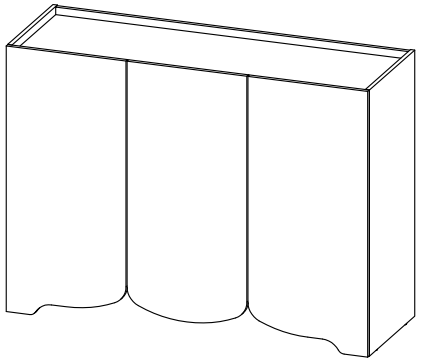





⚠WARNING⚠

Weight Capacity - 240 LBS
Warning : Do not stand on Sideboard
Warning : Do not over torgue bolts

Part List

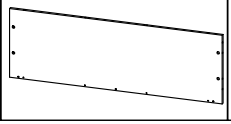
PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
A	TOP PANEL		X1	F	CENTER PANEL (R)		X1	K	DOOR PANEL (L)		X1
B	BOTTOM PANEL		X1	G	SHELF PANEL (L/R)		X2	L	DOOR PANEL (R)		X1
C	SIDE PANEL (L)		X1	H	SHELF PANEL (C)		X1	M	CENTER DOOR		X1
D	SIDE PANEL (R)		X1	I	BACK PANEL (UP)		X1				
E	CENTER PANEL (L)		X1	J	BACK PANEL (DOWN)		X1				

Hardware List


PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
HW1	MINIFIX CAM		X20	**HW7**	M3.5 X 16MM C.B SCREW		X40	**HW13**	3.5 X 16MM SCREW		X2
HW2	MINIFIX BOLT		X20	**HW8**	METAL SHELF SUPPORT		X12	**HW14**	4 X 35MM SCREW		X2
HW3	MINIFIX CAP		X20	**HW9**	5/8 PVC NAIL LEG		X4	**HW15**	6 X 40MM WALL PLUG		X2
HW4	M8 X 30MM WOOD DOWEL		X34	**HW10**	SOFT CLOSING HINGES 5/8		X6	**HW16**	CABLE TIE		X2
HW5	M6 X 50MM CSK CAP WOOD SCREW		X12	**HW11**	CENTER LEG (50X50X140MM)		X1				
HW6	ALLEN KEY M4		X1	**HW12**	WALL BRACKET		X4				

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 60 minutes.
* Tools Required for Assembly (included): Allen Key, while Screwdriver and Hammer (Not Included).

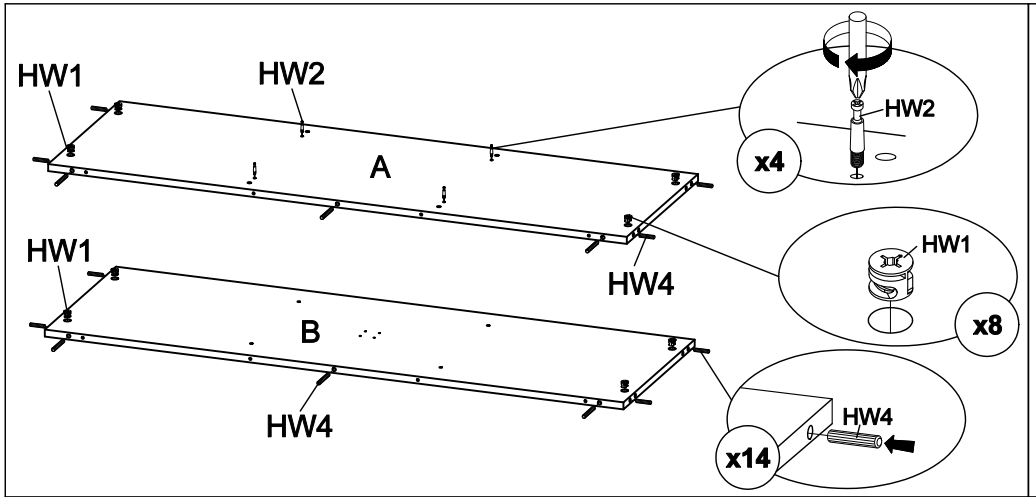


STEP 1: INSERT HARDWARE (HW1, HW4) INTO PANEL (A, B).
INSERT HARDWARE (HW2) ONTO PANEL (A).

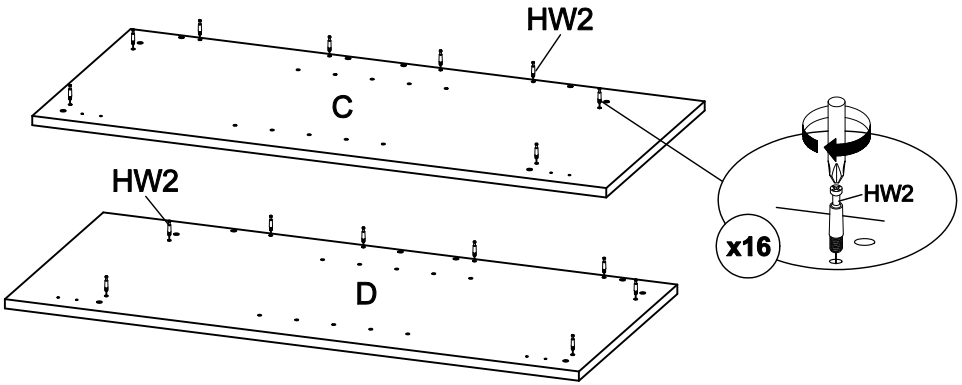


STEP 2: INSERT HARDWARE (HW2) ONTO PANEL (C, D).

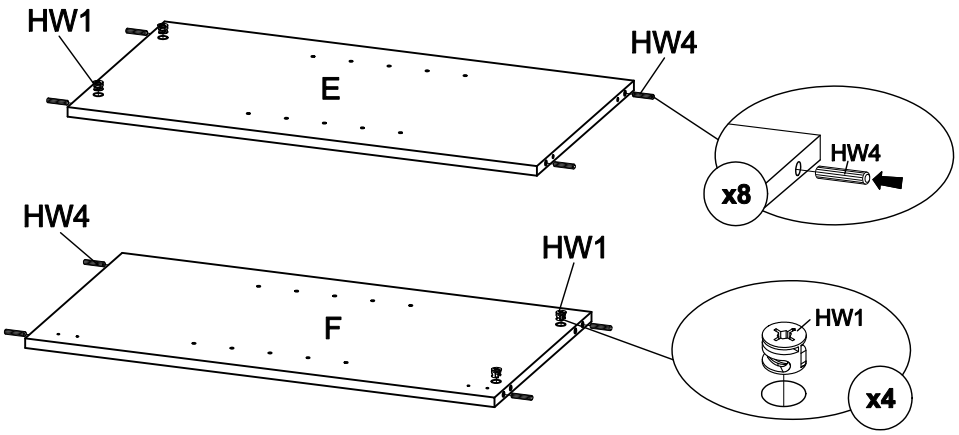


STEP 3: INSERT HARDWARE (HW1, HW4) INTO PANEL (E, F).

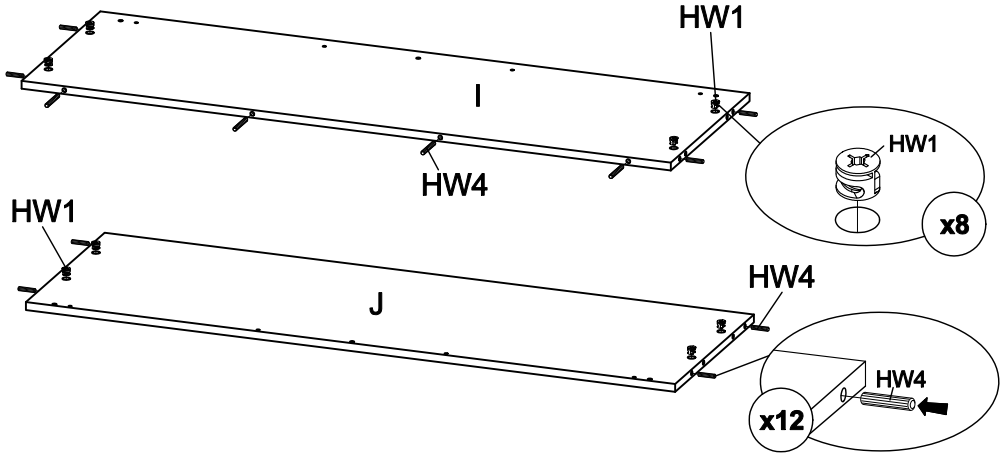


STEP 4: INSERT HARDWARE (HW1, HW4) INTO PANEL (I, J).

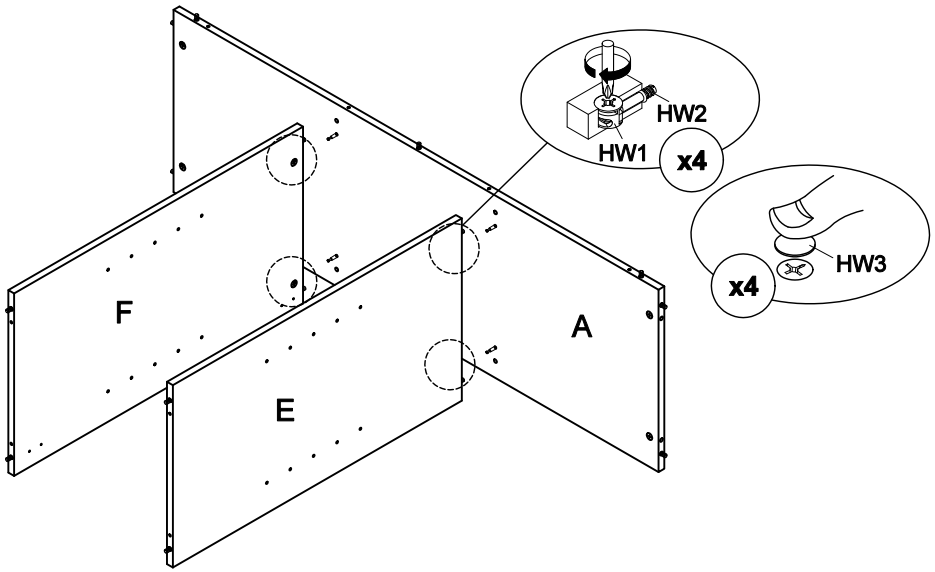


STEP 5: ATTACH PANEL (A) TO PANEL (E, F). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

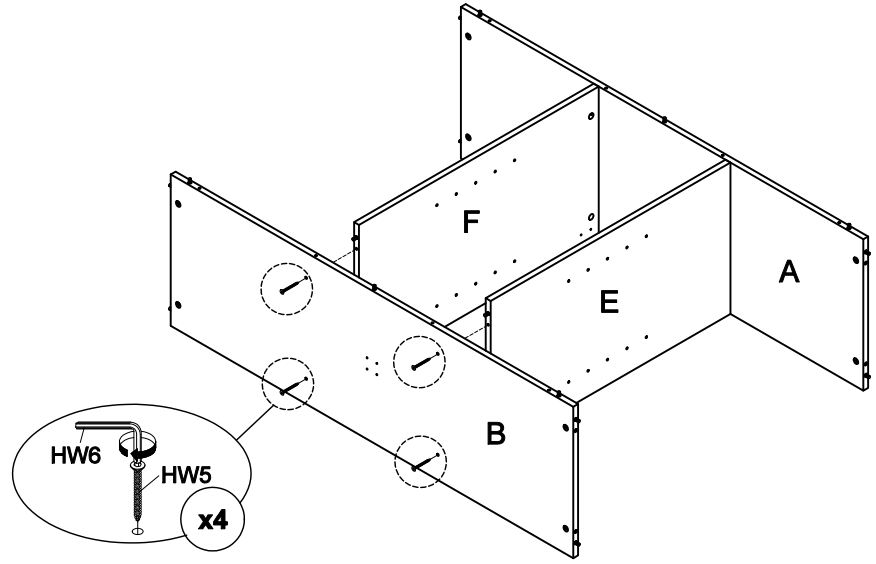


STEP 6: CONNECT PANEL (B) TO PANEL (E, F) BY USING HARDWARE (HW5, HW6).

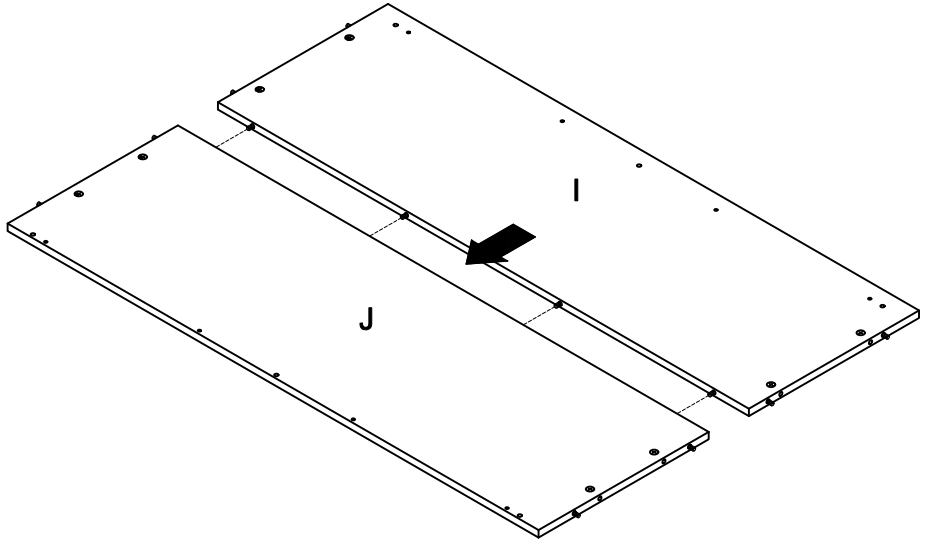


STEP 7: ATTACH PANEL (I) TO PANEL (J).

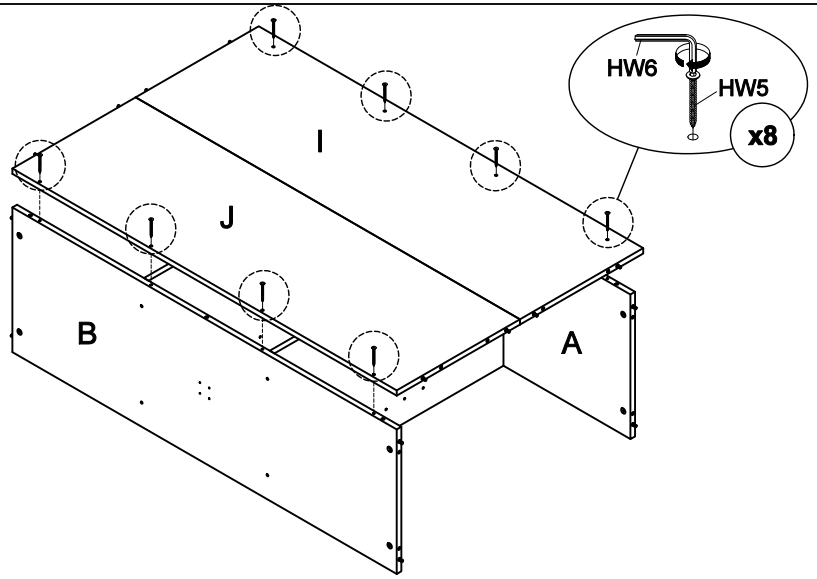


STEP 8: CONNECT PANEL (I, J) TO PANEL (A, B) BY USING HARDWARE (HW5, HW6).

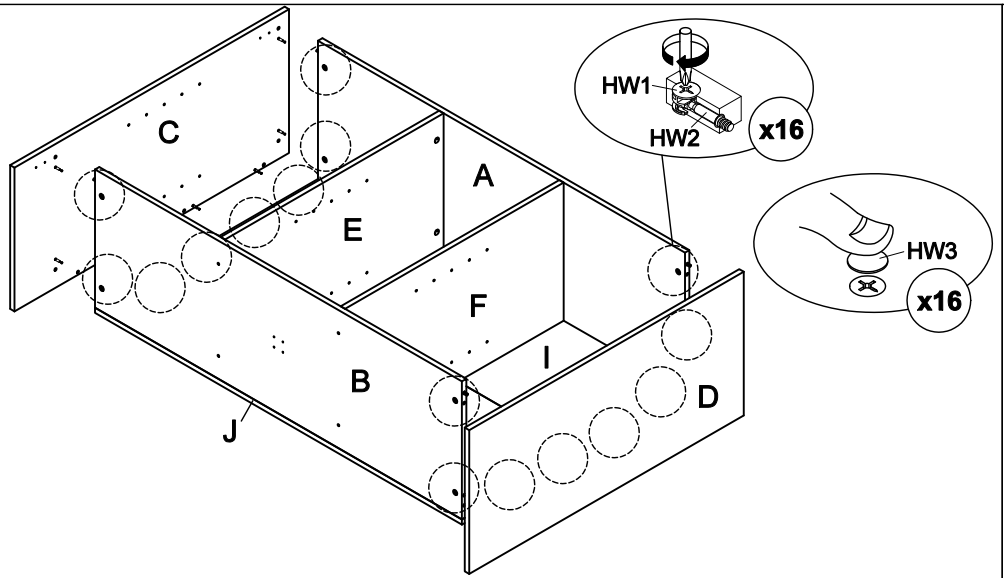


STEP 9: ATTACH PANEL (C, D) TO PANEL (A, B, I, J). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

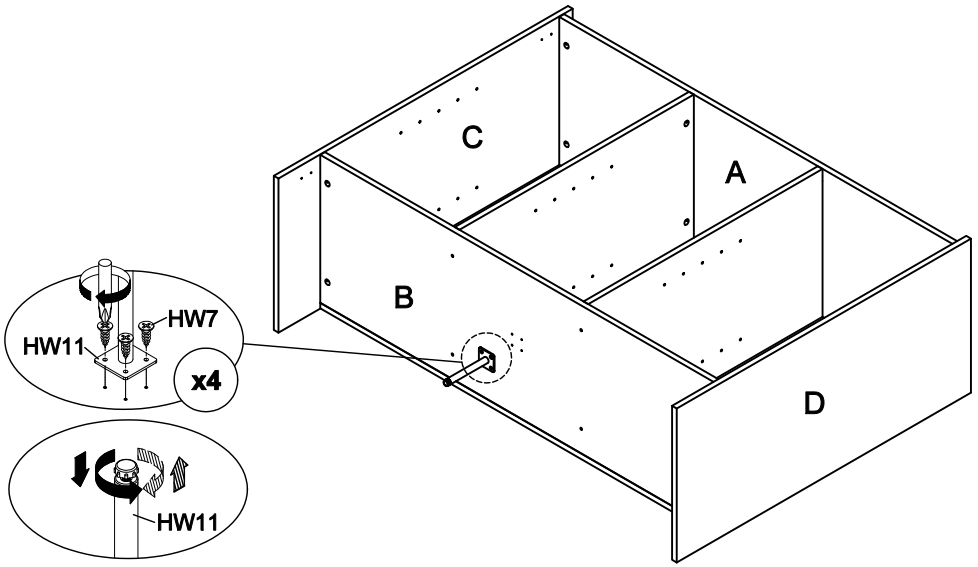


STEP 10: ATTACH HARDWARE (HW11) TO PANEL (B) BY USING HARDWARE (HW7).

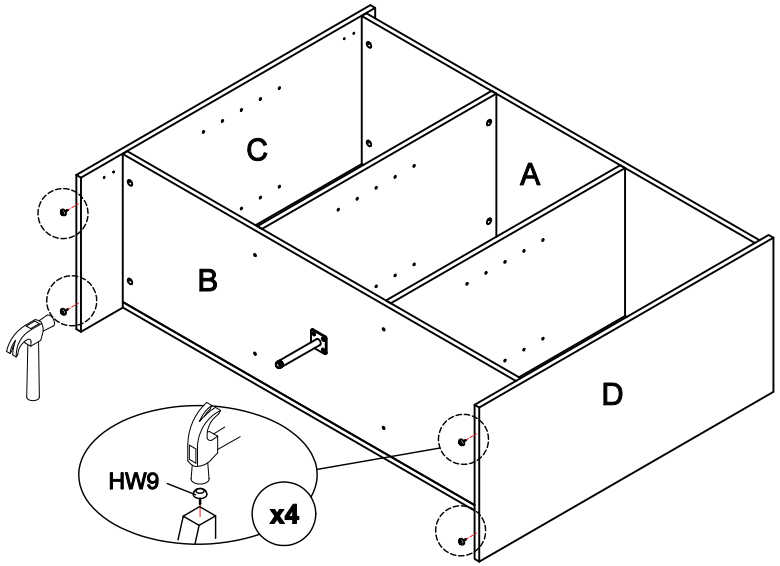


STEP 11: HIT HARDWARE (HW9) INTO BOTTOM OF THE PANEL (C, D).

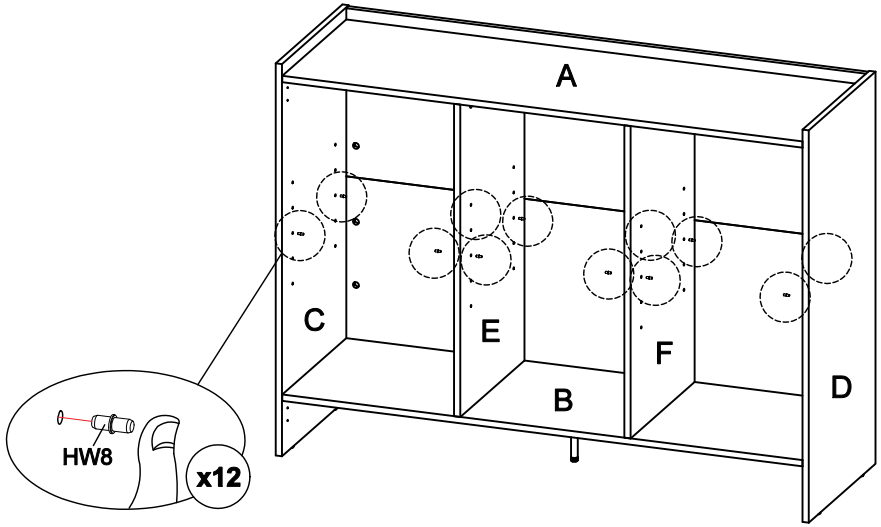


STEP 12: INSERT HARDWARE (HW8) INTO MOUNTING POSITIONS ON PANEL (C, D, E, F) BY HAND.

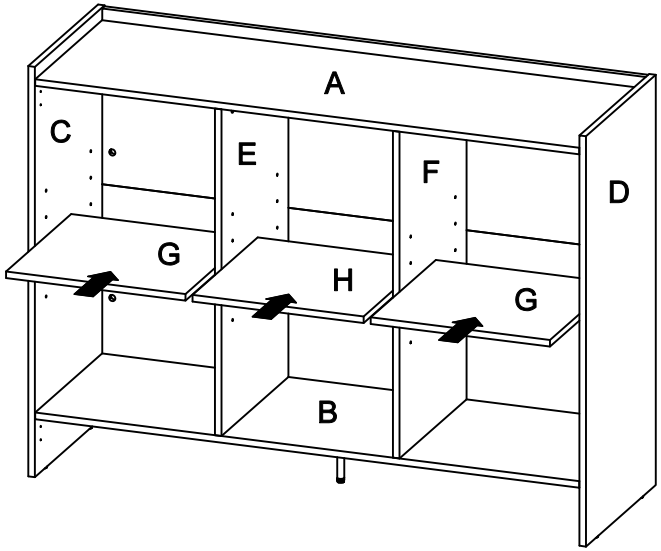


STEP 13: INSERT THE PANEL (G) IN BETWEEN (C, E & D, F). INSERT THE PANEL (H) IN BETWEEN (E, F) .

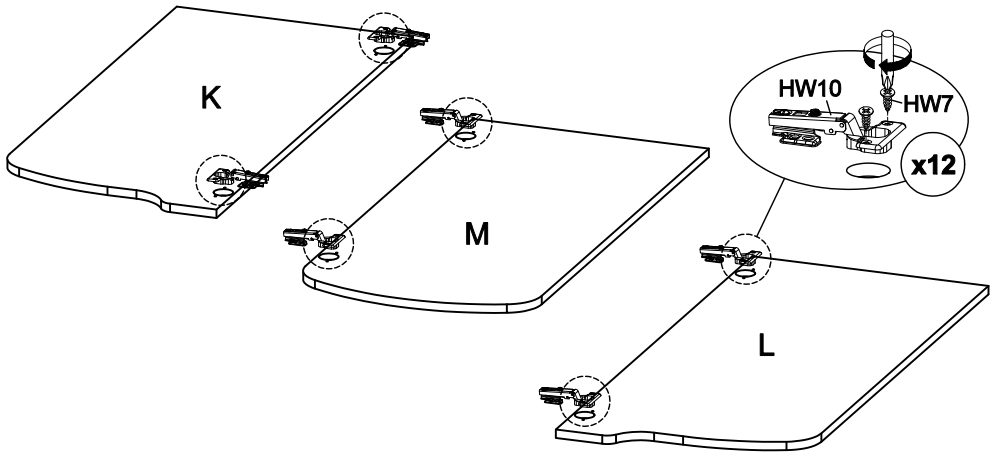


STEP 14: ATTACH HARDWARE (HW10) TO PANEL (K, L, M) BY USING HARDWARE (HW7).

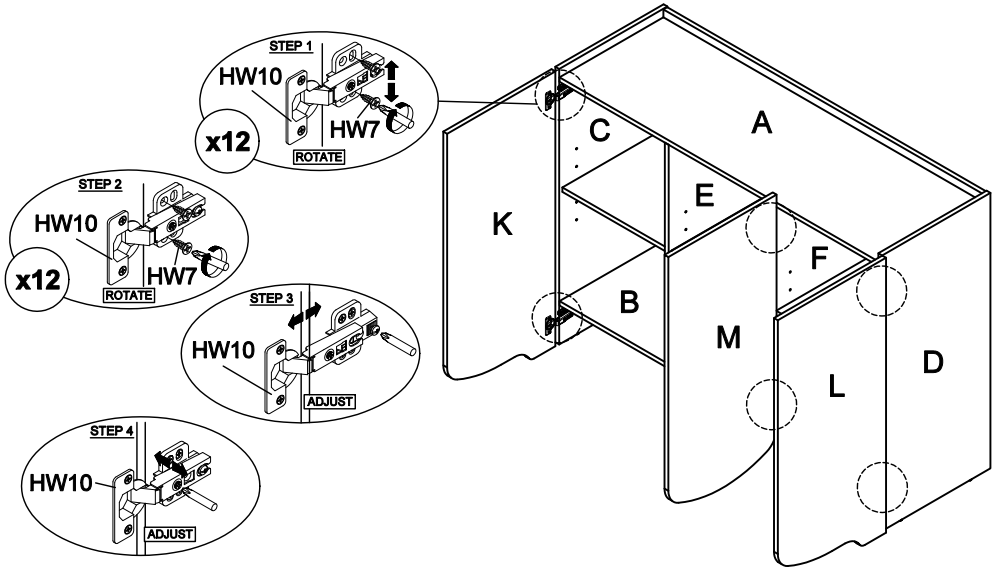


STEP 15: ATTACH HARDWARE (HW10) TO PANEL (C, D, F) BY USING HARDWARE (HW7). TIGHTEN OR LOOSEN THE SCREW TO ADJUST POSITION OF PANEL (K, L, M).

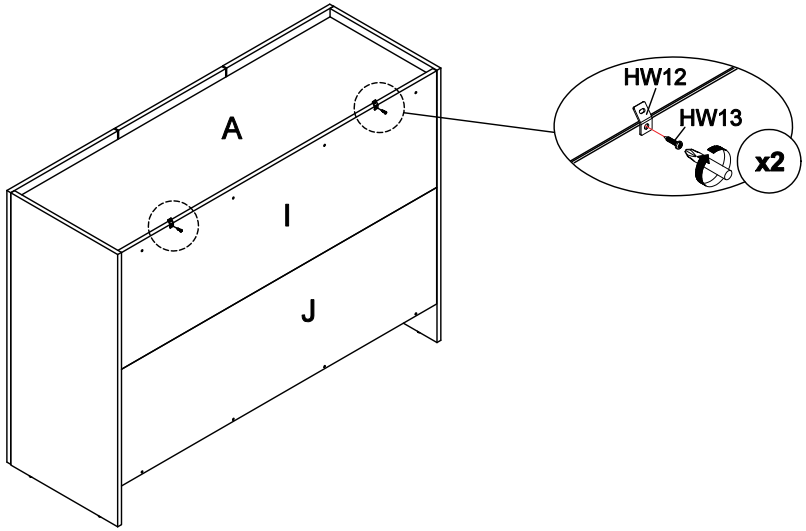


STEP 16: ASSEMBLE HARDWARE (HW12) TO PANEL (I) BY USING HARDWARE (HW13).

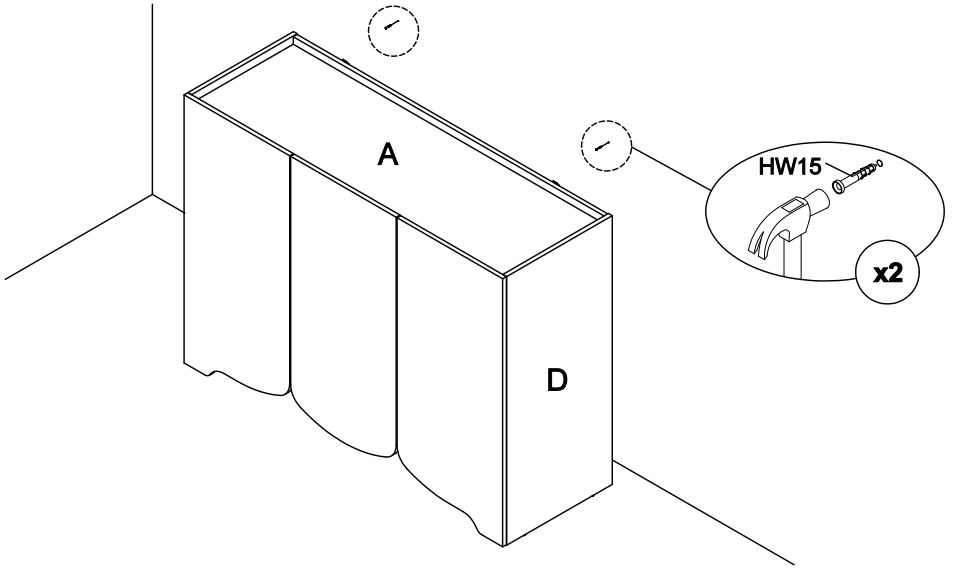

STEP 17 MARK AND USE THE POWER DRILL TO DRILL A HOLE ON THE WALL. HIT HARDWARE (HW15) INTO THE WALL.

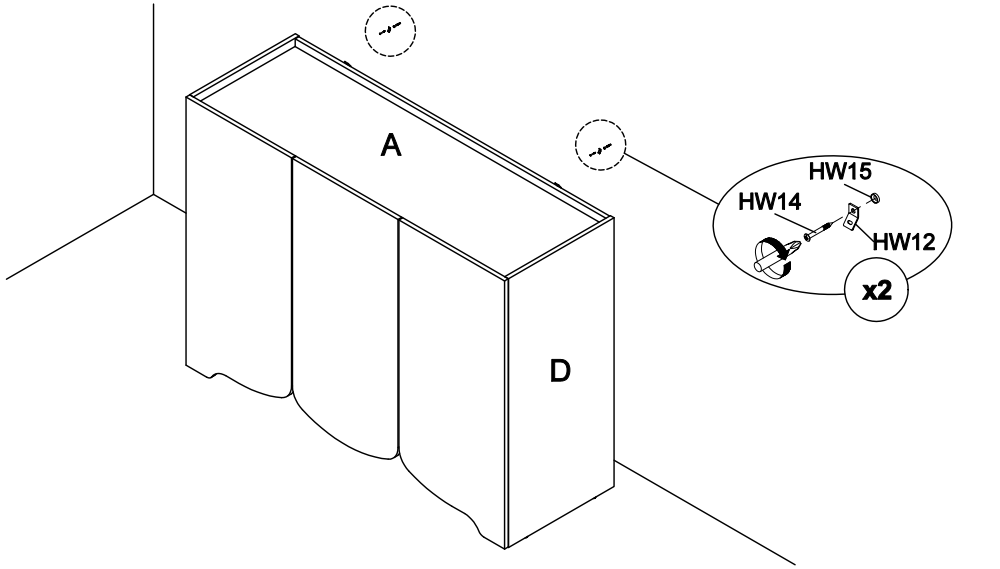

STEP 18: ASSEMBLE HARDWARE (HW12) TO (HW15) BY USING HARDWARE (HW14). IN THE ORDER SHOWN IN THE PICTURE.

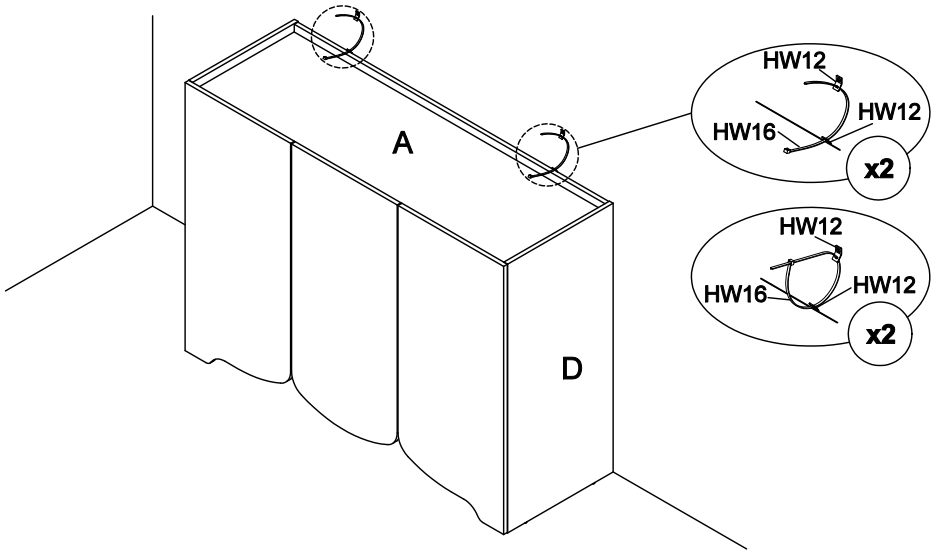

STEP 19: CONNECT BOTH OF THE HARDWARE (HW12) BY USING HARDWARE (HW16). TIGHTEN THE HARDWARE (HW16), AS SHOWN.