NOTICE

* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 45 minutes.
* Tools Required for Assembly (included): Allen Key, while Screwdriver and Hammer (Not Included).

CARE AND MAINTENANCE

WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

SAFAVIEH FURNITURE







ITEM ID: MED3608A
ITEM DIMENSTION: 31.18" X 15.75" X 28.82"

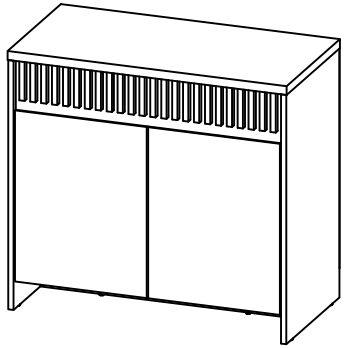


⚠WARNING⚠

Weight Capacity - 119 LBS
Warning : Do not stand on Sideboard
Warning : Do not over torgue bolts


Part List and Hardware List

PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
A	TOP PANEL		X1	E	TOP SUPPORT		X1	I	DOOR PANEL (L)		X1
B	BOTTOM PANEL		X1	F	CENTER SUPPORT		X1	J	DOOR PANEL (R)		X1
C	SIDE PANEL (L)		X1	G	BACK PANEL		X1	K	CABINET LEG		X1
D	SIDE PANEL (R)		X1	H	SHELF PANEL		X1				


HW1	MINIFIX CAM		X21	HW6	M3.5 X 16MM C.B SCREW		X24	HW11	WALL BRACKET		X4
HW2	MINIFIX BOLT		X21	HW7	5/8 NAIL		X16	HW12	3.5 X 16MM SCREW		X2
HW3	MINIFIX CAP		X21	HW8	5/8 PVC NAIL LEG		X6	HW13	4 X 35MM SCREW		X2
HW4	M8 X 30MM WOOD DOWEL		X15	HW9	METAL SHELF SUPPORT		X4	HW14	6 X 40MM WALL PLUG		X2
HW5	ALLEN KEY M4		X1	HW10	SOFT CLOSING 7/8 HINGES		X4	HW15	CABLE TIE		X2

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 45 minutes.
* Tools Required for Assembly (included): Allen Key , while Screwdriver and Hammer (Not Included).

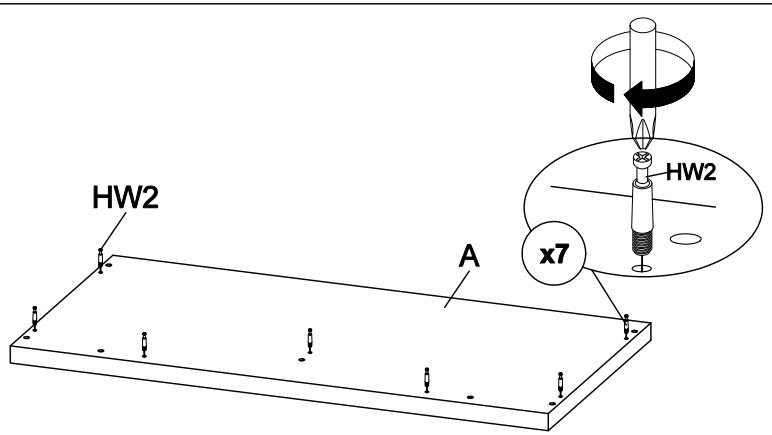


STEP 1: INSERT HARDWARE (HW2) ONTO PANEL (A).

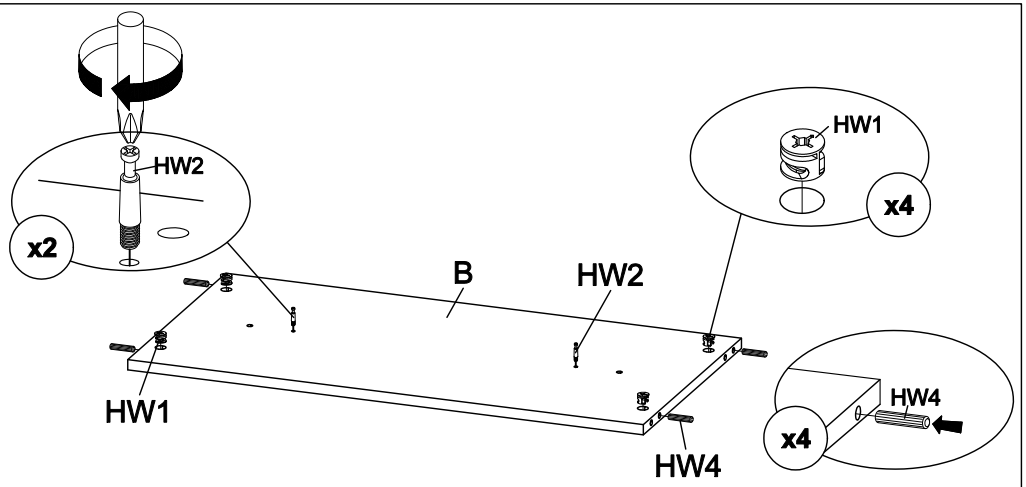


STEP 2: INSERT HARDWARE (HW1, HW4) INTO PANEL (B).
INSERT HARDWARE (HW2) ONTO PANEL (B).

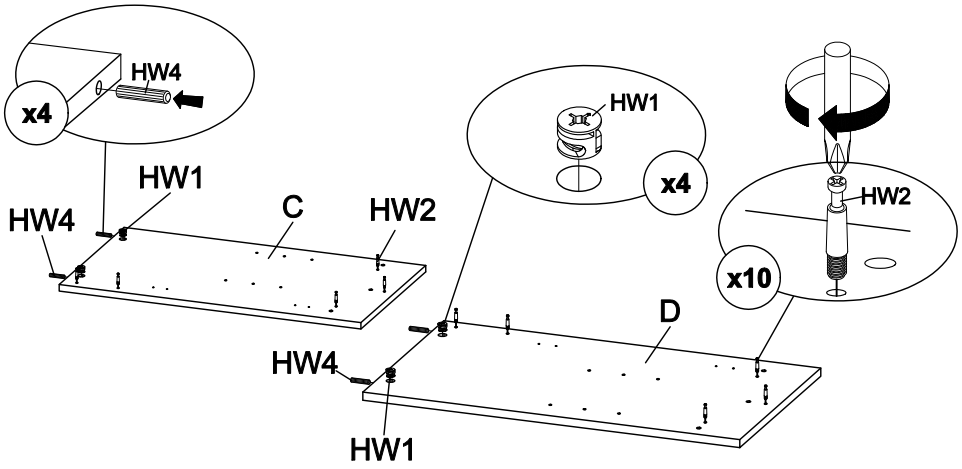


STEP 3: INSERT HARDWARE (HW1, HW4) INTO PANEL (C, D).
INSERT HARDWARE (HW2) ONTO PANEL (C, D).

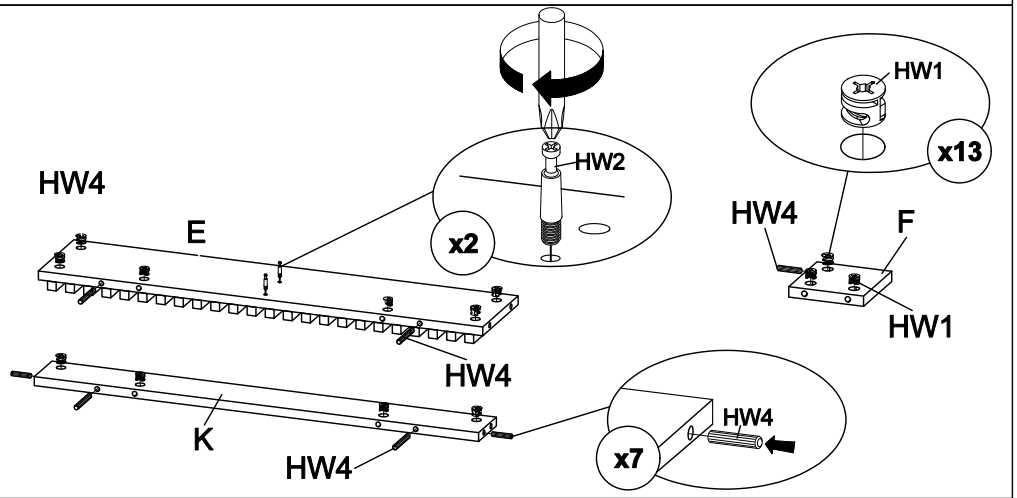


STEP 4: INSERT HARDWARE (HW1, HW4) INTO PANEL (E, F, K). INSERT HARDWARE (HW2) ONTO PANEL (E).

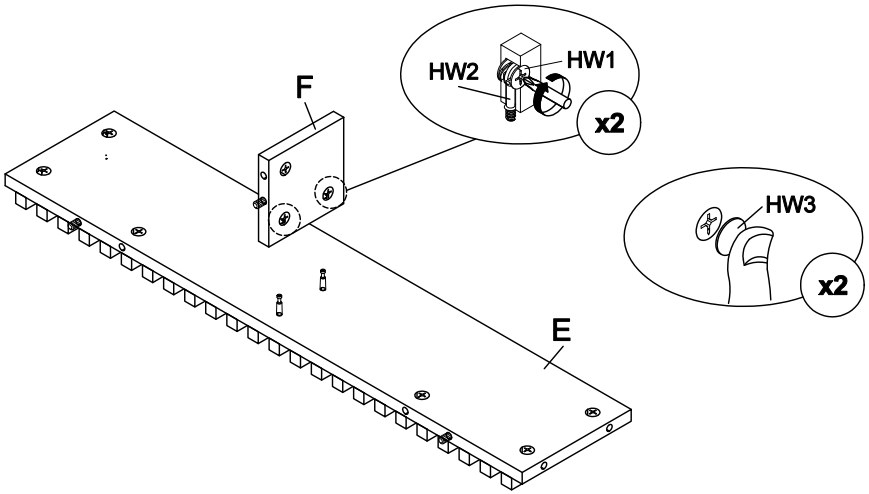


STEP 5: ATTACH PANEL (E) TO PANEL (F). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTILL TIGHT. APPLY (HW3) ONTO ALL (HW1).

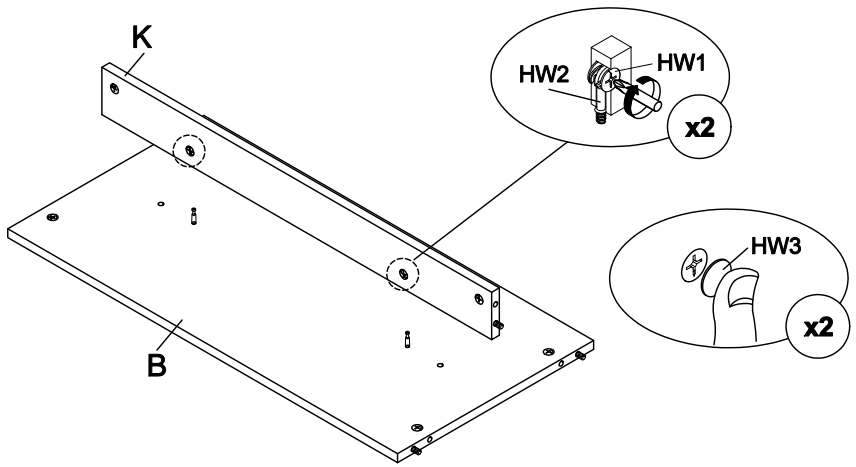


STEP 6: ATTACH PANEL (B) TO PANEL (K). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

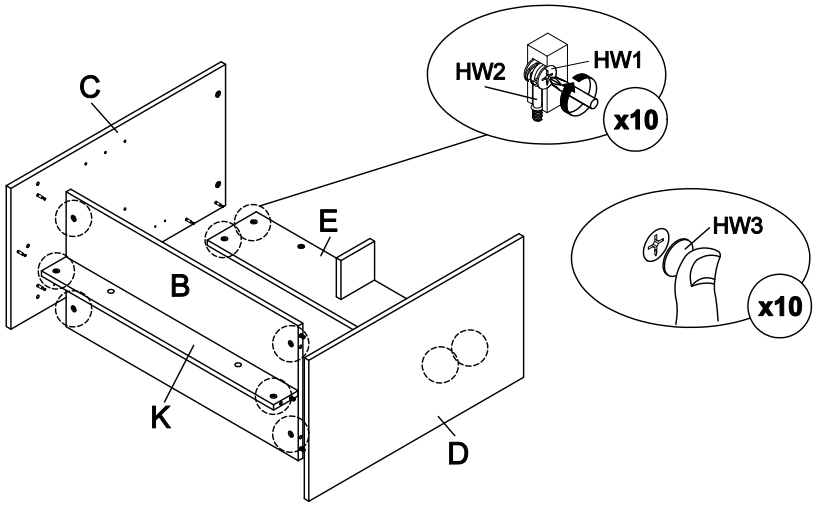


STEP 7: ATTACH PANEL (C, D) TO PANEL (B, E, K). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

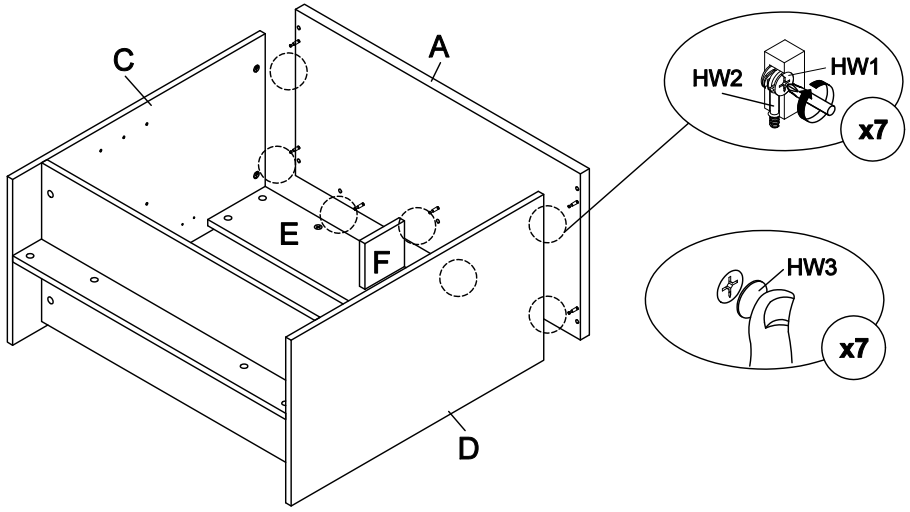


STEP 8: ATTACH PANEL (A) TO PANEL (C, D, E, F). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

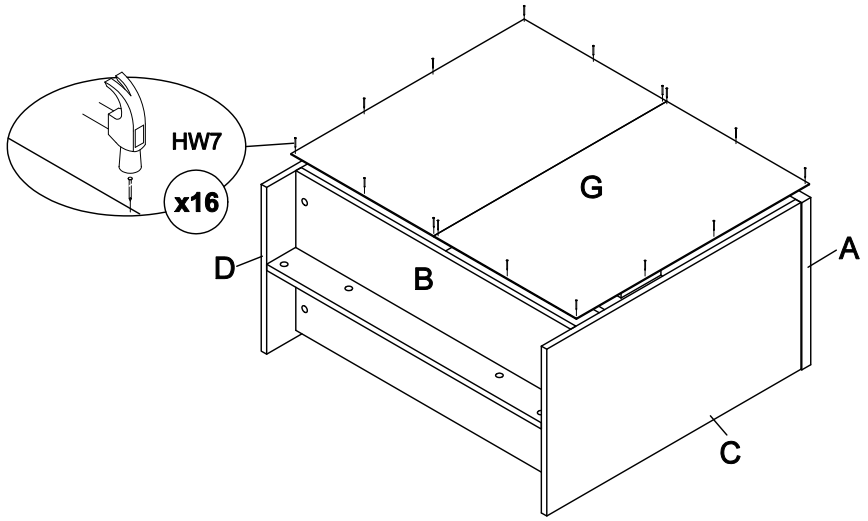


STEP 9: ASSEMBLE PANEL (G) TO ENTIRE BODY WITH HARDWARE (HW7).

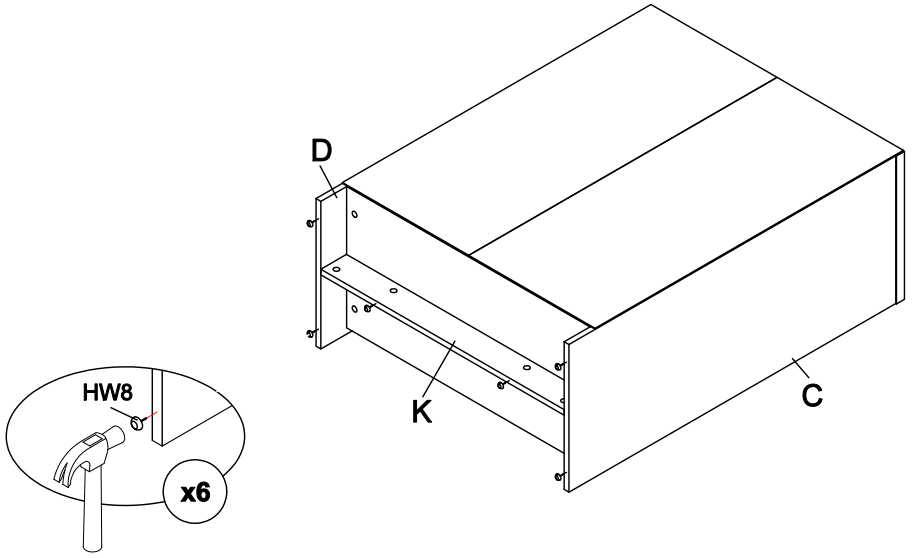


STEP 10: HIT HARDWARE (HW8) INTO BOTTOM OF PANEL (C, D, K).

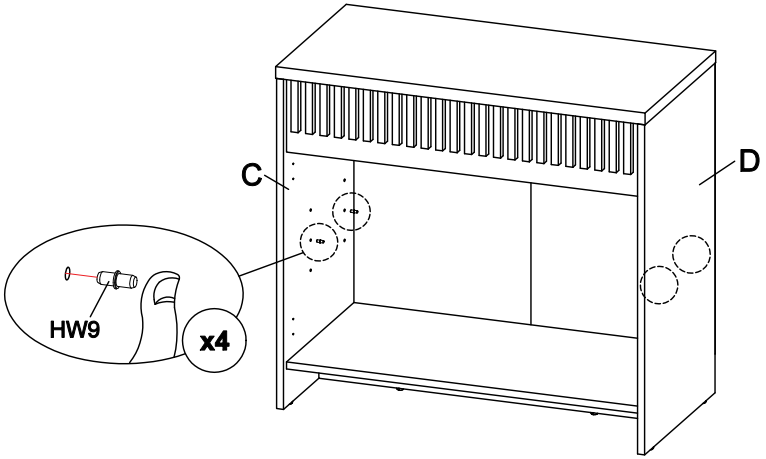


STEP 11: INSERT HARDWARE (HW9) INTO MOUNTING POSITION ON PANEL (C, D) BY HAND.

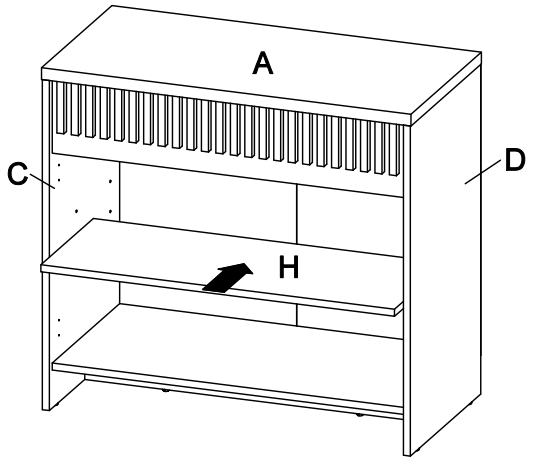


STEP 12: ASSEMBLE PANEL (H) IN BETWEEN PANEL (C, D).

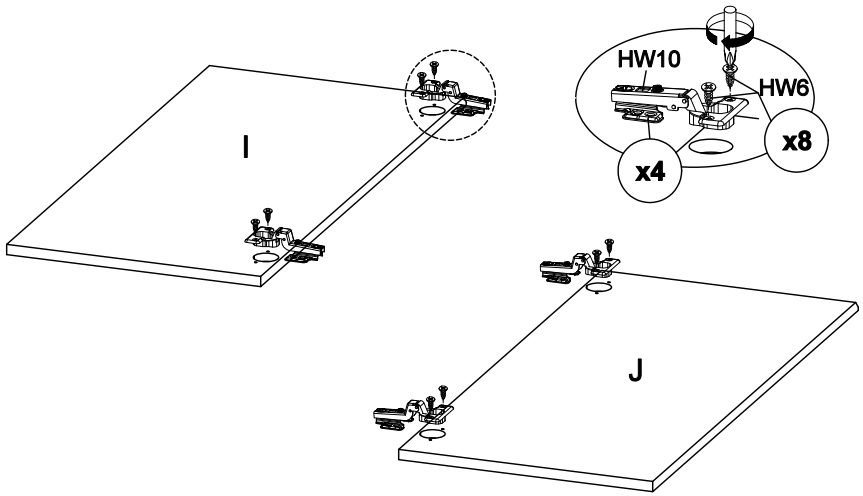


STEP 13: ATTACH HARDWARE (HW10) TO PANEL (I, J) BY USING HARDWARE (HW6).

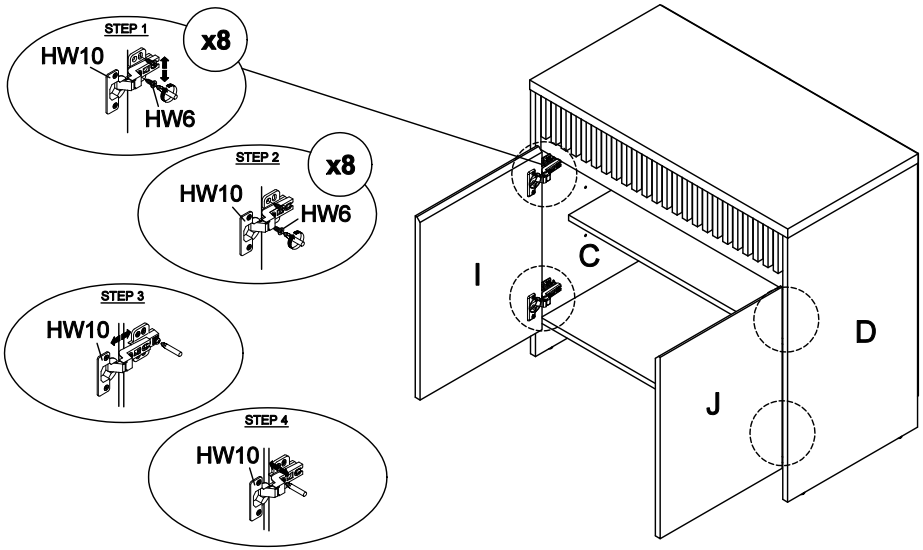


STEP 14: ATTACH HARDWARE (HW10) INTO PANEL (C, D) BY USING HARDWARE (HW6). TIGHTEN OR LOOSEN THE SCREW TO ADJUST POSITION OF PANEL (I, J). (DO ONLY WHEN NEEDED)

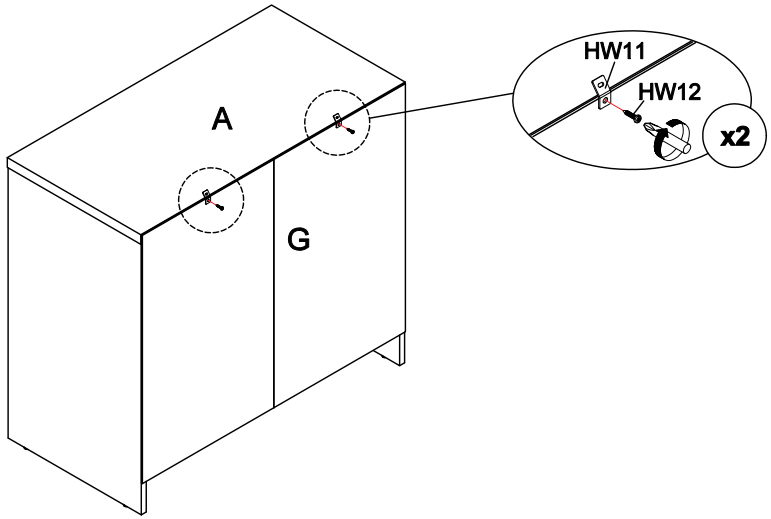


STEP 15: ASSEMBLE HARDWARE (HW11) ONTO PANEL (G) BY USING HARDWARE (HW12).

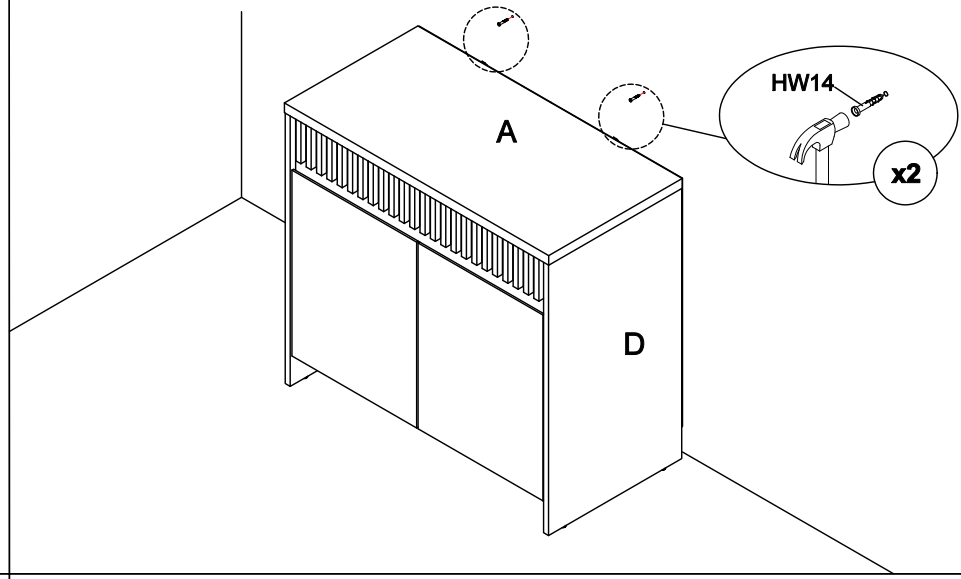

STEP 16: MARK AND USE THE POWER DRILL A HOLE ON THE WALL. HIT HARDWARE (HW14) INTO THE WALL.

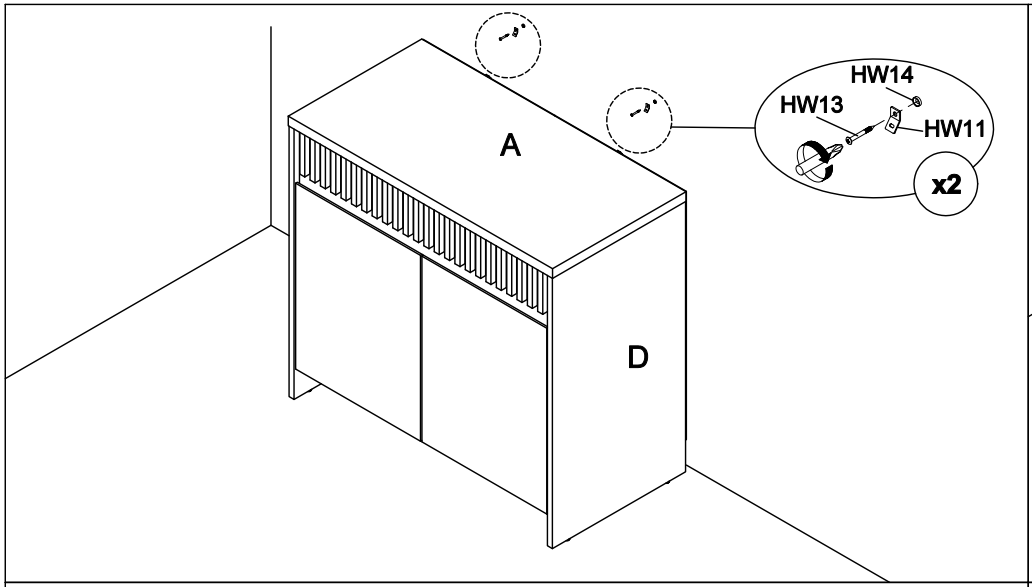

STEP 17: ASSEMBLE HARDWARE (HW11, HW14) BY USING HARDWARE (HW13). IN THE ORDER SHOWN IN THE PICTURE.

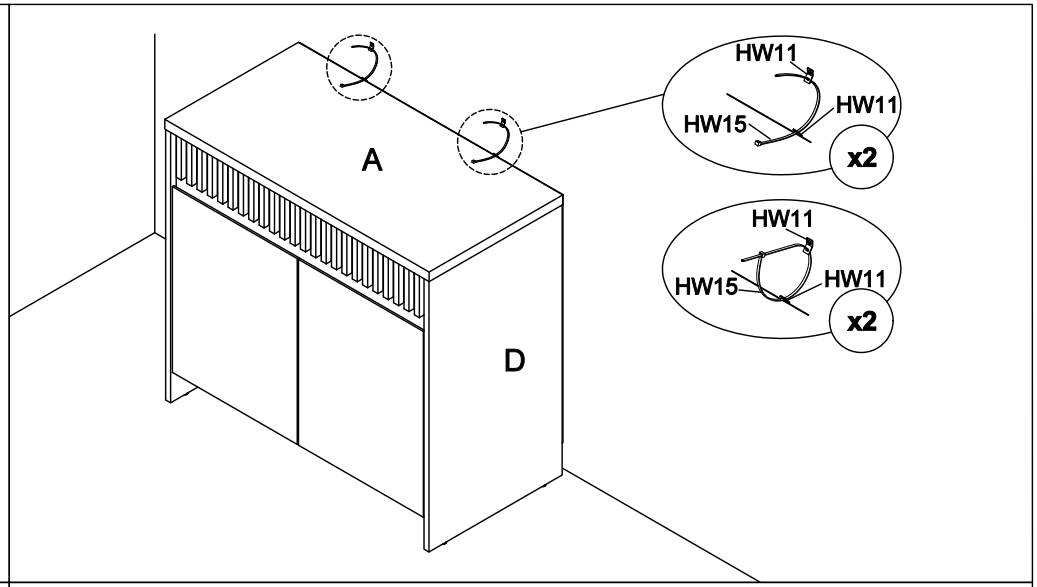

STEP 18: CONNECT BOTH OF THE HARDWARE (HW11) BY USING HARDWARE (HW15). TIGHTEN THE HARDWARE (HW15), AS SHOWN.