










CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.  
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE


- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	SIDE PANEL		2X
C	DIVIDER		1X
D	ADJUSTABLE SHELF		2X
E	RAIL		1X
F	BOTTOM PANEL		1X
G	BACK PANEL		1X
H	LEG		4X
I	DOOR		4X





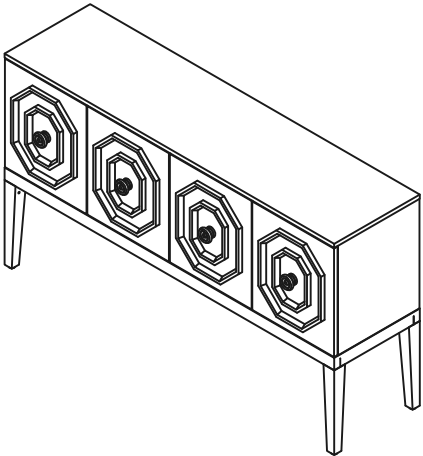










Model# MED5005  
Product Dimensions: 54"W x 14 19/32"D x 30"H



WEIGHT CAPACITY :  
TOP : 50 LBS  
SHELF : 30 LBS


WARNING: DO NOT OVER TORQUE  
BOLTS/SCREWS

PIECE	DESCRIPTION	PICTURE	QUANTITY
1	65 MM BOLT	M6x65mm 	4X
2	20 MM BOLT	M6x20mm 	8X
3	SPRING WASHER		8X
4	FLAT WASHER		8X
5	1/2" ROUND HEAD SCREW	M3x13mm 	32X
6	CAMBOLT		33X
7	CAMLOCK		33X
8	HINGE		8X
9	SHELF SUPPORT PIN		8X
10	HANDLE BOLT		4X
11	HANDLE		4X
12	DOWEL		12X
13	ALLEN KEY		1X


**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 60 minutes.  
Tools Required for Assembly : Phillips Screwdriver


<p><b>STEP 1</b> ATTACH CAMBOLTS TO TOP PANEL, SIDE PANELS, BOTTOM PANEL AND BACK PANEL.</p>	<p><b>STEP 2</b> DETACH THE HINGE FROM THE BASE. ATTACH HINGE BASES TO SIDE PANELS AND DIVIDER USING 1/2" ROUND HEAD SCREWS. ATTACH HINGES TO DOORS USING 1/2" ROUND HEAD SCREWS.</p>

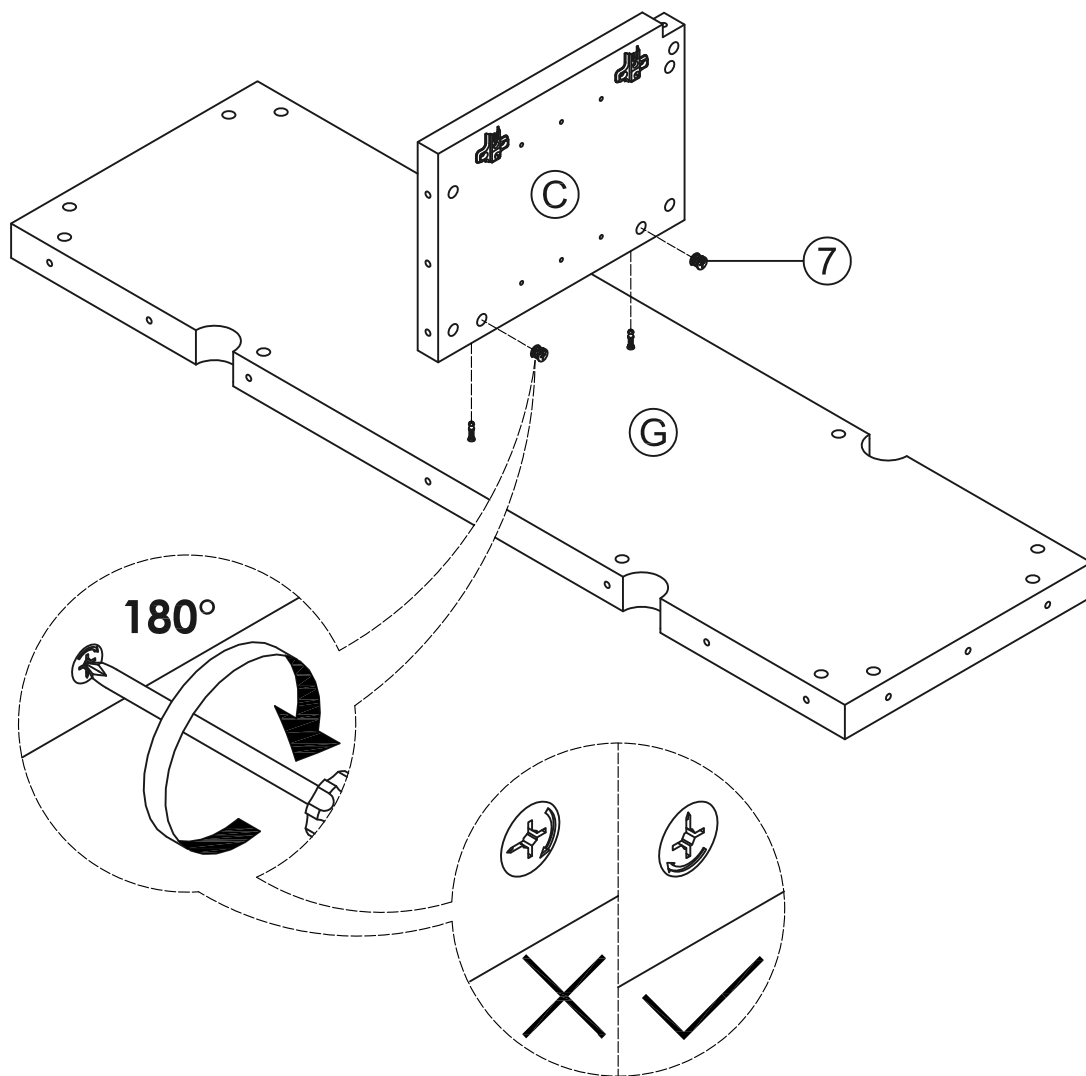


**STEP 3** ATTACH DIVIDER TO BACK PANEL USING CAMLOCKS.

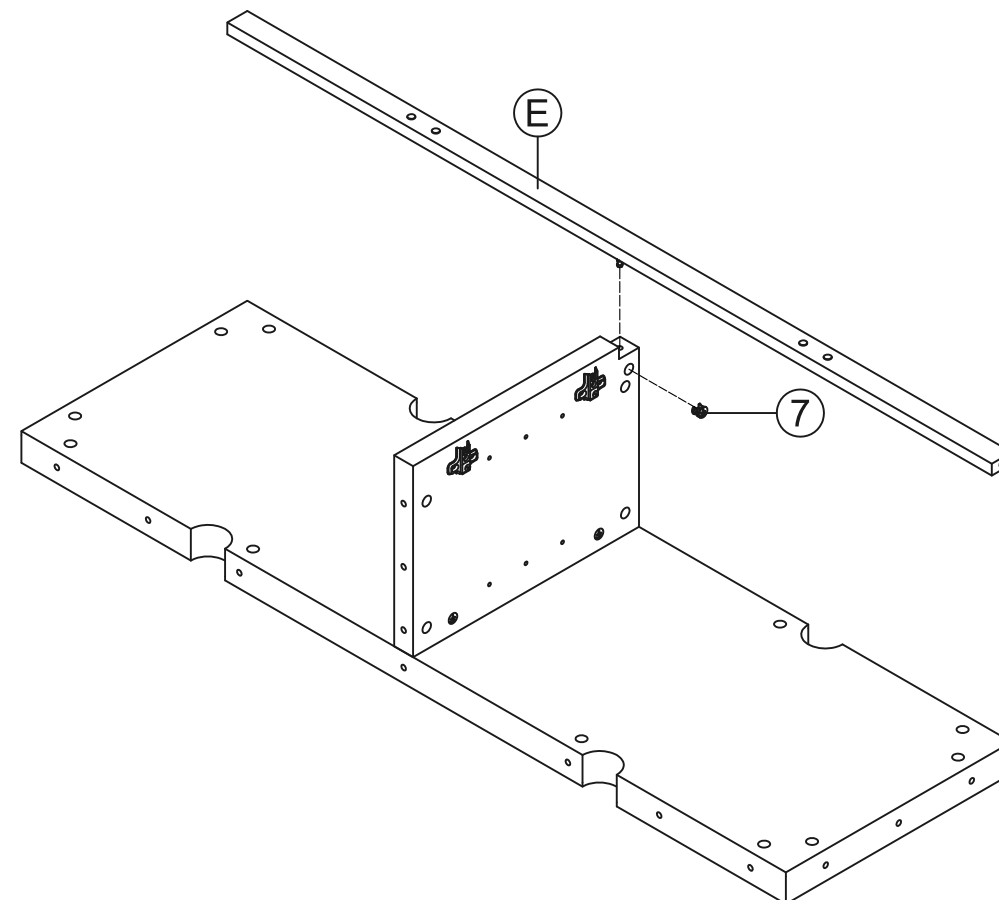


**STEP 4** ATTACH RAIL TO UNIT USING CAMLOCK.

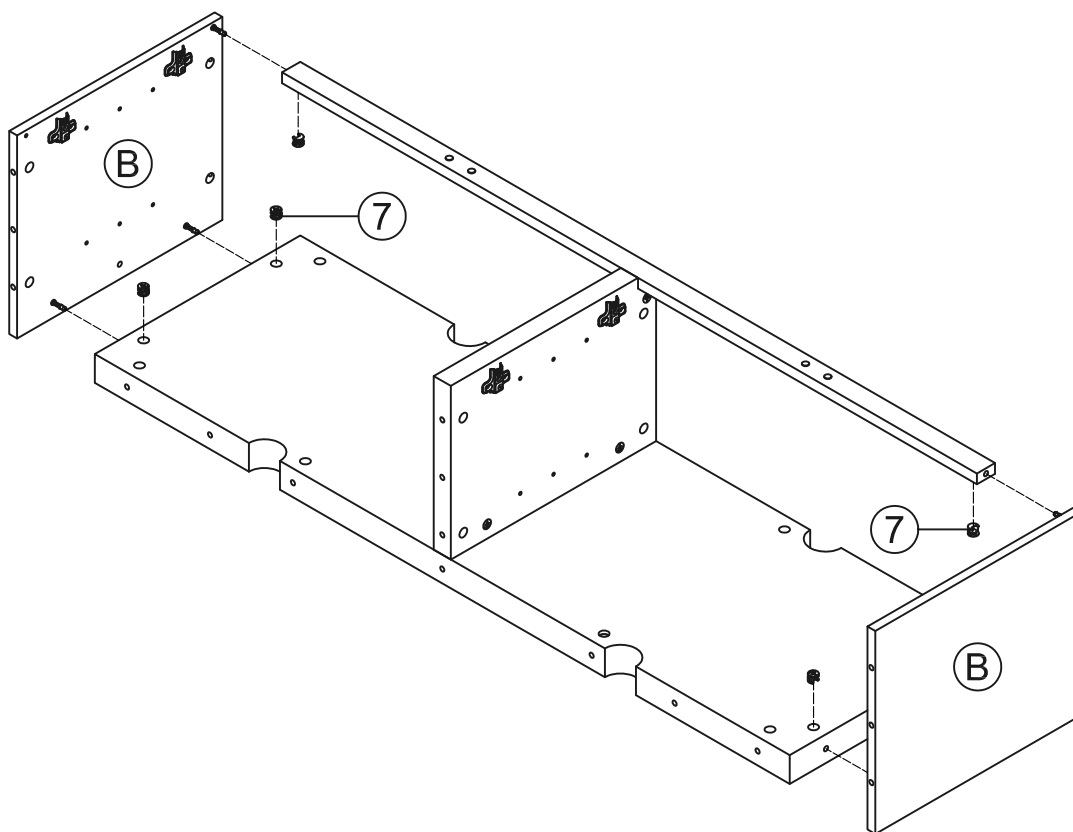


**STEP 5** ATTACH SIDE PANELS TO UNIT USING CAMLOCKS.

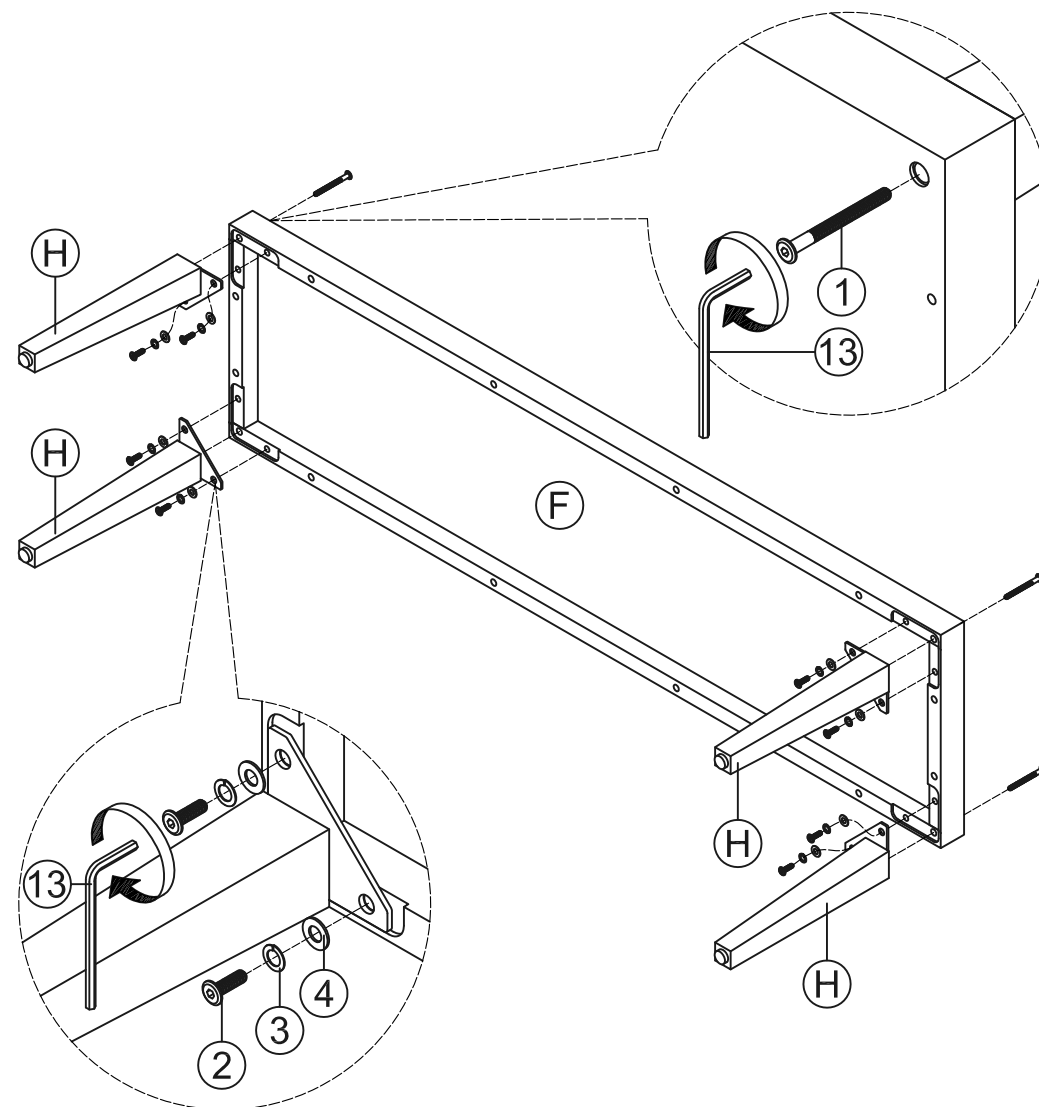


**STEP 6** ATTACH LEGS TO BOTTOM PANEL USING 65 MM BOLTS, 20 MM BOLTS, SPRING WASHERS AND FLAT WASHERS. TIGHTEN THE BOLTS USING L KEY.

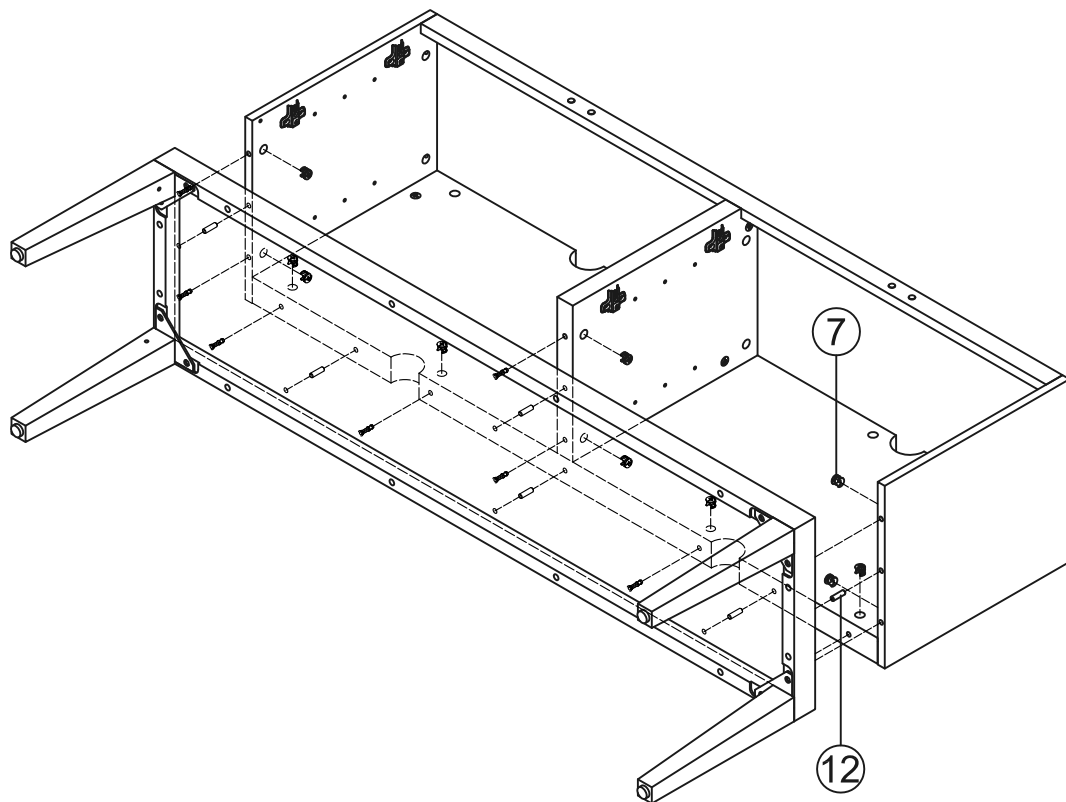


**STEP 7** ATTACH UNIT FROM STEP 6 TO UNIT FROM STEP 5 USING CAM LOCKS AND DOWELS.

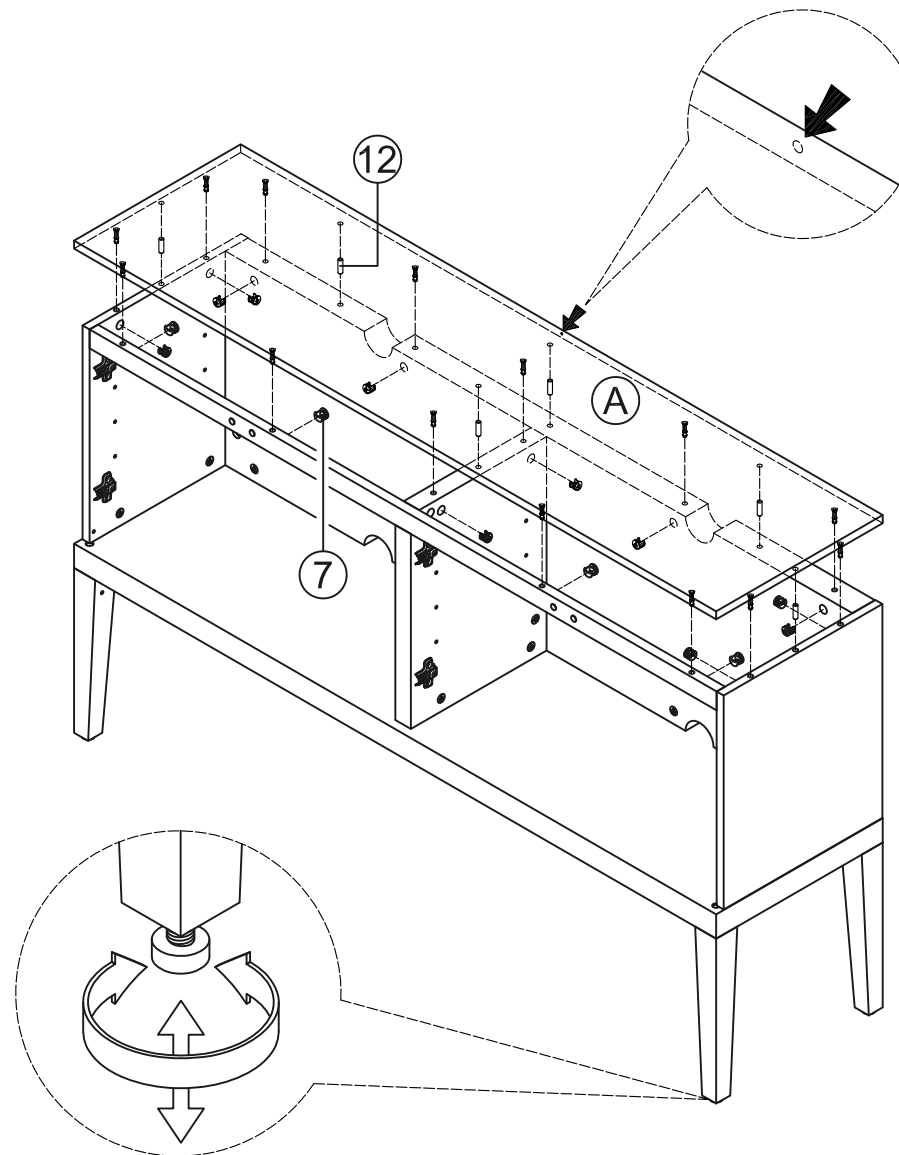


**STEP 8** ATTACH TOP PANEL TO UNIT USING CAMLOCKS AND DOWELS. ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.

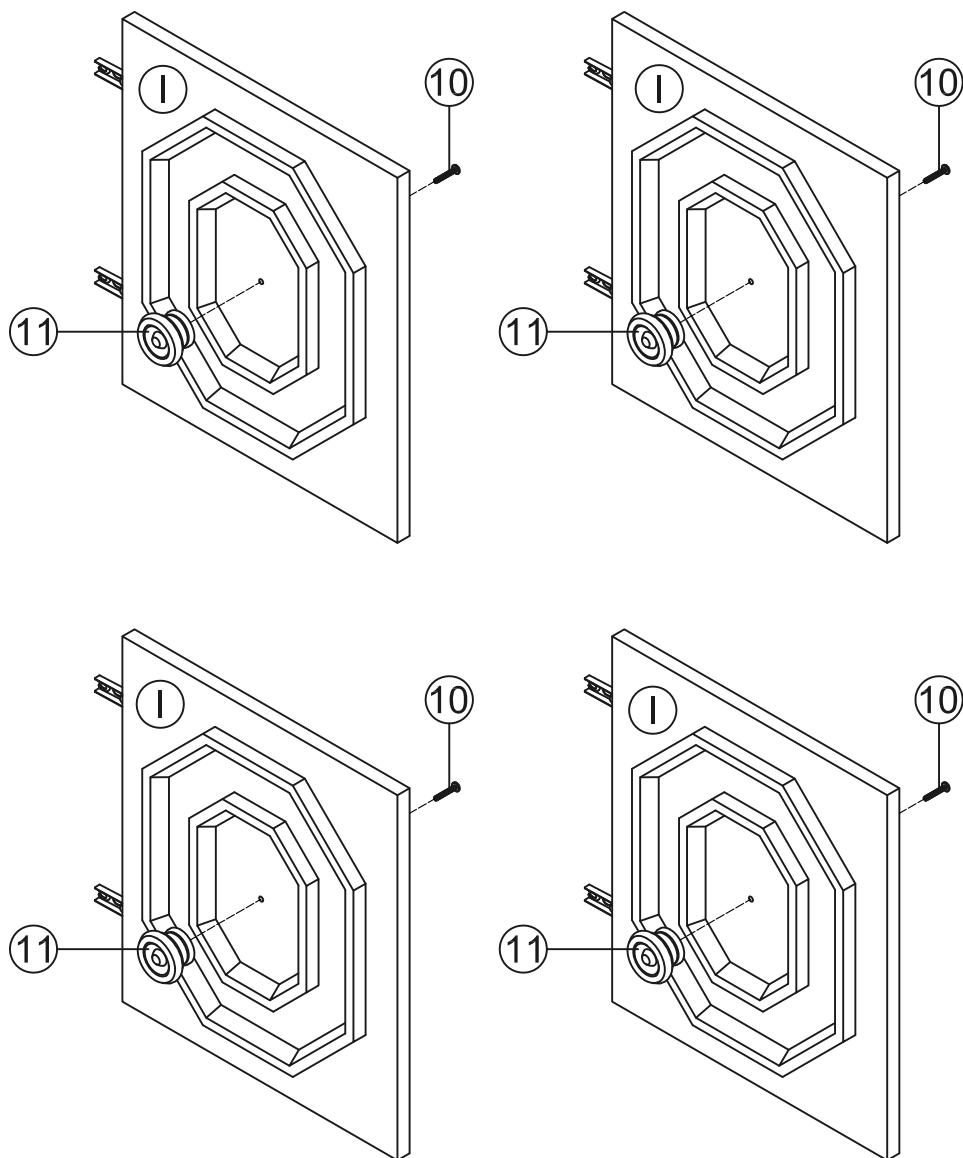



**STEP 9** ATTACH HANDLES TO DOORS USING HANDLE BOLTS.

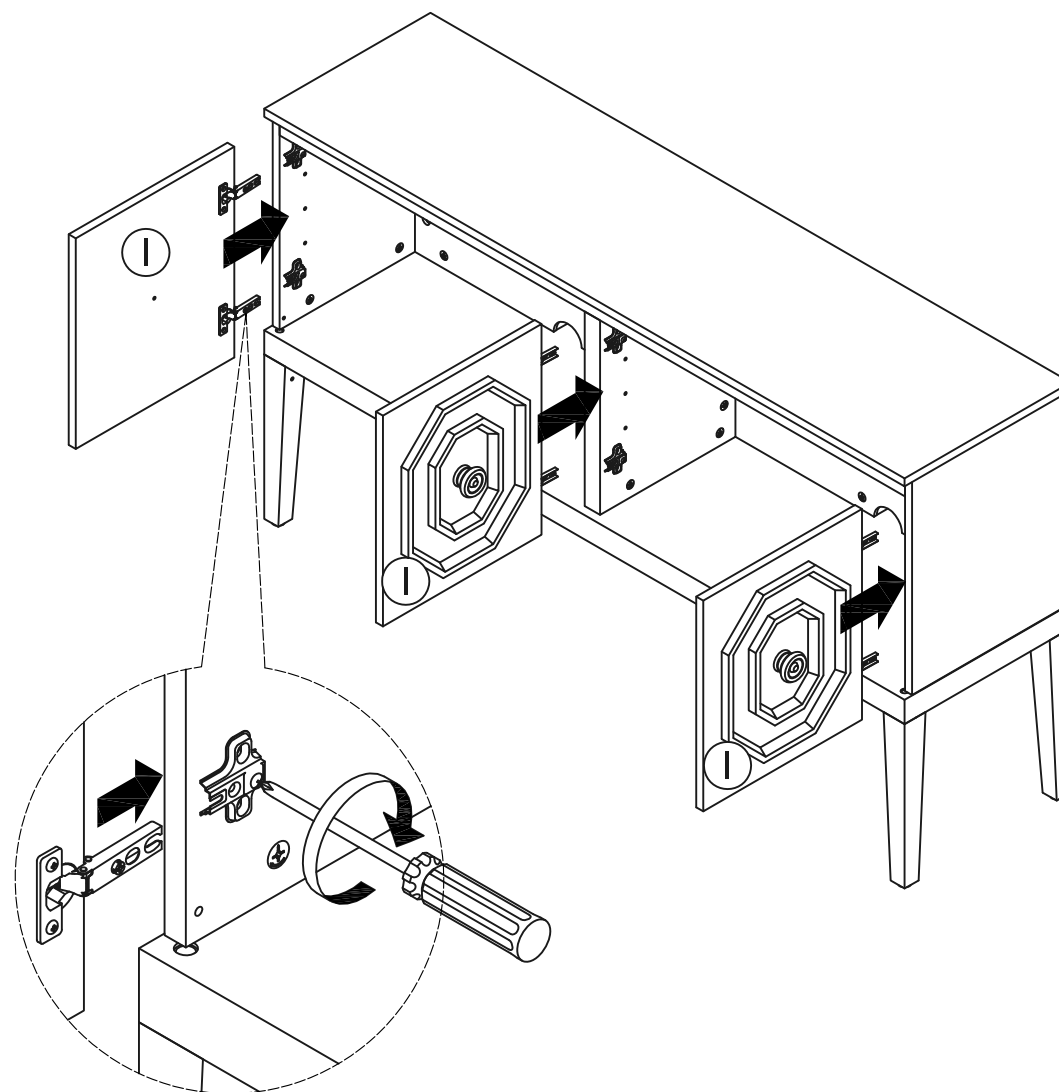


**STEP 10** ATTACH DOORS TO UNIT.

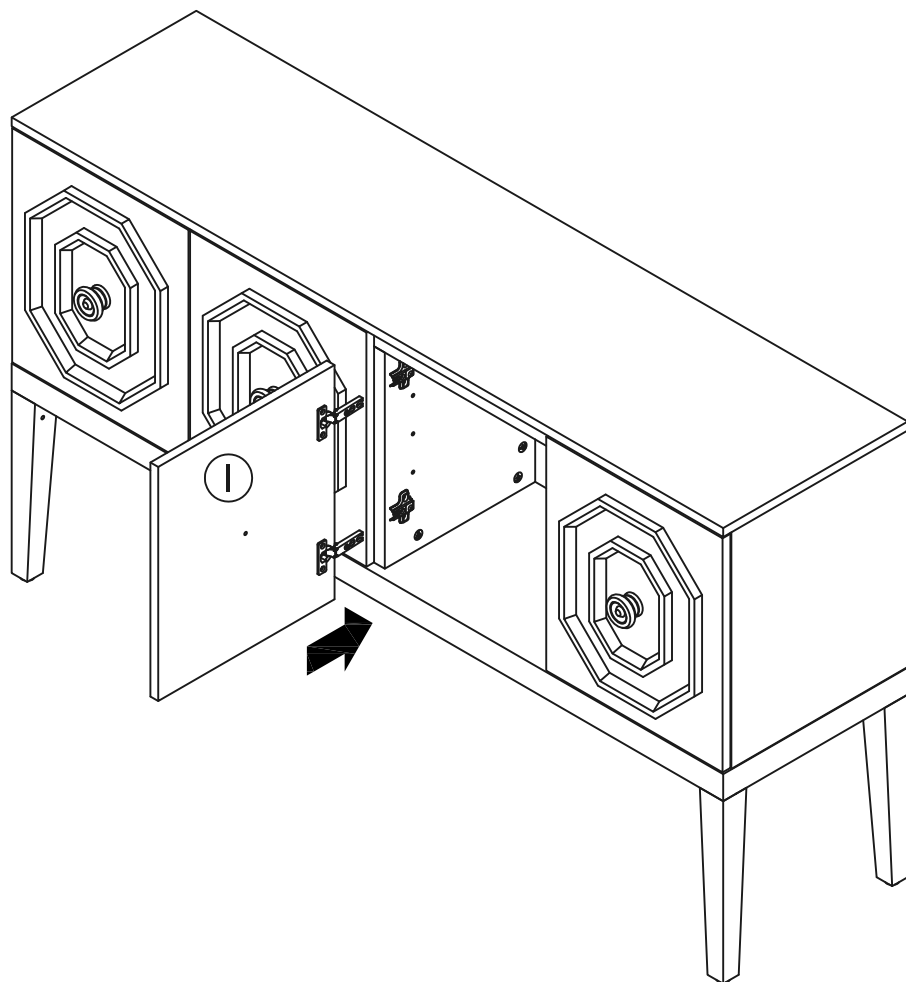


**STEP 11** ATTACH DOOR TO UNIT.

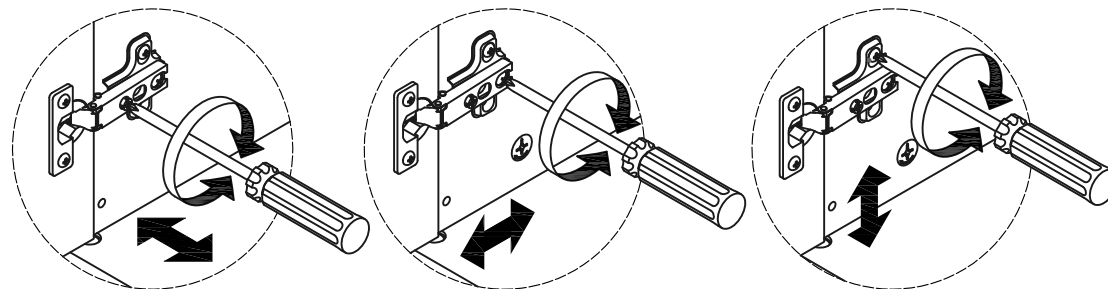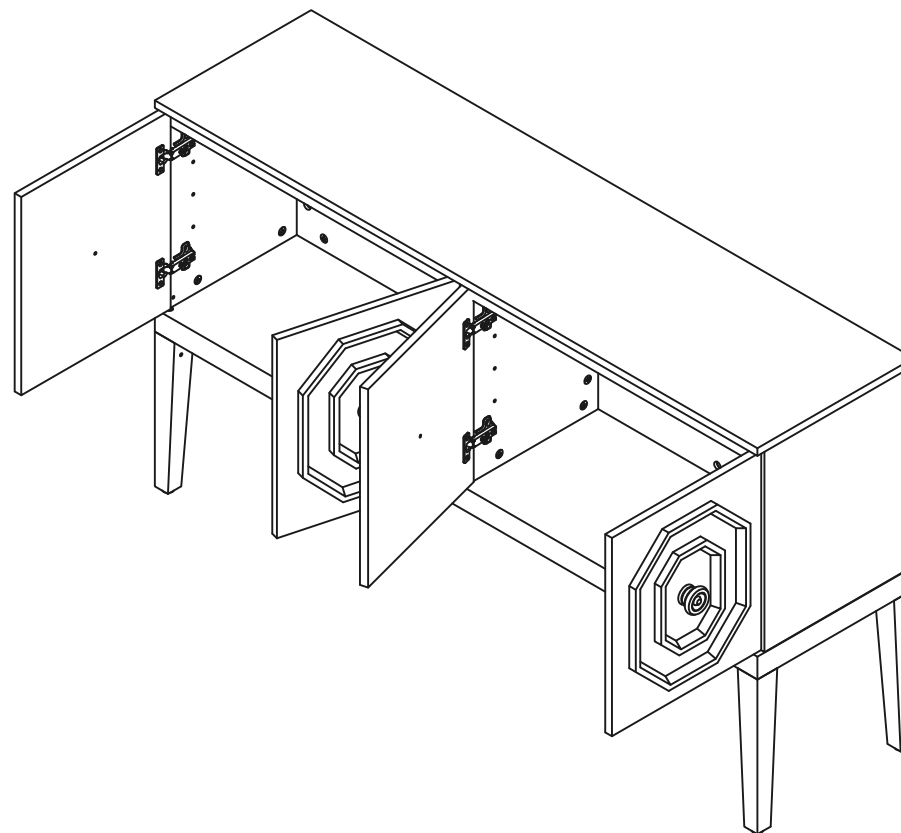

**STEP 12** FRONT MIDDLE SCREW ON HINGE WILL ADJUST YOUR DOOR TO THE LEFT AND RIGHT.  
BACK MIDDLE SCREW ON HINGE WILL ADJUST YOUR DOOR FORWARD AND BACKWARD.  
SCREW ON HINGE BASE WILL ADJUST YOUR DOOR UP AND DOWN.

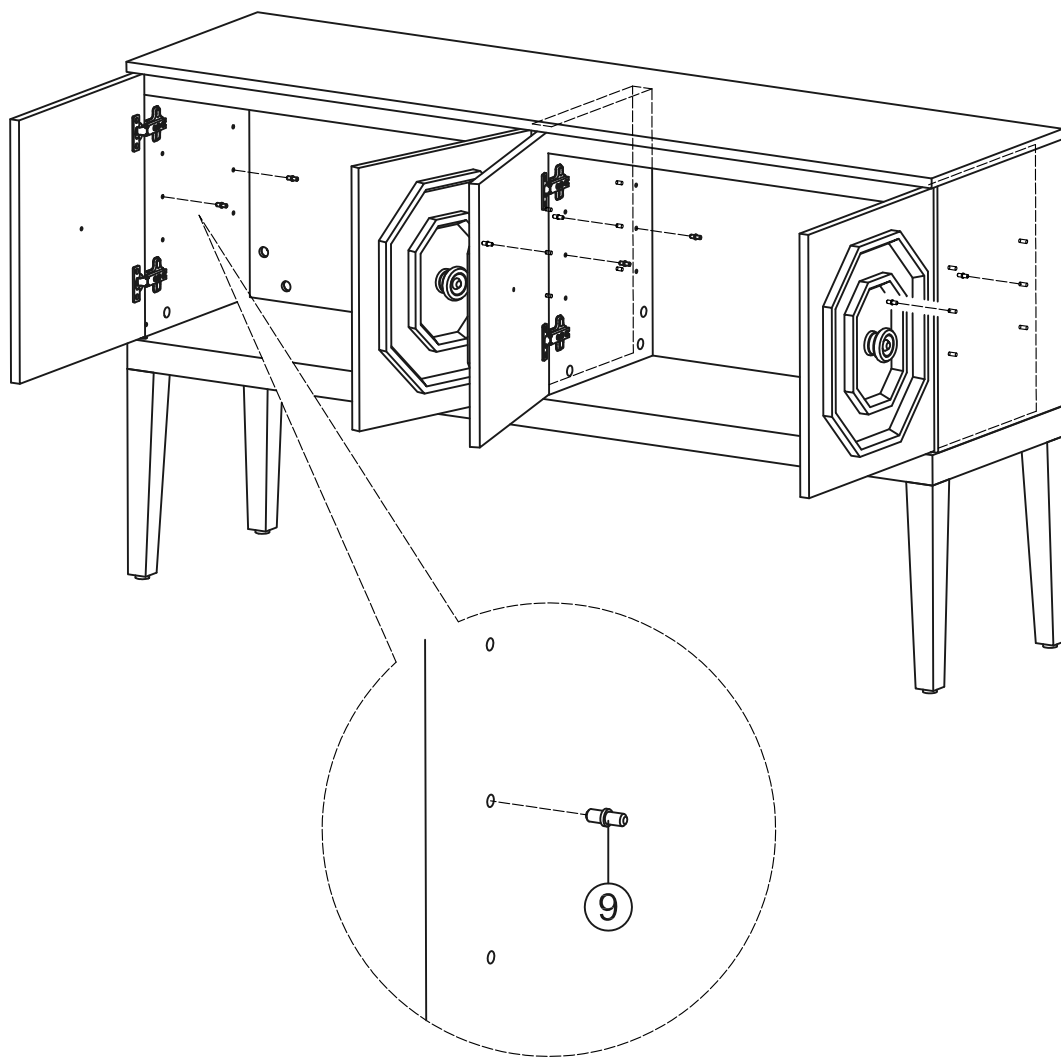

**STEP 13** INSERT SHELF SUPPORT PINS INTO PANELS AT DESIRED LEVEL.

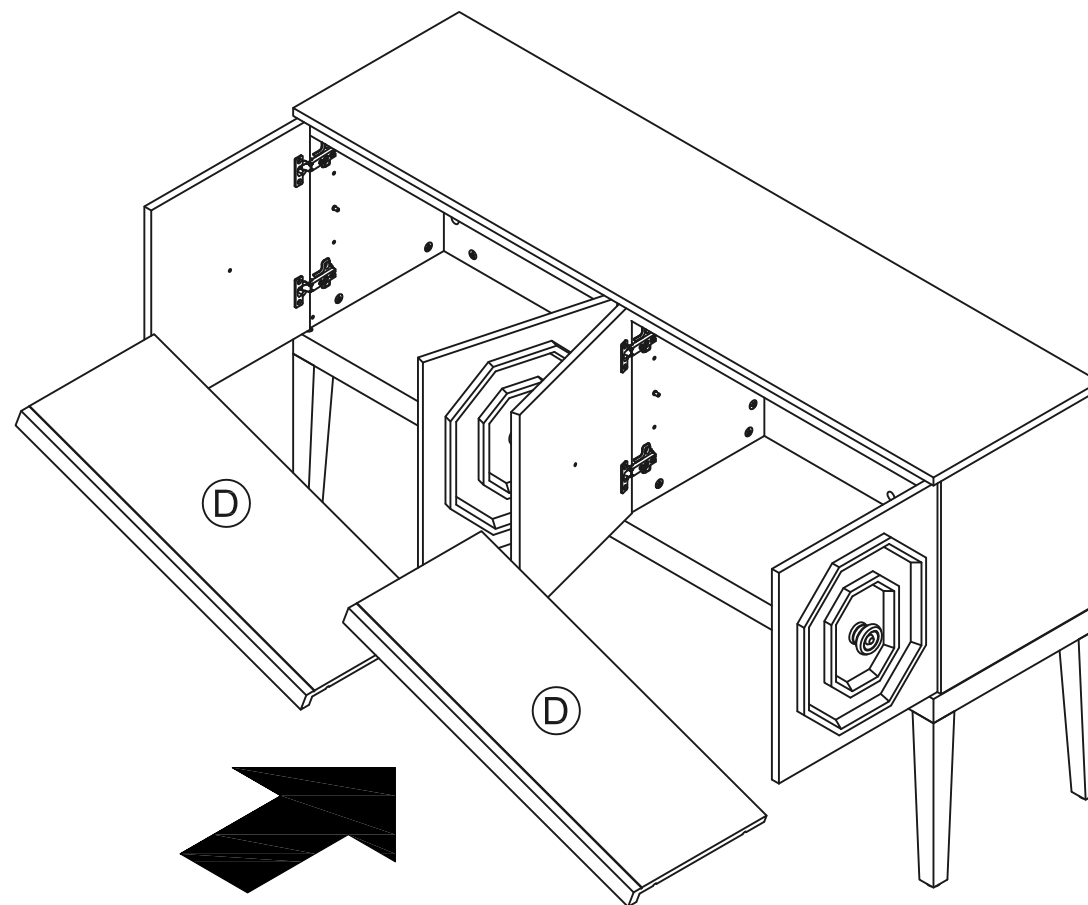

**STEP 14** PLACE ADJUSTABLE SHELVES INTO POSITION.