

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

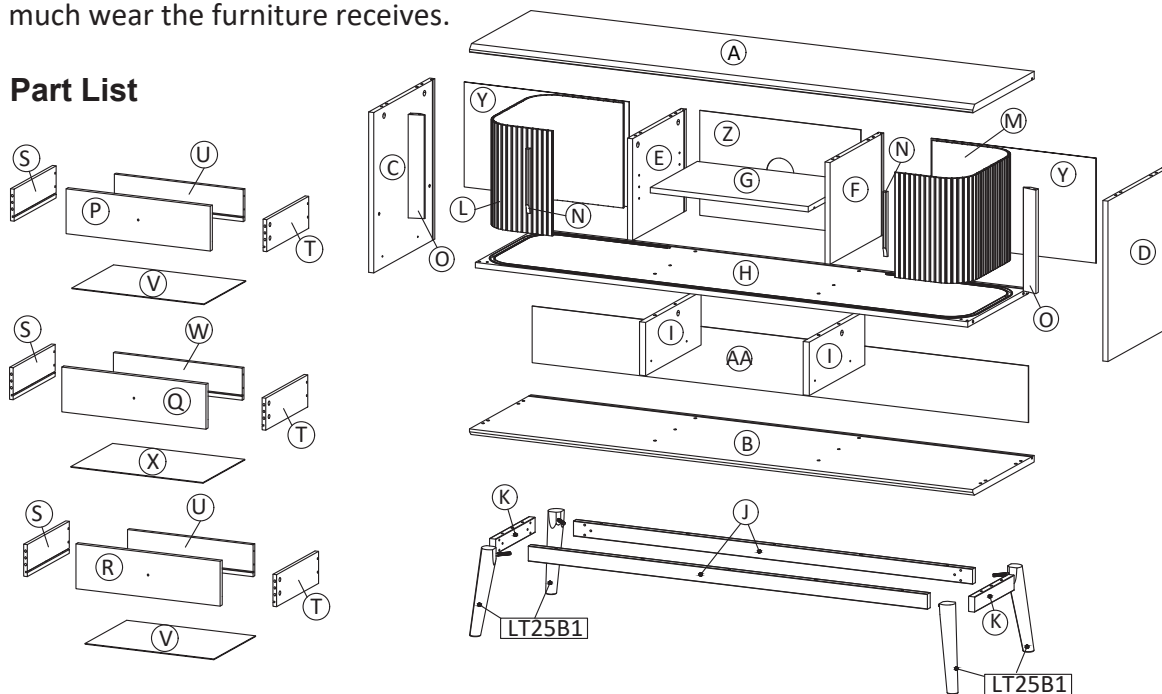


SAFAVIEH

FURNITURE

Model# MED9625

Product Dimensions: 58"Wx15"Dx28"H

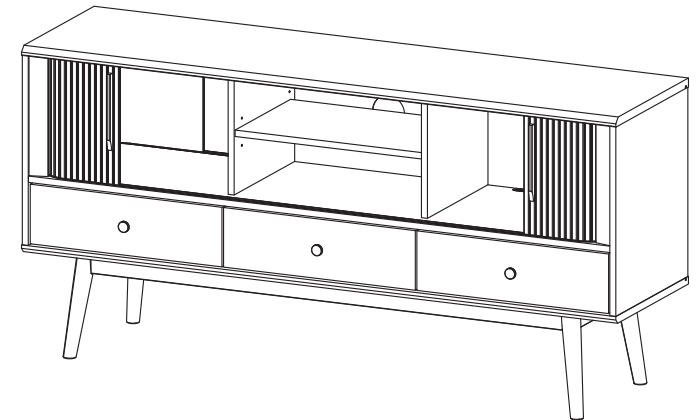










⚠ WARNING

This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 65 inches
Weight Limit: 83 lbs
Shelf Load Limit: 22 lbs
Drawer Load Limit: 18 lbs
Use with heavier televisions may result
in instability causing tip over resulting in
death or Serious injury.

⚠ WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on the child.

Hardware List

HW1x22  $\varnothing$ 6 x 35 mm	HW2x10  $\varnothing$ 15 mm	HW3x12  $\varnothing$ 12 mm	HW4x30  $\varnothing$ 8 x 30 mm	HW5x14  $\varnothing$ 6 x 30 mm
HW6x4  $\varnothing$ 8 x 50 mm	HW7x8  M 7 x 50 mm	HW8x2  L 4	HW9x4  	HW10x12  M 8 X 39 mm
HW11x18  M 3.5 x 13 mm	HW12x26  M 6 x 10.5 mm	HW13x4  $\varnothing$ 15 mm	HW14x3  	HW15x3  M 4 X 22 mm
HW16x4  	HW17x12  M 6.4 x 53 mm	HW18x28  M 4 x 16 mm	HW19x4  	HW20x1 
HW21x32  	HW22x32  M 3.5 x 15.5 mm	HW US11x1  	HW BC410x4  	HW RM30Ax3  300 mm

Part List & HW For Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	1 of 2
B	Bottom Board	1	1 of 2
C	Side Board Left	1	2 of 2
D	Side Board Right	1	2 of 2
E	Center Board Left	1	2 of 2
F	Center Board Right	1	2 of 2
G	Adjustable Shelf	1	1 of 2
H	Fixed Shelf	1	1 of 2
I	Center Board Small	2	2 of 2
J	Bottom Skirt 1	2	1 of 2
K	Bottom Skirt 2	2	1 of 2
L	Door Left	1	1 of 2
M	Door Right	1	1 of 2
N	Handle	2	1 of 2
O	Support Board	2	1 of 2
P	Front Drawer Left	1	2 of 2
Q	Front Drawer Middle	1	2 of 2
R	Front Drawer Right	1	2 of 2
S	Side Drawer Left	3	2 of 2
T	Side Drawer Right	3	2 of 2
U	Back Drawer 1	2	2 of 2
V	Bottom Drawer 1	2	1 of 2
W	Back Drawer 2	1	2 of 2
X	Bottom Drawer 2	1	1 of 2
Y	Back Board 1	2	1 of 2
Z	Back Board 2	1	1 of 2
AA	Back Board 3	1	1 of 2
LT25B1	Leg	4	1 of 2

Piece	Description	Qty	Carton Call
HW1	Cambolt	22	2 of 2
HW2	CamLock Big	10	2 of 2
HW3	CamLock Small	12	2 of 2
HW4	Dowel Medium	30	2 of 2
HW5	Dowel Small	14	2 of 2
HW6	Dowel Big	4	2 of 2
HW7	Screw M 7 x 50 mm	8	2 of 2
HW8	Allen Key	2	2 of 2
HW9	Shelf Pin	4	2 of 2
HW10	Screw M 8 x 39 mm	12	2 of 2
HW11	Screw M 3.5 x 13 mm	18	2 of 2
HW12	Screw M 6 x 10.5 mm	26	2 of 2
HW13	Screw Cap	4	2 of 2
HW14	Handle	3	2 of 2
HW15	Screw M 4 x 22 mm	3	2 of 2
HW16	Ring	4	2 of 2
HW17	Screw M 6.4 x 53 mm	12	2 of 2
HW18	Screw M 4 x 16 mm	28	2 of 2
HW19	Flange Nut	4	2 of 2
HW20	Wrench	1	2 of 2
HW21	Wedge	32	2 of 2
HW22	Screw M 3.5 x 15.5 mm	32	2 of 2
HW US11	Anti-Deflection Bar	1	1 of 2
HW BC410	Corner Brace	4	2 of 2
HW RM30A	Drawer Runner	3	2 of 2

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

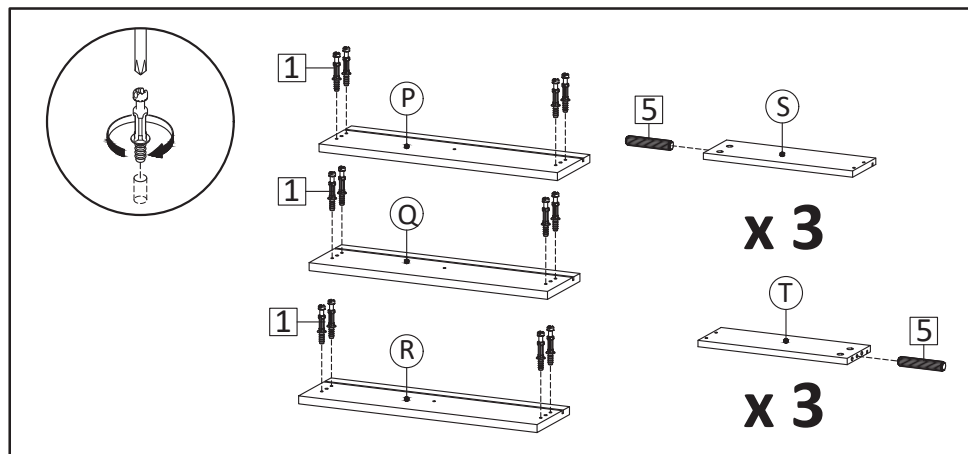


STEP1: Insert Cambolt (HW1) into Front Drawers (P,Q,R), Insert Dowel Small (HW5) into Side Drawers (S&T).

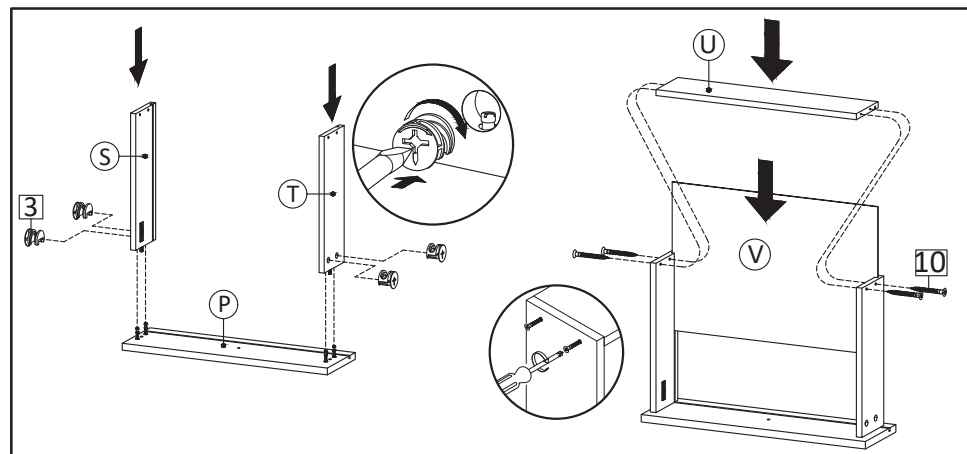

STEP2: Combine Side Drawers (S&T) into Front Drawer Left (P) using Cambolt (HW1) into Camlock Small (HW3), then tighten camlock using screwdriver. Insert Bottom Drawer 1 (V) , then put Back Drawer 1 (U) and secure with Screw M8x39mm (HW10).

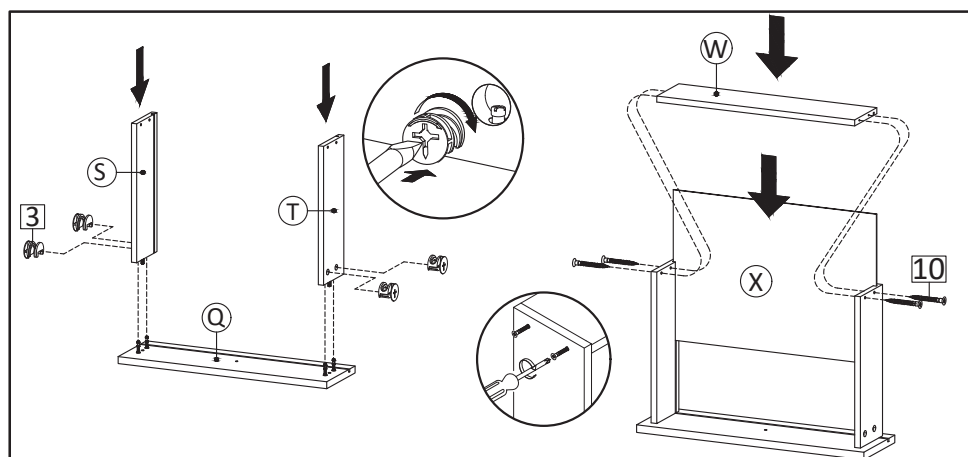

STEP3: Combine Side Drawers (S&T) into Front Drawer Middle (Q) using Cambolt (HW1) into Camlock Small (HW3), then tighten camlock using screwdriver. Insert Bottom Drawer 2 (X) ,then put Back Drawer 2 (W) and secure with Screw M8x39mm (HW10).

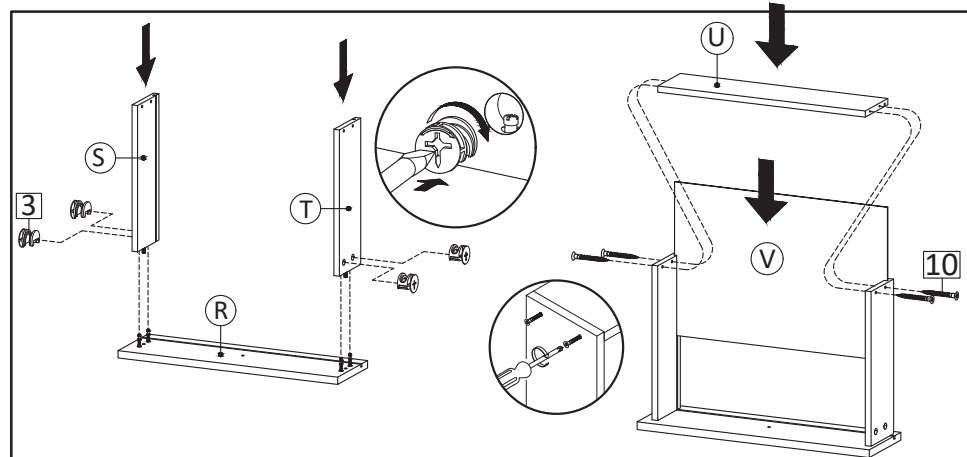

STEP4: Combine Side Drawers (S&T) into Front Drawer Right (R) using Cambolt (HW1) into Camlock Small (HW3), then tighten camlock using screwdriver. Insert Bottom Drawer 1 (V) , then put Back Drawer 1 (U) and secure with Screw M8x39mm (HW10)

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

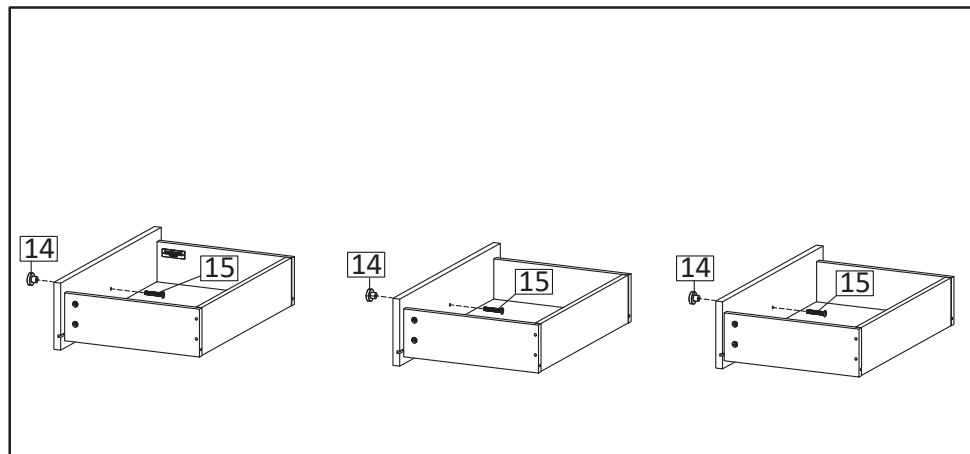


STEP5: Use Screw M4x22mm (HW15) to attach Handle (HW14) to the Front Drawers as above image.

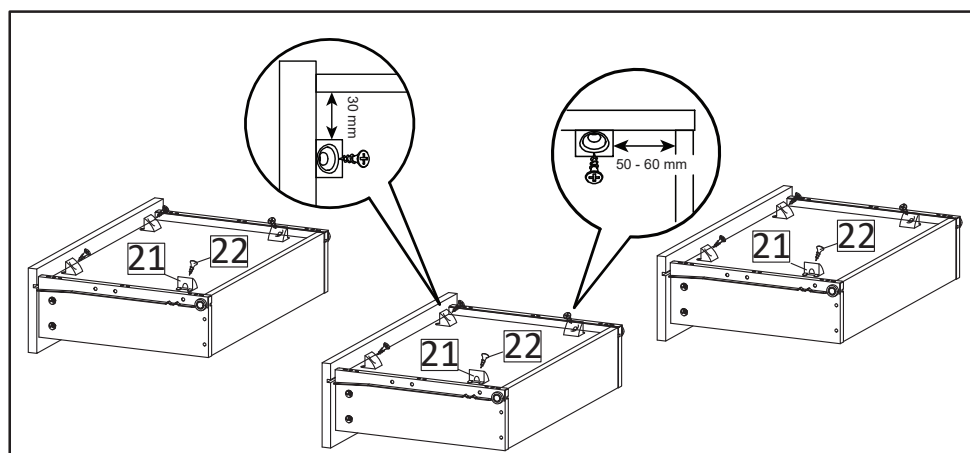

STEP7: Insert the Screw M3.5x15.5mm (HW22) and wedge (HW21) into the bottom of the drawer according to the picture.

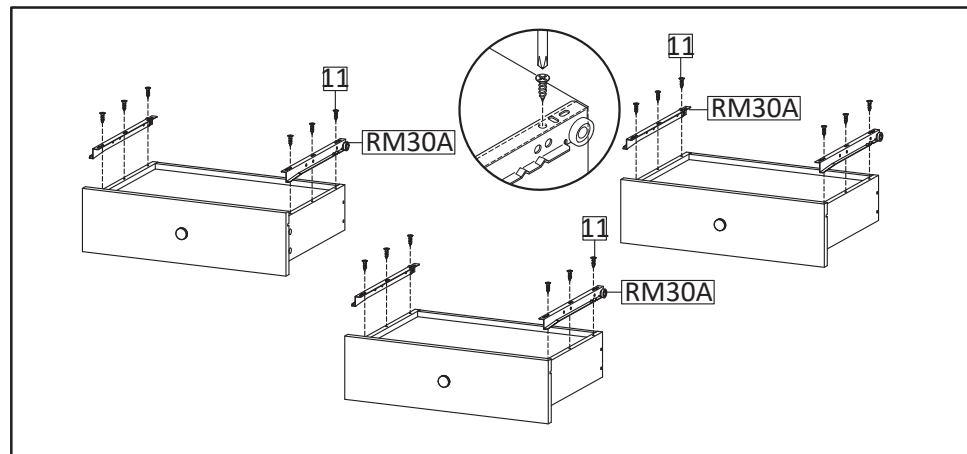

STEP6: Bring the three Drawers from previous step upside down. Install the drawer runner (HW RM30A) into position as shown in picture. Secure with screws M3.5x13mm (HW11)

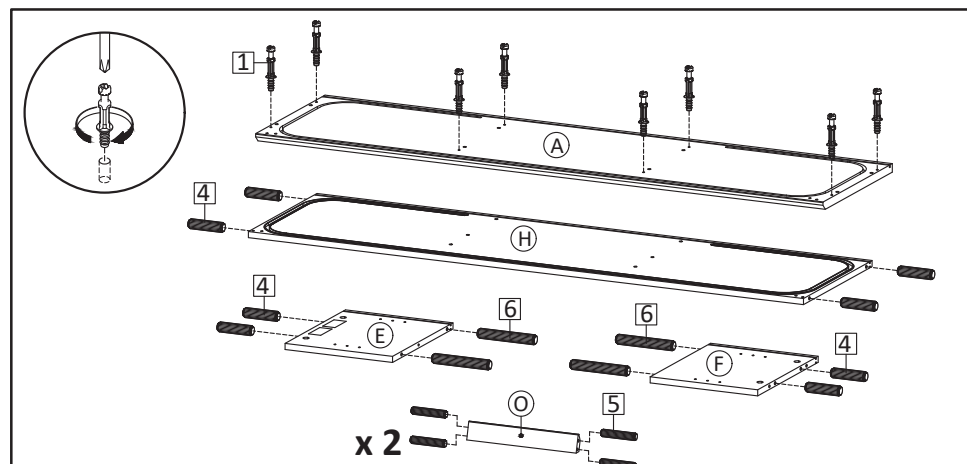

STEP8: Let start assembly the body of media stand. Insert Cambolt (HW1) into Top Board (A). Insert Dowel Medium 8x30mm (HW4) into Fixed Shelf (H) . Insert Dowel Medium 8x30mm (HW4) into Center Boards (E&F) in the same edge with large hole on the board showing in the image. Then insert Dowel Big 8x50mm (HW6) , on the opposite edge of Center Boards (E&F) and insert Dowel Small 6x30mm (HW5) into Support Board (O) shown in the image.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

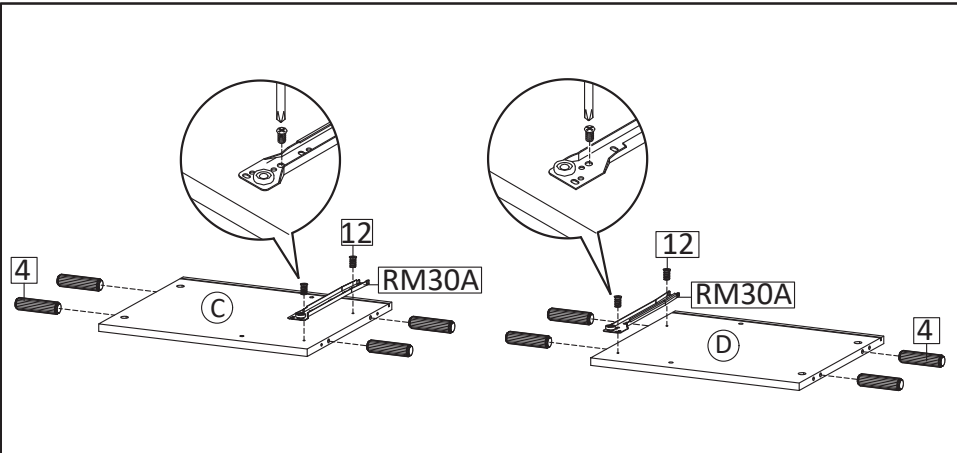


STEP9: Insert Dowel Medium (HW4) into Side Board Left (C) and Side Board Right (D). Continue with securing part of the metal runner (HW RM30A) into position as the above image, using screw M6x10.5mm (HW12).

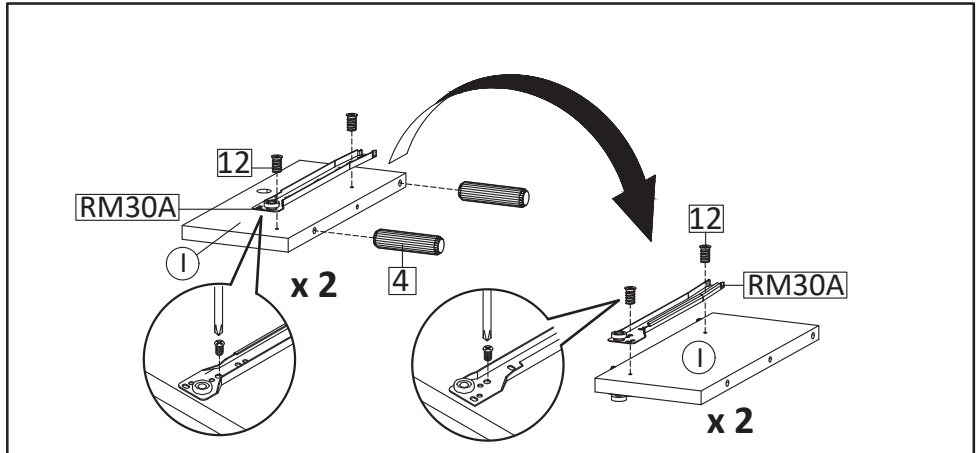

STEP10: Part of Drawer Runner must be installed to Center Board Small (I). Secure part of the Drawer Runner (HW RM30A) into position as the above image, using screw M6x10.5mm (HW12) and insert Dowel Medium (HW4), then flip the board to access the opposite surface, repeat the installation of Drawer Runner on this surface.

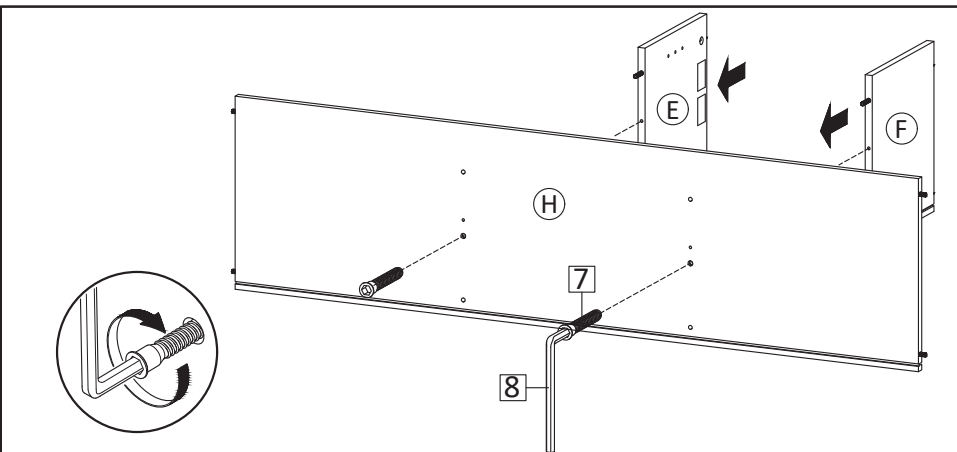

STEP11: Continue by attaching Fixed Shelf (H), Center Board Left (E) & Center Board Right (F). Secure with Screw M7X50mm (HW7) using Allen Key (HW8).

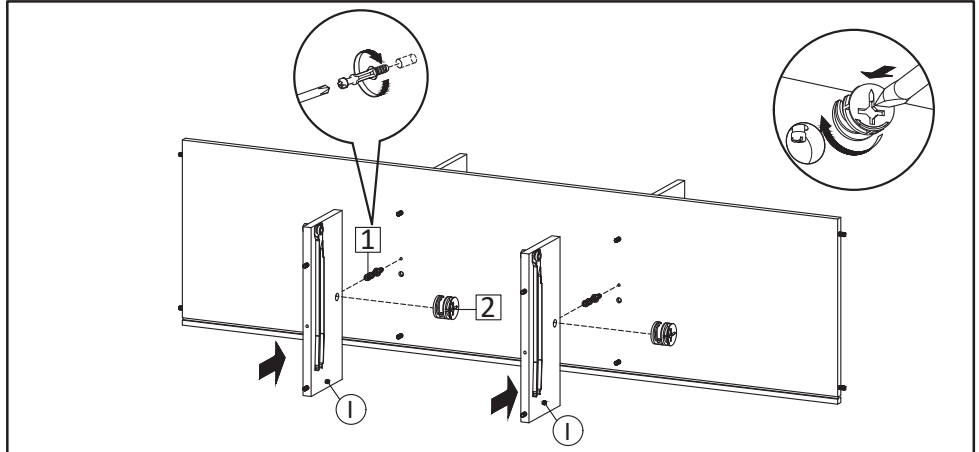

STEP12: Attach Center Board small (I) into the assembled component from step 11. Insert Cambolt (HW1), Camlock Big (HW2) and tighten it using screwdriver.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

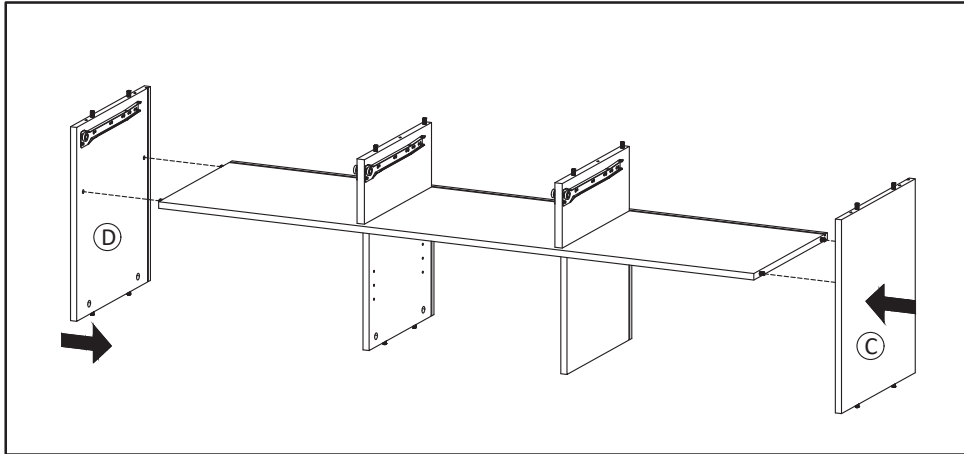


STEP13: Attach Side Board Left (C) & Side Board Right (D) into the assembled component from step 12.

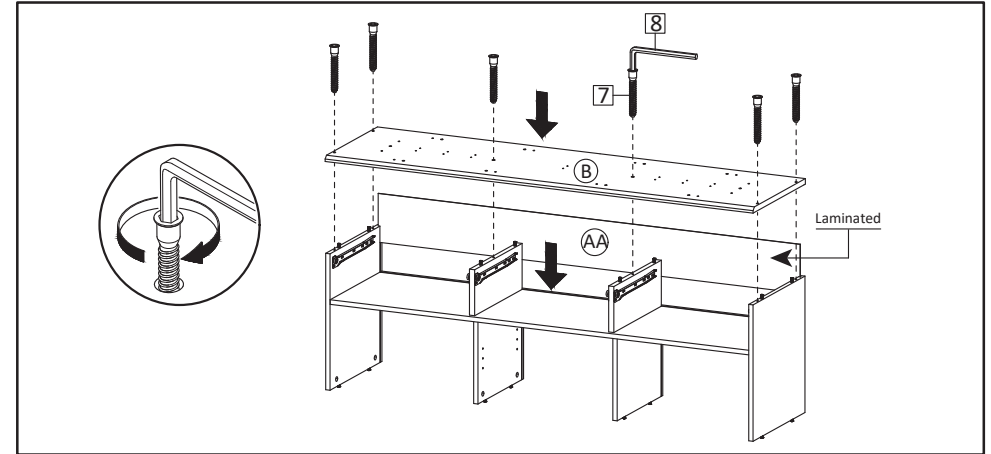

STEP14: Continue by attaching Bottom Board (B) and Back Board 3 (AA) into the assembled components from step 13. secure with Screw M7x50mm (HW7) using Allen Key (HW8).

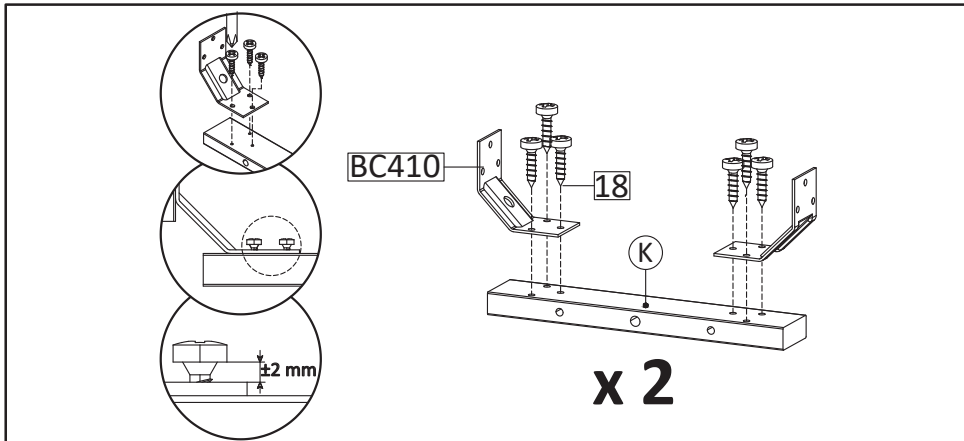

STEP15: Now let's combine the bottom skirt. Start with installing Corner Brace (HW BC410) into Bottom Skirt 2 (K) using Screw M4x16mm (HW18). Do not overtight screw yet, leave around 2mm gap.

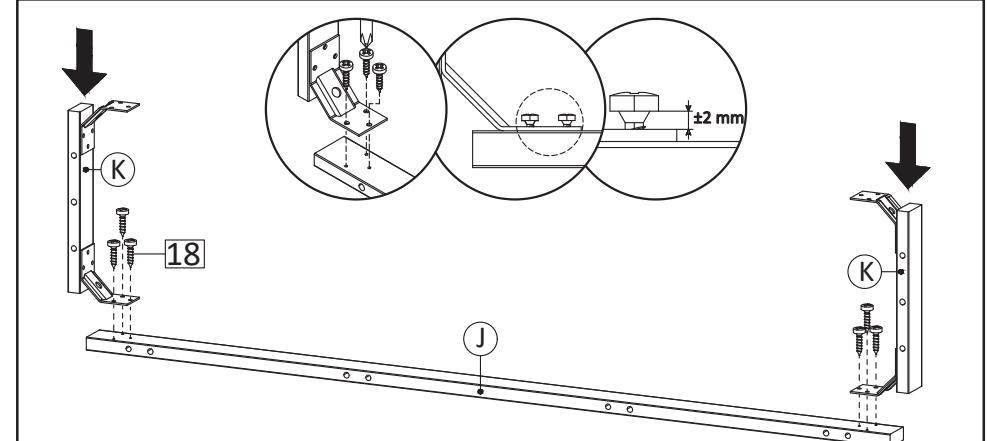

STEP16: Combine the Bottom Skirt 2 (K) from step 15 with Bottom skirt 1 (J), using Screw M4x16mm (HW18). Do not overtight screw yet, leave around 2mm gap.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

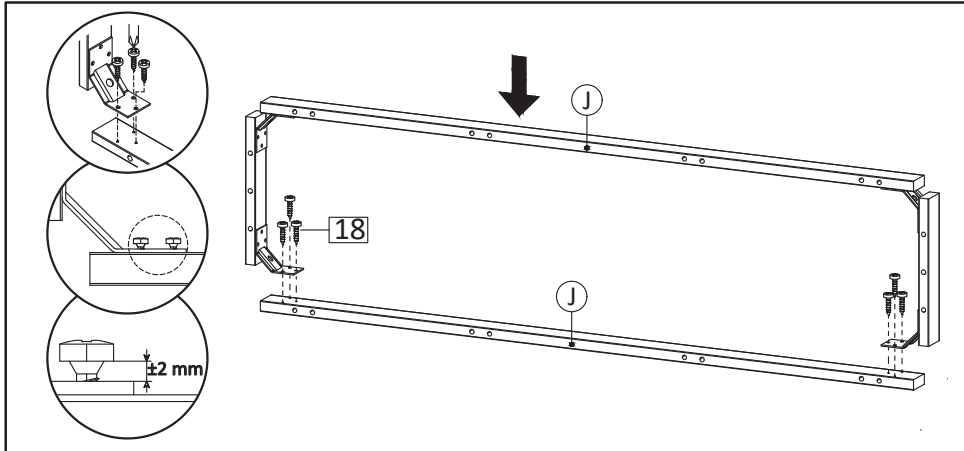


STEP17: Combine components from step 16 with remaining Bottom skirt 1 (J), using Screw M4x16mm (HW18). Do not overtight screw yet, leave around 2mm gap.

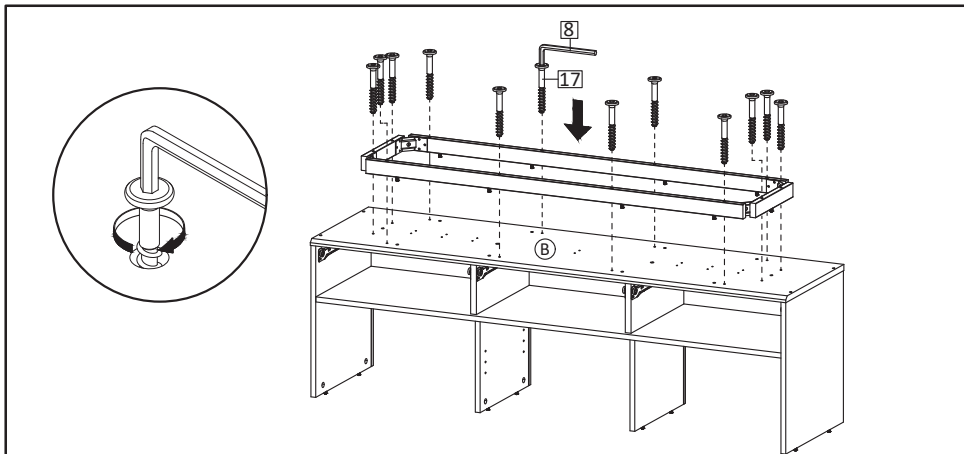

STEP19: Attach the assembled Bottom Skirt in the Bottom Board (B) secure with Screw M6.4x53mm (HW17) using Allen Key (HW8).

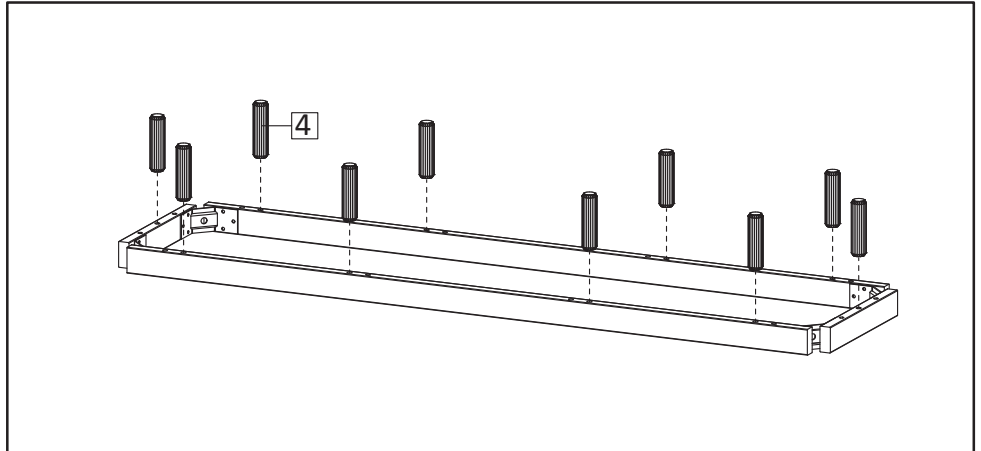


STEP18: Insert Dowel Medium (HW4) into assembled Bottom skirt from previous step.

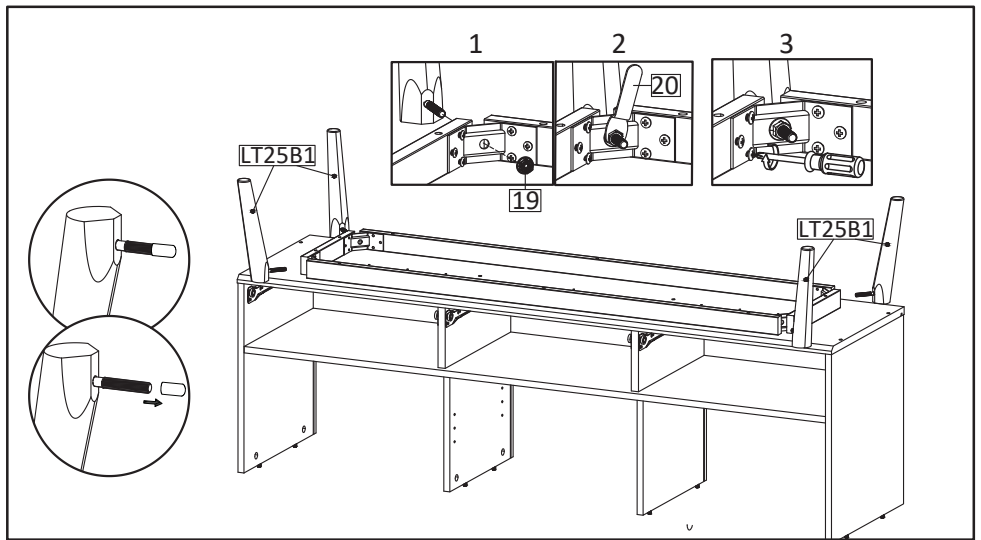


STEP20: First, let's fixing the leg by inserting leg to Corner Brace, Insert Flange Nut (HW19) first into the hanger bolt of leg, tighten all the Flange nut using provided Wrench (HW20). Second, after Ensuring that all legs has been tightened, continue with tighten all screws on the corner brace.

PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 90 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

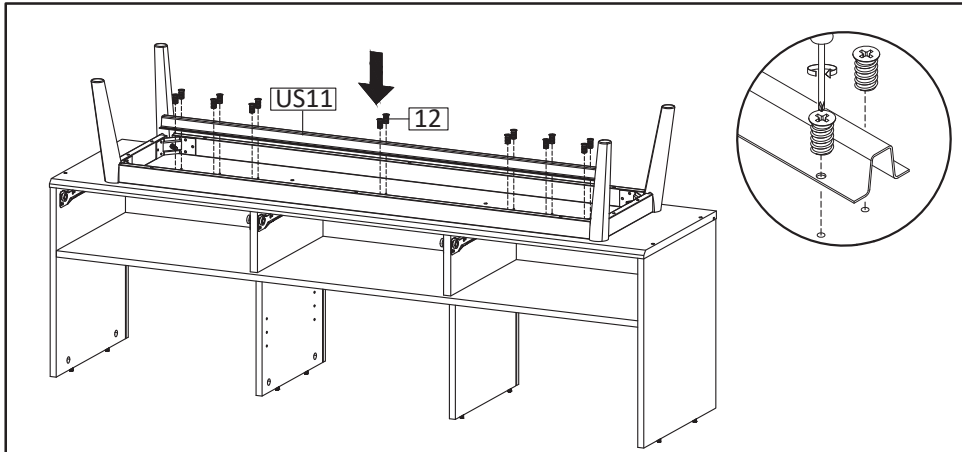


STEP21: Place Anti-Deflection Bar (HW US11), secure with screw M6x10.5mm (HW12), tighten using screwdriver.

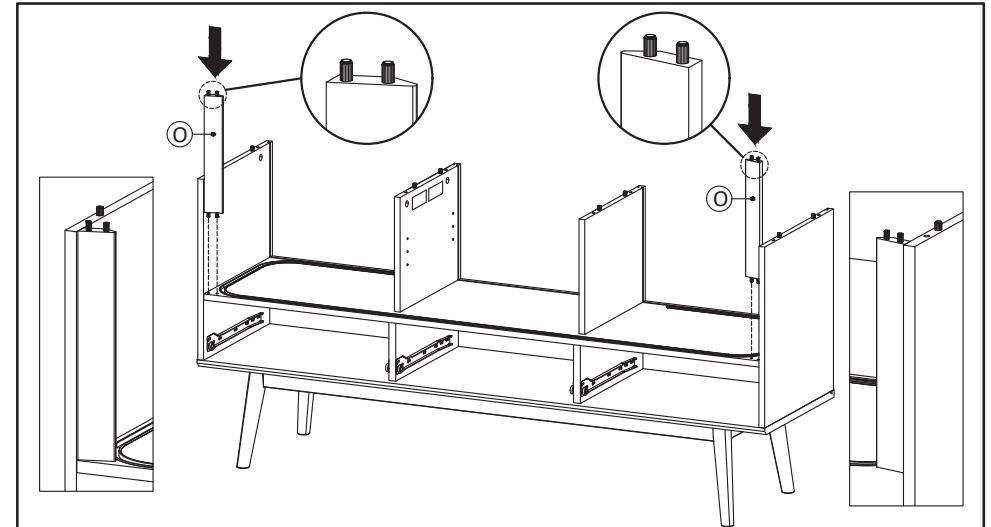

STEP22: Attach Support Board (O) into the assembled component from step 21.

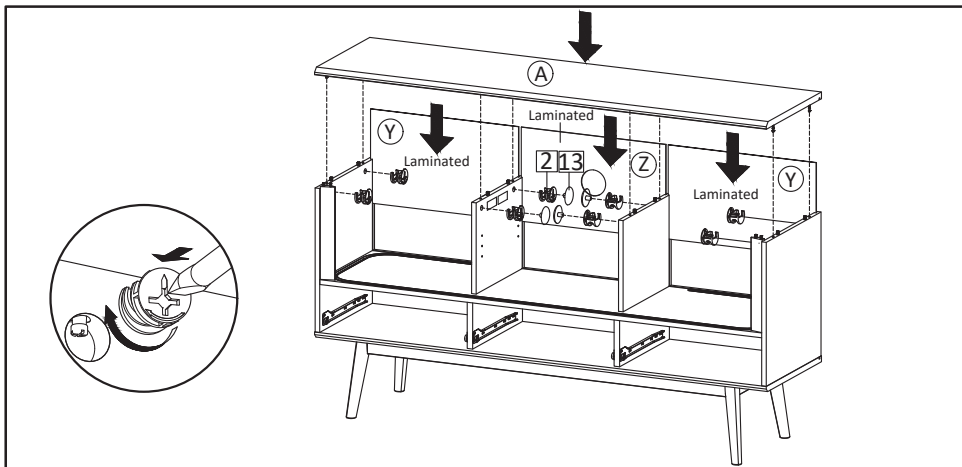

STEP23: Bring the Top Board (A), Back Board 1&2 (Y&Z) into assembled component. Secure with Camlock Big (HW2) and tighten it using screwdriver. Put the Screw Cap (HW13) over the tightened camlock.

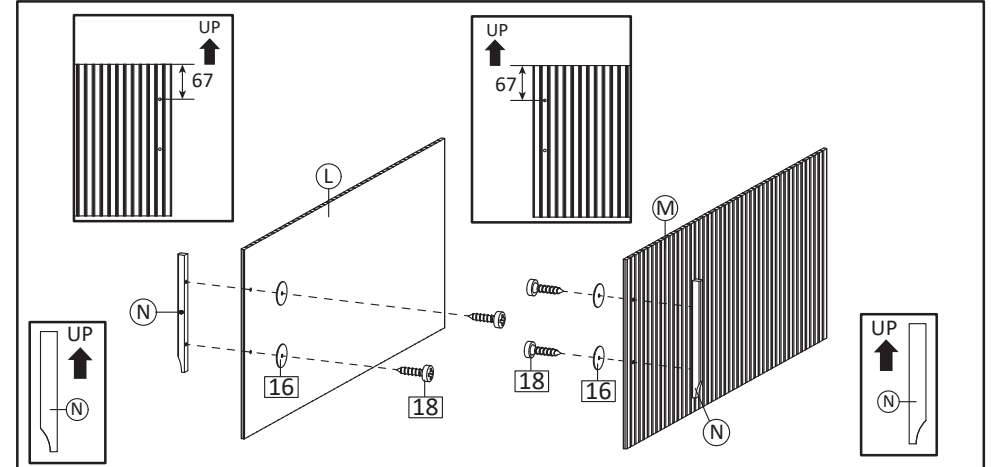

STEP24: Please attention to the handle shape which needs to be on the upper side of door. Insert Handle (N) and secure with Screw M4x16mm (HW18) & Ring (HW16), into Door Left (L) and Door Right (M).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

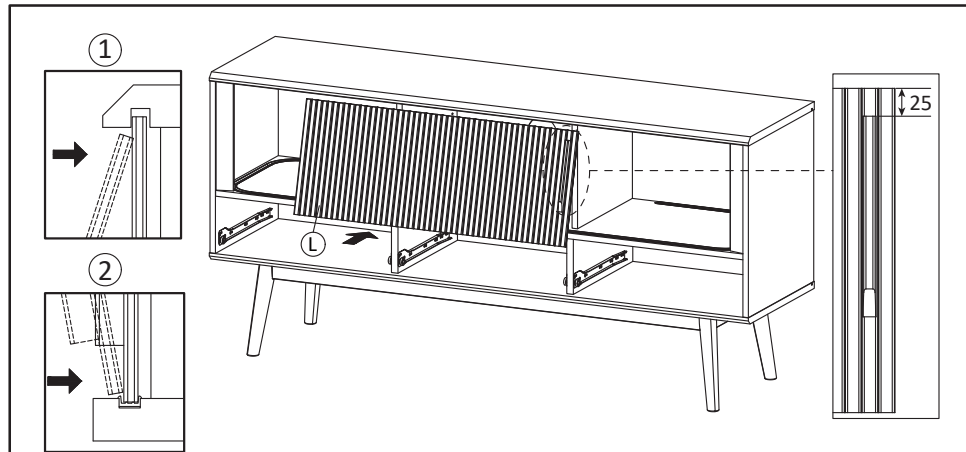


Step25: Insert the Door Left (L) into the upper groove line, then into lower groove line. Position the top and bottom parts of the door with the grooves of the top and bottom of the body. Follow the downward and upward directions position as shown in the figure.

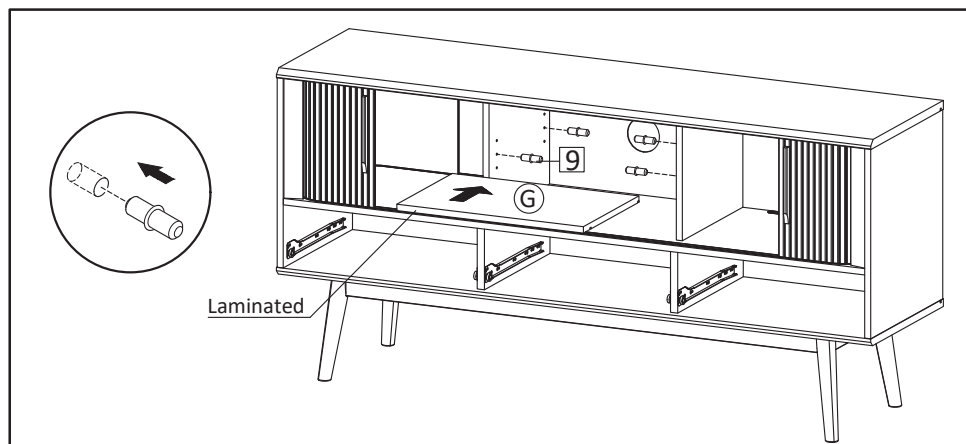

STEP27: Insert Shelf Pin (HW9) into the holes on Centerboards, on the desired level. Then place the Adjustable Shelf (G) by inserting the hole on the shelf into the shelf support.

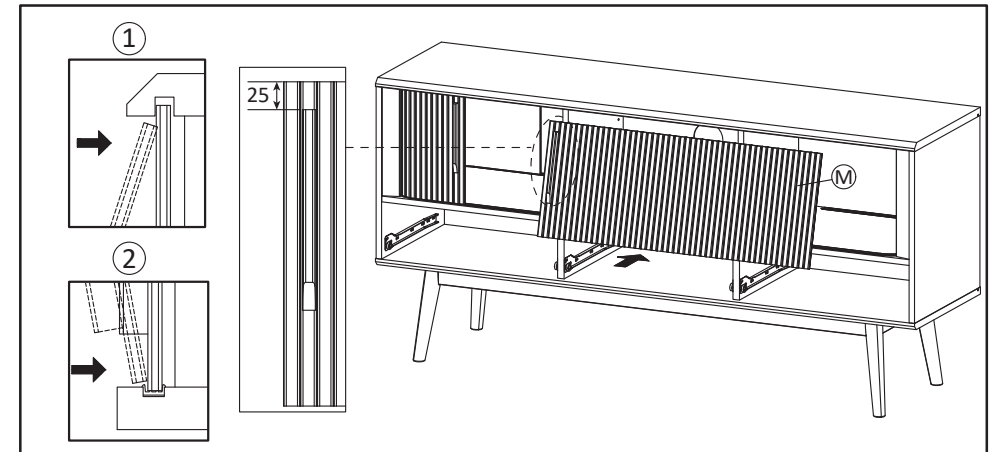


Step26: Insert the Door Right (M) into the upper groove line, then into lower groove line. Position the top and bottom parts of the door with the grooves of the top and bottom of the body. Follow the downward and upward directions position as shown in the figure.

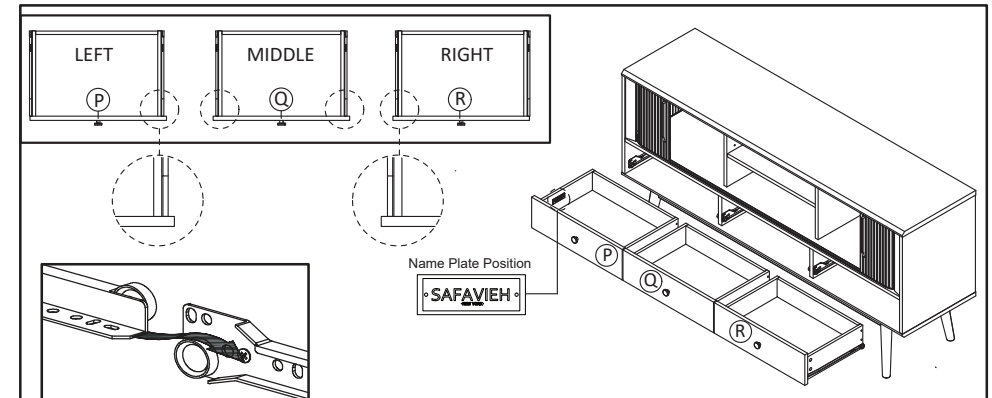


STEP28: First, please study the above image showing how to differentiate each drawer position. Hold the sides of drawer, position the wheel of Drawer Runner at drawer back and the wheel of Drawer Runner at side boards, according to the image. Slide in the drawers one by one into the media stand, ensure to follow the drawer position guidance.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 90 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

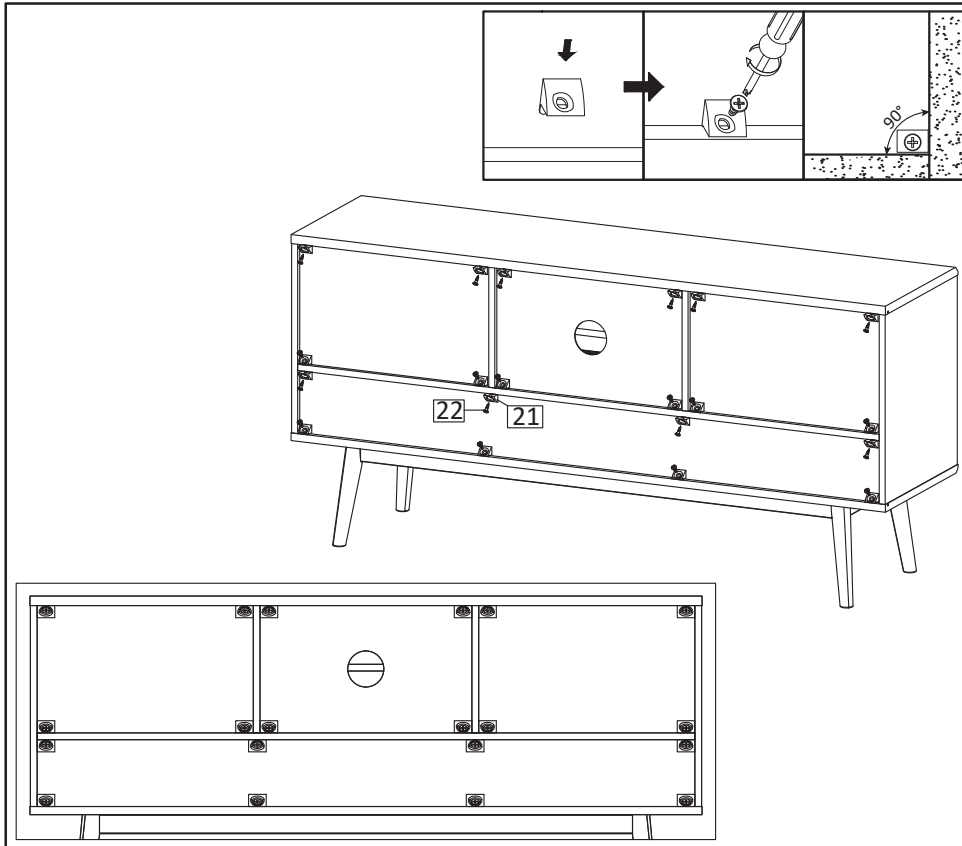

STEP29: Use Wedge (HW21), Screw M3.5x15.5mm (HW22) to tighten the back of media stand by using screwdriver.

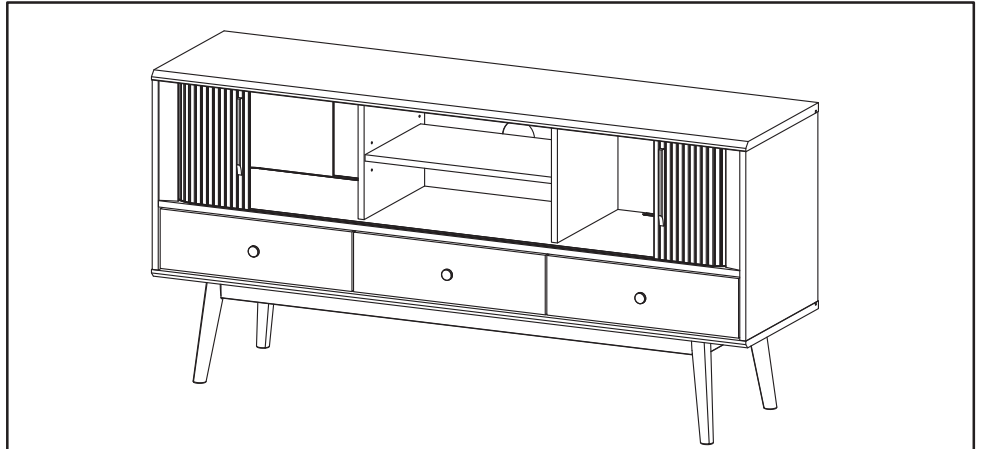

STEP30: Assembly is complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

