NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**


PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a reguler basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

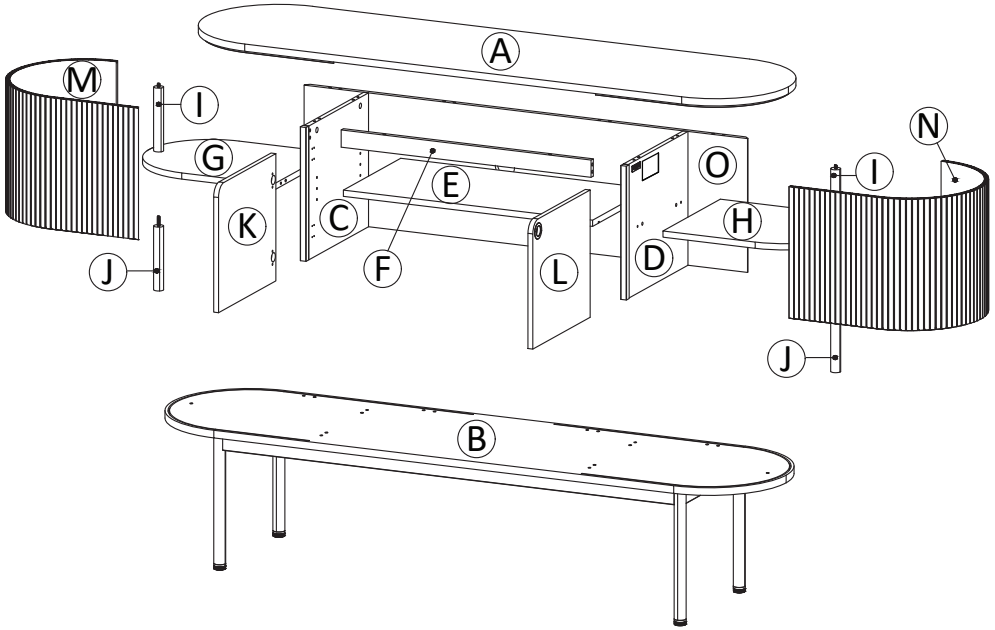

SAFAVIEH FURNITURE

Model# MED9630













Product Dimensions: 71”Wx18”Dx32”H

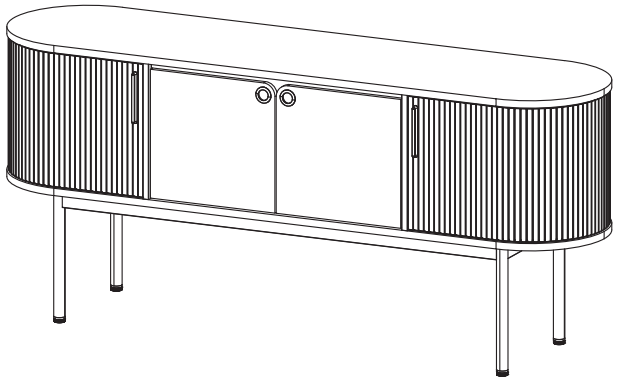

WARNING :

WEIGHT CAPACITY: 115 LBS.
Warning : Do not stand on media stand.
Warning : Do not over torque bolts.

Hardware List

HW1x12  Ø 6 x 35 mm	HW2x12  Ø 15 mm	HW3x26  Ø 8 x 30 mm	HW4x8  M 7 x 50 mm	HW5x14  M 6.4 x 53 mm
HW6x4 	HW7x2 	HW8x4  M 4 x 16 mm	HW9x32  M 4.5 x 12.5 mm	HW10x2 
HW11x4  Ø 15 mm	HW12x2 	HW13x1 	HW14x4 	HW15x4 
HW16x2  M 6 x 30 mm	HW17x4 	HW18x4  M 8 x 70 mm	HW19x2 	HW20x2 
HW PM3x2 	HW HS26Cx4 			


Part List & HW For Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	1 of 2
B	Bottom Board	1	1 of 2
C	Center Board Left	1	2 of 2
D	Center Board Right	1	2 of 2
E	Adjustable Shelf	1	2 of 2
F	Support Board	1	2 of 2
G	Fixed Shelf 1	1	2 of 2
H	Fixed Shelf 2	1	2 of 2
I	Pillar 1	2	1 of 2
J	Pillar 2	2	1 of 2
K	Door Left	1	2 of 2
L	Door Right	1	2 of 2
M	Sliding Door Left	1	2 of 2
N	Sliding Door Right	1	2 of 2
O	Back Board	1	1 of 2


Piece	Description	Qty	Carton Call
HW1	Cambolt	12	2 of 2
HW2	CamLock	12	2 of 2
HW3	Dowel	26	2 of 2
HW4	Screw M 7 x 50 mm	8	2 of 2
HW5	Screw M 6.4 x 53 mm	14	2 of 2
HW6	Shelf Pin	4	2 of 2
HW7	Stopper	2	2 of 2
HW8	Screw M 4 x 16 mm	4	2 of 2
HW9	Screw M 4.5 x 12.5 mm	32	2 of 2
HW10	Allen Key	2	2 of 2
HW11	Screw Cap	4	2 of 2
HW12	Handle	2	2 of 2
HW13	Wrench	1	2 of 2
HW14	Corner Brace	4	2 of 2
HW15	Support Corner Brace	4	2 of 2
HW16	Screw M 6 x 30 mm	2	2 of 2
HW17	Metal leg	4	1 of 2
HW18	Screw M 8 x 70 mm	4	2 of 2
HW19	Support Metal 1	2	1 of 2
HW20	Support Metal 2	2	1 of 2
HW PM3	Mounting Plate	2	2 of 2
HW HS26C	Hinge	4	2 of 2

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

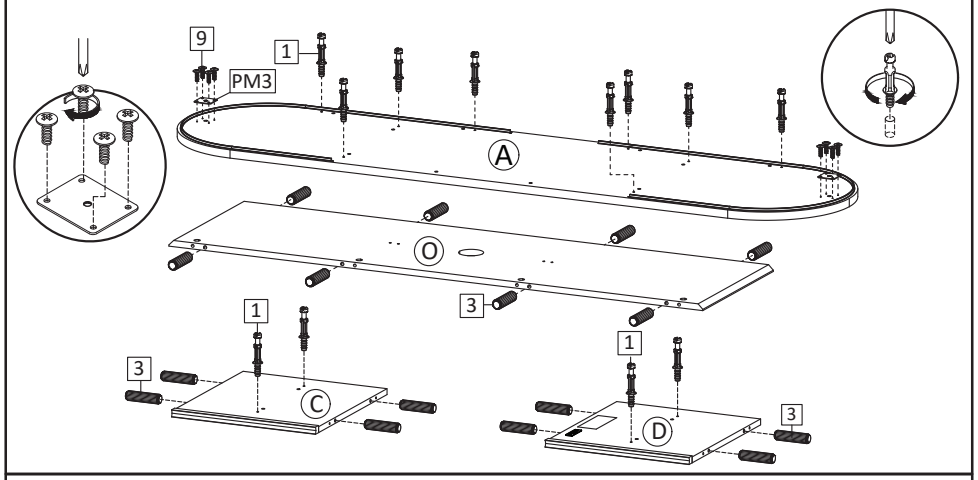


STEP1: Insert Cambolt (HW1) into Top Board (A). Insert Mounting Plate (HW PM3) secure with Screw M4.5x12.5mm (HW9) into Top Board (A). Insert Dowel(HW3) into Center Board Left (C), Center Board Right (D) and Back Board (O).

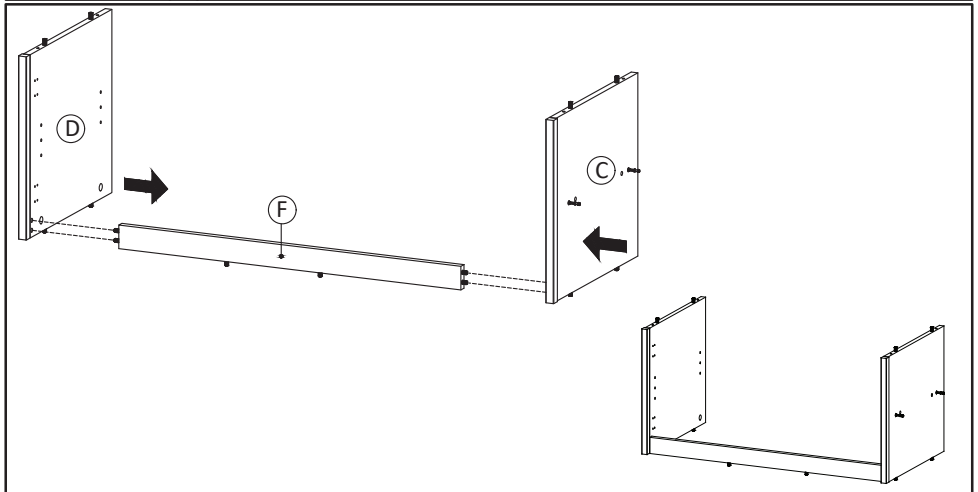

STEP3: Combine Center Board Left (C), Center Board Right (D), and Support Board (F) as per above image.

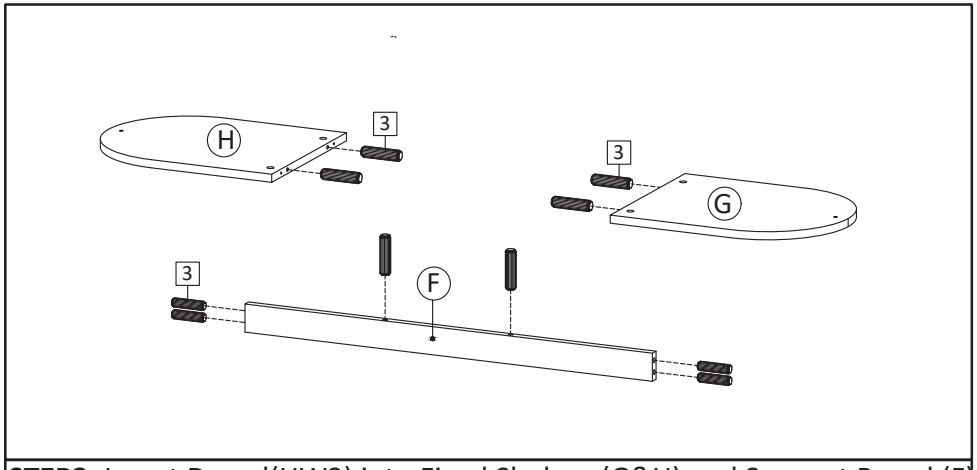


STEP2: Insert Dowel(HW3) into Fixed Shelves (G&H) and Support Board (F).

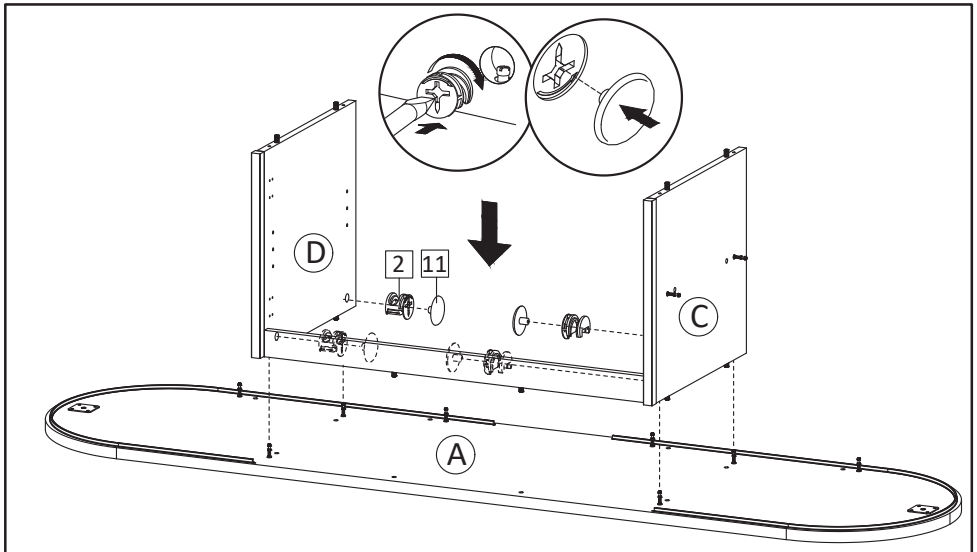


STEP4: Attach the pre-assembled component from step 3 to the Top Board (A). Insert Camlock (HW2) then tighten using screwdriver. Put Screw Cap (HW11) over the camlock as picture

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

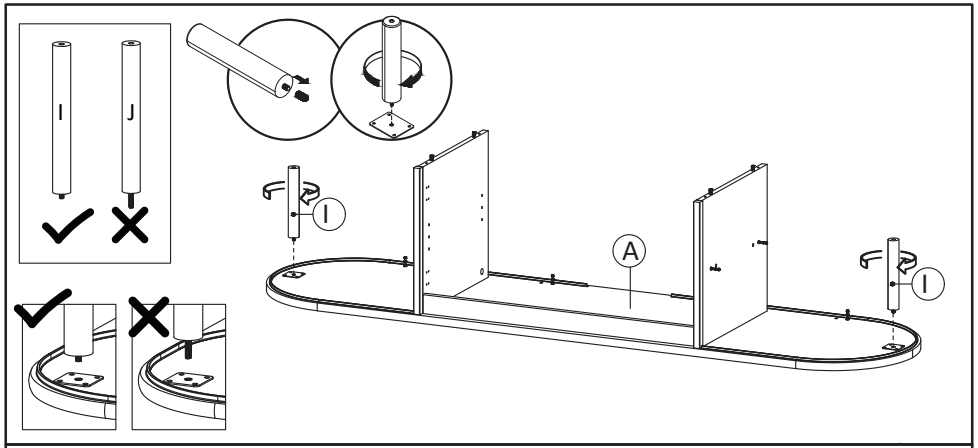


STEP5 : Please notice before install the Pillars, Pillar 1 (I) has shorter threaded bolt compare to Pillar 2 (J). Please be sure to install Pillar 1 (I) into the Top Board (A) as per image.

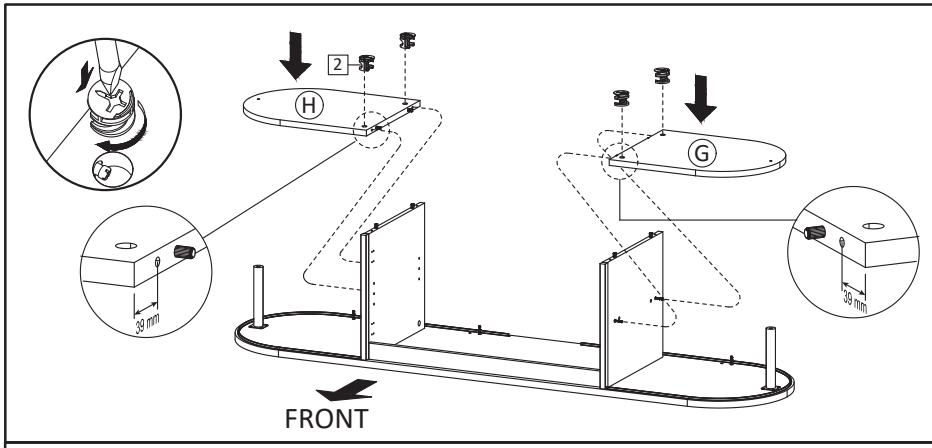

STEP6: Attach Fixed Shelf (G&H) into Center Boards. Insert Camlock (HW2) then tighten using screwdriver as picture.

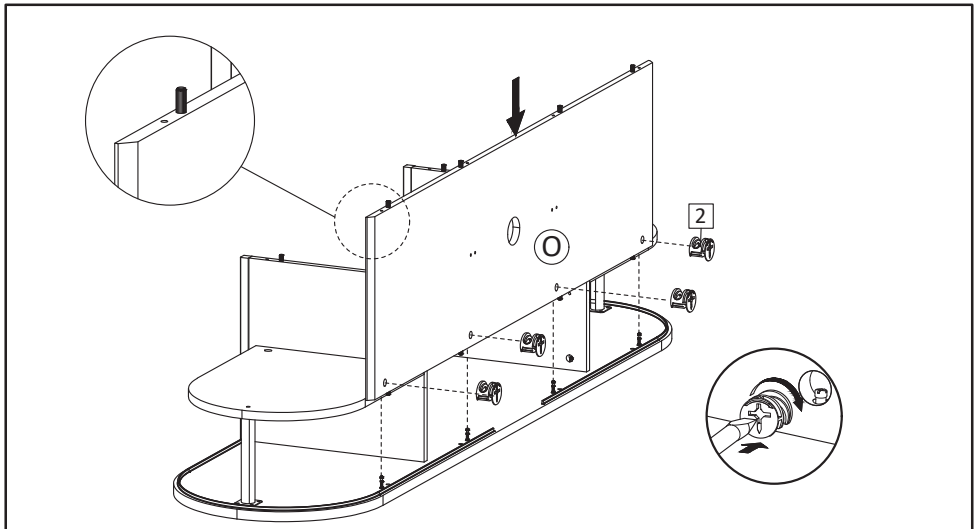


STEP7: Attach Back Board (O) into Top Board (A). Insert Camlock (HW2) then tighten using screwdrive as figure.

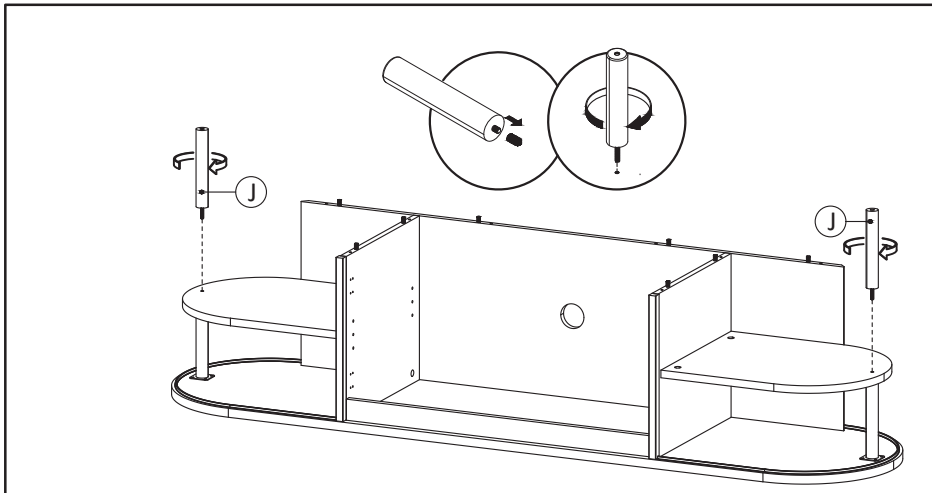


STEP8: Install Pillar 2 (J) with the threaded bolt goes through the hole of Fixed Shelf, tighten by rotating clockwise.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

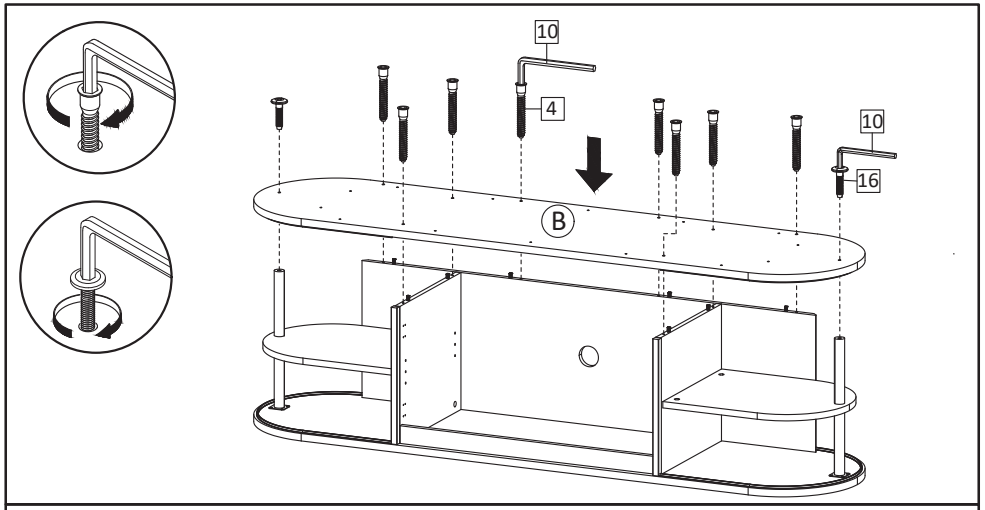


STEP9: Attach Bottom Board (B) and secure with Screw M7x50mm (HW4) into Back Board & Center Board, tighten screws using Allen Key (HW10). Continue to secure the Pillar by inserting Screw M6x30mm (HW16),tighten screws using Allen Key (HW10) as figure.

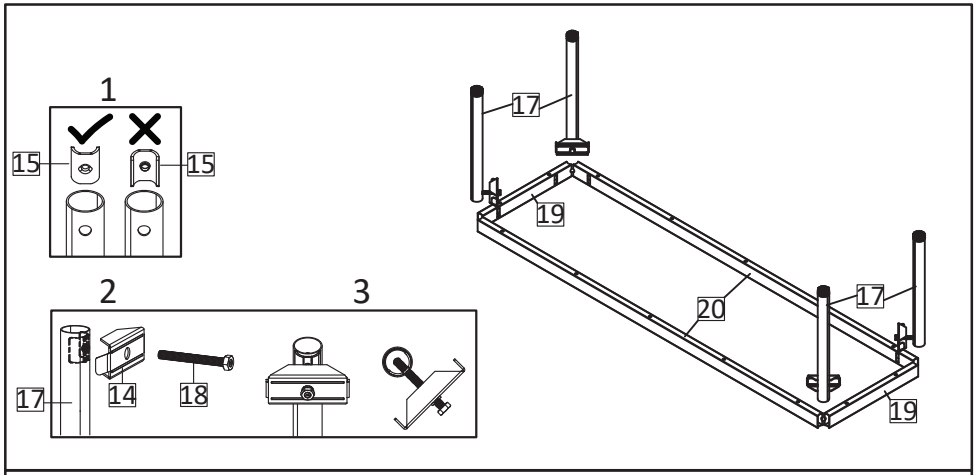

STEP10:Insert Support Corner Brace (HW15) and place it inside Leg (HW17) tube. Insert Screw M8x70mm (HW18) into the hole of Corner Brace (HW14). Screw in slightly just enough to grip Leg (HW17) with Support Corner Brace (HW15) inside Do not tighten. Arrange Support Metal Leg 1 (HW19) & Support Metal Leg 2 (HW20) on the floor as per image.

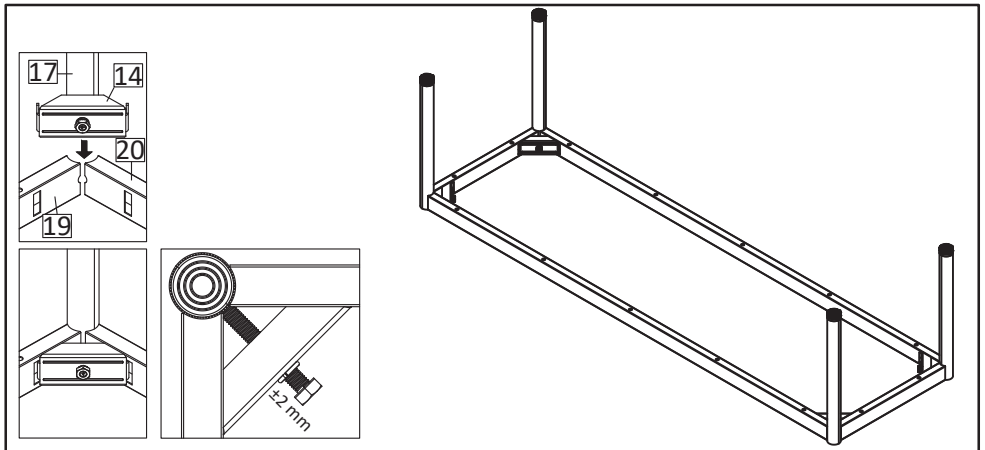


STEP11: Install the prepared Leg (HW17). Ensure the Corner Brace (HW14) hooks onto the hole of Support Metal Leg 1 (HW19) and Support Metal Leg 2 (HW20). Screw in just enough to grip the support metal leg using Wrench (HW13). Do not fully tighten. Repeat for the other legs.

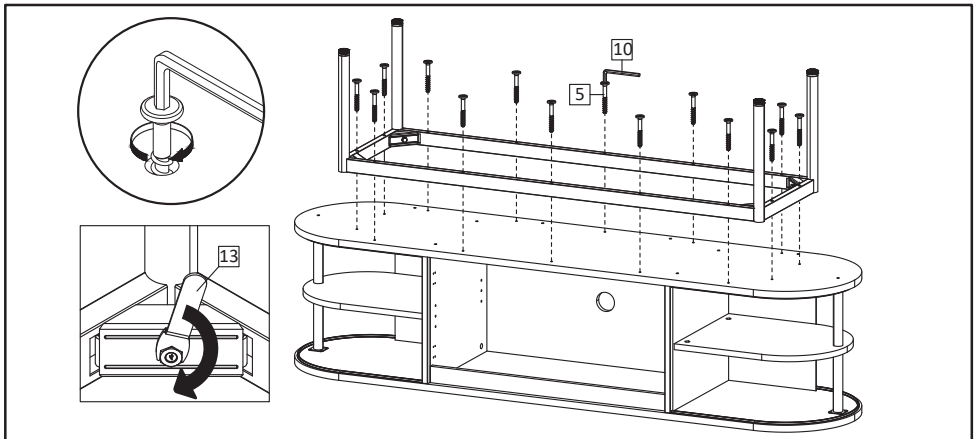


STEP12:Install assembled leg unit from Step 11 onto main assembled unit by inserting Screw (HW5). Tighten with Allen Key (HW10). Then tighten all the Screw on the corner brace unit with Wrench (HW13).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

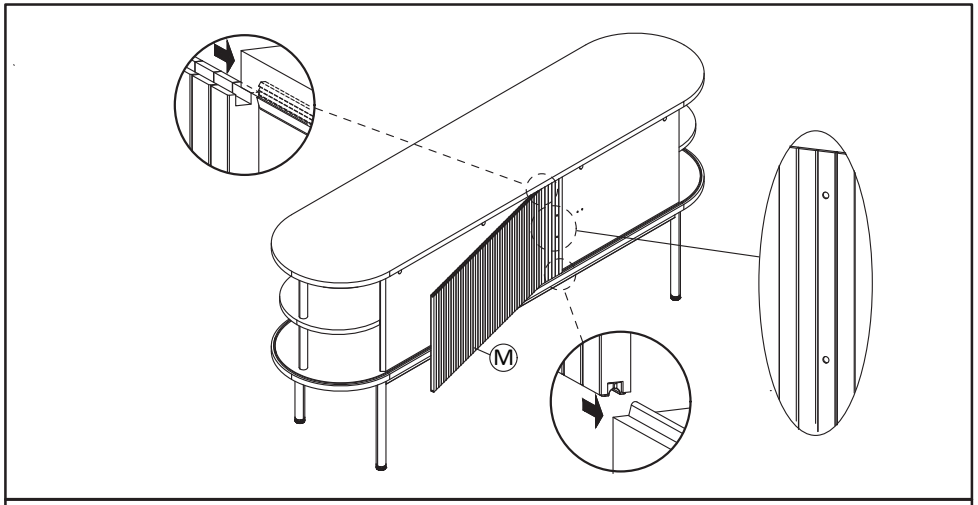


STEP13: Bring the product upright. Insert the Sliding Door Left (M) into the track. Carefully examine the tambour door. The side with plastic insert is placed at bottom track, while the side without plastic insert inside groove is for upper track.

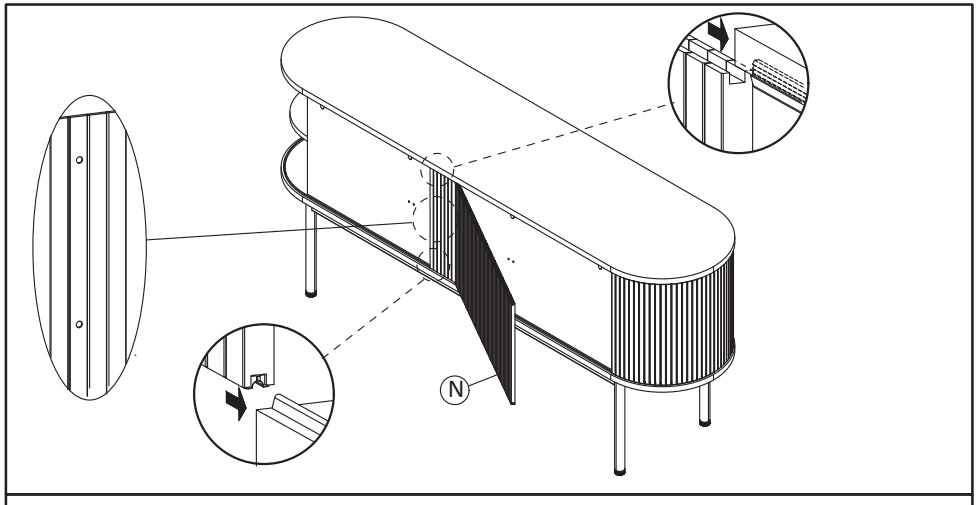

STEP14: Bring the product upright. Insert the Sliding Door Right (N) into the track. Carefully examine the tambour door. The side with plastic insert is placed at bottom track, while the side without plastic insert inside groove is for upper track.

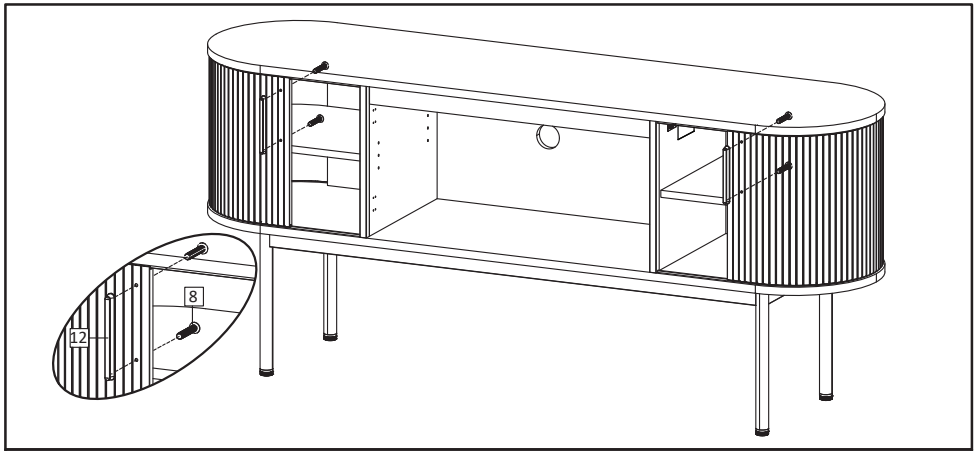


STEP15: Insert Handle (HW12) secure with Screw M4x16mm (HW8) into the holes on Doors (M&N) position as shown in the figure.

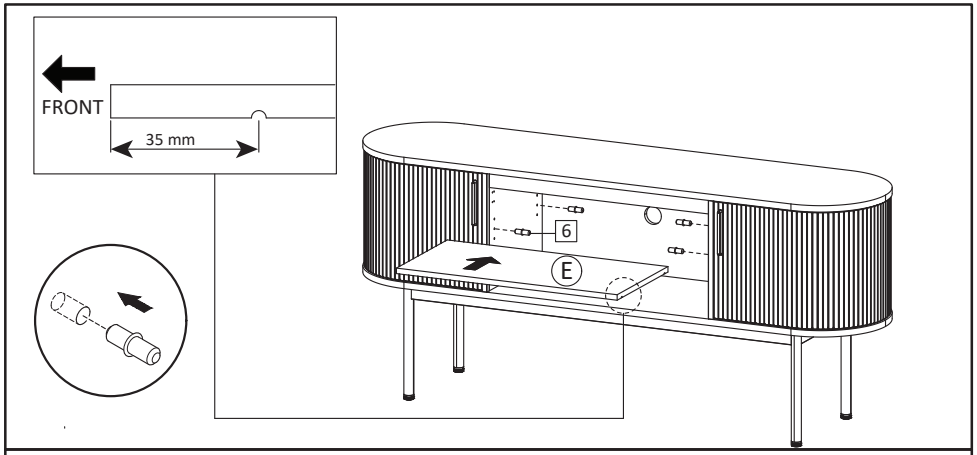


STEP16: Insert Shelf Pin (HW6) into the holes on Center Boards, on the desired level.Then place the Adjustable Shelf (E) by inserting the grooved line on the shelf into the shelf support.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

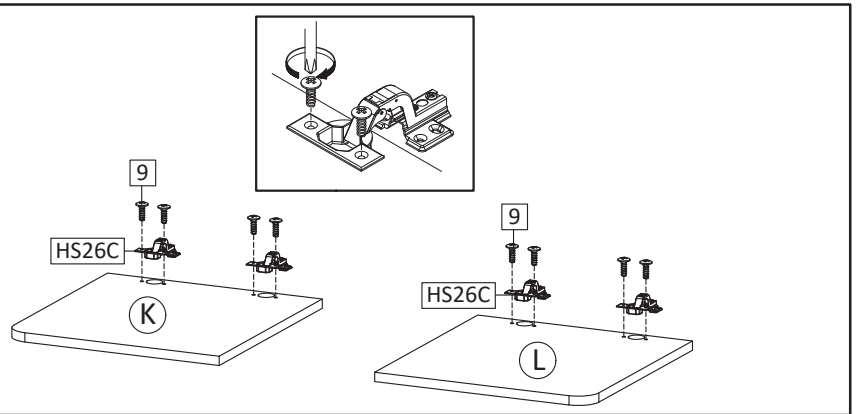


STEP17: Insert Hinge (HW HS26C) into remaining Door Left (K) and Door Right (L). Secure with Screw M4.5x12.5mm (HW9).

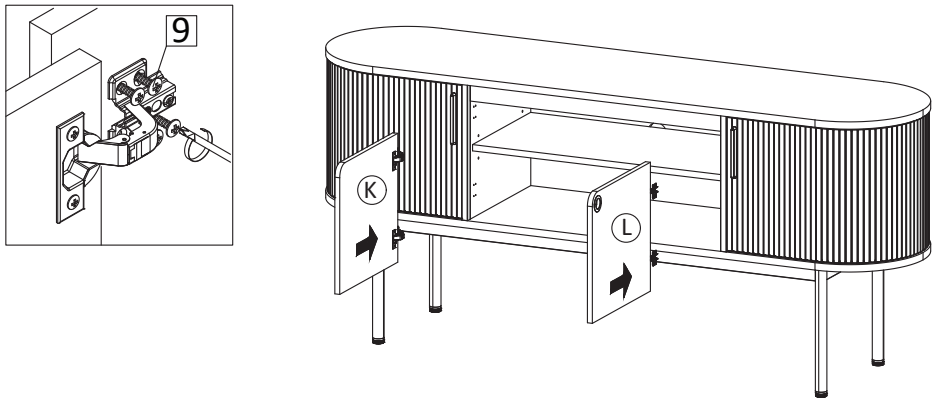

STEP18: Install Door Left (K) and Door Right (L) into Center Boards Please review above images carefully. Secure with Screw M4.5x12.5mm (HW9). Refer to separate page of how to adjust hinge (HS26C).

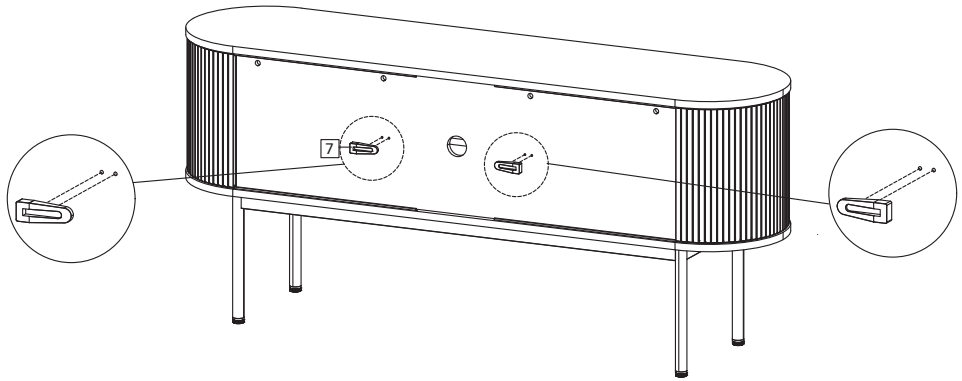


STEP19: Install stopper (HW7) into Back Board as figure.

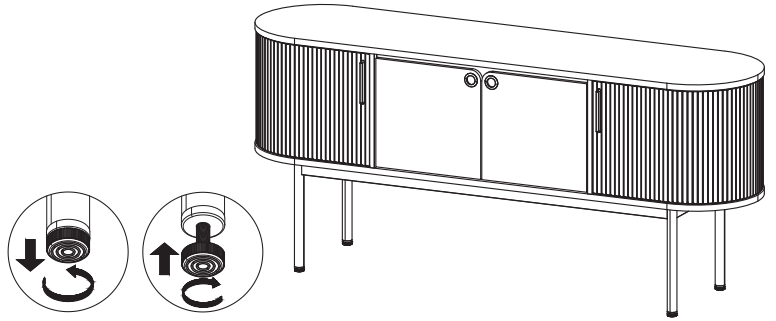

STEP20: Place your furniture on lever floor. The legs come with adjustable leveler,adjust it as needed until your furniture stands steadily on the floor.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (included): Allen Key
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

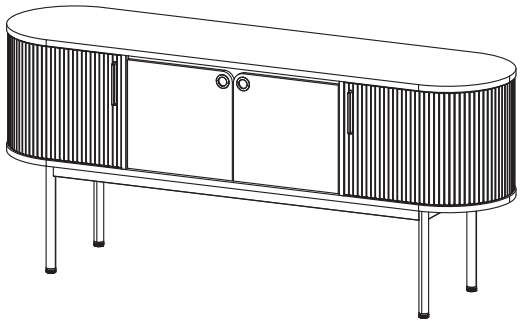



STEP21: Assembly is Complete.


TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE


Different wall materials require unique wall fasteners.
The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.
Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

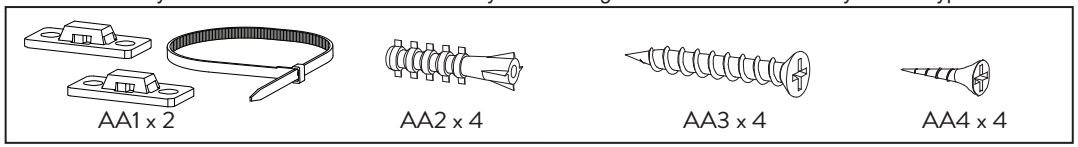


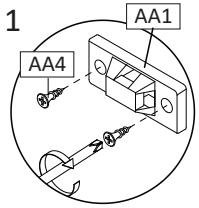


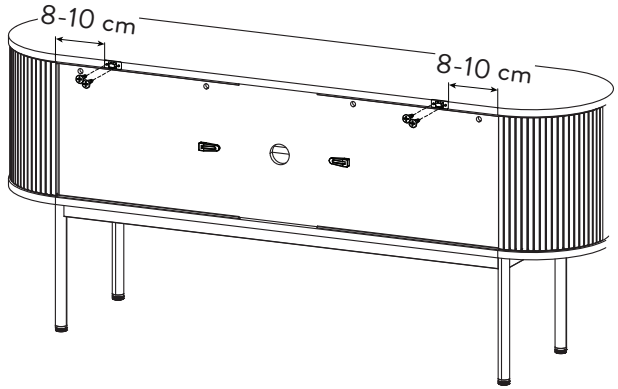


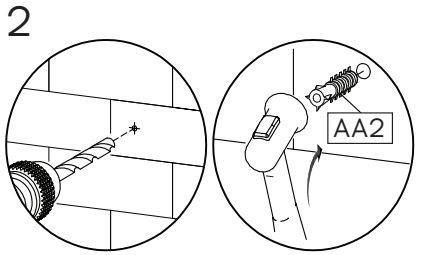


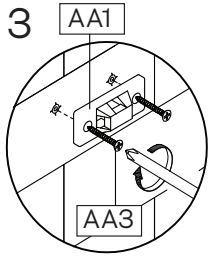

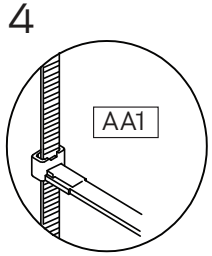


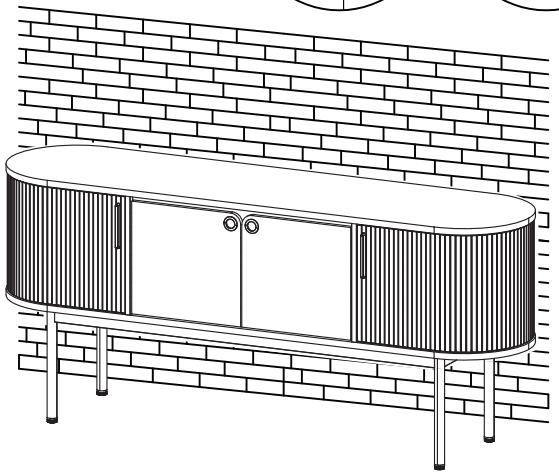


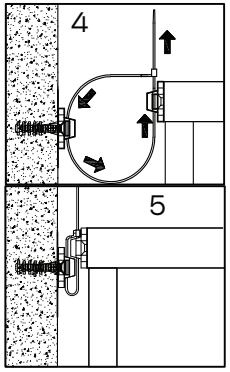

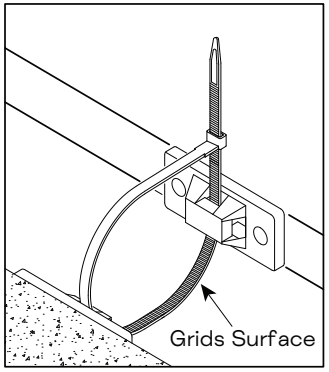


HOW TO ADJUST HINGES

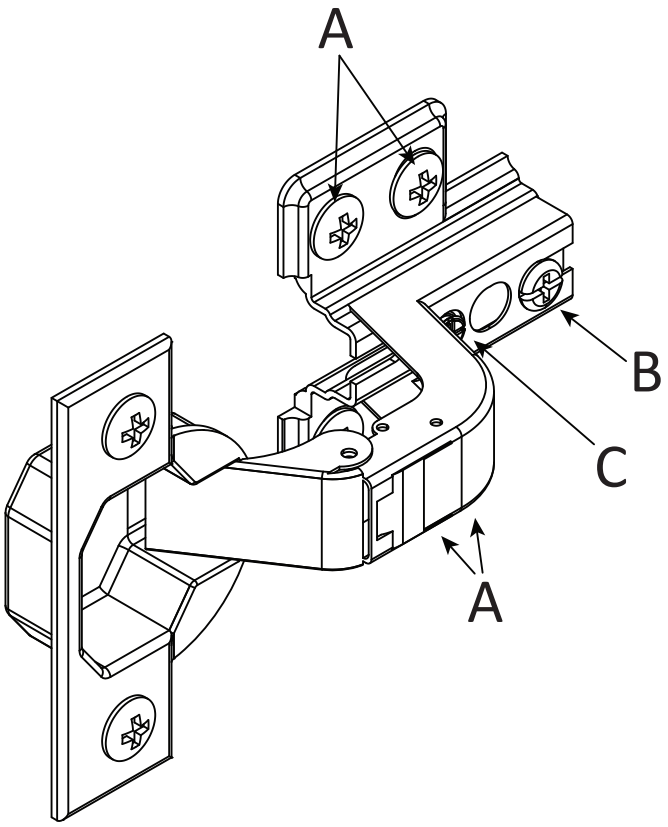

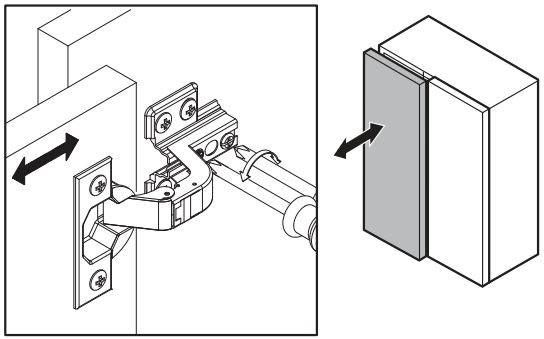

To adjust depth.

Loosen screw “B” and adjust door, if the door can not be adjusted, please loosen screw “C”, then try again. Tighten screw “B” and “C”.

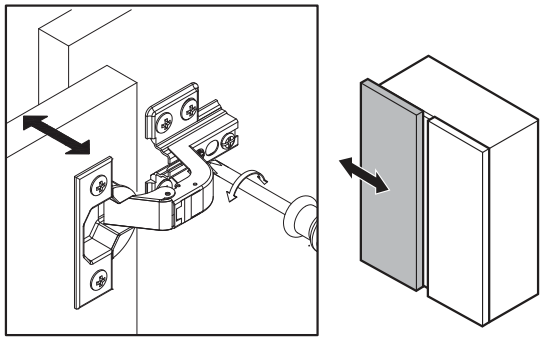

To adjust side ways.

Turning the screw “C” on BOTH hinges on each door.