NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Model# MED9647

Product Dimensions: 63.11x"Wx21.46"Dx31.38"H

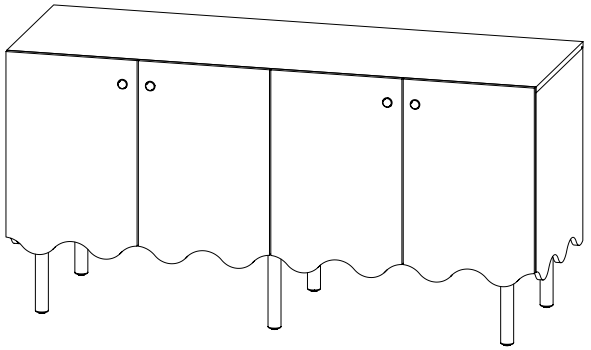









Part List

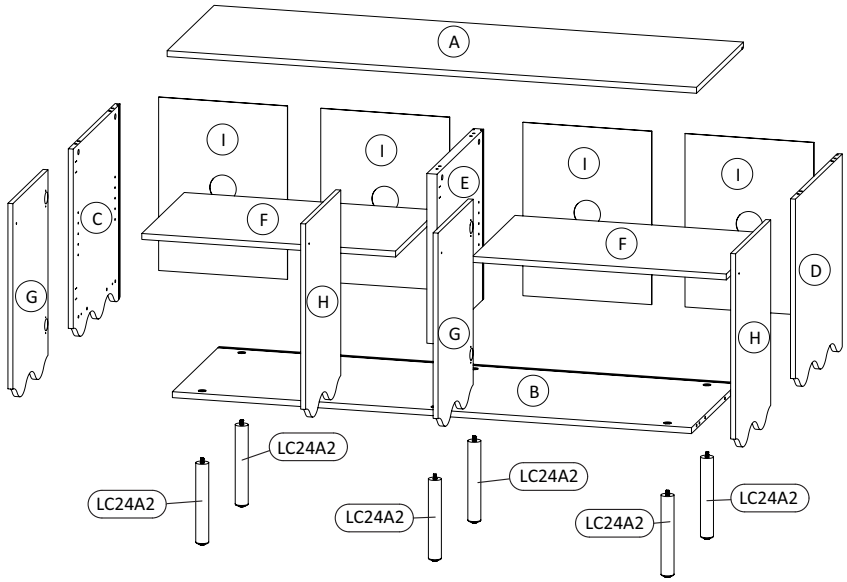

⚠ WARNING
This product is intended for use with a FLAT SCREEN TV ONLY
Maximum Screen Size: 65 inches
Weight Limit: 125.2 lbs
Shelf Load Limit: 52.90 lbs
Total Weight Limit: 336.8 lbs
Use with heavier televisions may result in instability causing tip over resulting in death or Serious injury.

⚠ WARNING
Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on the child.

Hardware List

HW1 x10  Ø 6 x 35 mm	HW2 x10  Ø 15 mm	HW3 x16  Ø 8 x 30 mm	HW4 x2  M 7 x 50 mm	HW5 x4 
HW6 x 8 	HW7 x2  Ø 15 mm	HW8 x48  M 4.5 x 12.5 mm	HW9 x20  M 3.5 x 15.5 mm	HW10 x20 
HW11 x4  M 4 x 20 mm	HW12 x4 	HW13 x4  Ø 15 mm	HW14 x2  512 mm	HW15 x2  Allen Key 5
HW16 x6 	HW HGL4x 1 SET 	HW HS35A x8 		

Part List & HW For Multi-Box Items


Piece	Description	Qty	Carton Call
A	Top Board	1	2 of 2
B	Bottom Board	1	2 of 2
C	Side Board Left	1	1 of 2
D	Side Board Right	1	1 of 2
E	Center Board	1	1 of 2
F	Adjustable Shelf	2	2 of 2
G	Door 1	2	1 of 2
H	Door 2	2	1 of 2
I	Back Board	4	1 of 2
LC24A2	Leg	6	1 of 2

Piece	Description	Qty	Carton Call
HW1	Cambolt	10	1 of 2
HW2	CamLock	10	1 of 2
HW3	Dowel	16	1 of 2
HW4	Screw M 7 x 50 mm	2	1 of 2
HW5	Sticker	4	1 of 2
HW6	Shelf Support	8	1 of 2
HW7	Screw Cap	2	1 of 2
HW8	Screw M 4.5 x 12.5 mm	48	1 of 2
HW9	Screw M 3.5 x 15.5 mm	20	1 of 2
HW10	Wedge	20	1 of 2
HW11	Screw M 4 x 20 mm	4	1 of 2
HW12	Handle	4	1 of 2
HW13	Screw Cap	4	1 of 2
HW14	List Joint 512 mm	2	1 of 2
HW15	Allen Key 5	2	1 of 2
HW16	JCN Nut	6	1 of 2
HW HGL4	Hand Grip + Allen Key	1 SET	1 of 2
HW HS35A	Hinge	8	1 of 2


PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**


HAND GRIP POSITION ADJUSTMENT

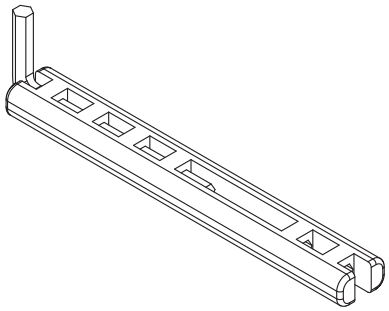

POSITION 1

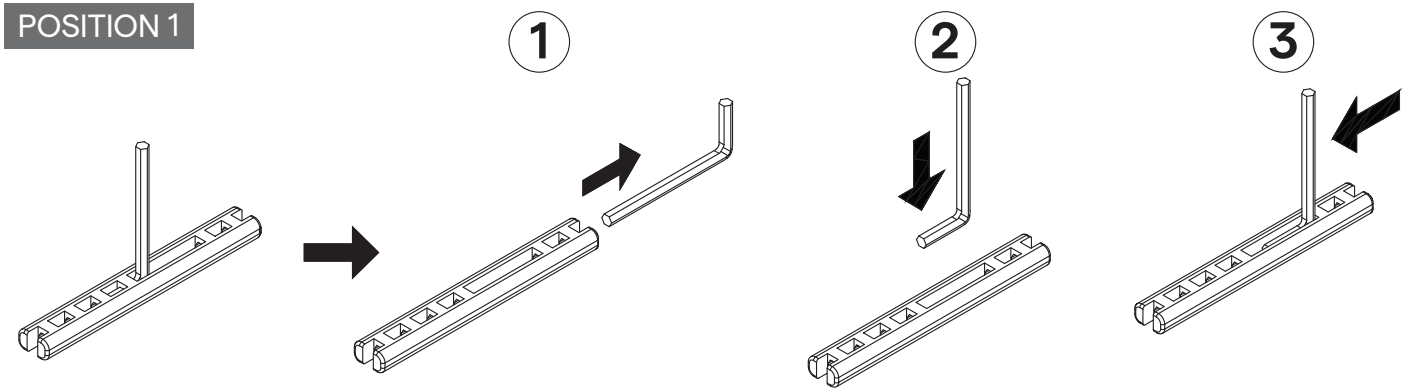


POSITION 2

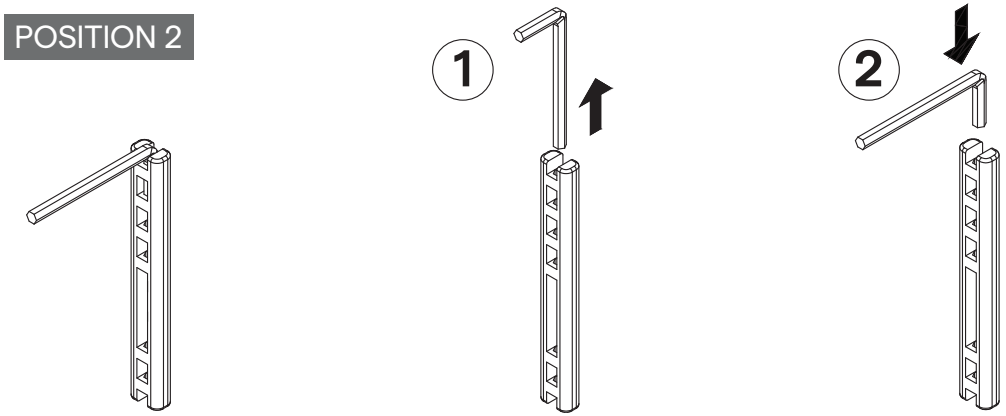

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

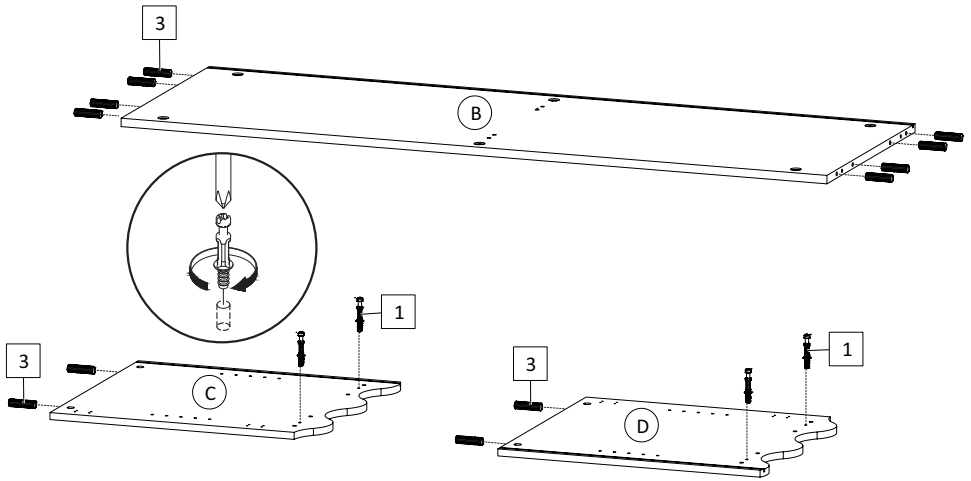

HW1	x 4
Ø 6 x 35 mm	

HW3	x 12
Ø 8 x 30 mm	

STEP 1: Insert Cambolt (HW1) into component Side Board Left (C) and Side Board Right (D), tighten using screwdriver. Then insert Dowel (HW3) into component Bottom Board (B), Side Board Left (C) and Side Board Right (D).

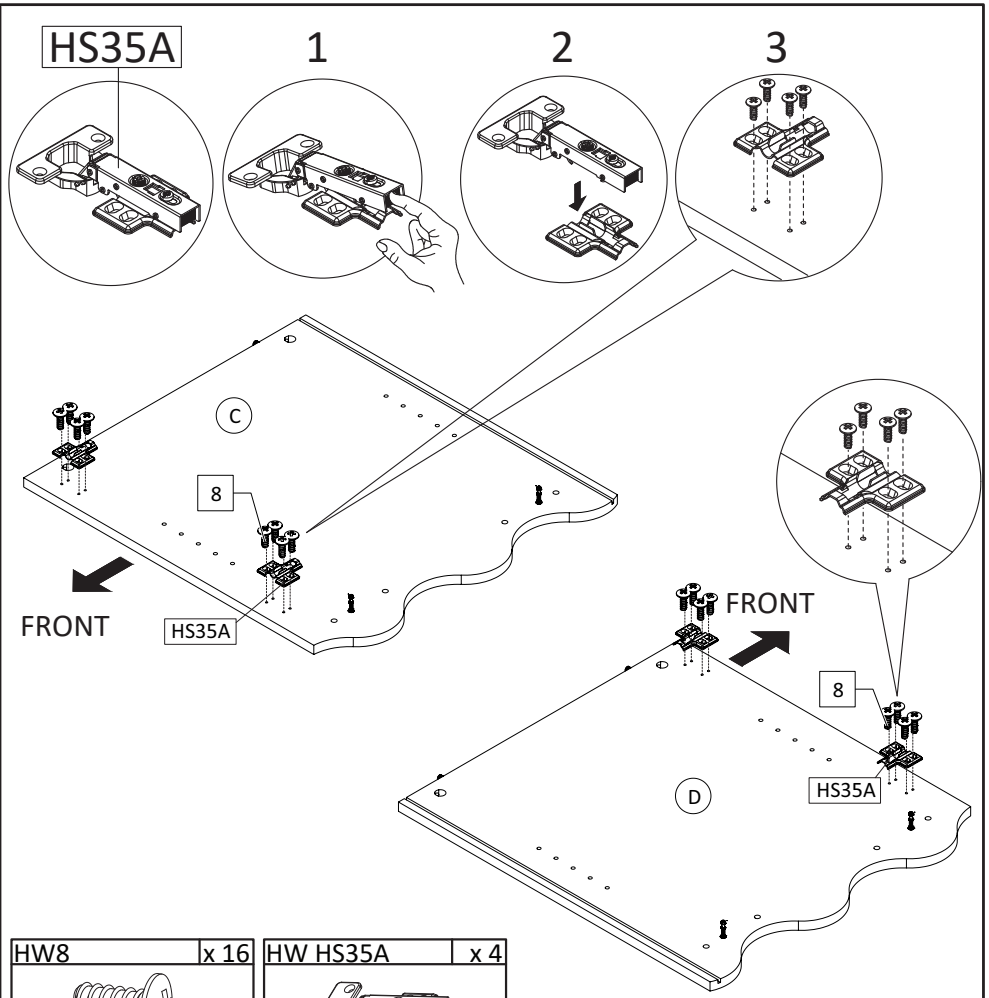


HW8	x 16
M 4.5 x 12.5 mm	

HW HS35A	x 4

STEP 2: Install the Hinge part (HS35A) onto the Side Board Left (C) and Side Board Right (D). First, detach the hinge by pressing on the back of the hinge, as shown. Secure with Screw M4.5 x 12.5 mm (HW8), then tighten using a screwdriver.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

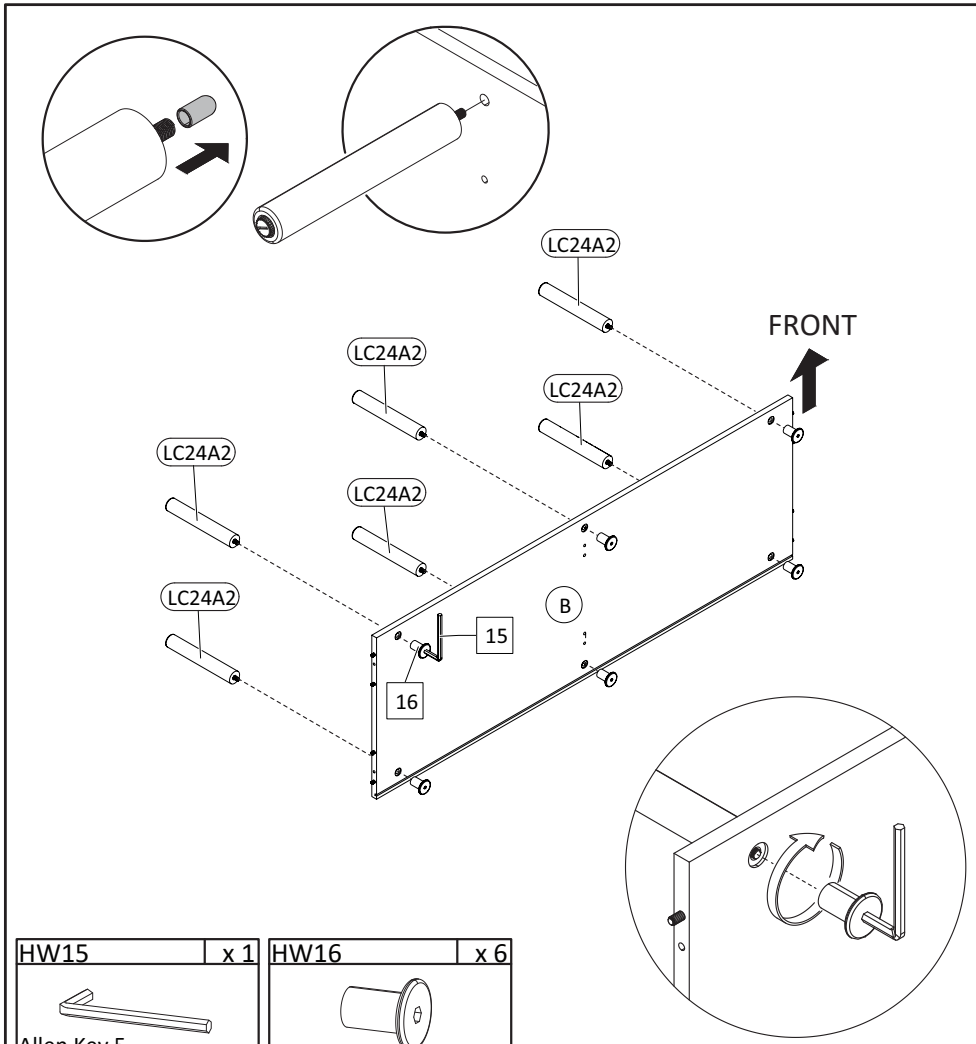

HW15	x 1
Allen Key 5	

HW16	x 6

STEP 3: Remove the rubber from the Leg (LC24A2), then Insert the Leg (LC24A2) into holes on the Bottom Board (B), secure with JCN Nut (HW16), then tighten using Allen Key 5 (HW15).

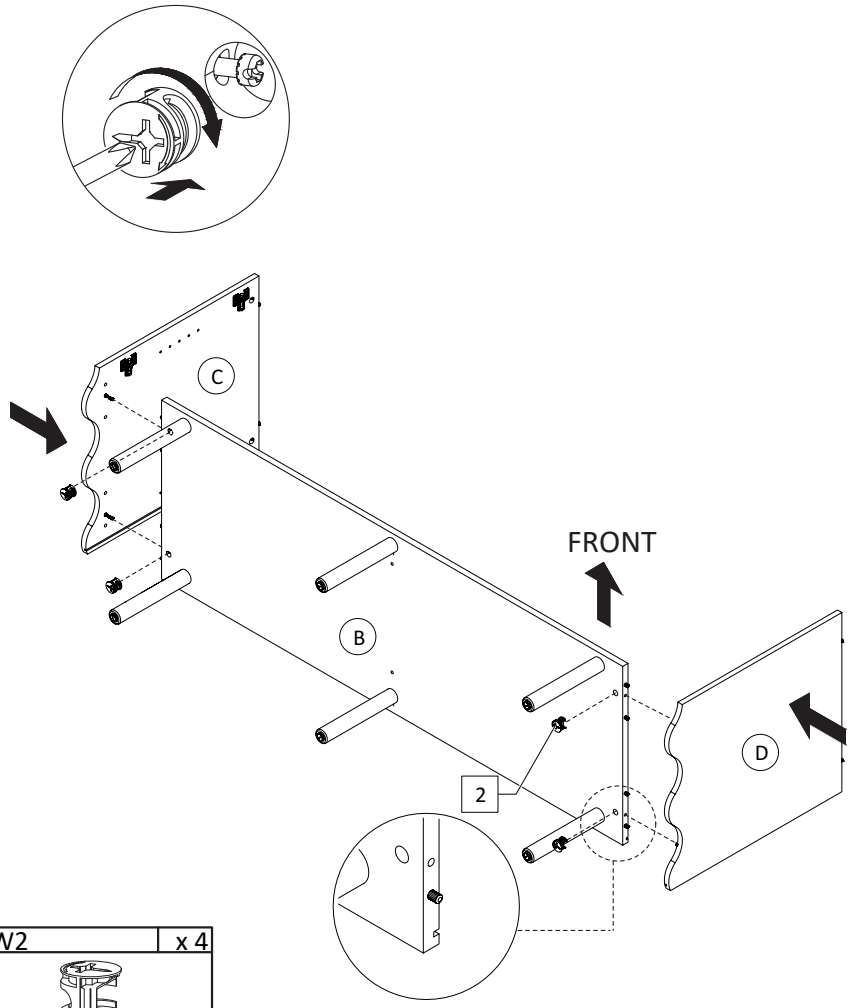


HW2	x 4
Ø 15 mm	

STEP 4: Attach Side Board Left (C) and Side Board Right (D) to Bottom Board (B), secure with Camlock (HW2), then tighten using screwdriver.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

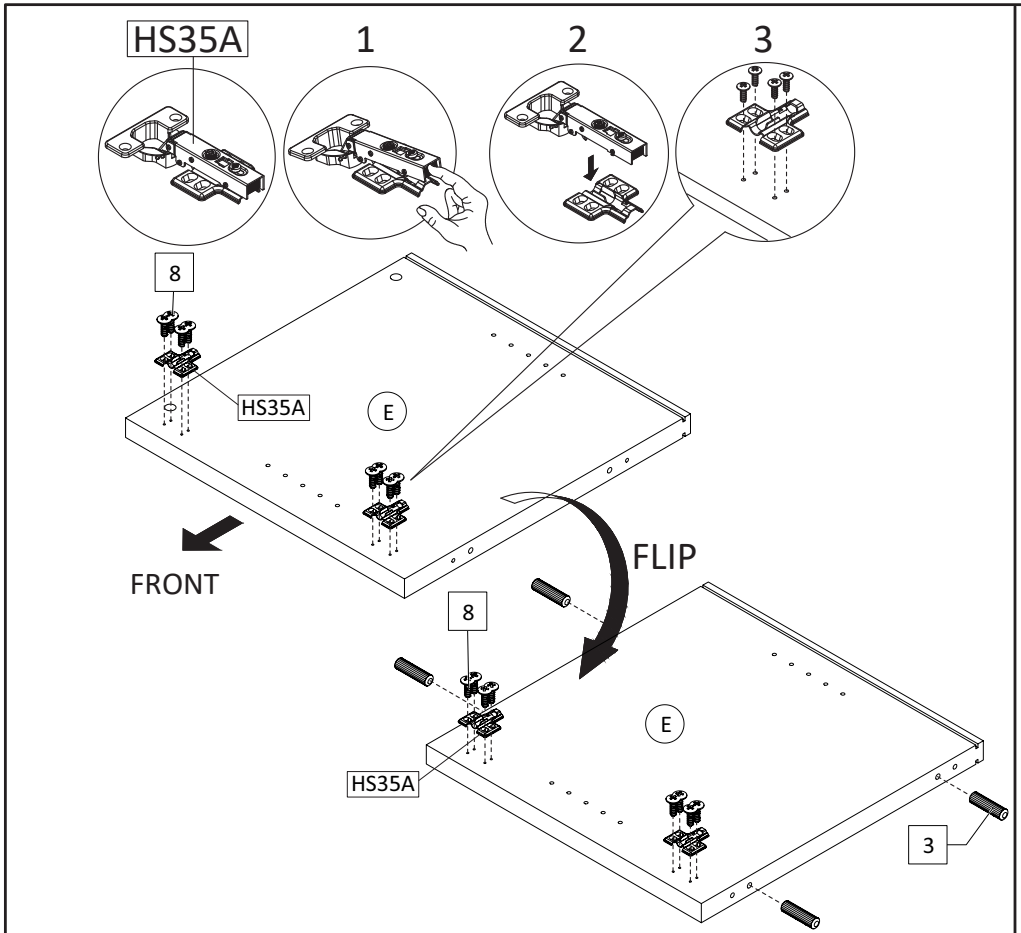


HW3	x 4
Ø 8 x 30 mm	

HW8	x 16
M 4.5 x 12.5 mm	

HW HS35A	x 4

STEP 5: Install the Hinge part (HS35A) onto the Center Board (E). First, detach the hinge by pressing on the back of the hinge, as shown. Secure with Screw M4.5 x 12.5 mm (HW8), then tighten using a screwdriver. Flip the Center Board (E) and repeat the same process on the opposite side. Then insert Dowel (HW3) into top and bottom side of the component.

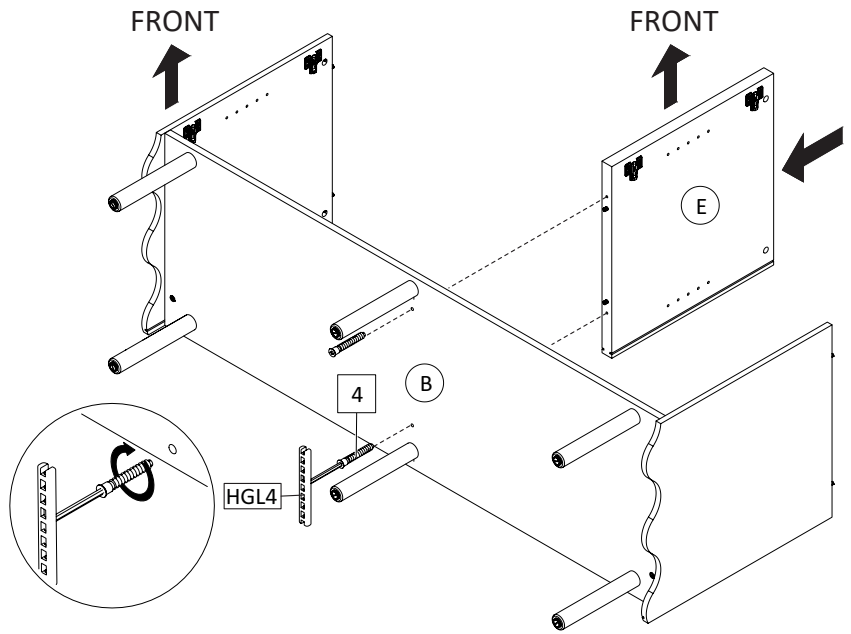


HW4	x 2
M 7 x 50 mm	

HW HGL4	x 1

STEP 6: Attach Center Board (E) to Bottom Board, secure with Screw M7 x 50 mm (HW4), then tighten using Hand Grip + Allen Key (HW HGL4).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

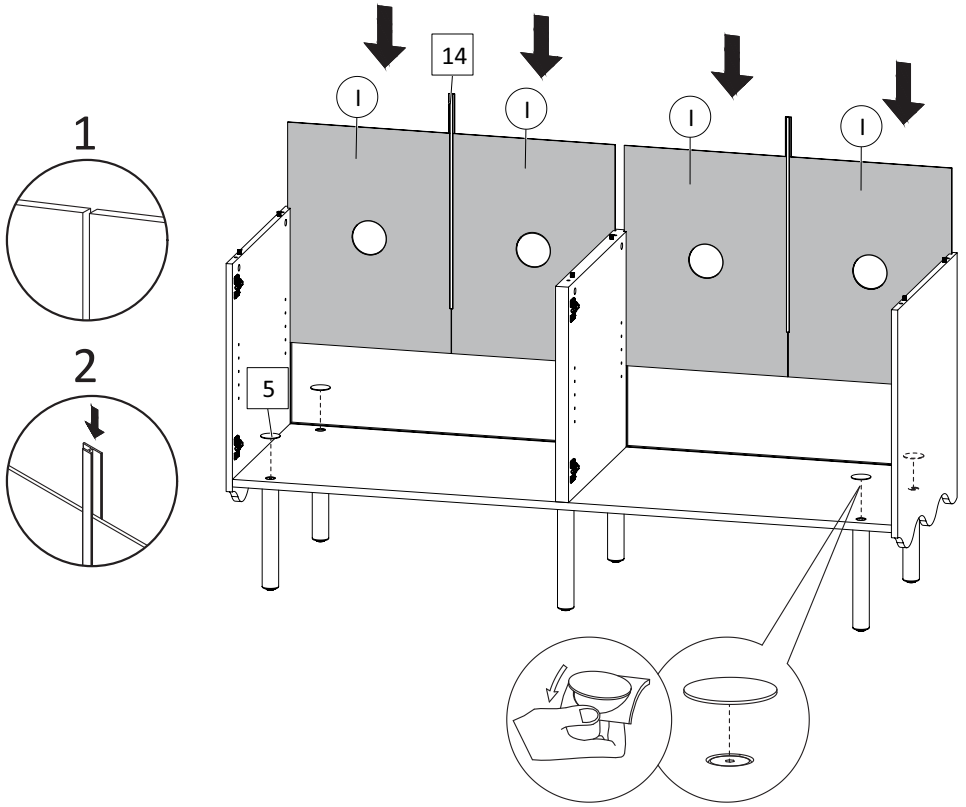

HW5	x 4

HW14	x 2
512 mm	

STEP 7: Insert Back Board (I) into Bottom Board, then insert List Joint (HW14) in between the Back Boards. Peel off paper from the Sticker (HW5) and apply over the holes in the Bottom Board.

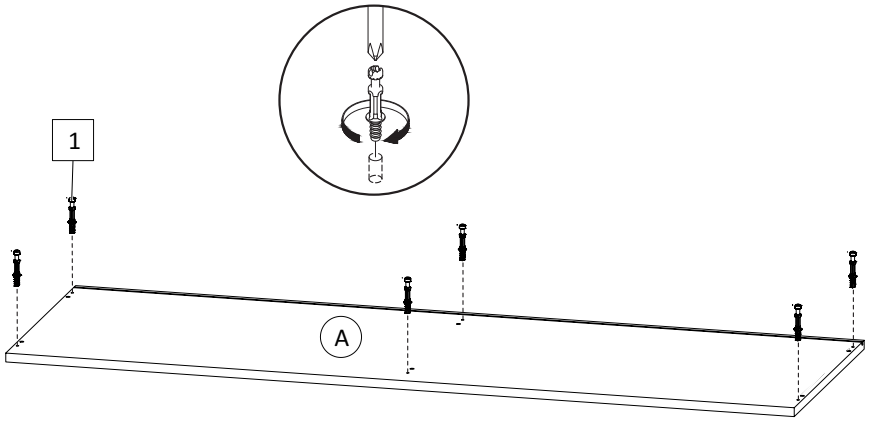



HW1	x 6
Ø 6 x 35 mm	

STEP 8: Insert Cambolt (HW1) into Top Board (A), then tighten using screwdriver.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

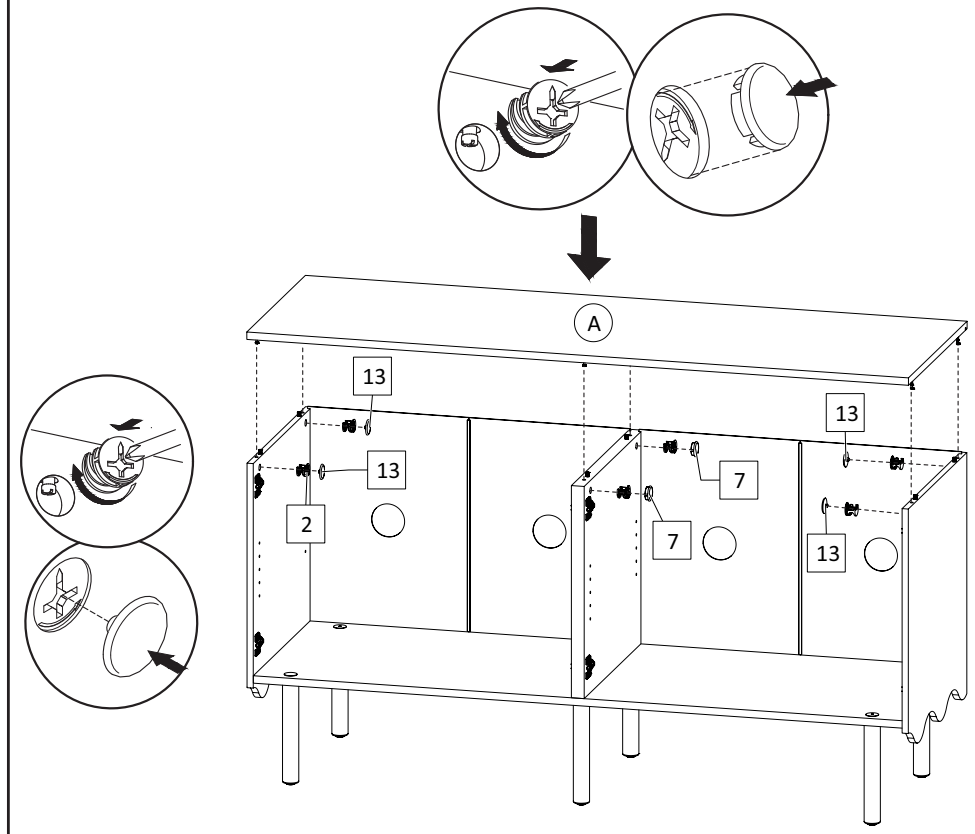


HW2	x 6
 Ø 15 mm	

HW7	x 2
 Ø 15 mm	

HW13	x 4
 Ø 15 mm	

STEP 9: Attach the Top Board (A) to pre-assembly component from previous step, secure with Camlock (HW2) and tighten using screwdriver.
Then insert Screw Cap (HW7) into the center board and Screw Cap (HW13) into camlock on the side boards.

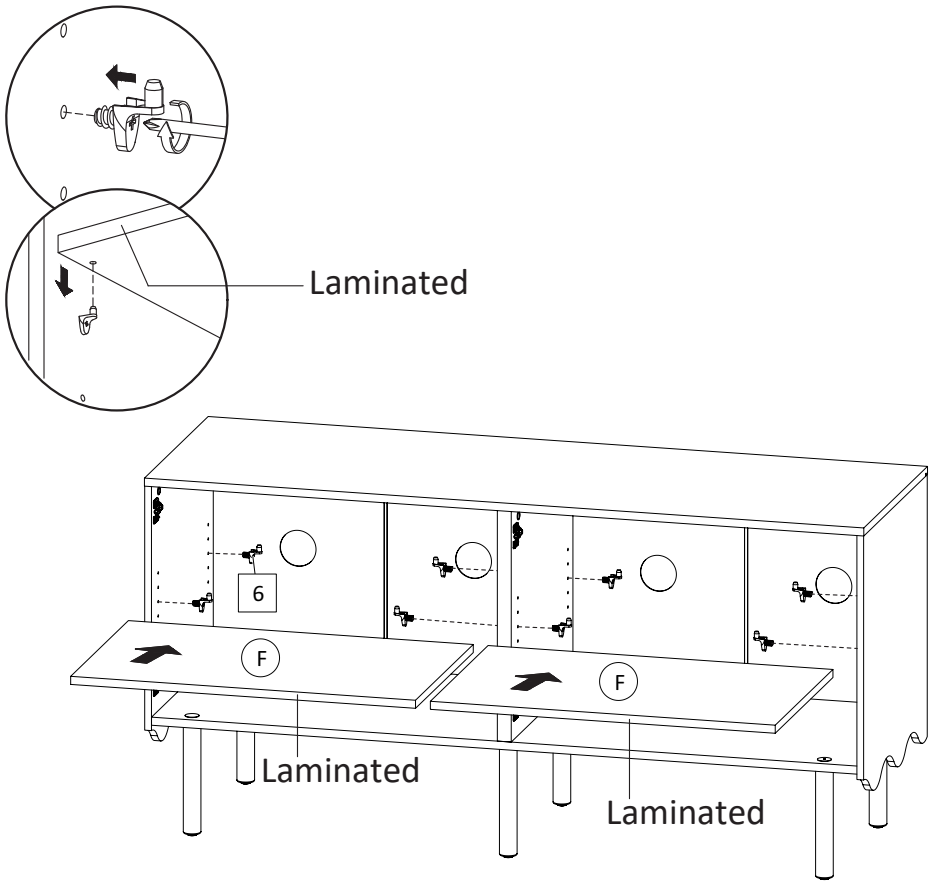



HW6	x 8
	

STEP 10: Install the Shelf Supports (HW6) into the holes in the Side Board Left, Side Board Right, and Center Board at the desired height. Tighten using a screwdriver. Then place the Adjustable Shelf (F) by aligning the holes with the Shelf Support (HW6) and inserting them securely.


PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

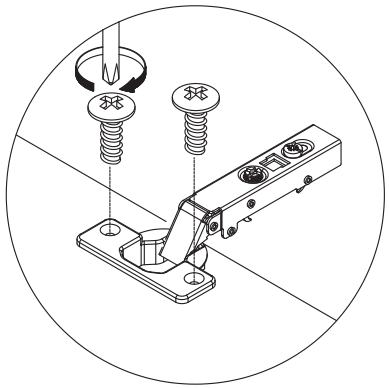


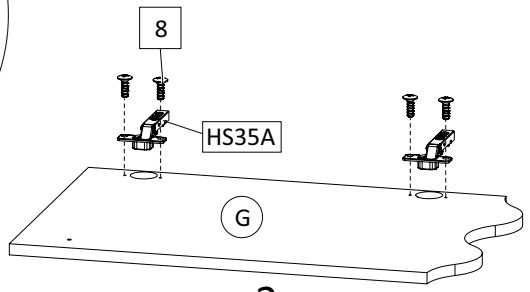

x 2

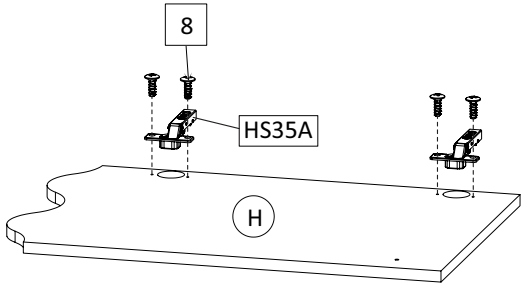


x 2

HW8	x 16
 M 4.5 x 12.5 mm	


HW HS35A	x 8
	


STEP 11: Install the Hinge part (HS35A) onto Door 1 (G) and Door 2 (H), secure with Screw M4.5 x 12.5 mm (HW8), then tighten using screwdriver.


1

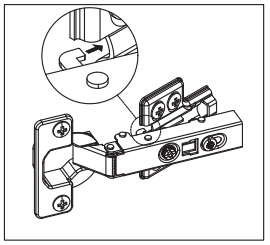

2

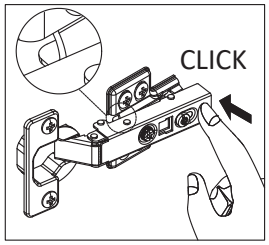

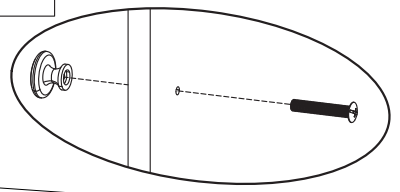

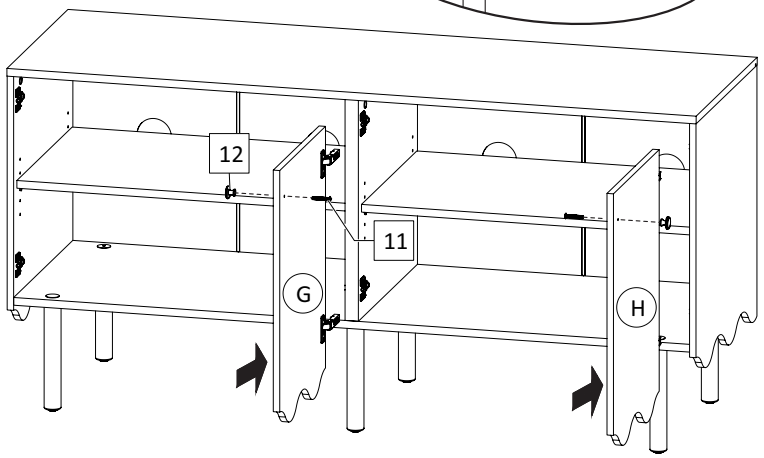


HW11	x 2
 M 4 x 20 mm	

HW12	x 2
	

STEP 12: Install Door 1 (G) onto the Center Board and Door 2 (H) onto the Side Board Right, following the details shown in the illustration above. Refer to the last page for instructions on adjusting the hinges.
Then install the Handles (HW12) onto the doors and secure with Screw M4 x 20 mm (HW11).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

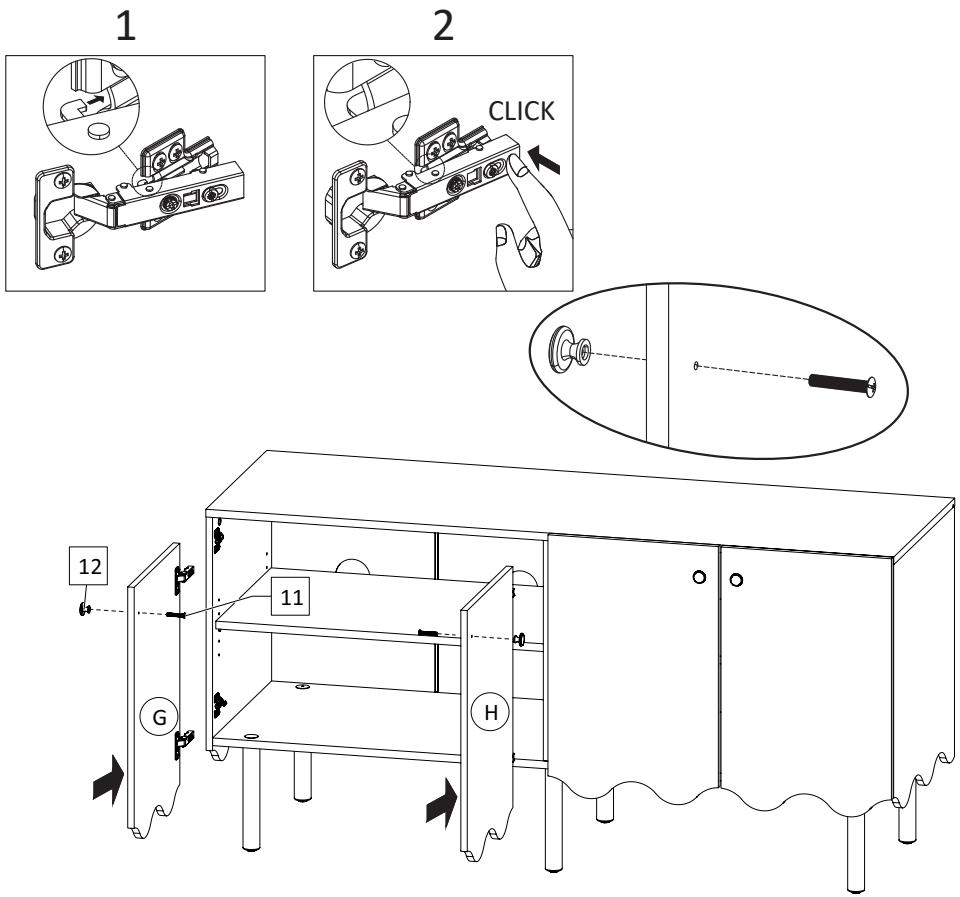

HW11	x 2
 M 4 x 20 mm	

HW12	x 2
	

STEP 13: Install Door 1 (G) onto the Side Board Left and Door 2 (H) onto the Center Board, following the details shown in the illustration above. Refer to the last page for instructions on adjusting the hinges. Then install the Handles (HW12) onto the doors and secure with Screw M4 x 20 mm (HW11).

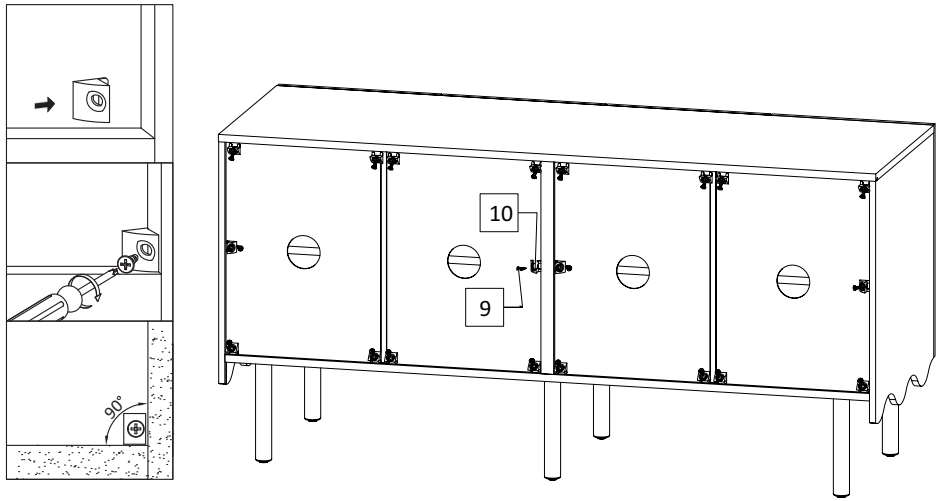


HW9	x 20
 M 3.5 x 15.5 mm	

HW10	x 20
	

STEP 14: Attach the Wedge (HW10) into back of item, secure using Screw M3.5 x 15.5 mm (HW9). Before tightening the Wedge (HW10), make sure the Top Board and Bottom Board are aligned at a 90° angle to the side boards.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

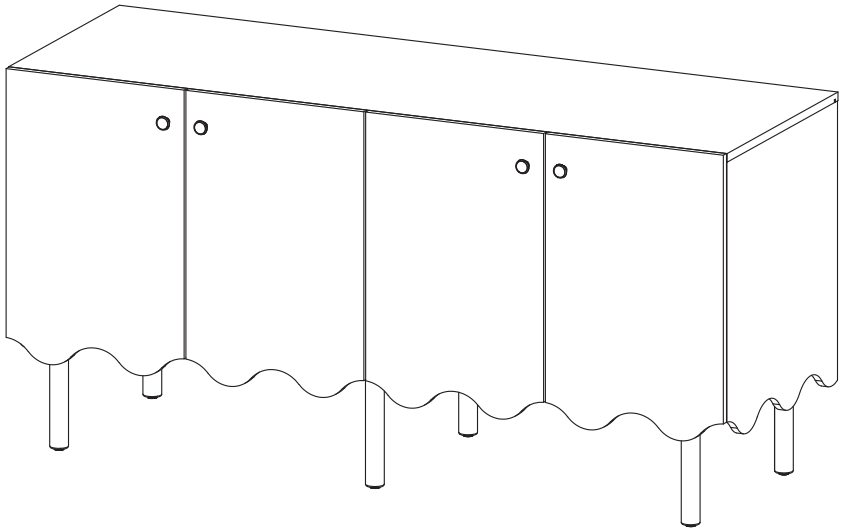



STEP15: Assembly is Complete.


TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.
The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.
Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

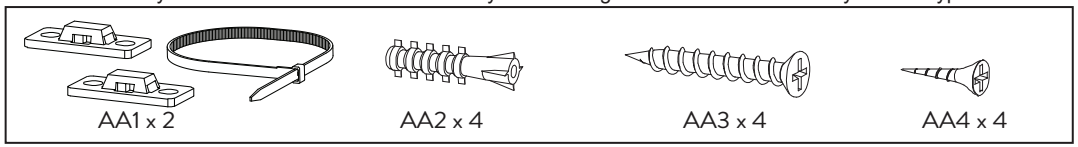


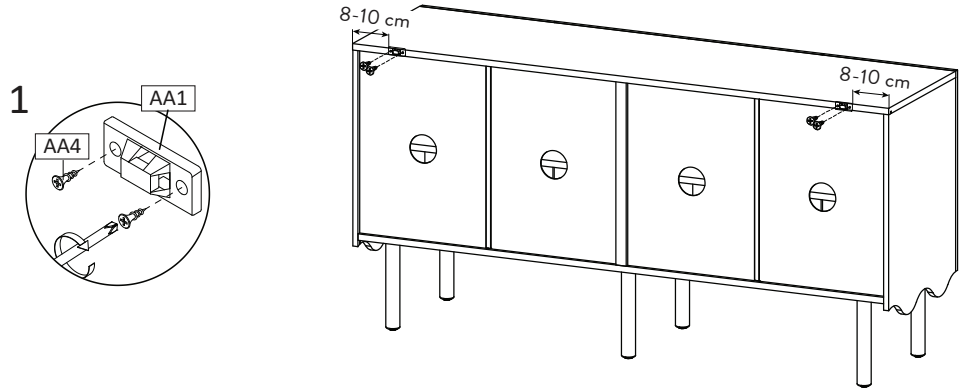


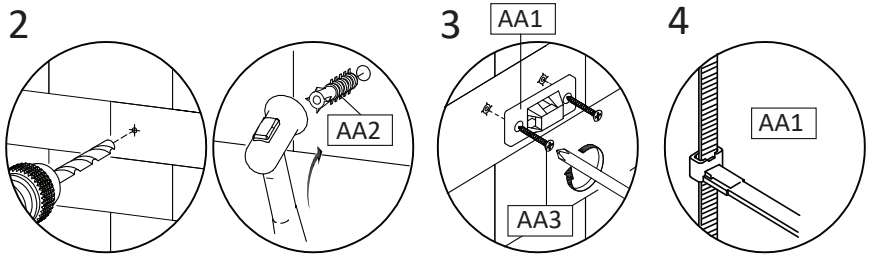

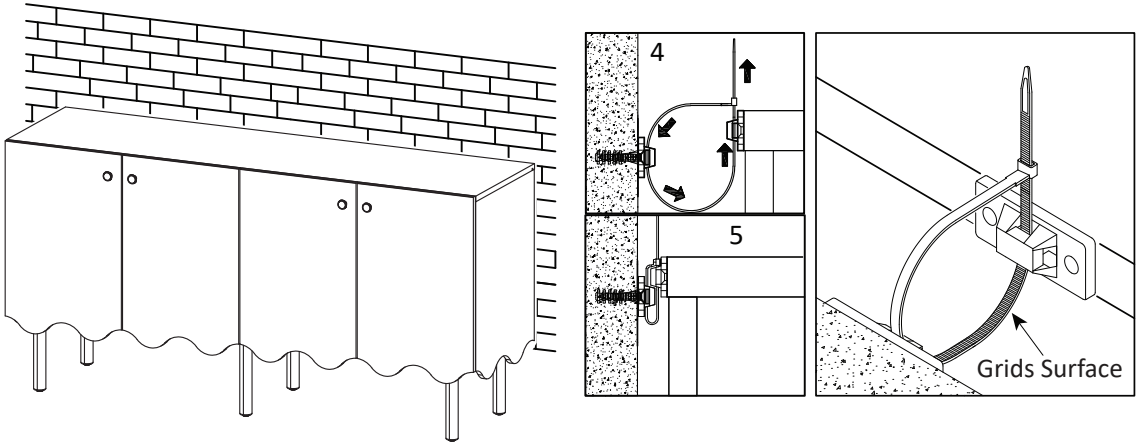


HOW TO ADJUST HINGES

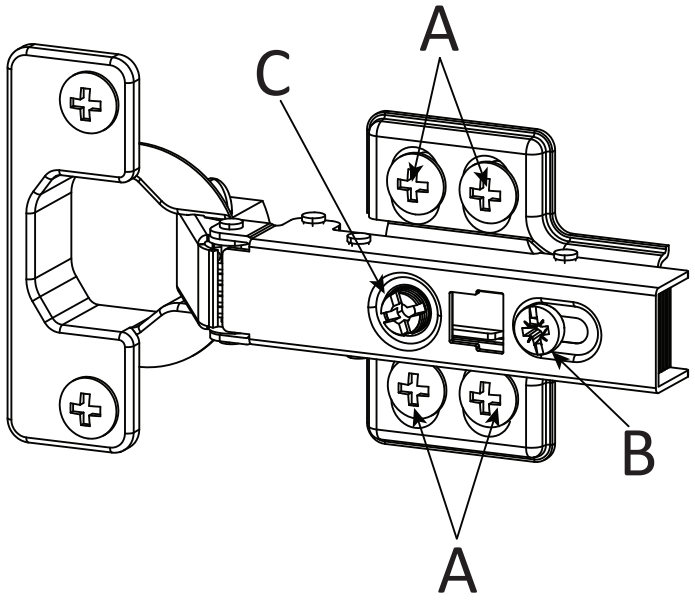

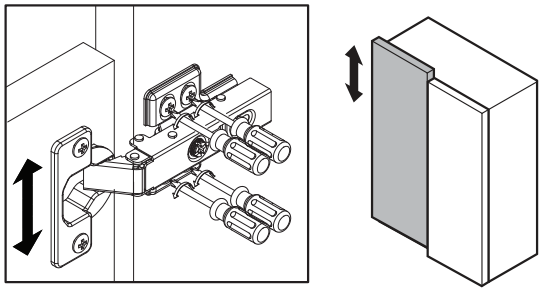


To adjust the vertical height.

Loosen the four screws “A” on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

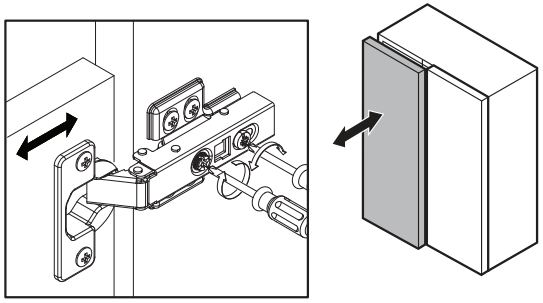

To adjust depth.

Loosen screw “B” and adjust door, if the door can not be adjusted, please loosen screw “C”, then try again. Tighten screw “B” and “C”.

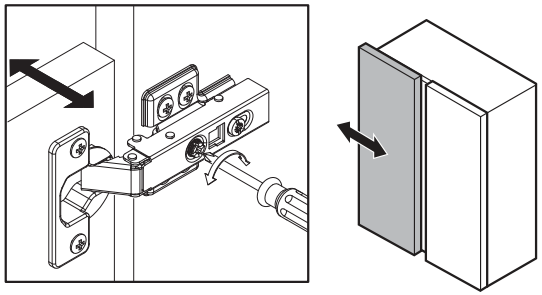

To adjust side ways.

Turning the screw “C” on BOTH hinges on each door.