NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Model# MED9648

Product Dimensions: 63.11x”Wx14.17”Dx17.56”H

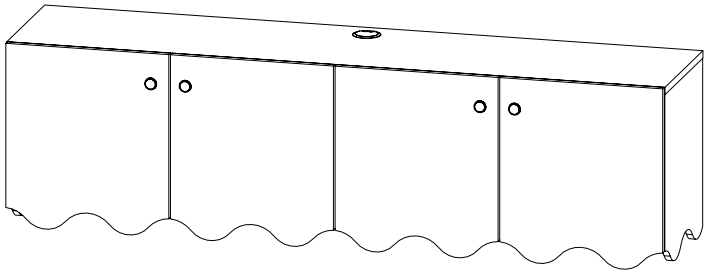

Part List

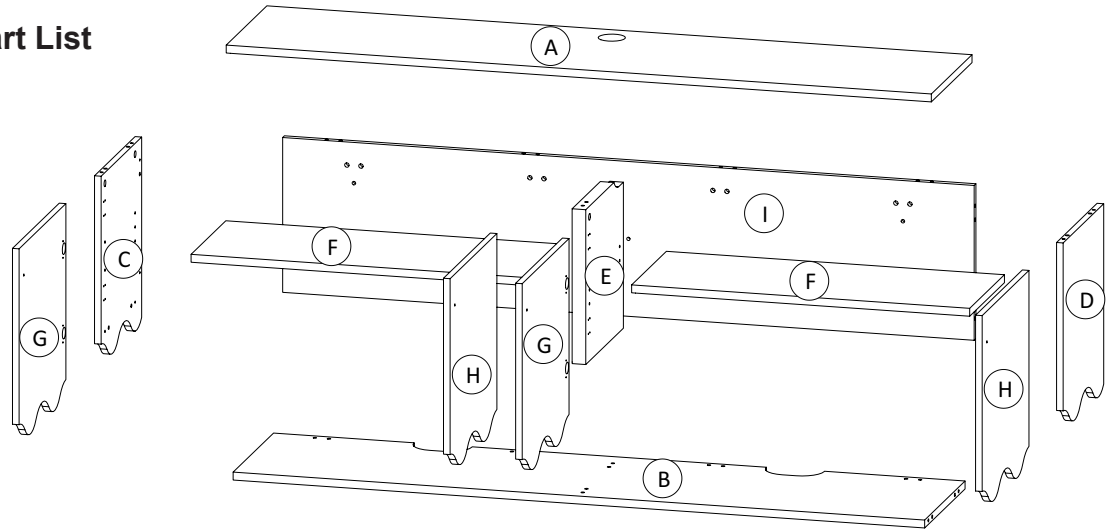













⚠ WARNING

This product is intended for use with a FLAT SCREEN TV ONLY
Maximum Screen Size: 65 inches
Weight Limit: 84 lbs
Shelf Load Limit: 33 lbs
Total Weight Limit: 216 lbs
Use with heavier televisions may result in instability causing tip over resulting in death or Serious injury.

⚠ WARNING

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on the child.

Hardware List

HW1 x17  Ø 6 x 35 mm	HW2 x17  Ø 15 mm	HW3 x23  Ø 8 x 30 mm	HW4 x7  M 7 x 50 mm	HW5 x8 
HW6 x2 	HW7 x1  Ø 15 mm	HW8 x48  M 4.5 x 12.5 mm	HW9 x9 	HW10 x9  5.5 x 45 mm
HW11 x4  M 4 x 20 mm	HW12 x4 	HW13 x4  Ø 15 mm	HW14 x8  M 6 x 15 mm	HW15 x8 
HW16 x1 	HW HGL4 x1 SET 	HW PA14 x1  1400 mm	HW PA05 x4  50 mm	HW HS26A x8 

Part List & HW For Multi-Box Items


Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Center Board	1
F	Adjustable Shelf	2
G	Door 1	2
H	Door 2	2
I	Back Board	1

Piece	Description	Qty
HW1	Cambolt	17
HW2	CamLock	17
HW3	Dowel	23
HW4	Screw M 7 x 50 mm	7
HW5	Shelf Support	8
HW6	Wall Mounted Bolt	2
HW7	Screw Cap	1
HW8	Screw M 4.5 x 12.5 mm	48
HW9	Wall Plug	9
HW10	Screw 5.5 x 45 mm	9
HW11	Screw M 4 x 20 mm	4
HW12	Handle	4
HW13	Screw Cap	4
HW14	Screw M 6 x 15 mm	8
HW15	JCN Nut	8
HW16	Grommet Cover	1
HW HGL4	Hand Grip + Allen Key	1 SET
HW PA14	Long Bracket	1
HW PA05	Short Bracket	4
HW HS26A	Hinge	8


PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**


HAND GRIP POSITION ADJUSTMENT

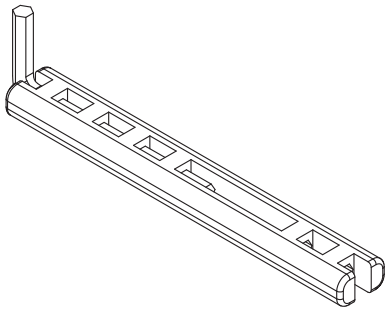

POSITION 1

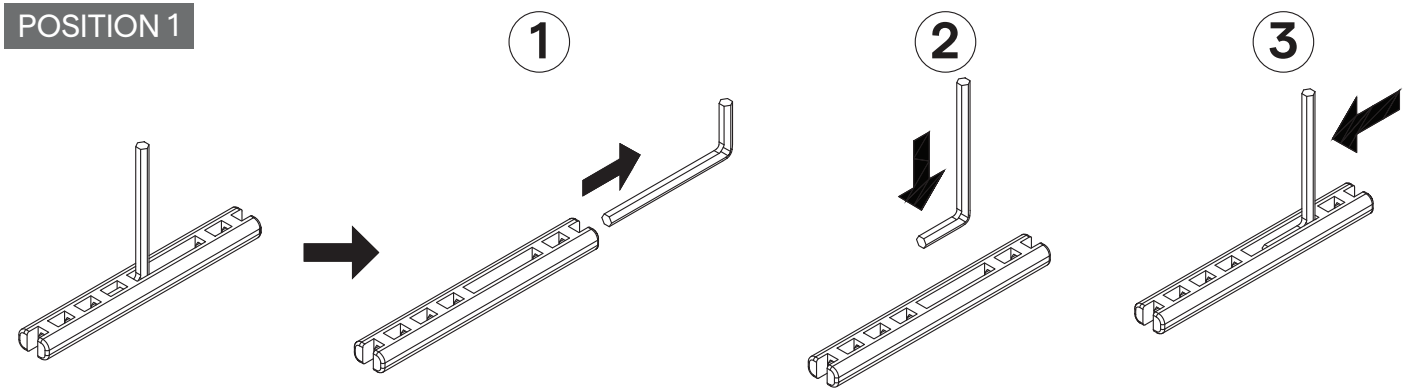


POSITION 2

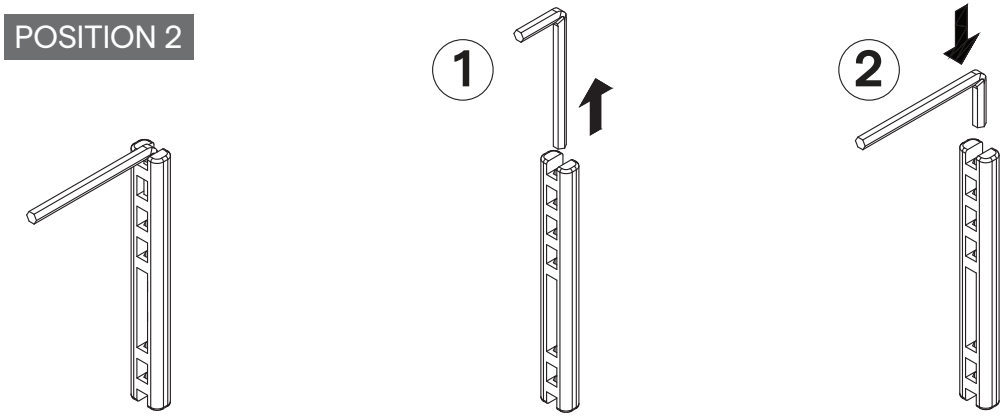


PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

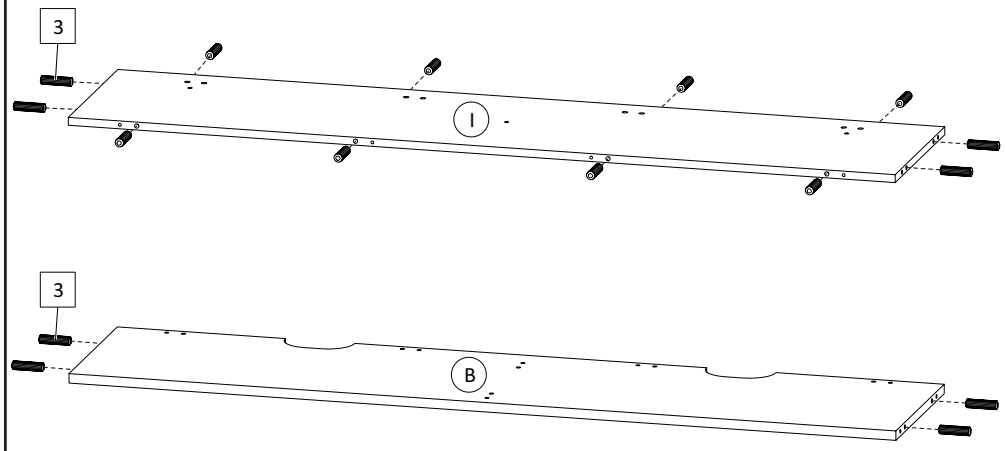

HW3	x 16
Ø 8 x 30 mm	

STEP 1: Insert Dowel (HW3) into Bottom Board (B) and Back Board (I).

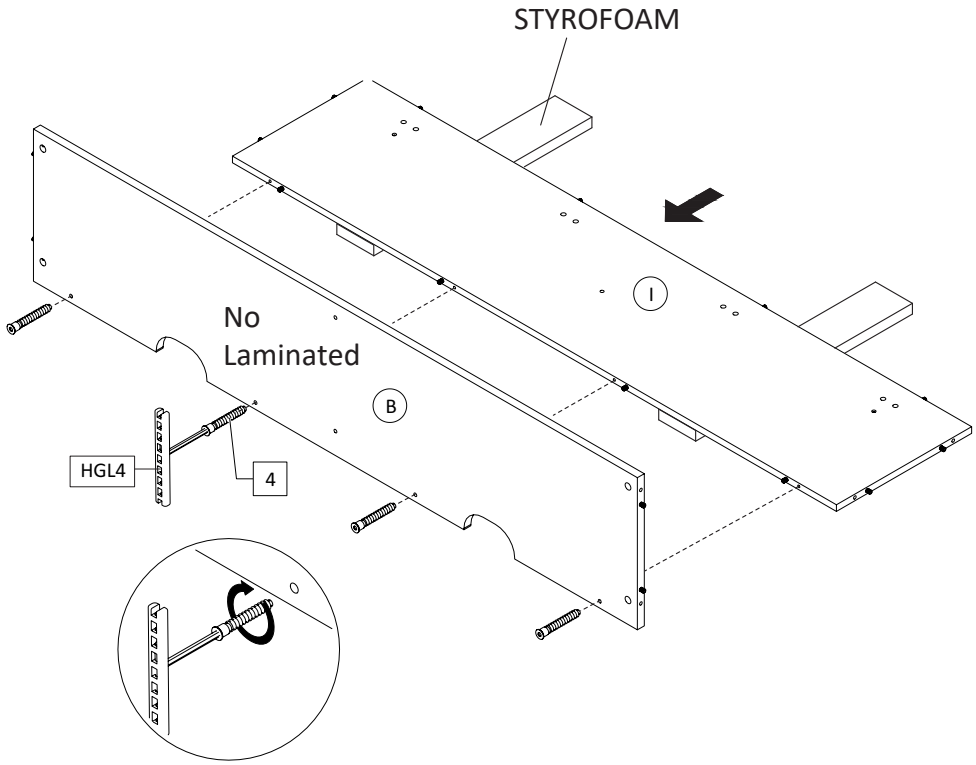


HW4	x 4
M 7 x 50 mm	


HW HGL4	x 1


STEP 2: First take the styrofoam from the packaging and place it under the Back Board (I). Combine Bottom Board (B) with Back Board (I), secure with Screw M7 x 50 mm (HW4), then tighten using Hand Grip + Allen Key (HW HGL4).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

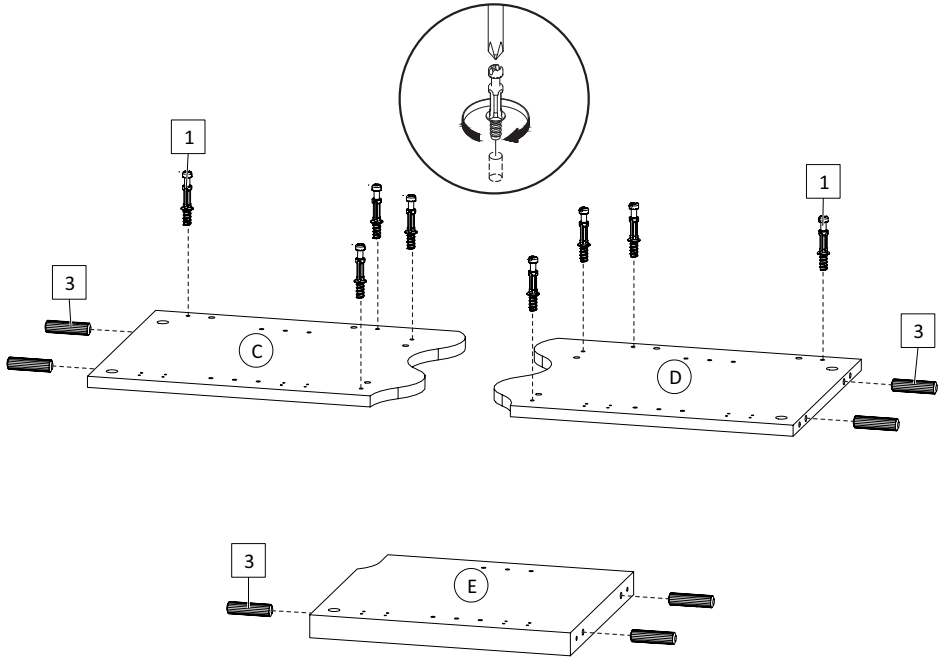

HW1	x 8
 Ø 6 x 35 mm	

HW3	x 7
 Ø 8 x 30 mm	

STEP 3: Insert Cambolt (HW1) into Side Board Left (C) and Side Board Right (D), tighten using screwdriver. Then insert Dowel (HW3) into Side Board Left (C) and Side Board Right (D) and Center Board (E).

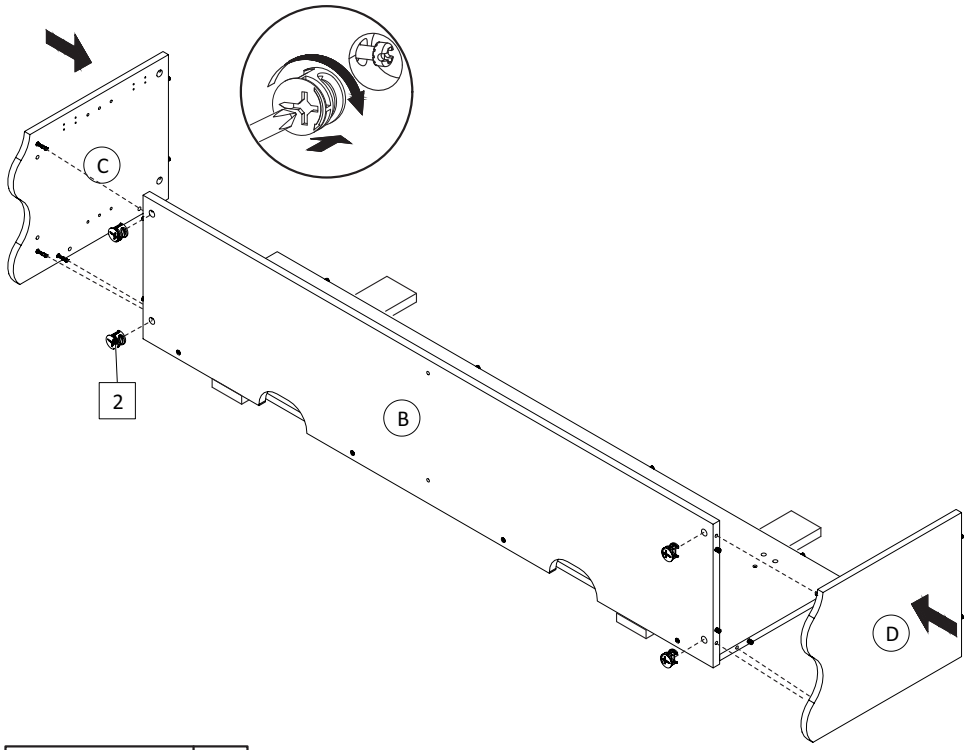


HW2	x 4
 Ø 15 mm	

STEP 4: Attach the Side Board Left (C) and Side Board Right (D) to pre-assembly component from previous step, secure with Camlock (HW2), then tighten using screwdriver.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

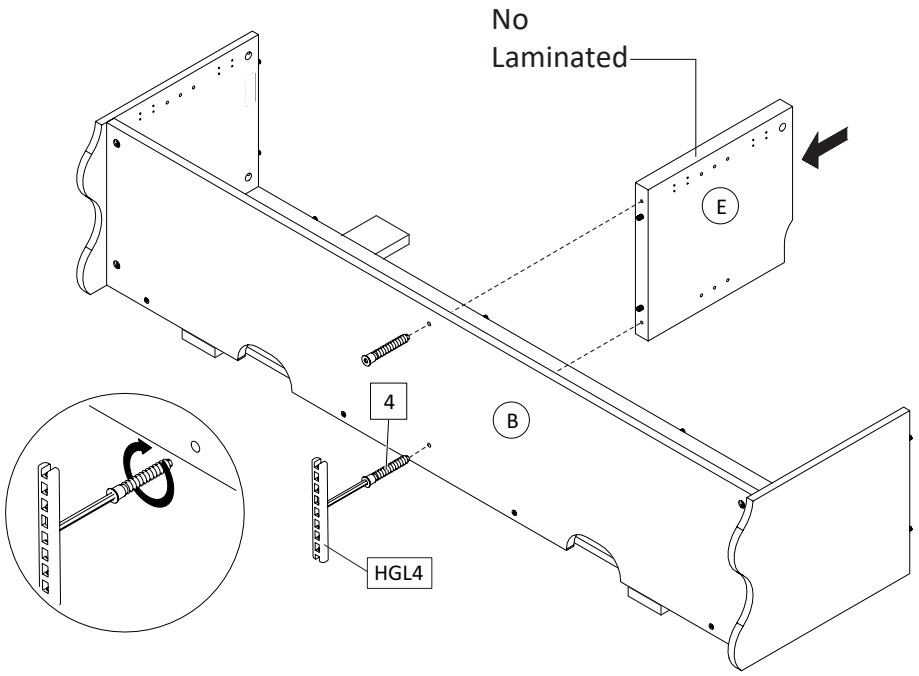

HW4	x 2
 M 7 x 50 mm	

HW HGL4	x 1
	

STEP 5: Attach The Center Board (E) to Bottom Board, secure with Screw M7 x 50 mm (HW4), then tighten using Hand Grip + Allen Key (HW HGL4). Ensure the orientation of the Center Board matches the illustration above.

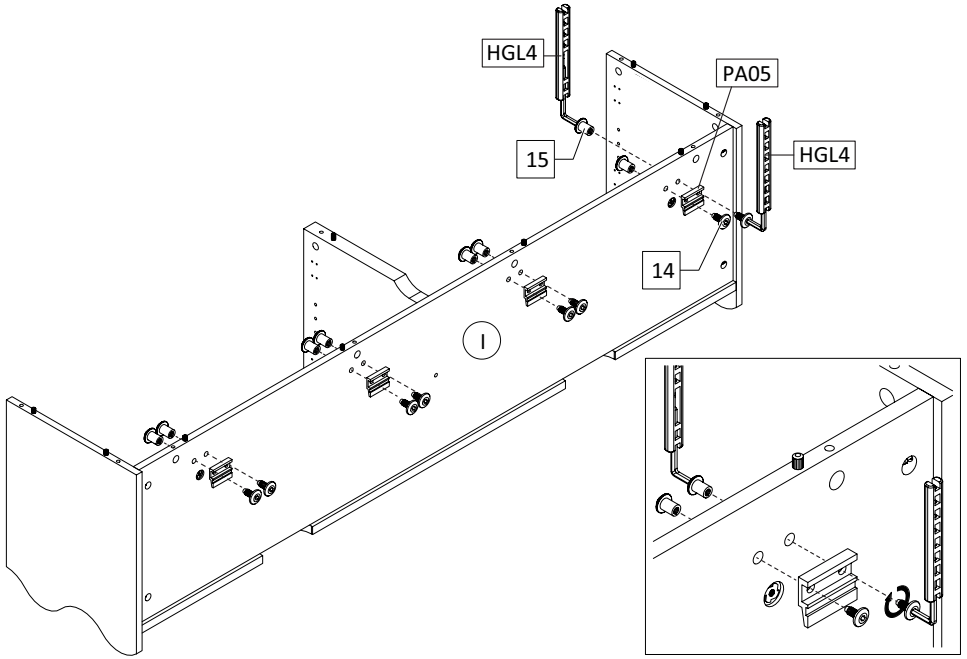

HW HGL4	x 2
	

HW14	x 8
 M 6 x 15 mm	


HW15	x 8
	


HW PA05	x 4
 50 mm	

STEP 6: Install the Short Bracket (HW PA05) onto Back Board, secure with Screw M6 x 15 mm (HW14) and JCN Nut (HW15), then tighten using Hand Grip + Allen Key (HW HGL4). Ensure the Short Bracket orientation matches the detail above.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

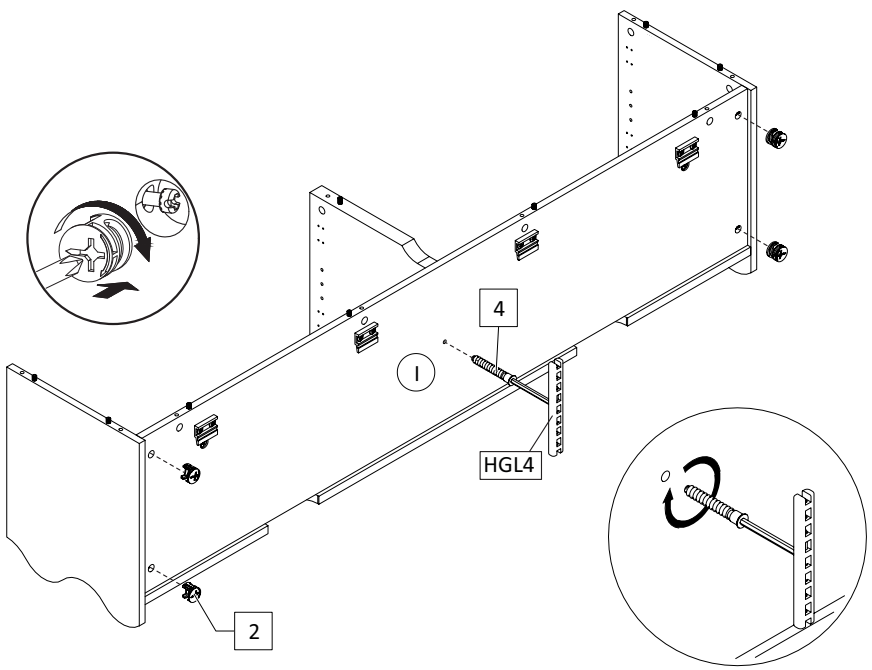



HW2	x 4
 Ø 15 mm	

HW4	x 1
 M 7 x 50 mm	

HW HGL4	x 1
	

STEP 7: Insert the Camlock (HW2) and Screw M7 × 50 mm (HW4) into the Back Board. Tighten the Cam Lock using a screwdriver, then tighten the screw using Hand Grip + Allen Key (HW HGL4).

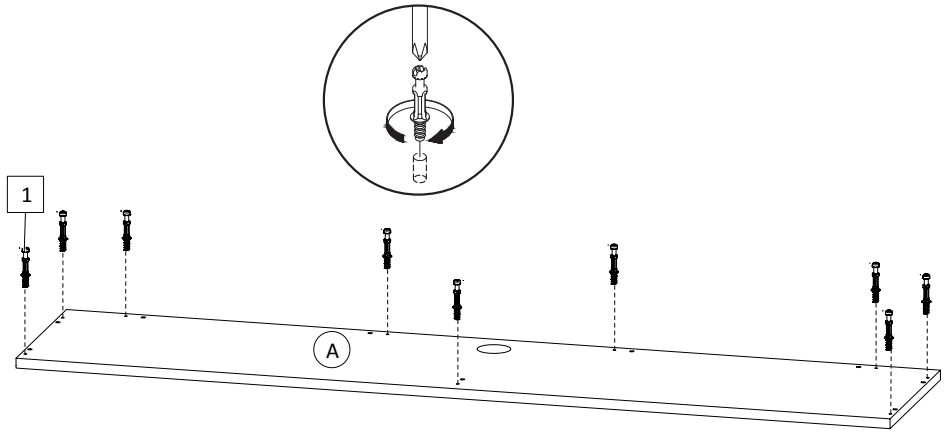


HW1	x 9
 Ø 6 x 35 mm	

STEP 8: Insert the Cambolt (HW1) into Top Board (A) component, then tighten using screwdriver.


PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

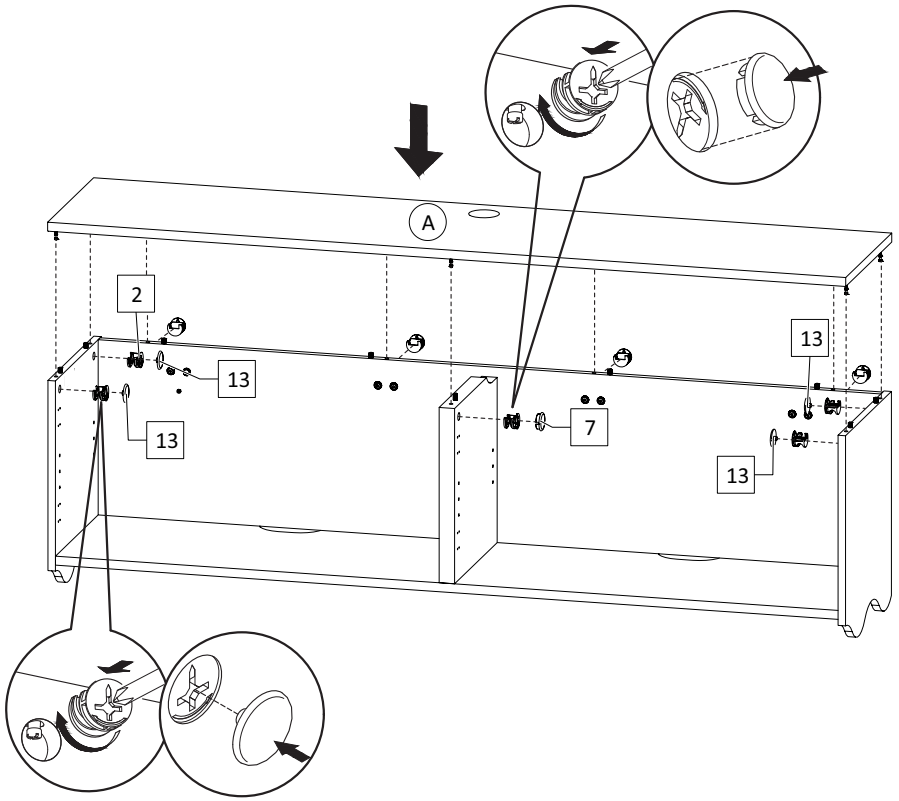

HW2	x 9	HW7	x 1	HW13	x 4
 Ø 15 mm		 Ø 15 mm		 Ø 15 mm	

Determine your desired (Y) height,
then subtract by 110.5 mm. This is the drill holes height from the floor (Z).

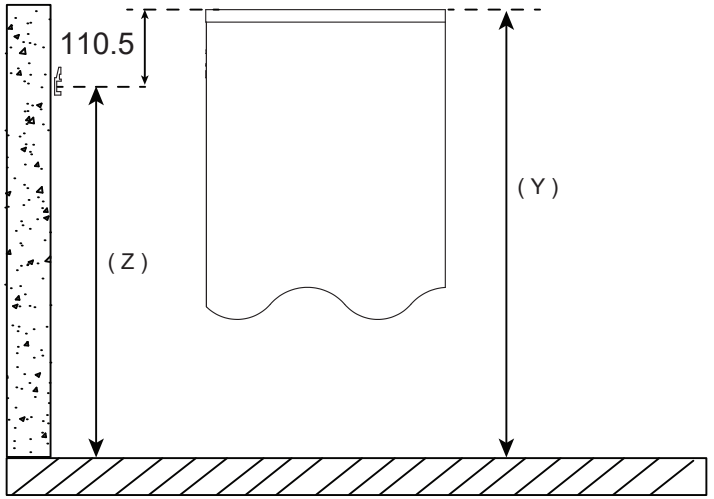

Wall mounting devices

To prevent injury or property damage from the unexpected tipping of furniture, we highly recommend to seek professional advice if unsure of wall constructions.

Properly affixing furniture to your wall will depend on the wall material: concrete, drywall, masonry, or wood will require the appropriate hardware.

Wall Plug (HW9) and screw 5.5x45mm (HW10) provided is suitable for concrete wall only.


please source the right wall anchor and wall screw according to the wall type. Please consult with your local hardware store to ensure you are using the correct hardware for your wall type.


STEP 9: Attach the Top Board (A) to pre-assembly component from previous step, secure with Camlock (HW2) and tighten using screwdriver.
Then insert Screw Cap (HW13) into camlock on the side board and Screw Cap (HW7) into the center board.

STEP 10: Determine your desired height of the top surface from the floor (Y). Subtract 110.5 mm from (Y) to obtain the drilling hole height from the floor (Z).

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

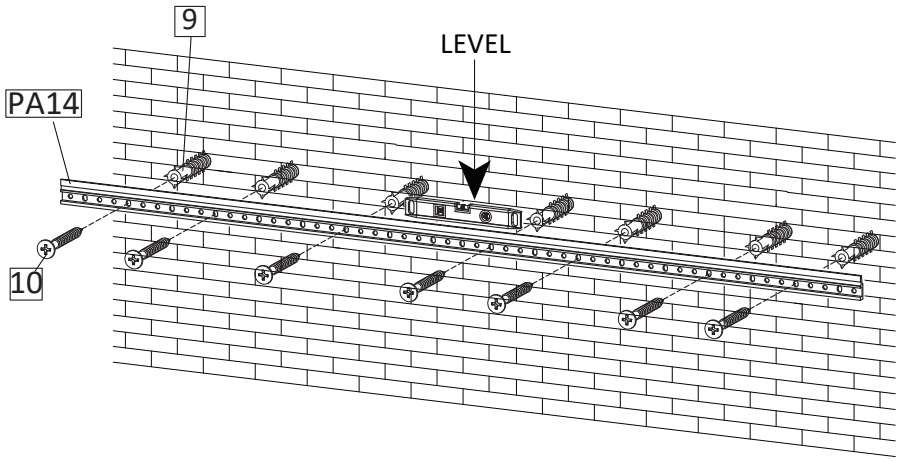

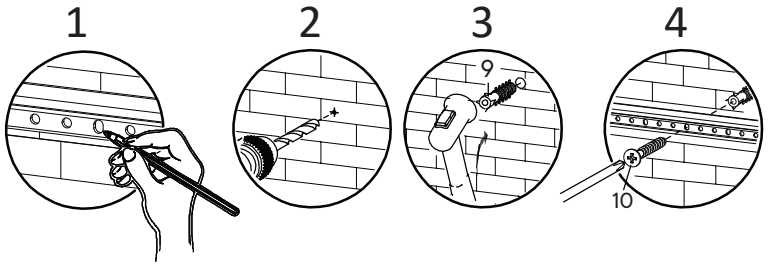


HW9	x 7

HW10	x 7
M 5.5 x 45 mm	

HW PA14	x 1
1400 mm	


STEP 11: First, position the Long Bracket (HW PA14) on the wall and ensure it is level. Mark the hole locations on the wall, then drill wall using a power drill. Insert the Wall Plugs (HW9) into the pre-drilled holes. Using a hammer, gently tap each screw to ensure it is properly seated. Then install the Long Bracket (HW PA14) onto the wall and secure with Screw 5.5 x 45 mm (HW10) into the installed Wall Plugs (HW9). Finally, use a screwdriver to tighten the screws clockwise to lock them in place before hanging the product on the wall. Ensure the orientation of the long bracket matches the illustration above.

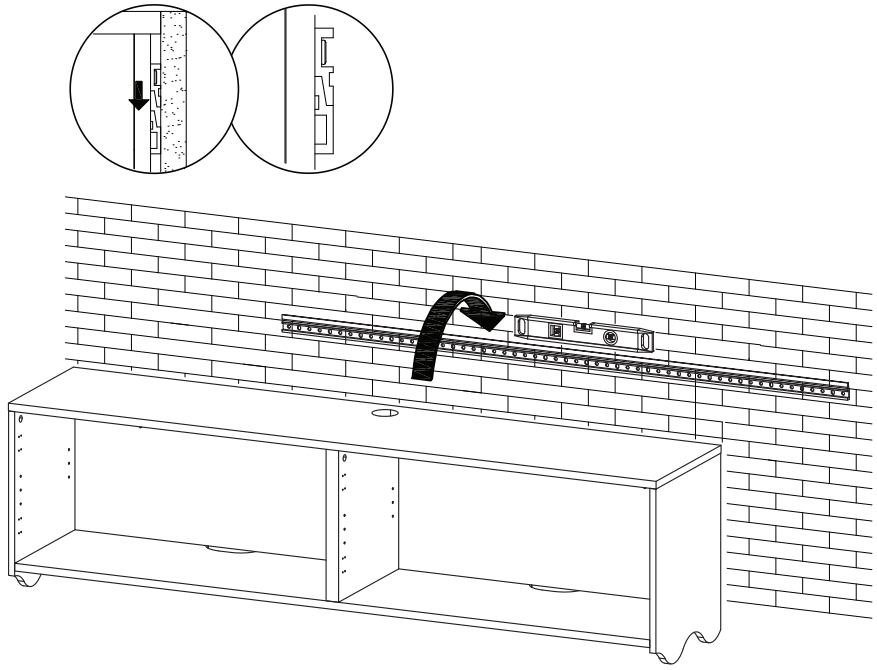

STEP 12: Attach the TV Stand to wall bracket. Use a level to ensure the TV stand is horizontal.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

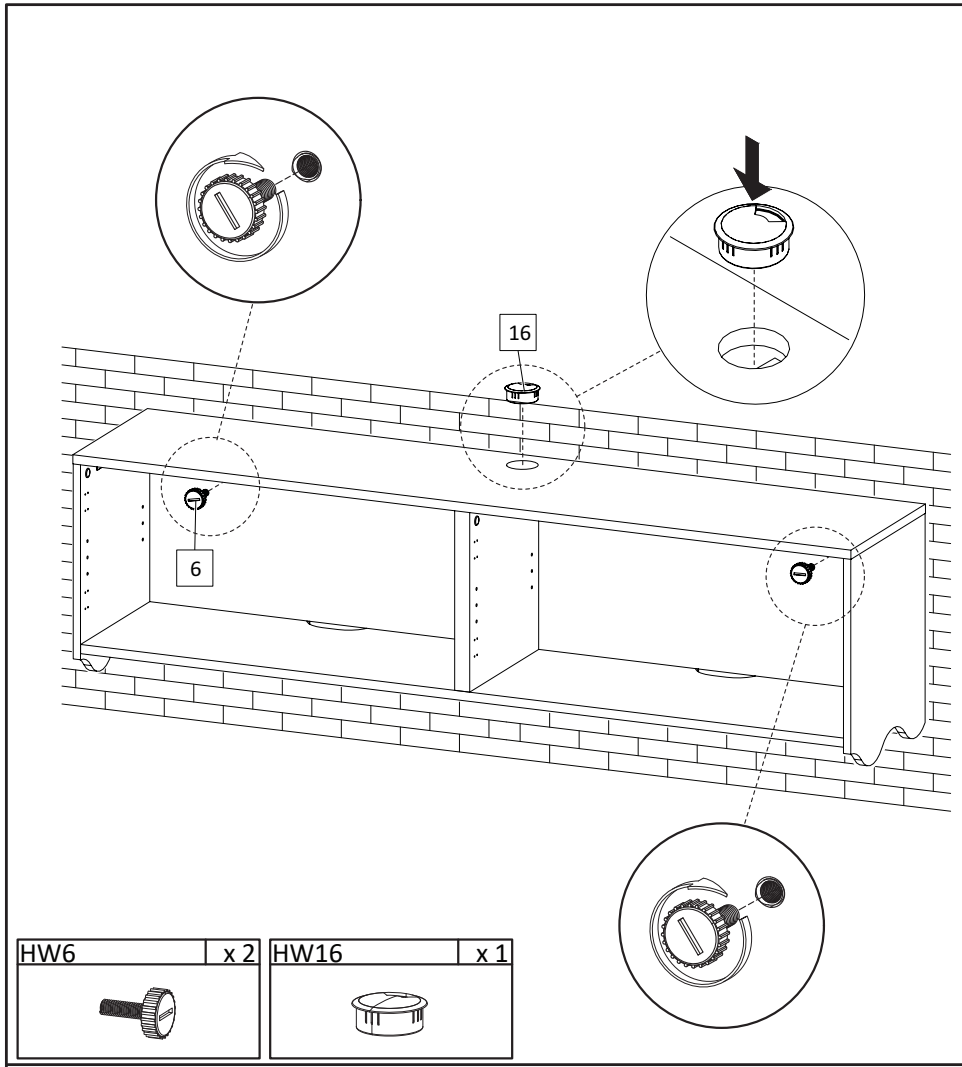

HW6	x 2

HW16	x 1

STEP 13: Insert Wall Mounted Bolt (HW6) into the holes in the Back Board and turn clockwise to lock the TV stand to the wall. Then attach the Grommet Cover (HW16) to the Top Board.

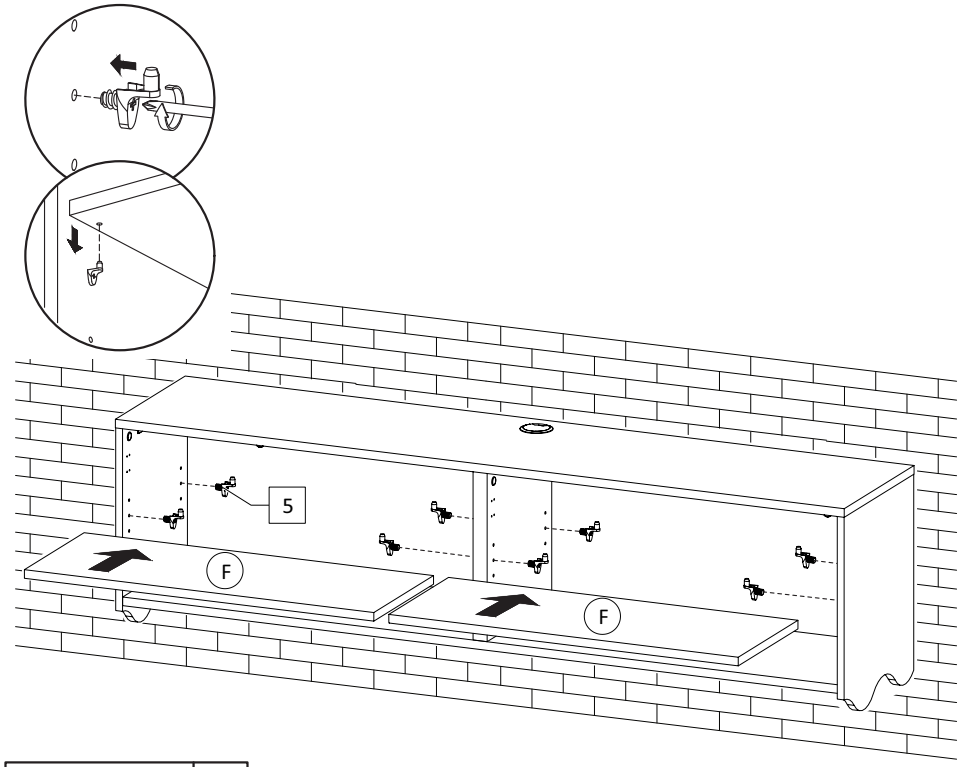


HW5	x 8


STEP 14: Install the Shelf Supports (HW5) into the holes in the Side Board Left, Side Board Right, and Center Board at the desired height. Tighten using a screwdriver. Then place the Adjustable Shelves (F) by aligning the holes with the Shelf Supports (HW5) and inserting them securely.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

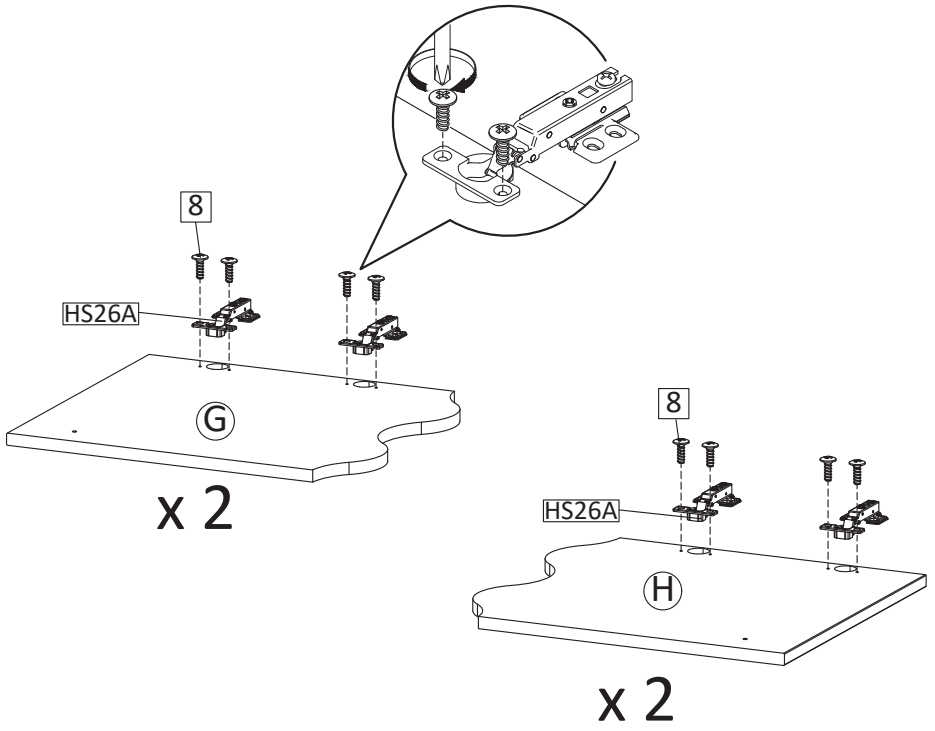

HW8	x 16
 M 4.5 x 12.5 mm	

HW HS26A	x 8
	

STEP 15: Install the Hinge (HW HS26A) to Door 1 (G) and Door 2 (H), secure with Screw M4.5 x 12.5 mm (HW8), then tighten using screwdriver.

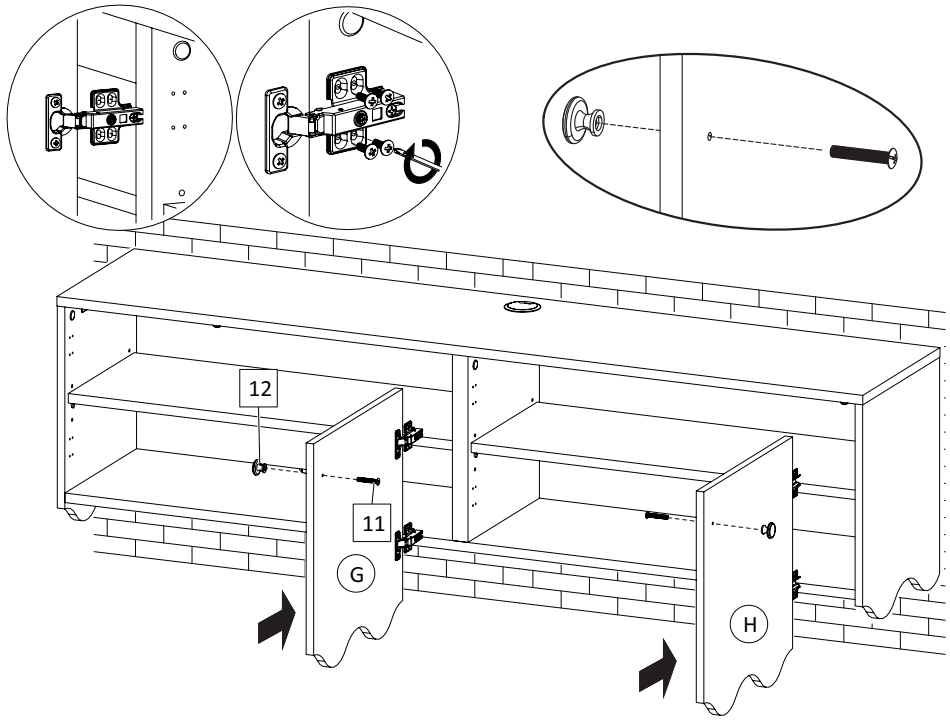

HW8	x 16
 M 4.5 x 12.5 mm	


HW11	x 2
 M 4 x 20 mm	

HW12	x 2
	

STEP 16: Install Door 1 (G) and Door 2 (H) onto the Side Board Right and Center Board. Secure with Screw M4.5 x 12.5 mm (HW8) and tighten using a screwdriver. Refer to the last page for instructions on adjusting the hinges. Then install the Handle (HW12) onto the doors and secure with Screw M4 x 20 mm (HW11).

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 120 minutes.
*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

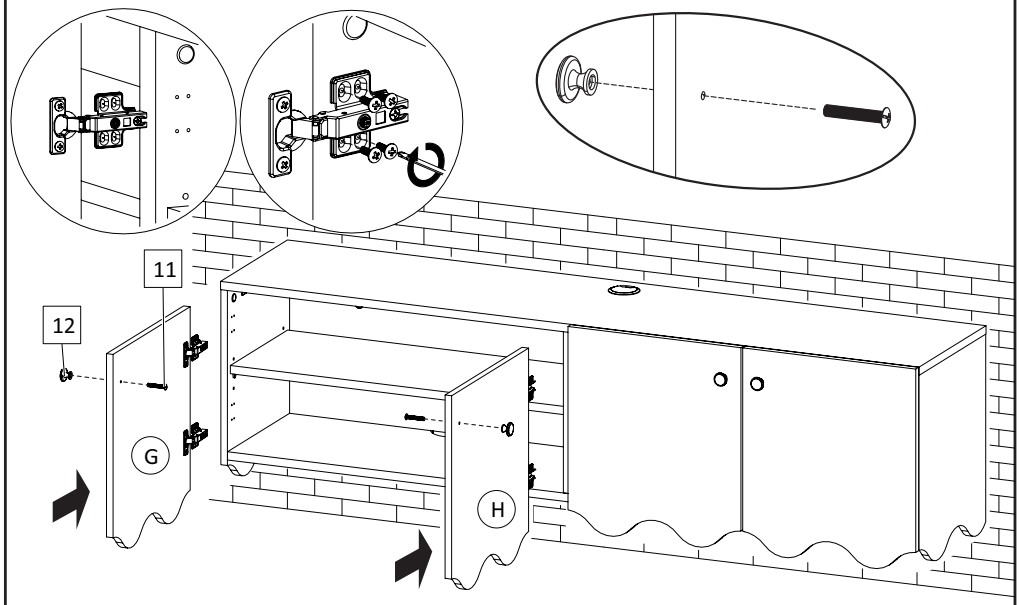


HW8	x 16
 M 4.5 x 12.5 mm	

HW11	x 2
 M 4 x 20 mm	


HW12	x 2
	


STEP 17: Install Door 1 (G) and Door 2 (H) onto the Side Board Left and Center Board. Secure with Screw M4.5 x 12.5 mm (HW8) and tighten using a screwdriver. Refer to the last page for instructions on adjusting the hinges. Then install the Handle (HW12) onto the doors and secure with Screw M4 x 20 mm (HW11).

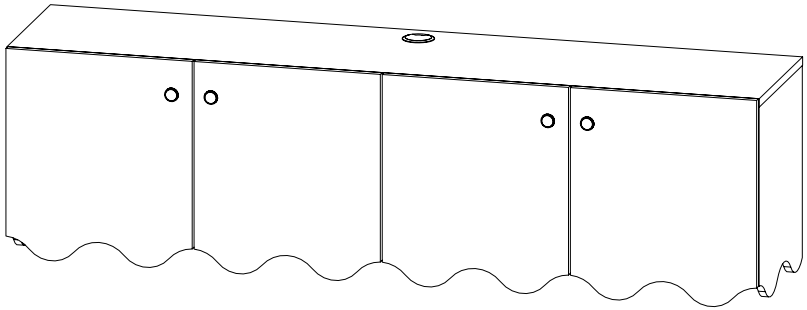

STEP18: Assembly is Complete.


HOW TO ADJUST HINGES

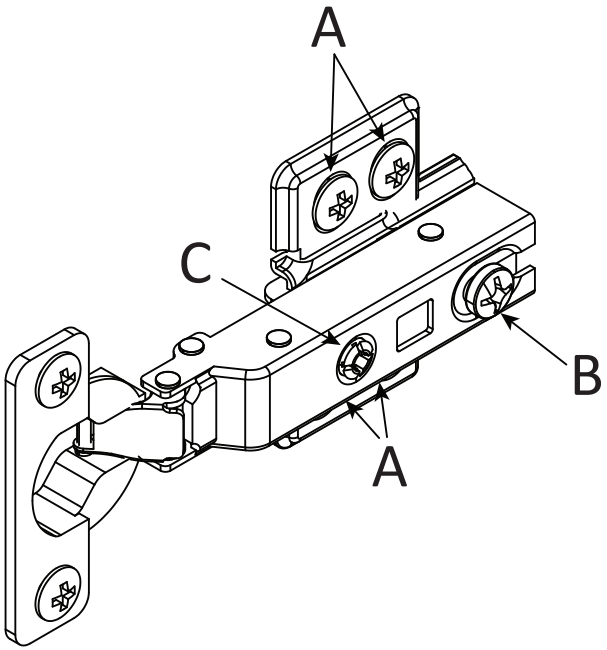

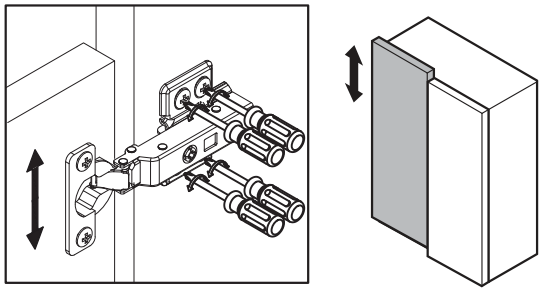


To adjust the vertical height.

Loosen the four screws “A” on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

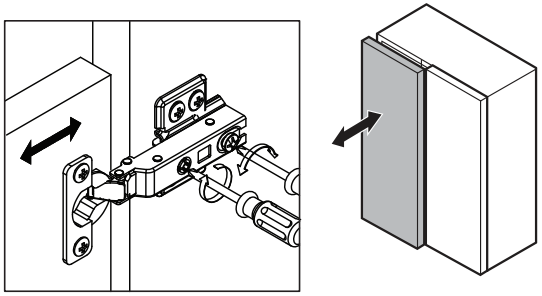

To adjust depth.

Loosen screw “B” and adjust door, if the door can not be adjusted, please loosen screw “C”, then try again. Tighten screw “B” and “C”.

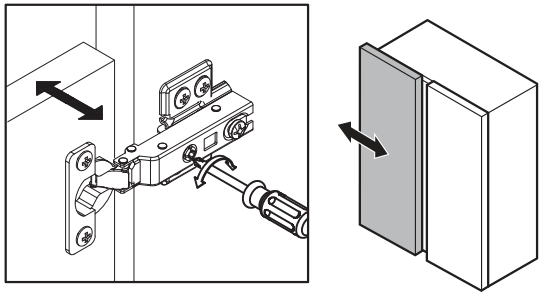

To adjust side ways.

Turning the screw “C” on BOTH hinges on each door.