NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**


PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (Not included): Screwdriver

CARE AND MAINTENANCE


Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

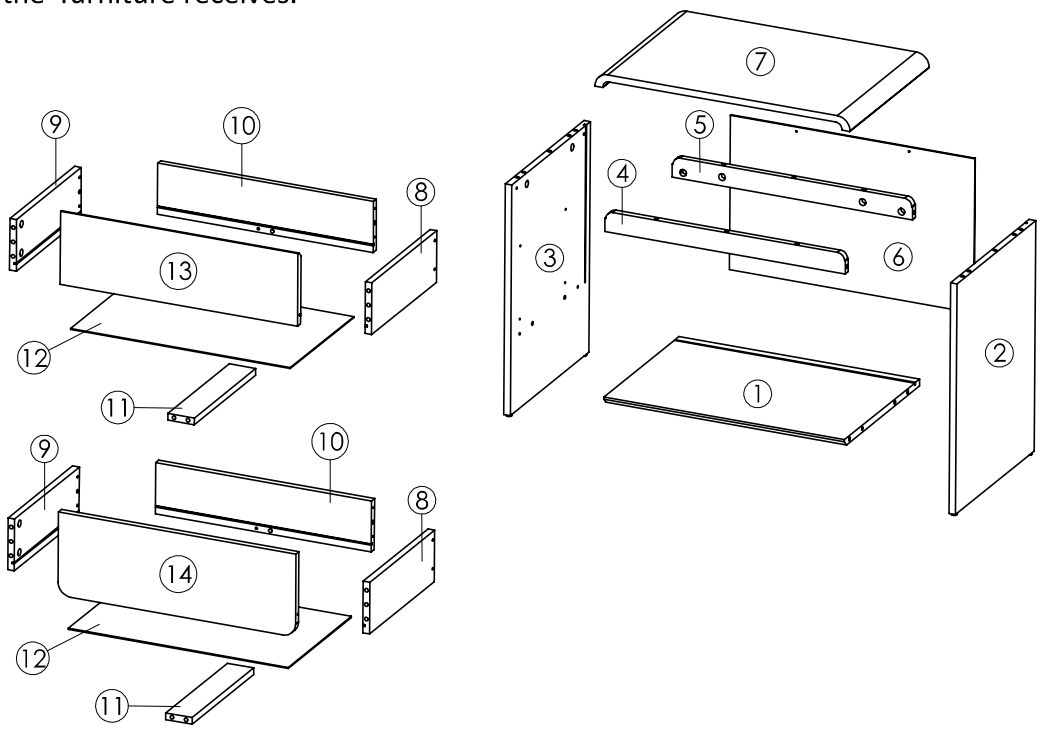

SAFAVIEH FURNITURE

Model# NST3101
Product Dimensions: W 22.83" x D 15.47" x H 21.61"




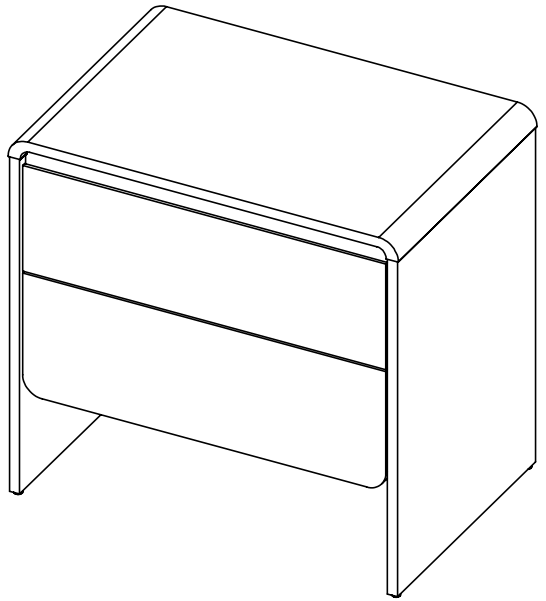



WARNING

TOTAL WEIGHT CAPACITY: 32 LBS

Top Load Capacity: 22 lbs
Drawer Load Capacity : 10 lbs
Warning: Do not stand on night stand
Warning: Do not over torque bolt

Hardware List

HW1x26  Ø6x32 mm	HW2x26  Ø15x12 mm	HW3x24  Ø8x32 mm	HW4x10  Ø7x32 mm	HW5x10  Ø6x12 mm	HW6x6  Ø4x19 mm
HW7x6  10x14 mm	HW8x16 S (OAK) S1(WALNUT) S2(BALCK)  Ø20 mm	HW9x8  Ø5x8.5 mm	HW10x2  300 mm		

Anti-tip Restrain Pack	
HW11x4  Ø6x15 mm	HW12x2SET  300 mm
HW13x4  Ø8x35 PLUG	HW14x4  Ø10x50 mm


Part List & HW

Piece	Description	Qty	Carton Call
1	Bottom Panel	1	1 of 1
2	Right Side Panel	1	1 of 1
3	Left Side Panel	1	1 of 1
4	Front Top Frame	1	1 of 1
5	Back Top Frame	1	1 of 1
6	Back Panel	1	1 of 1
7	Top Panel	1	1 of 1
8	Right Side Drawer	2	1 of 1
9	Left Side Drawer	2	1 of 1
10	Drawer Back	2	1 of 1
11	Drawer Base Support	2	1 of 1
12	Drawer Base	2	1 of 1
13	Upper Front Drawer	1	1 of 1
14	Lower Front Drawer	1	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt Ø6x32mm	26	1 of 1
HW2	Camlock Ø15x12mm	26	1 of 1
HW3	Wooden Dowel Ø8x32mm	24	1 of 1
HW4	Screw M 7 x 32 mm	10	1 of 1
HW5	Screw M 6 x 12 mm	10	1 of 1
HW6	Screw M 4 x 19 mm	6	1 of 1
HW7	Plastic Stopper 10x14mm	6	1 of 1
HW8	Cover Cap Sticker Ø20mm	16	1 of 1
HW9	Screw M 5 x 8,5 mm	8	1 of 1
HW10	Metal runner 300mm	2	1 of 1
HW11	Screw M 6 x 15 mm	4	1 of 1
HW12	Anti-tip 300mm	2	1 of 1
HW13	Ø8x35 PLUG	4	1 of 1
HW14	Screw M 10 x 50 mm	4	1 of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

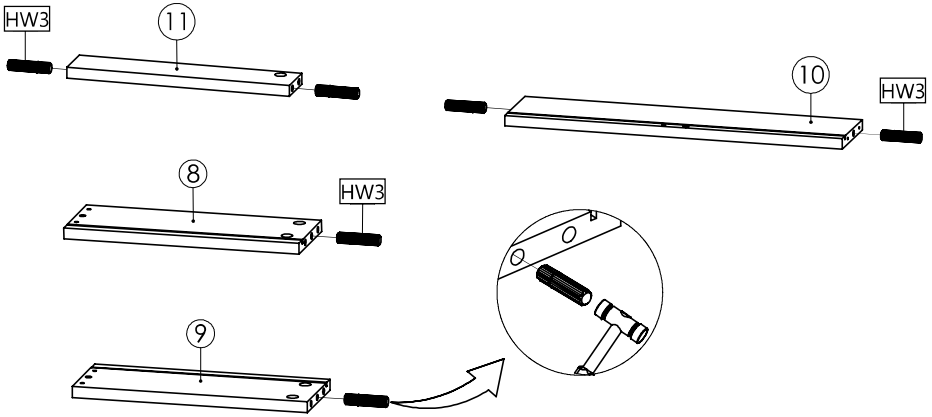


STEP1: Insert Wooden Dowel (HW3) into Side Drawers (8,9), Drawer Base Support (11) And Drawer Back (10)

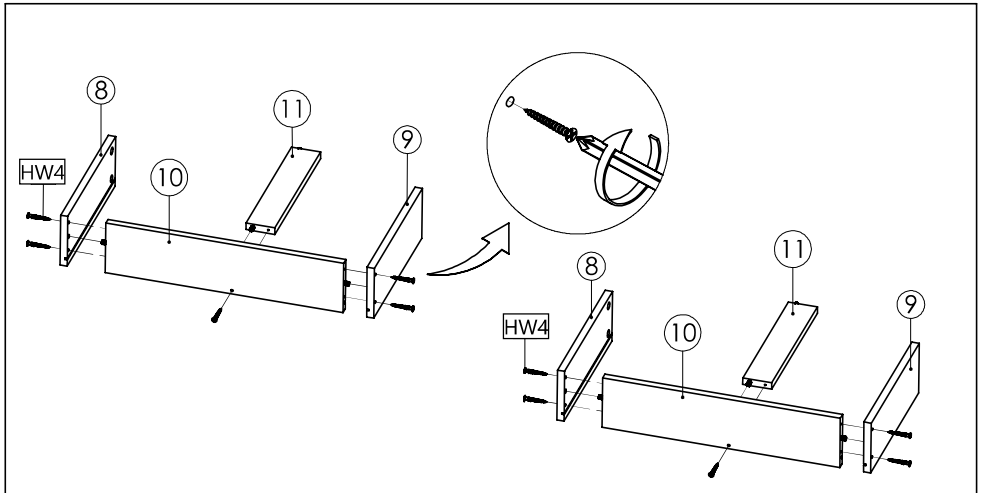


STEP2: Combine Side Drawers (8 & 9) and Drawer Base Support (11) into Drawer back (10) secure with screw M7x32mm (HW4) using screwdriver.

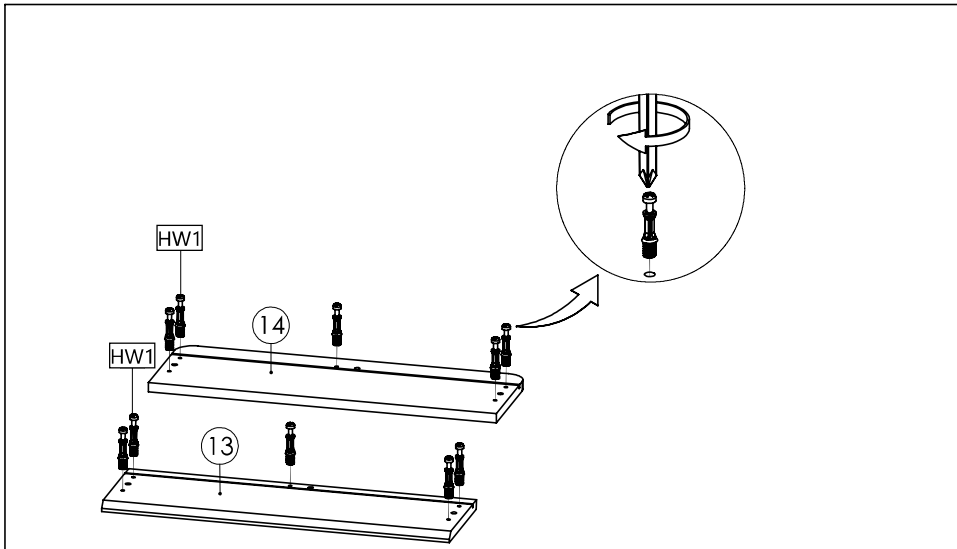


STEP3: Insert Cambolt (HW1) into Front Drawer (13 & 14)

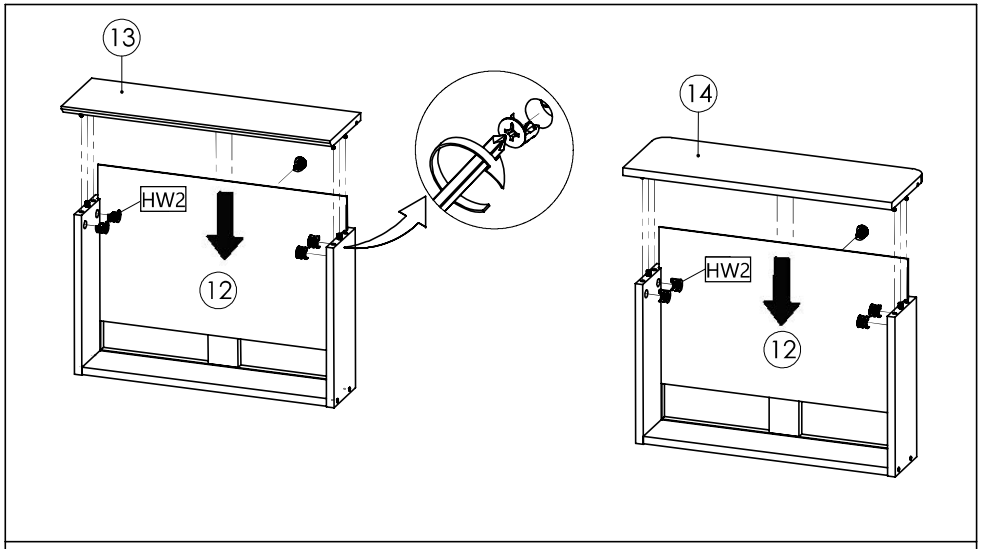


STEP4: Insert Drawer Base (12), then put front drawer (13&14) then tighten camlock (HW2) using screwdriver.

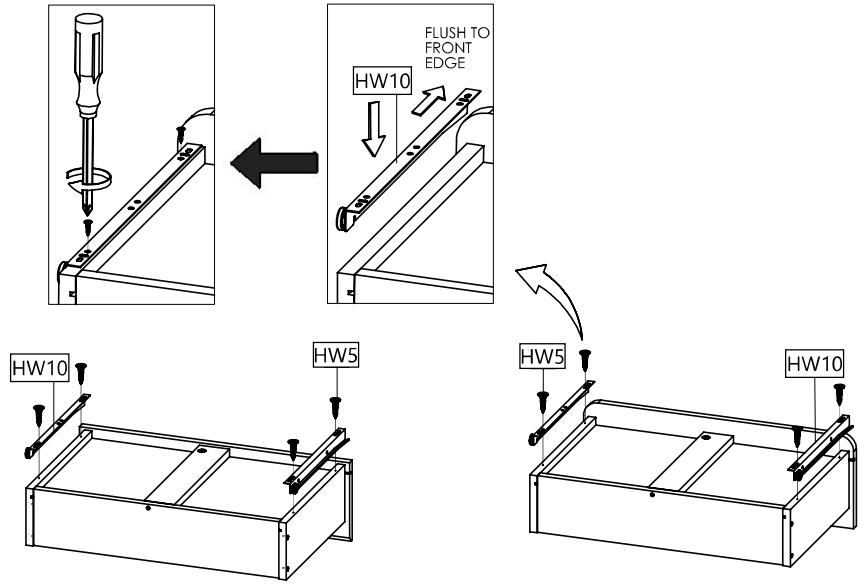


STEP5: Install the metal runner (HW10) into position as shown in picture.
Secure with screws M6x12mm (HW5).

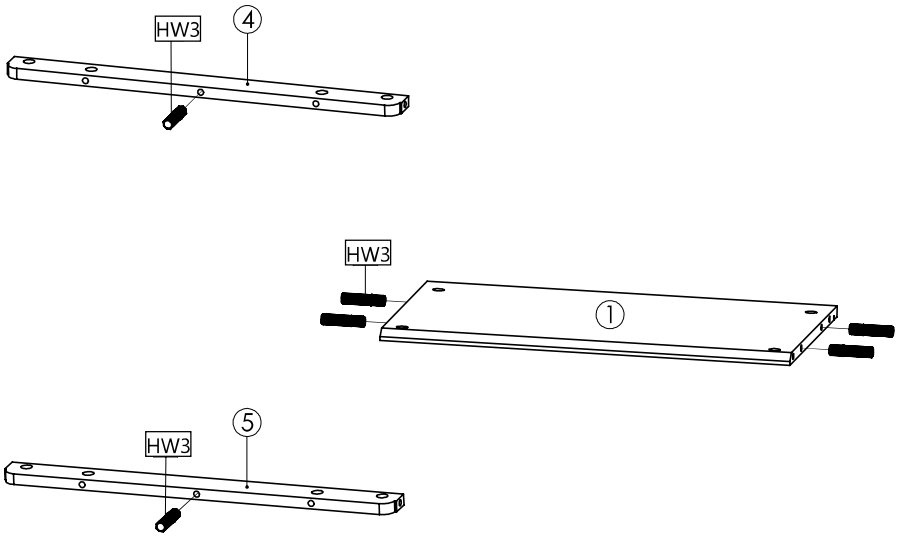


STEP6: Insert Wooden Dowel (HW3) into Bottom Panel (1),Front Top Frame (4)
And Back Top Frame (5).

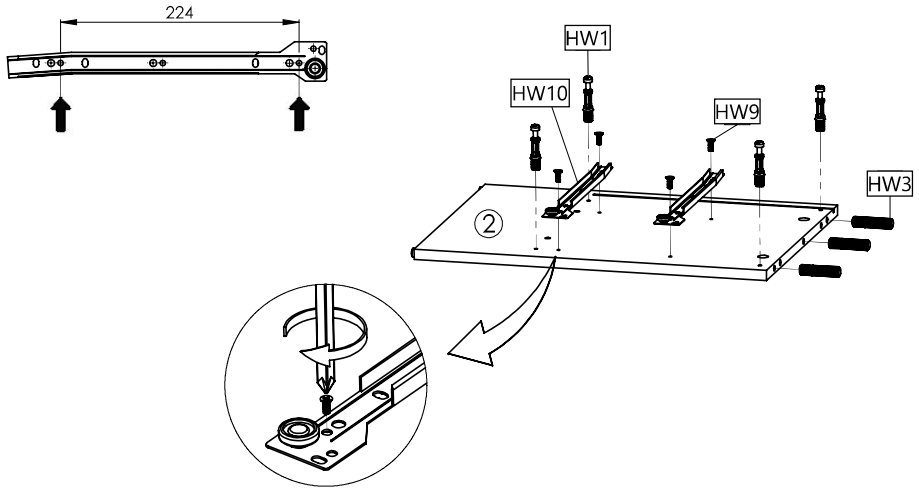


STEP7: Insert Cambolt (HW1) into right side panel (2).Insert Wooden Dowel (HW3) into Right Side Panel (2)
Continue with securing part of, the metal runner (HW10) into position as the above image, using screw M5x8.5mm (HW9)

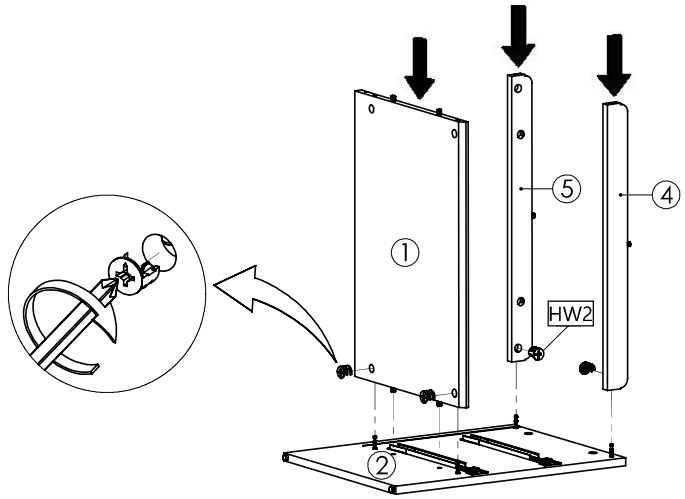


STEP8: Attach Bottom panel (1), Front Top Frame (4), And Back Top Frame (5).
into Right side panel (2).Secure with Camlock (HW2)
and tighten it using screwdriver.

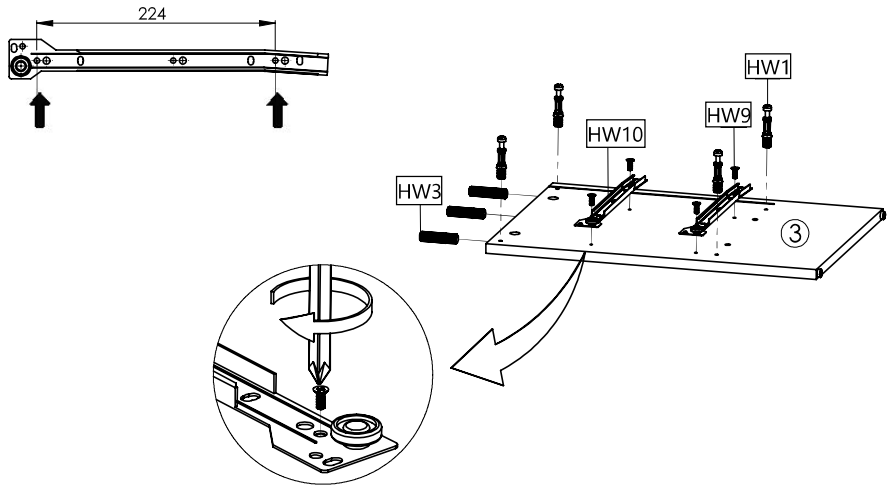


STEP9: Insert Cambolt (HW1) into left side panel (3).Insert Wooden Dowel (HW3) into left side Panel (3).
Continue with securing part of the metal runner (HW10) into position as the above image, using screw M5x8.5mm (HW9)

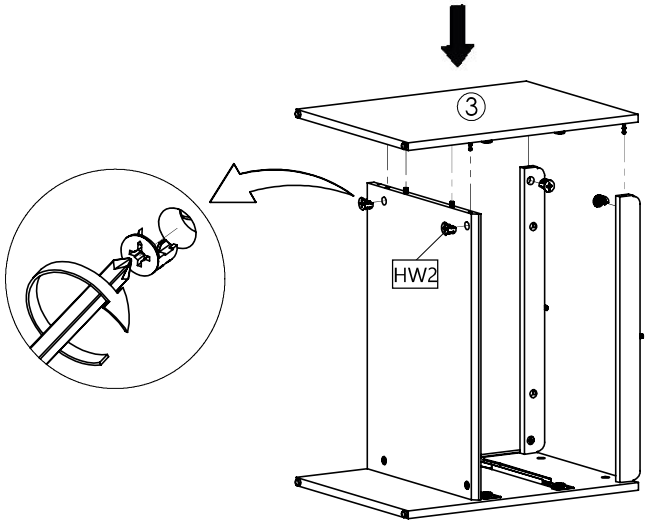


STEP10: Insert Left side panel (3) Secure with Camlock (HW2) and tighten it using screwdriver.

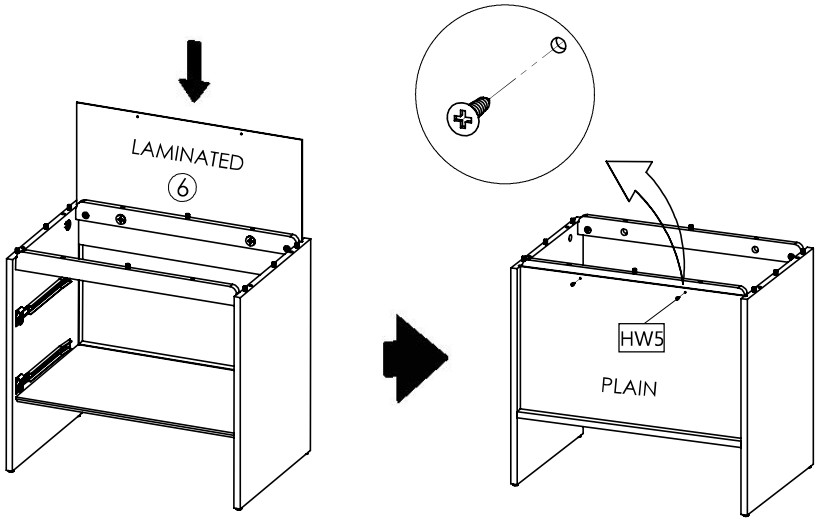


STEP11: Insert Back panel (6). secure with screw M6x12mm (HW5) into back panel (6) and back top frame (5)

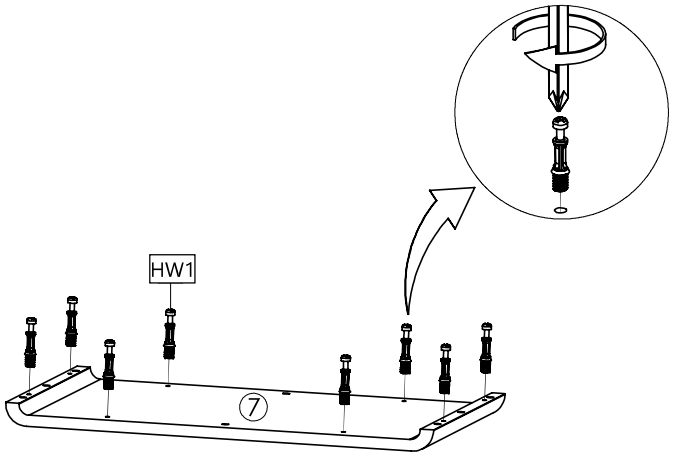


STEP12: Insert Cambolt (HW1) into Top panel (7)

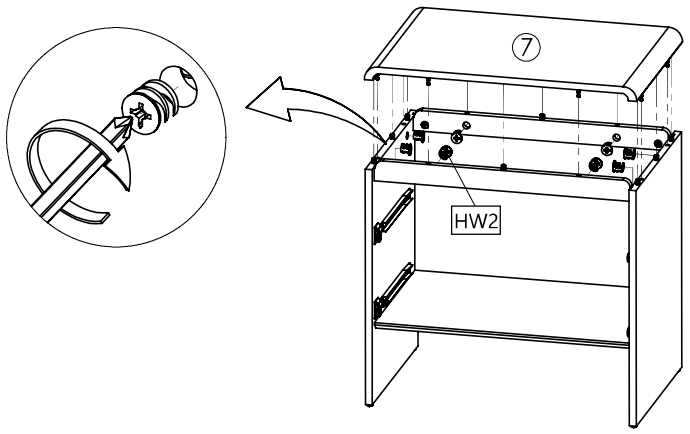


STEP13: Insert top panel (7), Secure with Camlock (HW2) and tighten it using screwdriver.

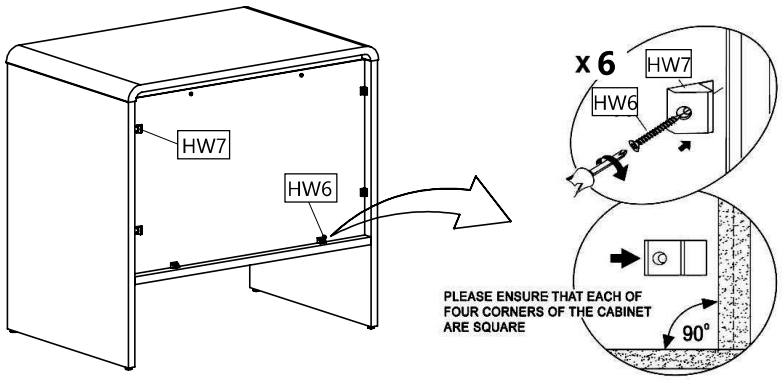

STEP14: Please ensure that each of four corners of the cabinet are square

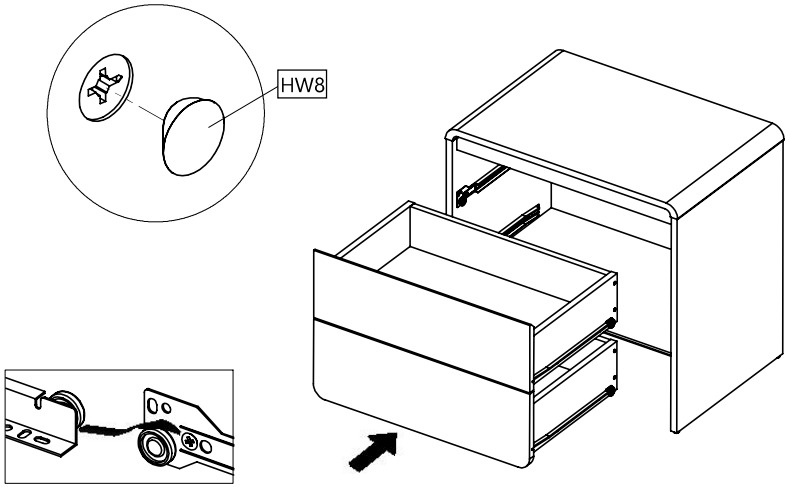

STEP15: Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at side boards, according to the image.
Slide in the drawers one by one into the cabinet.
Attach cover cap sticker (HW8) to the panel that has lamination

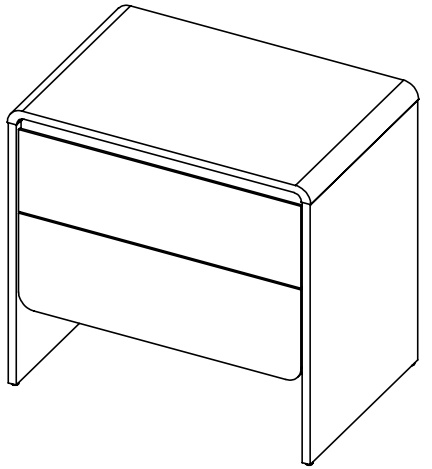

STEP16: Assembly is complete




ANTI-TIP RESTRAINT INSTALLATION


WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

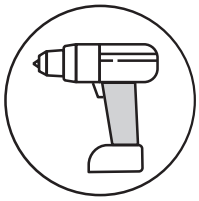

REQUIRED TOOL
8MM / 5/16" DRILL BIT

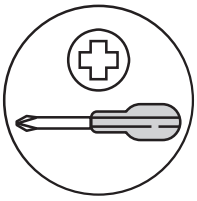


REQUIRED TOOL

Hardware (**HW13/HW14**) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.


ANTI-TIP RESTRAINT PACK			
ID	DESCRIPTION		QTY
HW12	BRACKET		4
HW11	M6 × 15MM SCREW		4
HW13	M8 × 35MM PLUG		4
HW14	M10 × 50MM SCREW		4
HW12	STRAP		2

1

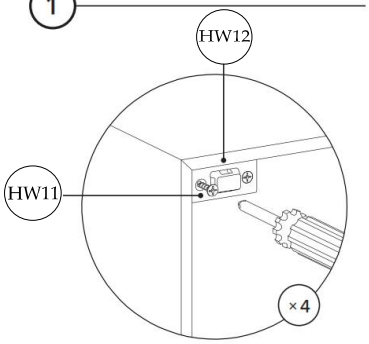


Attach pair of brackets to **"Top Panel"** of the unit. Note there are no existing pilot holes on the product.

2

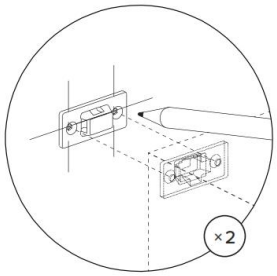

Mark on wall where second pair of brackets should be placed.

3

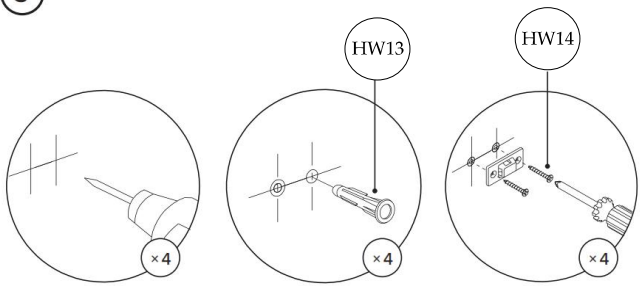


Drill holes in wall using 8mm / 5/16" drill bit.

4A



Align brackets on unit with brackets on wall.

4B

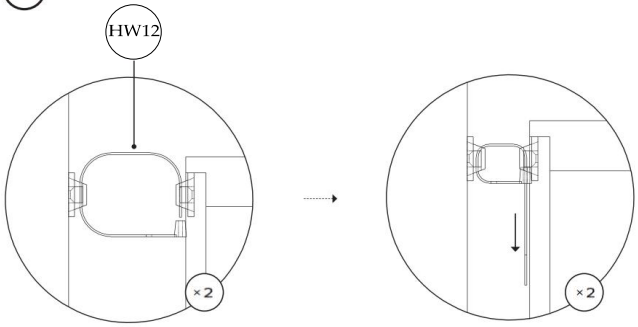

Pull strap down until it snap-locks.