NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**


PREPARATION


*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 45 minutes.
*Tools Required for Assembly (Not included): Screwdriver

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a reguler basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

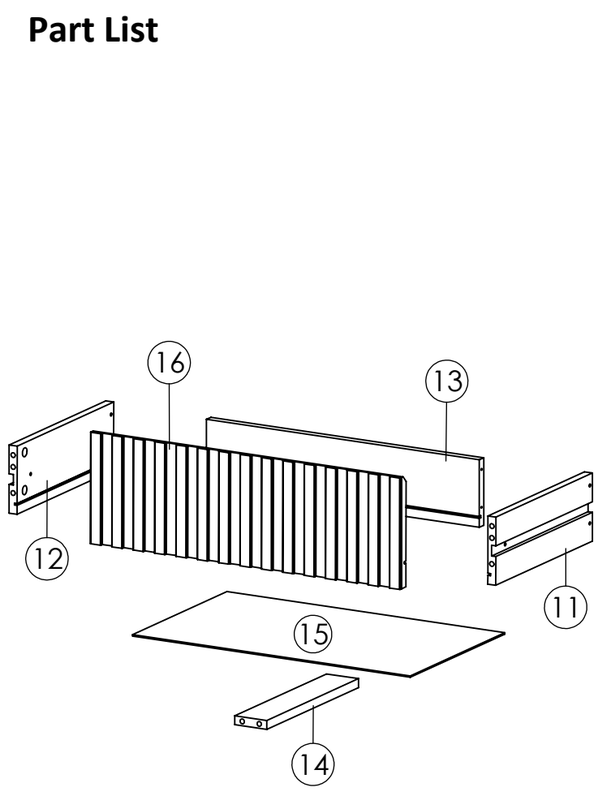

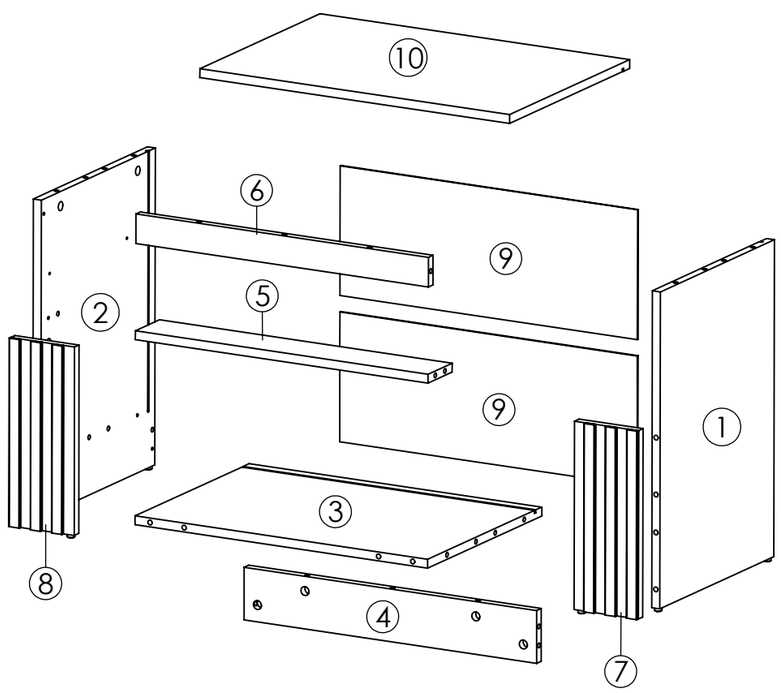

SAFAVIEH FURNITURE



Model# NST3102
Product Dimensions: W 22.83" X D 15.67" X H 21.85"

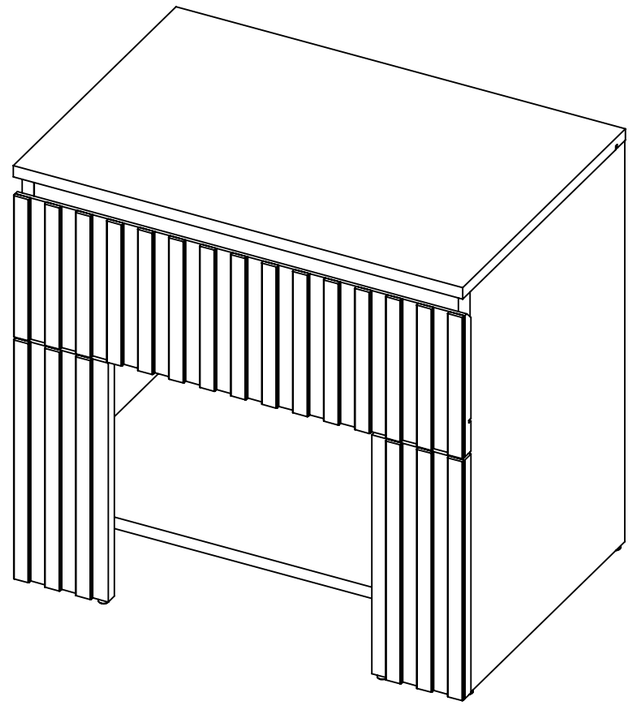

WARNING :

WEIGHT CAPACITY :
Top : 26 Lbs
Drawer : 11 Lbs
Shelf : 15 Lbs
Warning : Do not stand on the product.
Warning : Do not over torque bolts.

Hardware List

Ax28  Ø6x32 mm	Bx28  Ø15x12 mm	Cx25  Ø8x32 mm	Ex5  Ø7x32 mm	Hx4  Ø4x19 mm	Ox4 
Sx12 Ø20 mm OAK	ASx1 310 mm	AYx4 Ø5x8.5 mm	CPx1 list "H" 547 mm	CQx2 Ø4x10 mm	


Part List & HW

Piece	Description	Qty	Carton Call
1	Right Side Panel	1	1 of 1
2	Left Side Panel	1	1 of 1
3	Bottom Panel	1	1 of 1
4	Bottom Support	1	1 of 1
5	Front Fixed Shelf	1	1 of 1
6	Top Support	1	1 of 1
7	Right Pillar	1	1 of 1
8	Left Pillar	1	1 of 1
9	Back Panel	2	1 of 1
10	Top Panel	1	1 of 1
11	Right Side Drawer	1	1 of 1
12	Left Side Drawer	1	1 of 1
13	Drawer Back	1	1 of 1
14	Drawer Base Support	1	1 of 1
15	Drawer Base	1	1 of 1
16	Front Drawer	1	1 of 1


Piece	Description	Qty	Carton Call
A	Cambolt	28	1 of 1
B	Camlock	28	1 of 1
C	Wooden Dowel	25	1 of 1
E	Screw M 7 x 32 mm	5	1 of 1
H	Screw M 4 x 19 mm	4	1 of 1
O	Plastic Stopper	4	1 of 1
S	Cover Cap Sticker	12	1 of 1
AS	Mini Slide Runner	1	1 of 1
AY	Screw M 5 x 8,5 mm	4	1 of 1
CP	List "H"	1	1 of 1
CQ	Bolt M 4 x 10 mm	2	1 of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 45 minutes.

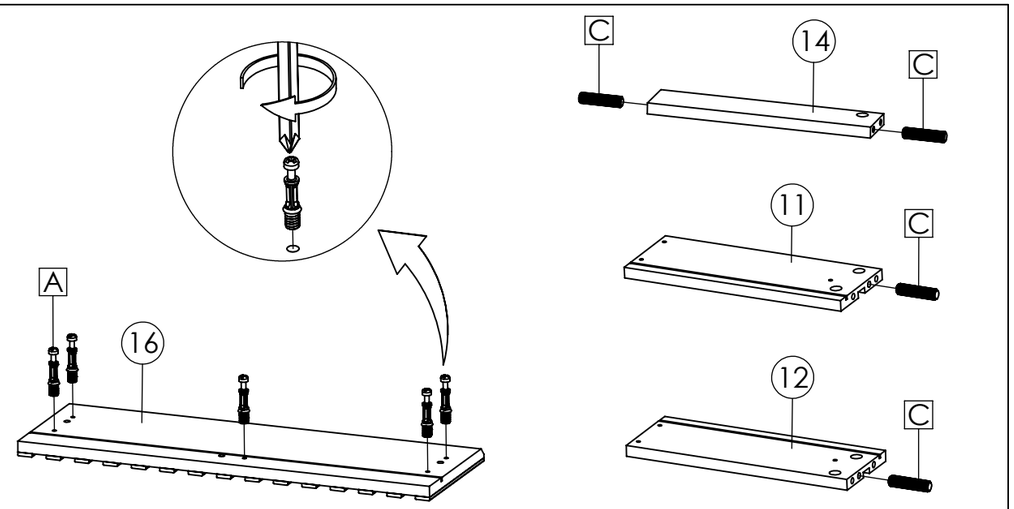


STEP1: Insert Cambolt (A) into Front Drawer (16).Insert Wooden Dowel (C) into Side Drawers (11&12). & Drawer Base Support (14)

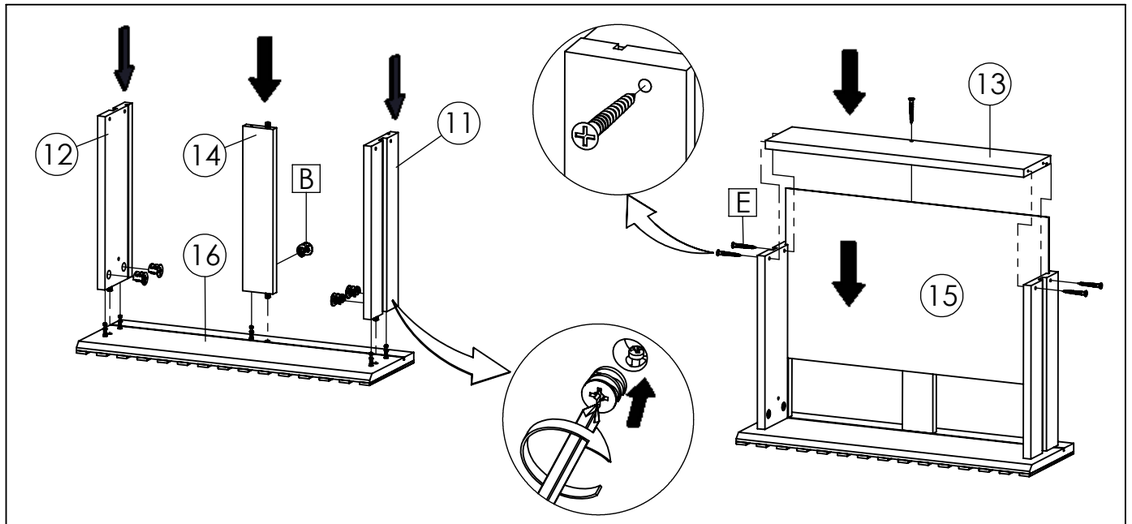


STEP2: Combine Side Drawers (11 & 12) and Drawer Base Support (14) into Front Drawer (16) then tighten camlock (B) using screwdriver.
Insert Drawer Base (15), then put Drawer Back (13) with laminated face facing upward then secure with Screw M7x32mm (E).

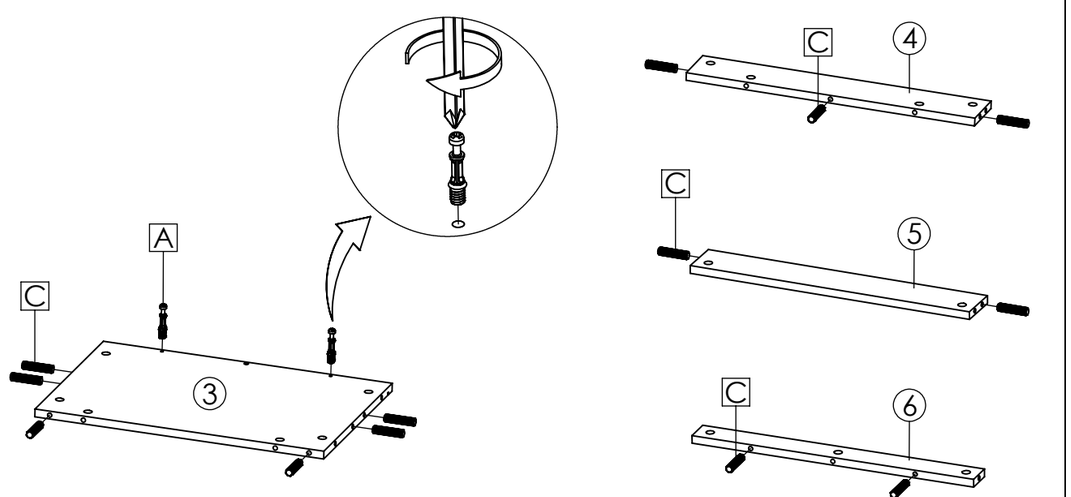


STEP3: Insert Cambolt (A) into bottom panel (3).Insert Wooden Dowel (C) into bottom panel (3), bottom back panel (4), front fixed shelf (5), and top support (6)

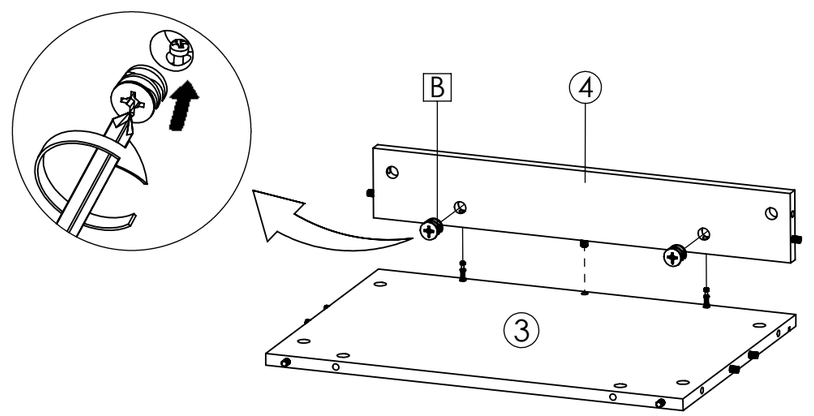


STEP4: Combine Bottom panel (3) into Bottom support (4) then tighten camlock (B) using screwdriver.

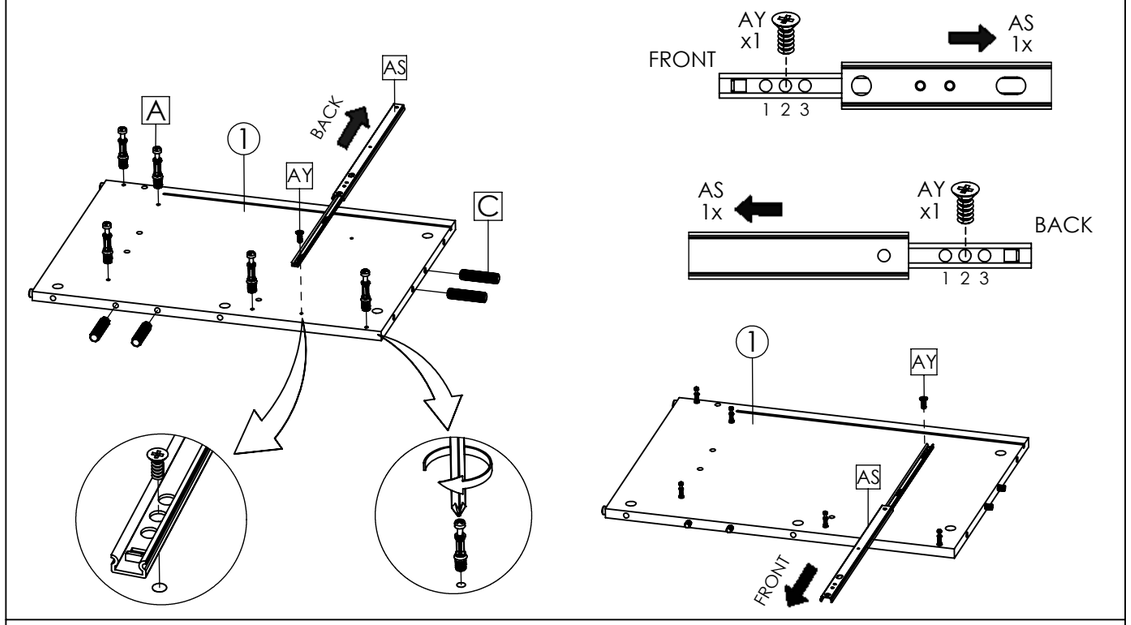


STEP5: Insert Cambolt (A) into right side panel (1).Insert Wooden Dowel (C) into right side Panel (1).
Install the mini slide runner (AS) into position as shown in picture.
Secure with screws M5x8,5mm (AY).

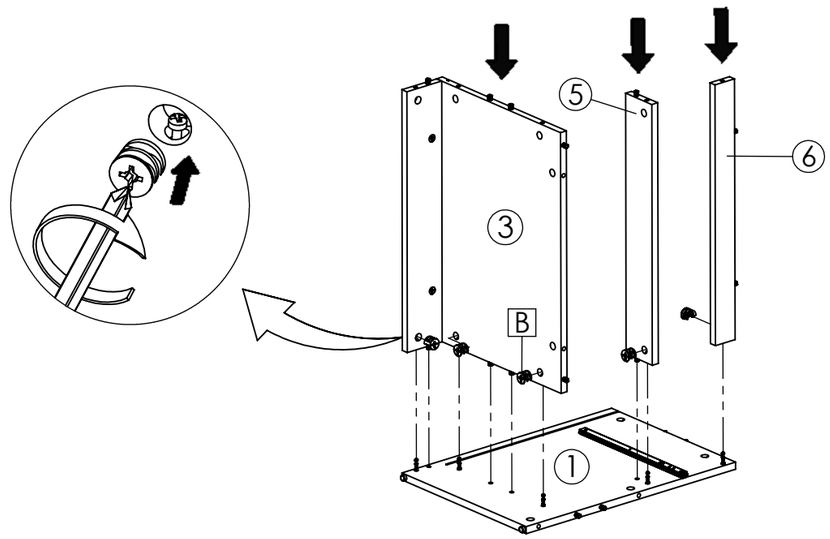


STEP6: Attach Bottom panel (3), front fixed shelf (5) and top support (6) into Right side panel (1). Secure with Camlock (B) and tighten it using screwdriver.

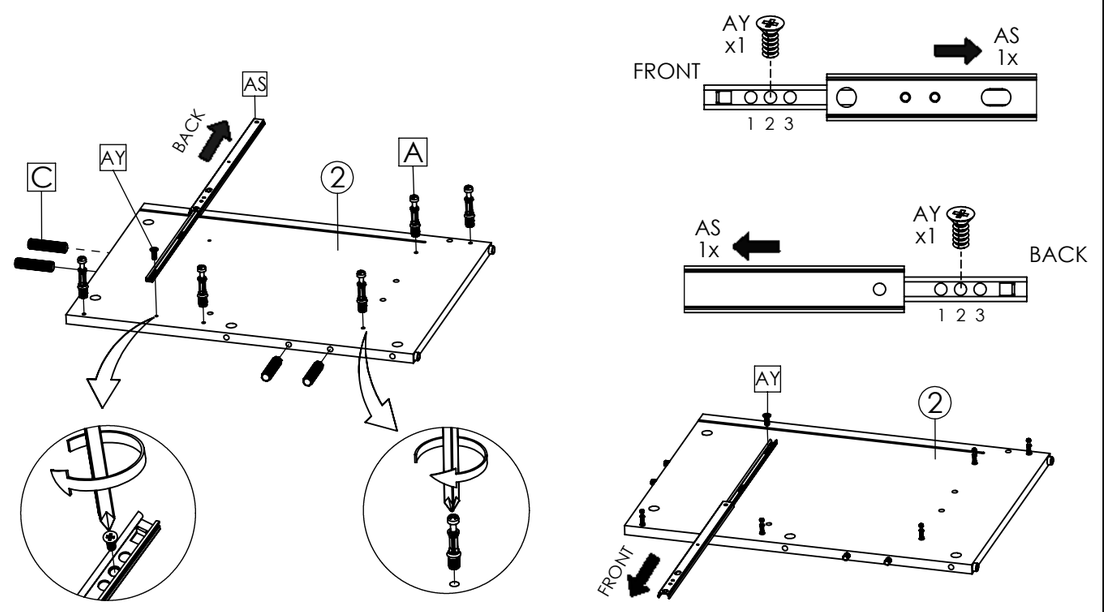


STEP7: Insert Cambolt (A) into left side panel (2).Insert Wooden Dowel (C) into left side Panel (2).
Install the mini slide runner (AS) into position as shown in picture.
Secure with screws M5x8,5mm (AY).

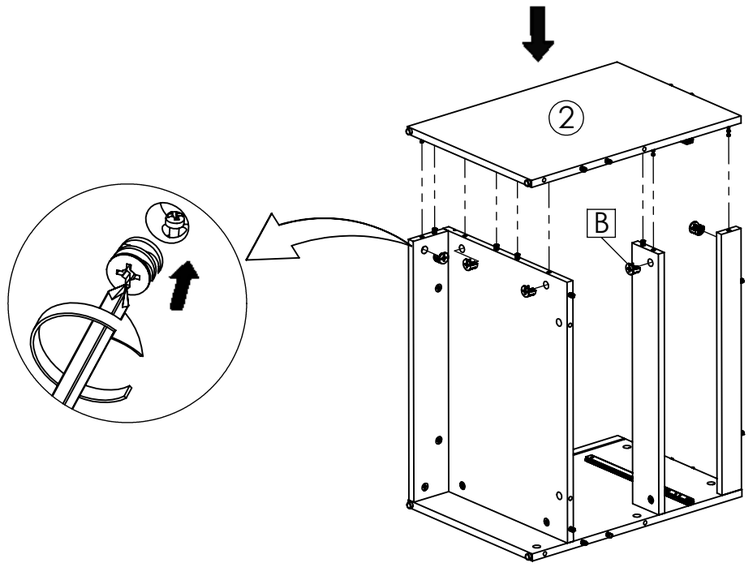


STEP8: Insert Left side panel (2) Secure with Camlock (B) and tighten it using screwdriver.

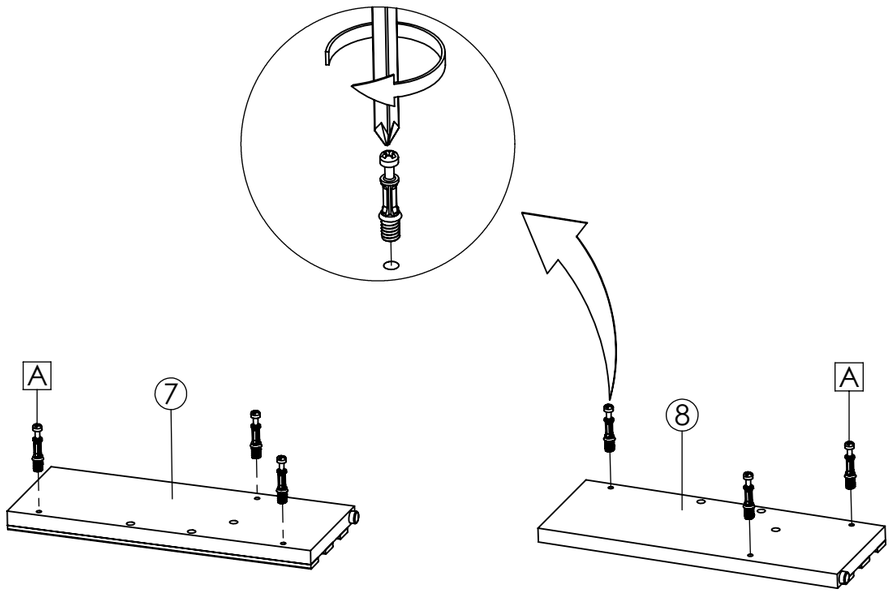


STEP9: Insert Cambolt (A) into right pillar (7) and left pillar (8)

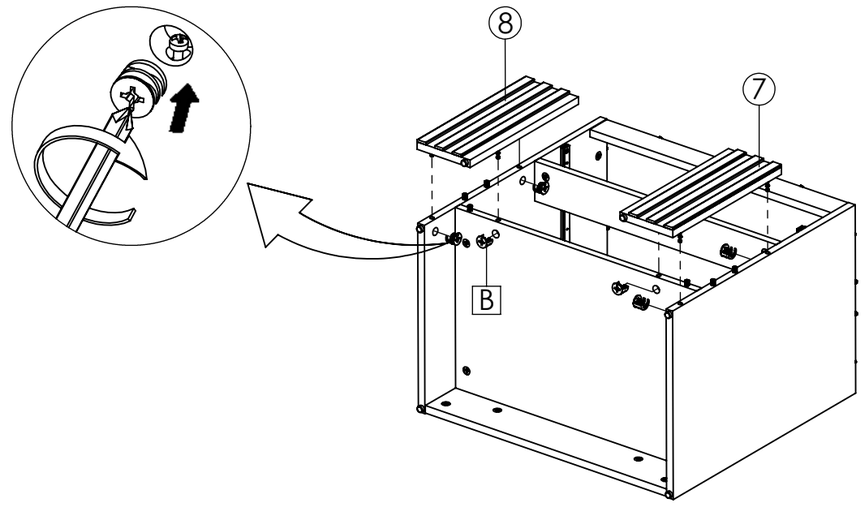


STEP10: Insert Right pillar (7), Left pillar (8) Secure with Camlock (B) and tighten it using screwdriver.

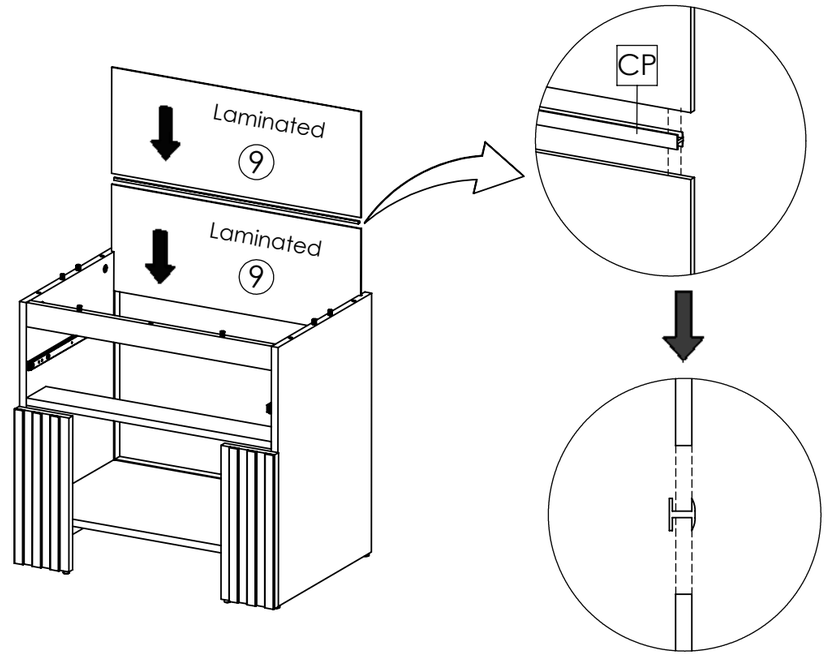


STEP11: Insert Back panel 2x (9), And List "H" (CP)

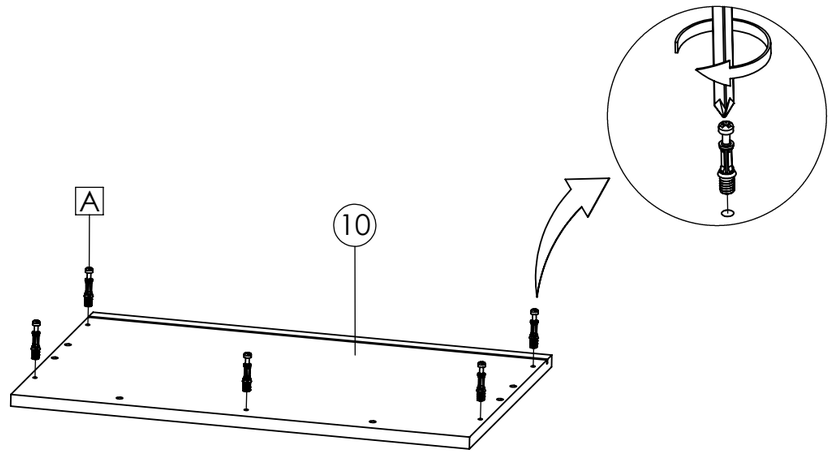


STEP12: Insert Cambolt (A) into top panel (10)

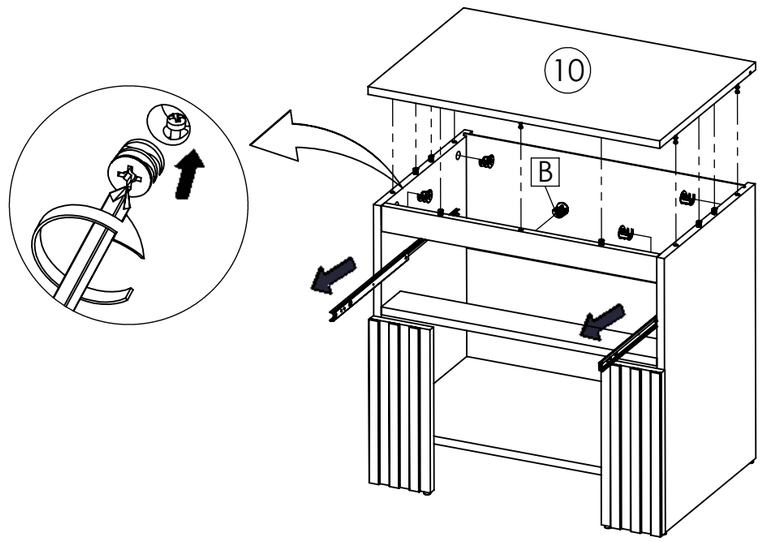


STEP13: Insert top panel (10), Secure with Camlock (B) and tighten it using screwdriver.

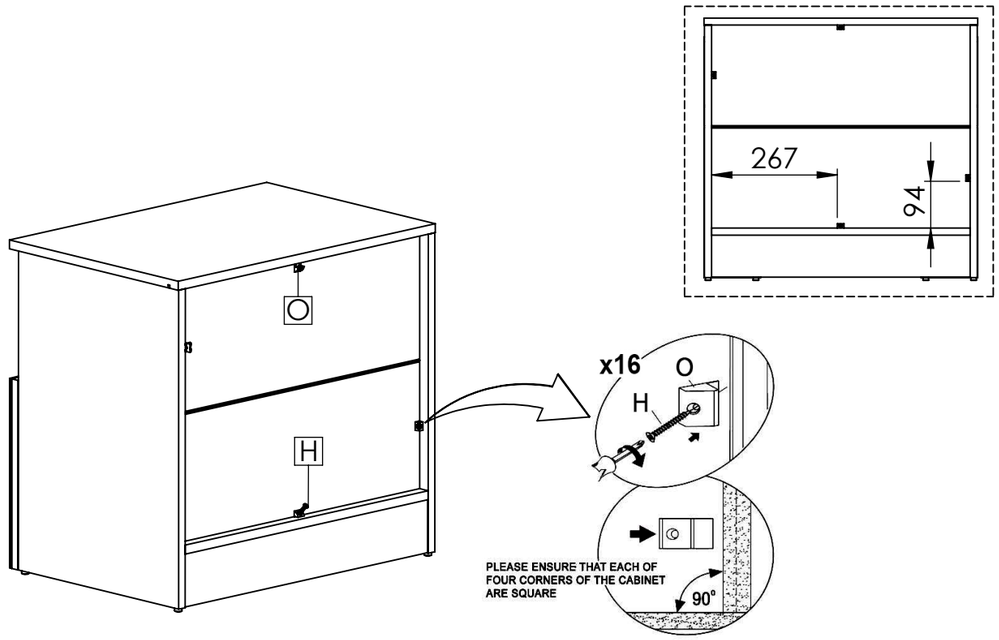

STEP14: Attach the plastic stopper (O) to the back panel Secure with screw M4x19 mm (H) and tighten it using screwdriver.

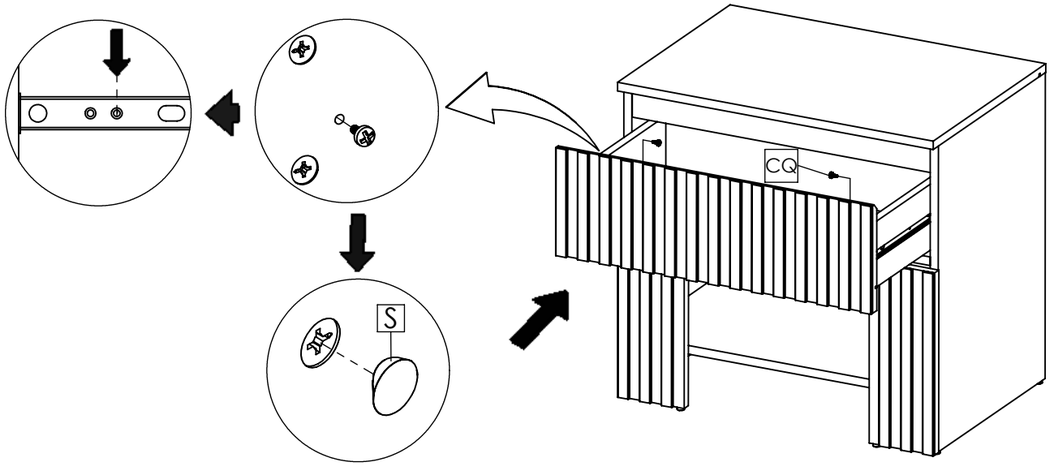

STEP15: Insert the assembled drawer, Secure with Bolt M4x10 mm (CQ) and tighten it using screwdriver. continue to attach cover cap sticker (S) to the panel that has lamination

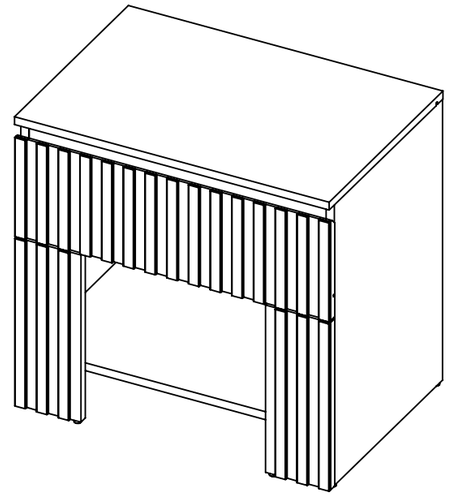

STEP16: Assembly is complete