NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**


PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (Not included): Screwdriver

CARE AND MAINTENANCE


Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

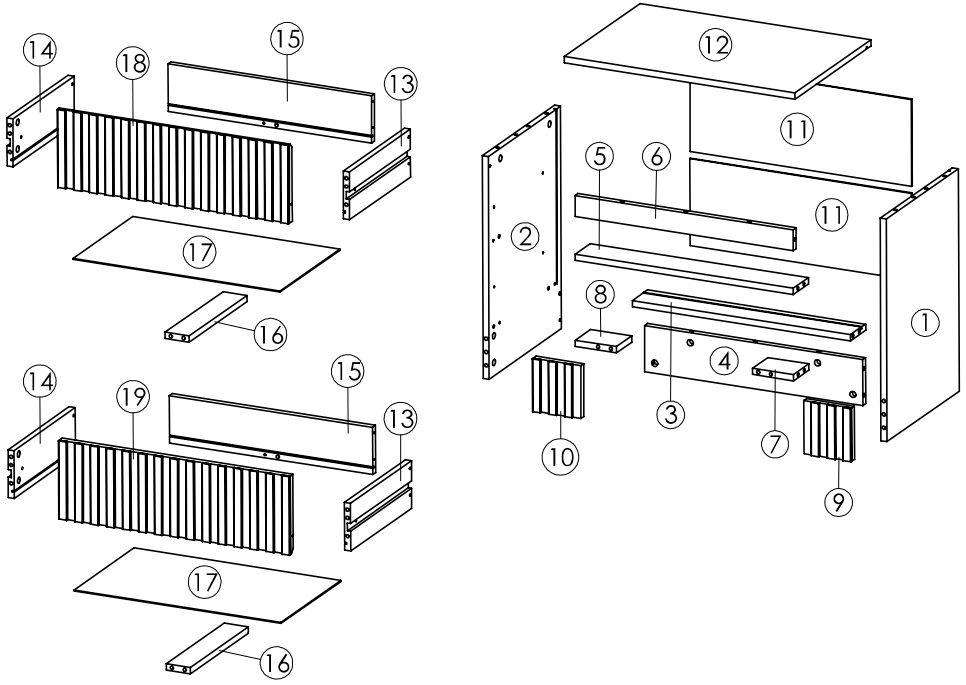

SAFAVIEH FURNITURE

Model# NST3103
Product Dimensions: W 22.83" x D 15.67" x H 21.85"




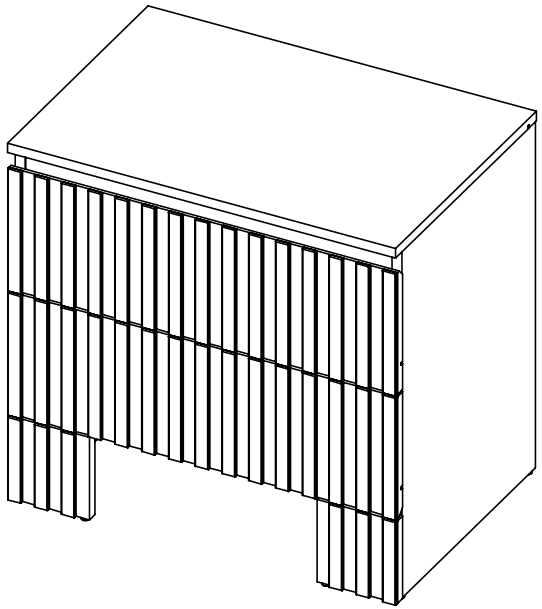



WARNING

TOTAL WEIGHT CAPACITY: 37 LBS

Top Load Capacity: 26 lbs
Drawer Load Capacity : 11 lbs
Warning: Do not stand on night stand
Warning: Do not over torque bolt

Hardware List

H W1 x33  Ø6x32 mm	H W2 x33  Ø15x12 mm	HW3x27  Ø8x32 mm	HW4x10  Ø7x32 mm	HW5x4  Ø4x19 mm	HW6x4  10x14 mm
HW7x16  Ø20 mm OAK	HW8x2  310 mm	HW9x8  Ø5x8.5 mm	HW10x1  list "H" 547 mm	HW11x4  Ø4x10 mm	

Anti-tip Restrain Pack	
HW12x4  Ø6x15 mm	HW13x2SET  300 mm
HW14x4  Ø8x35 PLUG	HW15x4  Ø10x50 mm


Part List & HW

Piece	Description	Qty	Carton Call
1	Right Side Panel	1	1 of 1
2	Left Side Panel	1	1 of 1
3	Back Fixed Shelf	1	1 of 1
4	Bottom Support	1	1 of 1
5	Front Fixed Shelf	1	1 of 1
6	Top support	1	1 of 1
7	Right leg support	1	1 of 1
8	Left leg support	1	1 of 1
9	Right leg	1	1 of 1
10	Left leg	1	1 of 1
11	Back Panel	2	1 of 1
12	Top Panel	1	1 of 1
13	Right Side Drawer	2	1 of 1
14	Left Side Drawer	2	1 of 1
15	Drawer Back	2	1 of 1
16	Drawer Base Support	2	1 of 1
17	Drawer Base	2	1 of 1
18	Upper Front Drawer	1	1 of 1
19	Lower Front Drawer	1	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt Ø6x32mm	33	1 of 1
HW2	Camlock Ø15x12mm	33	1 of 1
HW3	Wooden Dowel Ø8x32mm	27	1 of 1
HW4	Screw M 7 x 32 mm	10	1 of 1
HW5	Screw M 4 x 19 mm	4	1 of 1
HW6	Plastic Stopper 10x14mm	4	1 of 1
HW7	Cover Cap Sticker Ø20mm	16	1 of 1
HW8	Mini Slide Runner 310mm	2	1 of 1
HW9	Screw M 5 x 8,5 mm	8	1 of 1
HW10	List "H" 547 mm	1	1 of 1
HW11	Bolt M 4 x 10 mm	4	1 of 1
HW12	Screw M 6 x 15 mm	4	1 of 1
HW13	Anti-tip 300mm	2	1 of 1
HW14	Ø8x35 PLUG	4	1 of 1
HW15	Screw M 10 x 50 mm	4	1 of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

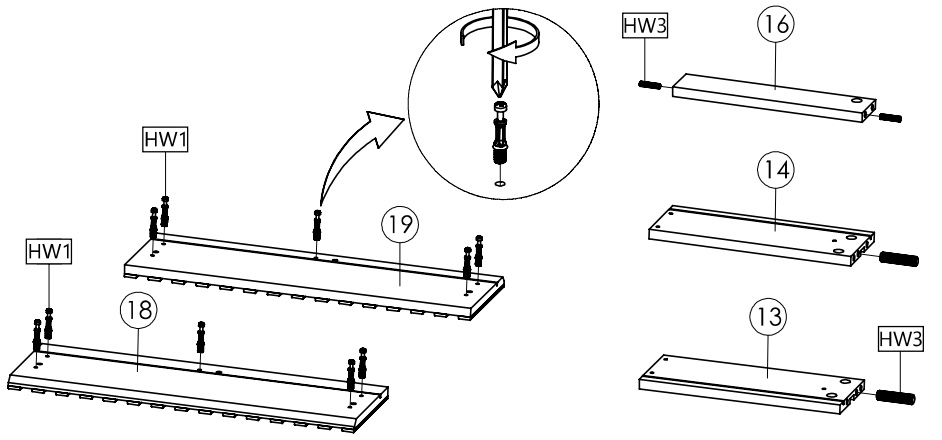


STEP1: Insert Cambolt (HW1) into Upper Front Drawer (18) And Lower Front Drawer(19).Insert Wooden Dowel (HW3) into Side Drawers (13 & 14). And Drawer Base Support (16)

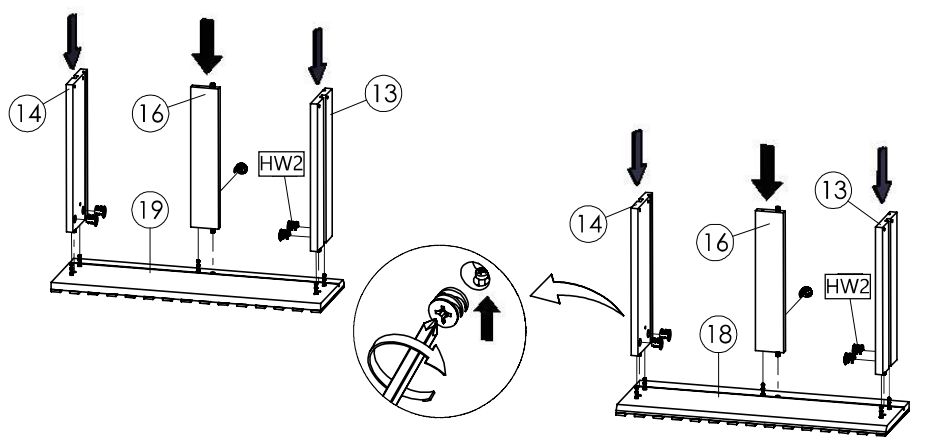


STEP2: Combine Side Drawers (13 & 14) and Drawer Base Support (16) into Upper Front Drawer (18), Lower front drawer (19) then tighten camlock (HW2) using screwdriver.

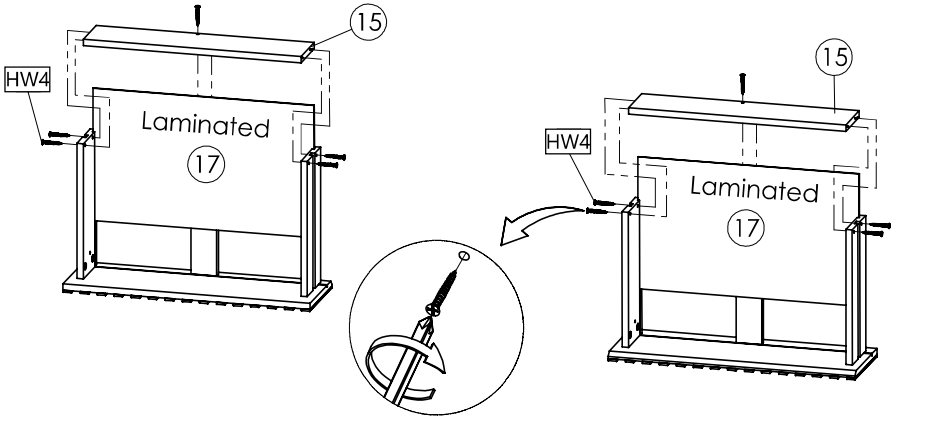


STEP3: Insert Drawer Base (17), then put Drawer Back (15) with laminated face facing upward then secure with Screw M7x32mm (HW4).

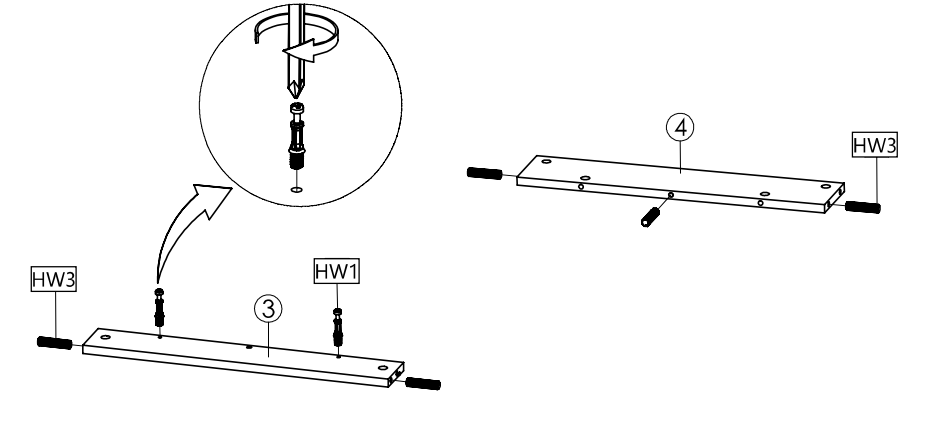


STEP4: Insert Cambolt (HW1) into Back Fixed Shelf (3).Insert Wooden Dowel (HW3) into Back Fixed Shelf (3) and bottom back panel (4)

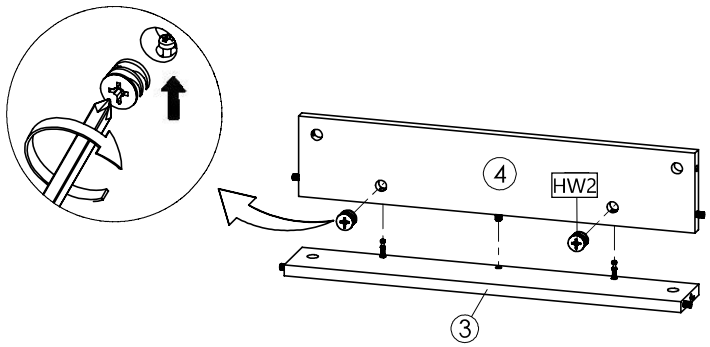


STEP5: Combine Back Fixed Shelf (3) into Bottom support (4) then tighten camlock (HW2) using screwdriver.

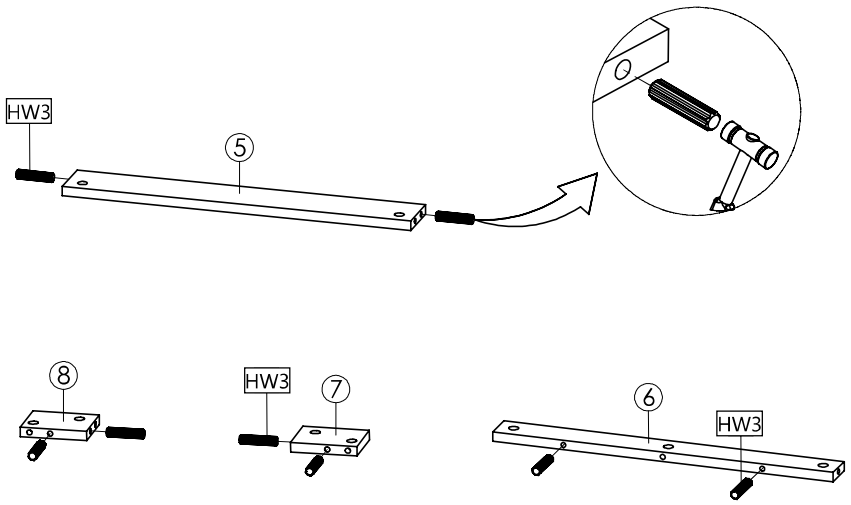


STEP6: Insert Wooden Dowel (HW3) into front fixed shelf (5), top support (6), right inner front cross (7) And left inside front cross (8)

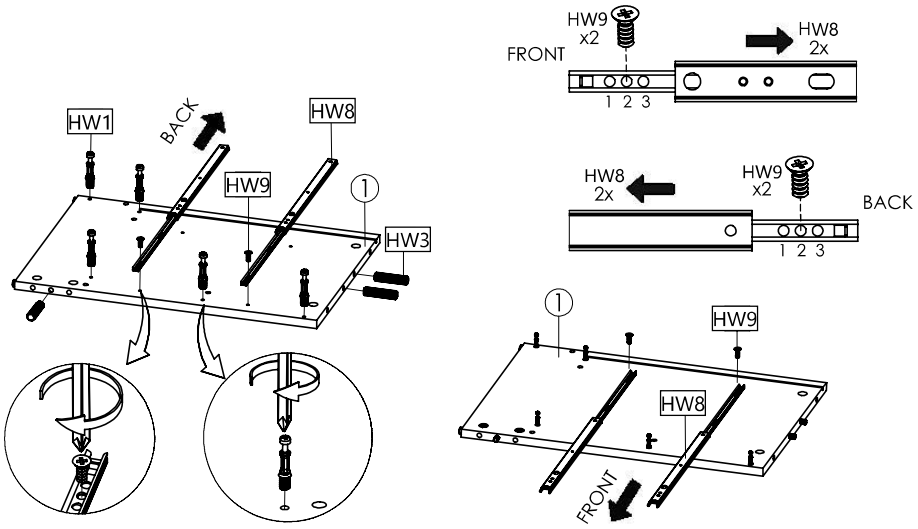


STEP7: Insert Cambolt (HW1) into right side panel (1).Insert Wooden Dowel (HW3) into right Side Panel (1).
Install the mini slide runner (HW8) into position as shown in picture.
Secure with screws M5x8,5mm (HW9).

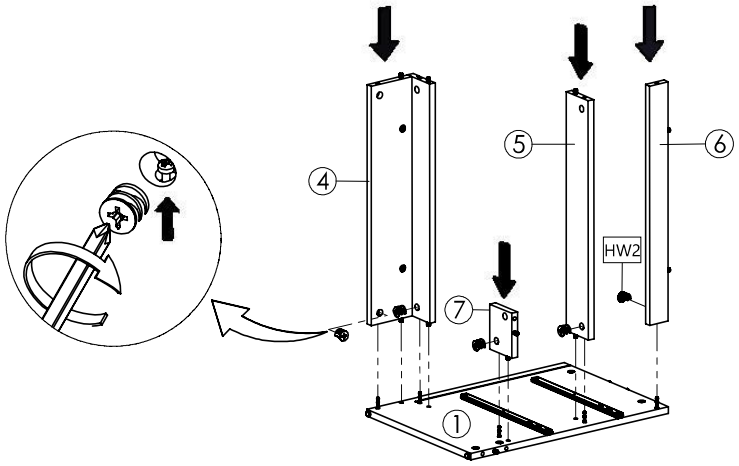


STEP8: Attach Bottom Back panel (4), front fixed shelf (5), top frame (6), and right inner front cross (7) into Right side panel (1).Secure with Camlock (HW2) and tighten it using screwdriver.

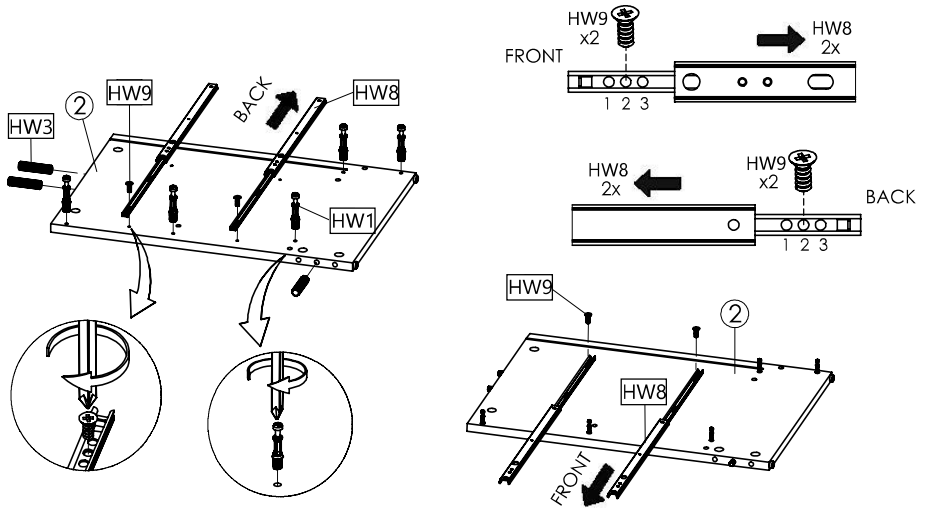


STEP9: Insert Cambolt (HW1) into left side panel (2).Insert Wooden Dowel (HW3) into left Side Panel (2).
Install the mini slide runner (HW8) into position as shown in picture.
Secure with screws M5x8,5mm (HW9).

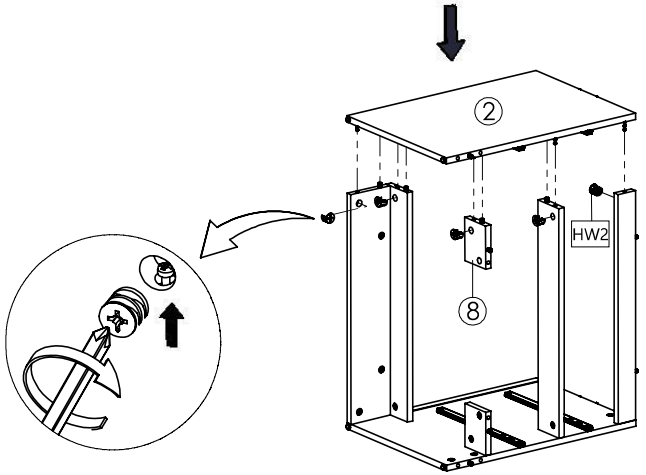


STEP10: Attach Left side panel (2) and Left inside front cross (8)
Secure with Camlock (HW2) and tighten it using screwdriver.

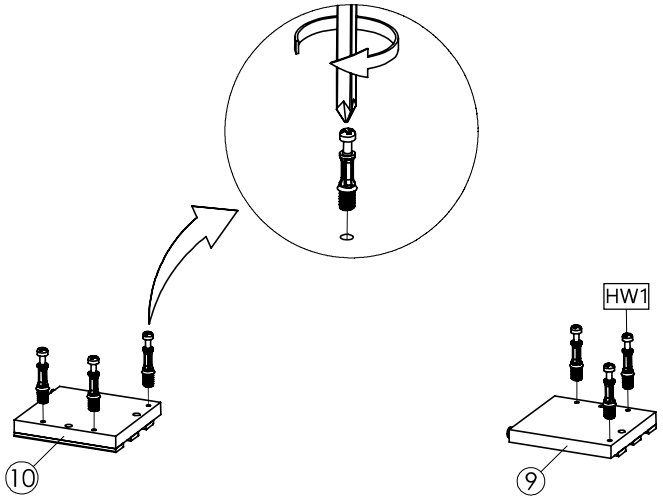


STEP11: Insert Cambolt (HW1) into Right leg (9) And Left leg (10)

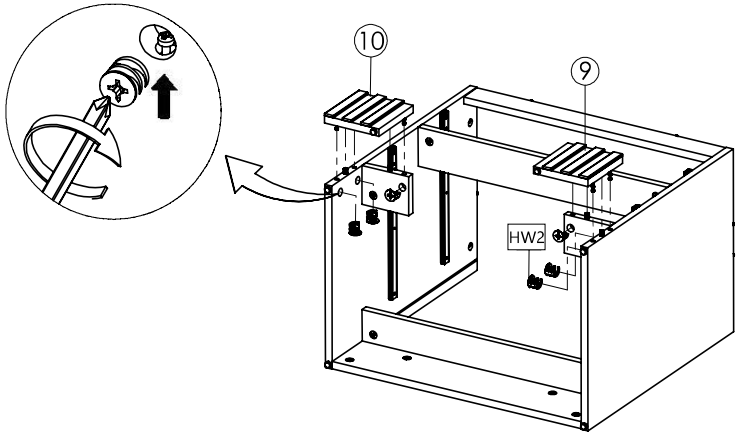


STEP12: Insert Right leg (9), Left leg (10) Secure with Camlock (HW2) and tighten it using screwdriver.

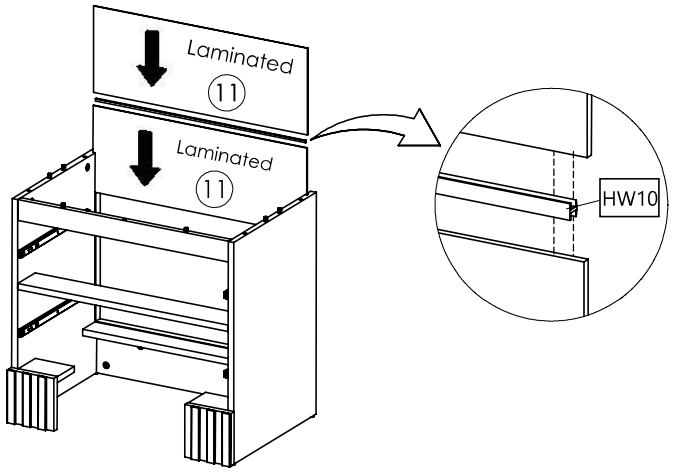


STEP13: Insert Back panel 2x (9), And List "H" (HW10)

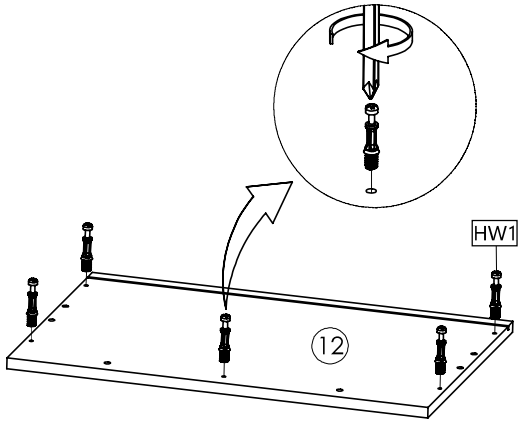


STEP14: Insert Cambolt (HW1) into top panel (12)

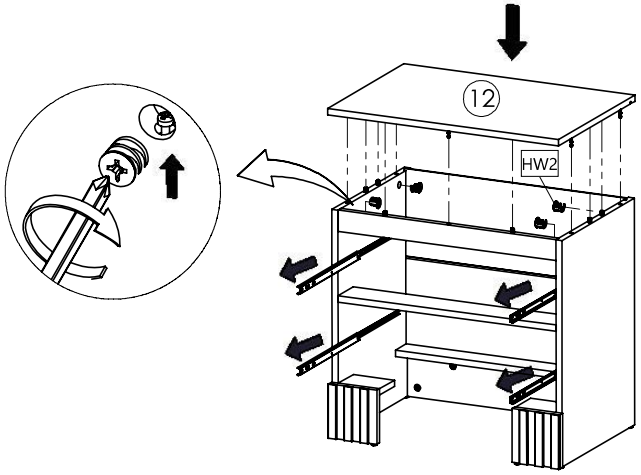


STEP15: Insert top panel (12), Secure with Camlock (HW2) and tighten it using screwdriver.

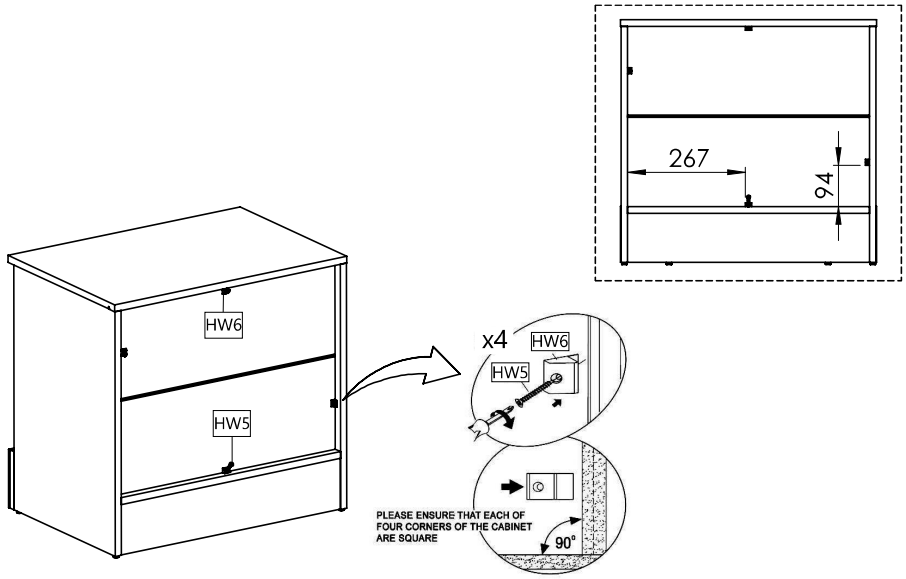


STEP16: Attach the plastic stopper (HW6) to the back panel Secure with screw M4x19 mm (HW5) and tighten it using screwdriver.

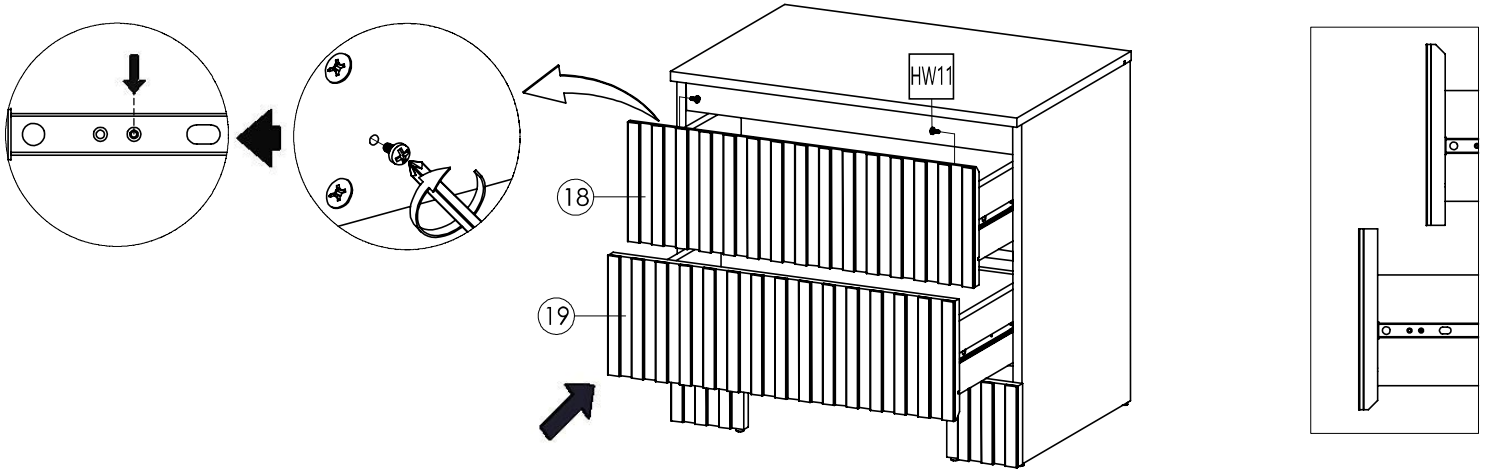

STEP17: Insert the assembled drawer, Secure with Bolt M4x10 mm (HW11) and tighten it using screwdriver.

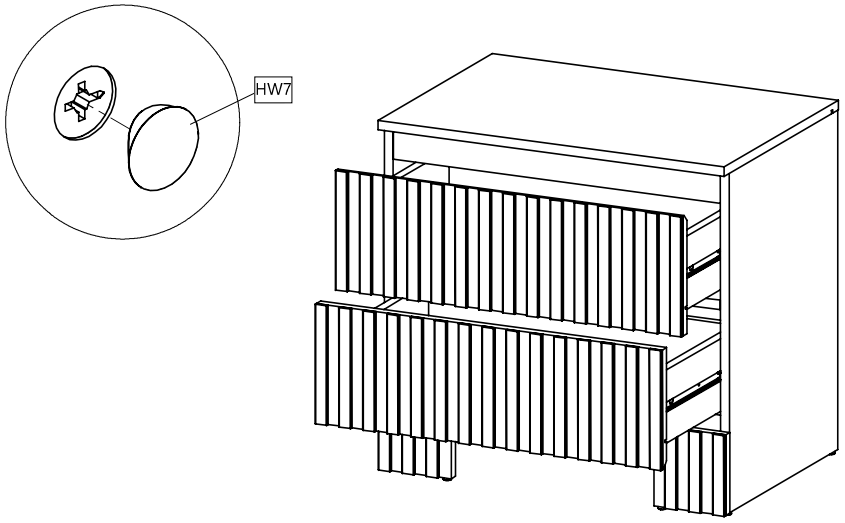

STEP18: Attach cover cap sticker (HW7) to the panel that has lamination

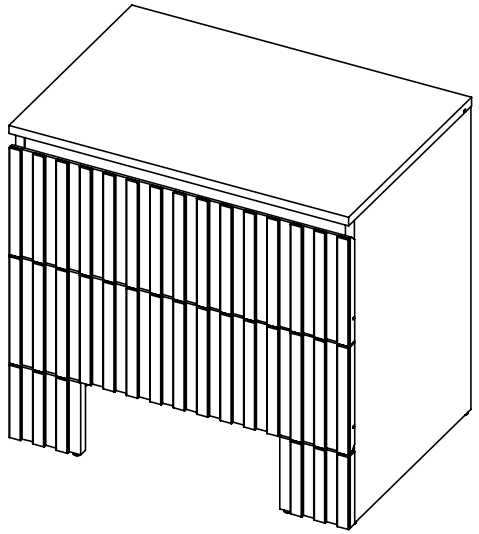

STEP19: Assembly is complete




ANTI-TIP RESTRAINT INSTALLATION


WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

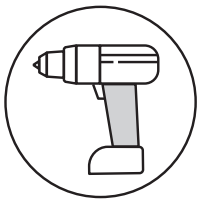

REQUIRED TOOL
8MM / 5/16" DRILL BIT

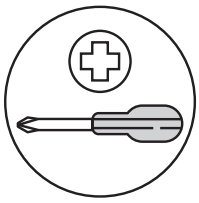


REQUIRED TOOL

Hardware (HW14/HW15) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.


ANTI-TIP RESTRAINT PACK			
ID	DESCRIPTION		QTY
HW13	BRACKET		4
HW12	M6 × 15MM SCREW		4
HW14	M8 × 35MM PLUG		4
HW15	M10 × 50MM SCREW		4
HW13	STRAP		2

1

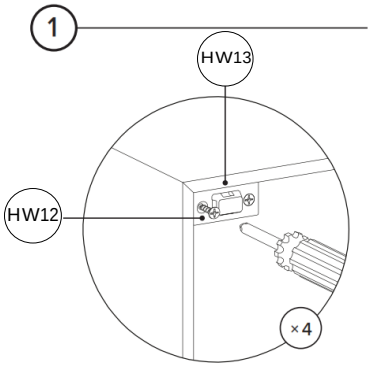


Attach pair of brackets to **"Top Panel"** of the unit. Note there are no existing pilot holes on the product.

2

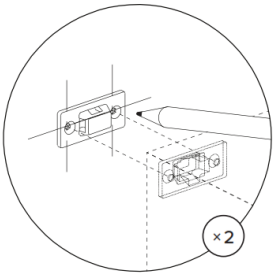


Mark on wall where second pair of brackets should be placed.

3

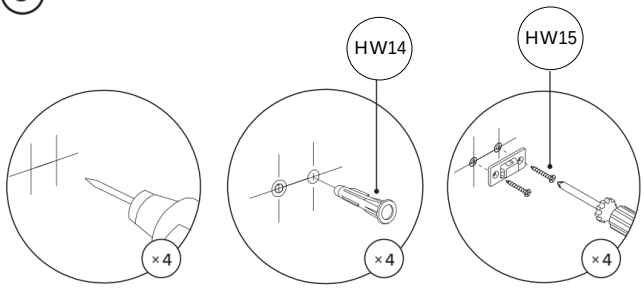


Drill holes in wall using 8mm / 5/16" drill bit.

4A

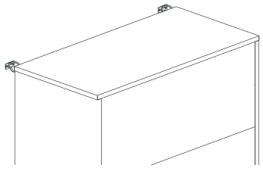

Align brackets on unit with brackets on wall.

4B

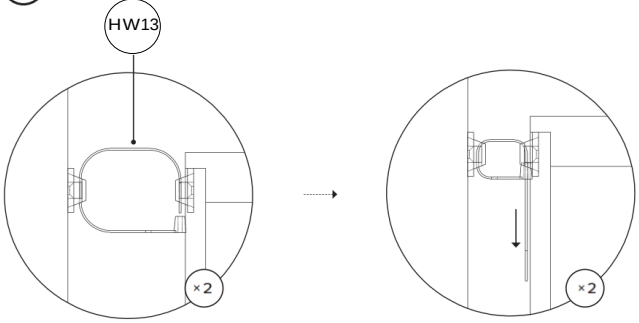

Pull strap down until it snap-locks.